

在RV110W上配置CoS设置

目标

服务类别(CoS)定义了使用Cisco Unity的限制和权限。您可以将服务类别(CoS)优先级设置映射到RV110W上的流量转发队列。


本文档的目的是说明如何在RV110W上配置CoS设置。

适用设备

- RV110W

CoS设置

步骤1.从基于Web的配置实用程序中，选择QoS > CoS Settings。将打开“CoS设置”页。

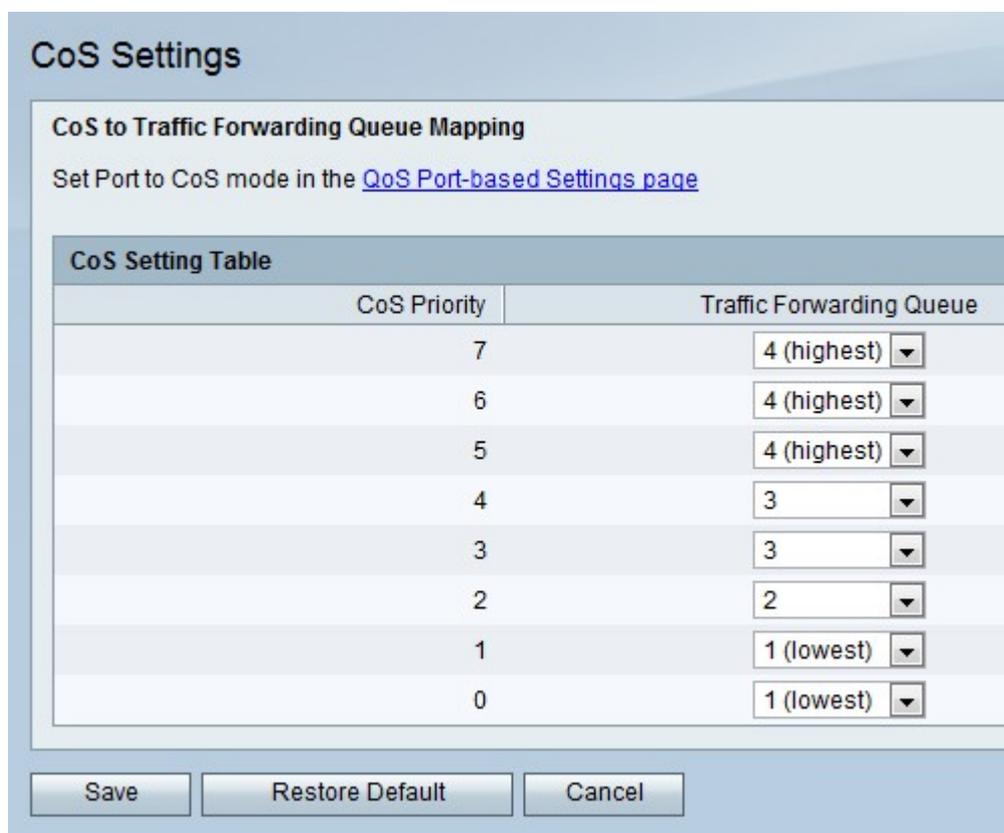

The screenshot shows the 'CoS Settings' page in a web interface. It features a section titled 'CoS to Traffic Forwarding Queue Mapping' with a link to 'QoS Port-based Settings page'. Below this is a table with two columns: 'CoS Priority' and 'Traffic Forwarding Queue'. The table contains eight rows, each with a CoS priority value and a corresponding queue selection dropdown menu. At the bottom of the page, there are three buttons: 'Save', 'Restore Default', and 'Cancel'.

CoS Priority	Traffic Forwarding Queue
7	4 (highest)
6	4 (highest)
5	4 (highest)
4	3
3	3
2	2
1	1 (lowest)
0	1 (lowest)

步骤2.对于每个CoS优先级，从各自的Traffic Forwarding Queue下拉列表选择一个优先级值。

步骤3.单击“保存”。