在RV系列路由器上配置虚拟局域网(VLAN)成员

目标

虚拟局域网(VLAN)是逻辑上独立的Internet协议(IP)子网,其端点与功能或其他共享特征相关 联。这使不同部门可以拥有单独的网络,以便其成员对资源拥有独占访问权限。

通过启用VLAN间路由,VLAN还允许在VLAN之间共享资源。这等同于安全性,因为只有 VLAN成员才能访问通过该VLAN的资源。这也意味着节省,因为部署VLAN意味着拥有单独的 网络,但只需购买一台设备。默认情况下,RV系列路由器有一个默认VLAN,即VLAN1,该 默认的VLAN无法删除、编辑或更改。根据设备型号,您最多可以创建6个VLAN。VLAN可以 标记、无标记或排除到特定端口。

本文旨在展示如何在RV系列路由器上配置VLAN成员资格。

适用设备

• RV系列 — RV110W、RV130、RV130W、RV132W、RV134W

软件版本

- 1.2.0.10 RV110W
- 1.0.3.16 RV130、RV130W
- 1.0.0.17 RV132W
- 1.0.0.21 RV134W

配置VLAN成员资格

添加 VLAN

步骤1:登录路由器的基于Web的实用程序,然后选择Networking > LAN > VLAN Membership。

注意:本文中的图像来自RV132W路由器。选项和术语可能因设备型号而异。



Create VLA	VLAN Membership Create VLANs and assign the Outgoing Frame Type. Up to five VLANs total can be created. VLAN IDs must be in the range (2 - 4094)								
VI ANS Setting Table									
Select	Select VLAN ID Description		Inter VLAN Routing	Port 1	Port 2	Port 3			
	1 Default		Disabled	Untagged	Untagged	Untagged			
	10	Accounting	Disabled	Tagged	Tagged	Tagged			
	20	Sales	Disabled	Tagged	Tagged	Tagged			
	30	Shipping	Disabled	Tagged	Tagged	Tagged			
Add Ro	w Edit	Delete	2						
Save	Save Cancel								

第三步:在VLAN ID字段中输入VLAN编号。VLAN ID必须在2到4094范围内。在本示例中 ,40用作VLAN ID。

Create VLANs an Up to five VLANs You must save b	td assign the Out total can be crea efore you can ec	lgoing Frame Type. ated. VLAN IDs must be i fit or delete.	n the range (2 - 4094)			
VLANs Setting	g Table					
Select	VLAN ID	Description	Inter VLAN Routing	Port 1	Port 2	Port 3
	1	Default	Disabled	Untagged	Untagged	Untagged
	10	Accounting	Disabled	Tagged	Tagged	Tagged
	20	Sales	Disabled	Tagged	Tagged	Tagged
		Shipping	Disabled	Tagged	Tagged	Tagged
	40	AfterSales		Tagged 🔻	Tagged 🔻	Tagged 🔹
Add Row	Edit	Delete				

第四步:在说明字段中输入VLAN的说明。在本示例中,输入AfterSales。

٧	/LAN Memb	ership								
	Create VLANs and assign the Outgoing Frame Type. Up to five VLANs total can be created. VLAN IDs must be in the range (2 - 4094) You must save before you can edit or delete.									
	VLANs Setting	g Table								
	Select	VLAN ID	Description	Inter VLAN Routing	Port 1	Port 2	Port 3			
	0	1	Default	Disabled	Untagged	Untagged	Untagged			
		10	Accounting	Disabled	Tagged	Tagged	Tagged			
		20	Sales	Disabled	Tagged	Tagged	Tagged			
		30	Shinning	Disabled	Tagged	Tagged	Tagged			
		40	AfterSales		Tagged 🔻	Tagged 🔻	Tagged 🔹			
	Add Row	Edit	Deloto							
	Save Cancel									

第五步:Click Save.

ate VLANs ar to five VLANs i must save b	total can be created assign the Out total can be created as a construction of the created assignment of the construction of th	lgoing Frame Type. ated. VLAN IDs must be dit or delete.	in the range (2 - 4094)			
LANs Setting	g Table					
Select	VLAN ID	Description	Inter VLAN Routing	Port 1	Port 2	Port 3
	1	Default	Disabled	Untagged	Untagged	Untagged
	10	Accounting	Disabled	Tagged	Tagged	Tagged
	20	Sales	Disabled	Tagged	Tagged	Tagged
	30	Shipping	Disabled	Tagged	Tagged	Tagged
	40	AfterSales		Tagged 🔻	Tagged 🔻	Tagged •
Add Row	Edit	Delete				

现在,您应该已经成功地将VLAN添加到RV系列路由器。配置设置已成功保存的确认消息将显 示在VLAN成员页面顶部。

VLAN Mer	VLAN Membership									
Conf	Configuration settings have been saved successfully									
Create VLAN Up to five VL You must sa	Create VLANs and assign the Outgoing Frame Type. Up to five VLANs total can be created. VLAN IDs must be in the range (2 - 4094) You must save before you can edit or delete.									
VLANs Set	VLANs Setting Table									
Select VLAN ID Description Inter VLAN Routing Port 1 Port 2 Port 3						Port 3				
	1	Default	Disabled	Untagged	Untagged	Untagged				
	10	Accounting	Disabled	Tagged	Tagged	Tagged				
	20	Sales	Disabled	Tagged	Tagged	Tagged				
	30	Shipping	Disabled	Tagged	Tagged	Tagged				
	40	AfterSales		Tagged 👻	Tagged 👻	Tagged 👻				
Add Rov	v Edit	Delete								
Save	Cancel									

添加成员

步骤1:要向VLAN添加成员,请选中相应VLAN的复选框。在本示例中,成员将添加到VLAN 40(AfterSales)。

١	/LAN Mem	bership							
	Create VLANs and assign the Outgoing Frame Type. Up to five VLANs total can be created. VLAN IDs must be in the range (2 - 4094) You must save before you can edit or delete.								
	VLANs Setti	ing Table							
	Select	VLAN ID	Description	Inter VLAN Routing	Port 1	Port 2	Port 3		
		1	Default	Disabled	Untagged	Untagged	Untagged		
		10	Accounting	Disabled	Tagged	Tagged	Tagged		
		20	Sales	Disabled	Tagged	Tagged	Tagged		
		30	Shipping	Disabled	Tagged	Tagged	Tagged		
		40	AfterSales		Tagged 🔻	Tagged 🔻	Tagged 🔻		
	Add Row	Edit	Delete						
	Save	Cancel							

第二步:单击 Edit。

V	VLAN Membership									
	Create VLANs and assign the Outgoing Frame Type. Up to five VLANs total can be created. VLAN IDs must be in the range (2 - 4094)									
You must save before you can edit or delete.										
	VLANs Setti	ng Table								
	Select	VLAN ID	Description	Inter VLAN Routing	Port 1	Port 2	Port 3			
		1	Default	Disabled	Untagged	Untagged	Untagged			
		10	Accounting	Disabled	Tagged	Tagged	Tagged			
		20	Sales	Disabled	Tagged	Tagged	Tagged			
		30	Shipping	Disabled	Tagged	Tagged	Tagged			
		40	AfterSales		Tagged 🔻	Tagged 🔻	Tagged 🔻			
	Add Row	Edit	Delete							
	Save	Cancel								

步骤3.(可选)选中此复选框以禁用VLAN间路由。如果启用了VLAN间,您需要为路由功能中 包含的VLAN分配IP地址。

注意:在本示例中,VLAN间路由处于未选中状态或禁用状态。

١	/LAN Mem	bership					
	Create VLANs Up to five VLA You must save	and assign the Ns total can be before you car	e Outgoing Frame Type. created. VLAN IDs must be in t edit or delete.	he range (2 - 4094)			
	VLANs Setti	ng Table					
	Select	VLAN ID	Description	Inter VLAN Routing	Port 1	Port 2	Port 3
		1	Default	Disabled	Untagged	Untagged	Untagged
		10	Accounting	Disabled	Tagged	Tagged	Tagged
		20	Sales	Disabled	Tagged	Tagged	Tagged
		30	Shipping	Disabled	Tagged	Tagged	Tagged
		40	AfterSales		Tagged 🔻	Tagged 🔻	Tagged 🔻
	Add Row	Edit	Delete				
	Save	Cancel					

第四步:在首选端口中选择VLAN标记。点击下拉箭头,然后选择Untagged、Tagged或 Excluded。

- 未标记 接口是VLAN的无标记成员。VLAN的帧以无标记的方式发送到端口VLAN。
- Tagged 接口是VLAN的已标记成员。VLAN的帧被标记到端口VLAN。
- 已排除 端口当前不是VLAN的成员。创建VLAN时,这是所有端口的默认设置。

注意:在本示例中,AfterSales VLAN被标记为端口1、端口2和端口3的成员。

VLA	N Men	nbership								
Cre Up 1	Create VLANs and assign the Outgoing Frame Type. Up to five VLANs total can be created. VLAN IDs must be in the range (2 - 4094)									
You	You must save before you can edit or delete.									
VI	LANs Sett	ing Table								
	Select	VLAN ID	Description	Inter VLAN Routing	Port 1	Port 2	Port 3			
		1	Default	Disabled	Untagged	Untagged	Untagged			
		10	Accounting	Disabled	Tagged	Tagged	Tagged			
		20	Sales	Disabled	Tagged	Tagged	Tagged			
		30	Shipping	Disabled	Tagged	Tagged	Tagged			
	v	40	AfterSales		Tagged 🔹	Tagged 🔻	Tagged 🔻			
	Add Row	Edit	Delete		Untagged Tagged Excluded					
s	Save	Cancel								

第五步:Click Save.

١	/LAN Mem	nbership					
Create VLANs and assign the Outgoing Frame Type. Up to five VLANs total can be created. VLAN IDs must be in the range (2 - 4094) You must save before you can edit or delete.							
	VLANs Setti	ing Table					
	Select	VLAN ID	Description	Inter VLAN Routing	Port 1	Port 2	Port 3
		1	Default	Disabled	Untagged	Untagged	Untagged
		10	Accounting	Disabled	Tagged	Tagged	Tagged
		20	Sales	Disabled	Tagged	Tagged	Tagged
		30	Shipping	Disabled	Tagged	Tagged	Tagged
		40	AfterSales		Tagged 🔻	Tagged 🔻	Tagged 🔻
	Add Row	Edit	Delete				
C	Save	Cancel					

现在,您应该已经成功地将成员添加到您的VLAN中。配置设置已成功保存的确认消息将显示 在VLAN成员页面顶部。

V	VLAN Membership									
	Configuration settings have been saved successfully									
	Create VLANs and assign the Outgoing Frame Type. Up to five VLANs total can be created. VLAN IDs must be in the range (2 - 4094) You must save before you can edit or delete.									
	VLANs Set	ting Table								
	Select	VLAN ID	Description	Inter VLAN Routing	Port 1	Port 2	Port 3			
		1	Default	Disabled	Untagged	Untagged	Untagged			
		10	Accounting	Disabled	Tagged	Tagged	Tagged			
		20	Sales	Disabled	Tagged	Tagged	Tagged			
		30	Shipping	Disabled	Tagged	Tagged	Tagged			
	V		AfterSales		Tagged 👻	Tagged 👻	Tagged 👻			
	Add Row	Edit	Delete							
	Save	Cancel								

为VLAN分配IP地址

步骤1:单击LAN > LAN Configuration。



第二步:点击VLAN下拉箭头并选择需要分配IP地址的VLAN。

注意:在本例中,我们将向VLAN 40添加IP地址。

I	LAN Configuration					
	Network					
	Host Name:	RV134	w			
	Domain Name:					
	IPv4					
	VLAN:	40 👻				
	Local IP Address:	1 10	. 168	. 105	.1	(Hint: 192.168.1.1)
	Subnet Mask:	20 30	. 255	. 255	. 0	
	Server Settings(DHCP)	40				

第三步:在本地IP地址字段下,输入需要为该VLAN分配的IP地址。

注意:在本示例中,我们将IP地址192.168.40.1分配给VLAN 40。

LAN Configuration					
Network					
Hest Name:	RV134W				
Domain Name:					
IPv4					
VLAN:	40 👻				_
Local IP Address:	192	168	40	1	(Hint: 192 168 1 1)
Subnet Mask:	255	. 255	. 255	. 0	

第四步:在Subnet Mask字段中输入VLAN的子网掩码。

LAN Configuration								
Network								
Hest Name:	RV134W							
Domain Name:								
IPv4								
VLAN:	40 -							
Local IP Address:	192 168	40 1	(Hint: 192 168 1 1)					
SubnetMask	255 . 255	. 255 . 0						

第五步:Click Save.

DHCP Option 66/150 & 67	🗖 Enable
TETP Server Host Name:	
TFTP Server IP:	
Configuration Filename.	
Save Cancel	

现在,您应该已经成功地为VLAN分配了IP地址。

关于此翻译

思科采用人工翻译与机器翻译相结合的方式将此文档翻译成不同语言,希望全球的用户都能通过各 自的语言得到支持性的内容。

请注意:即使是最好的机器翻译,其准确度也不及专业翻译人员的水平。

Cisco Systems, Inc. 对于翻译的准确性不承担任何责任,并建议您总是参考英文原始文档(已提供 链接)。