RV215W上的IPv6 LAN配置

目标

IPv6是IP的最新版本,旨在取代当前的IPv4系统,由于IPv4地址几乎耗尽,IPv6已经越来越流 行。IPv6提供的IP地址比IPv4大得多。IPv6的配置现在有助于使网络为未来的计算机网络做好 准备。本文介绍如何在RV215W上配置IPv6 LAN设置。

适用设备

·RV215W

软件版本

•1.1.0.5

IPv6 LAN配置

IPv6模式配置

RV215W必须将LAN设置为IPv6才能允许IPv6配置。此程序说明如何在RV215W上配置IPv6的 LAN IP模式。

步骤1.登录Web配置实用程序并选择Networking > IP Mode。"IP模式"页面随即打开:

IP Mode				
IP Mode:	LAN:IPv4+IPv6, WAN:IPv4	•		
Show Static 6to4 DNS Entry				
Save	Cancel			

步骤2.从IP Mode下拉列表中,选择LAN:IPv6、WAN:IPv4、LAN:IPv6、WAN:IPv6、 WAN:IPv6、LAN:IPv4+IPv6、WAN:IPv4 或LAN:IPv4+IPv6、WAN:IPv4+IPv6。这些选项允 许在LAN接口上使用IPv6。

步骤3.单击"保**存"**。

IPv6 LAN配置

此过程说明如何配置IPv6的LAN设置。

步骤1.登录Web配置实用程序,然后选择**Networking>IPv6>IPv6 LAN Configuration**。系统 将*显示"IPv6 LAN配*置"页:

IPv6 LAN Confi	guration				
IPv6					
IPv6 Address:	2001:0DB8:0000:0000:0000:0000:00001				
IPv6 Prefix Length:	32 (Range: 0-128, Default: 64)				
Server Settings(DH	CPv6)				
DHCP Status:	Enable				
Domain Name:	ExampleDomainName.com				
Server Preference:	250 (Range: 0-255, Default: 255)				
DNS Server:	Use DNS as Below 👻				
Static DNS 1 :	2001:0DB8:0000:0000:0000:0000:0002				
Static DNS 2 :	2001:0DB8:0000:0000:0000:0000:0003				
Client Lease Time:	120 minutes (0 means one day) (Range: 0 - 9999, Default: 0)				
You must save before you can edit or delete.					
IPv6 Address Poo	I Table				
Start Addre	ess	End Address	IPv6 Prefix Length		
2001:0DB	3:0000:0000:0000:0000:0000:0004	2001:0DB8:0000:0000:0000:0000:FFFF	32		
2001:0DB8::0001:0000		2001:0DB8::FFFF:FFFF	32		
Add Row	Edit Delete				
Save Ca	incel				

步骤2.在IPv6 Address字段中,输入IPv6地址作为LAN接口IPv6地址。IPv6地址可以使用或不使用双冒号记法输入。

步骤3.在IPv6 Prefix Length字段中,输入IPv6地址的网络部分的长度。

步骤4.要将RV215W设置为IPv6 DHCP服务器,请选中DHCP Status字段中的**Enable**复选框。 DHCP服务器在设备连接到LAN时自动为其分配IPv6地址。

IPv6 LAN Confi	guration			
IPv6				
IPv6 Address:	2001:0DB8:0000:0000:0000:0000:00001			
IPv6 Prefix Length:	32 (Range: 0-128, Default: 64)			
Server Settings(DH)	CPv6)			
DHCP Status:	Imable			
Domain Name:	ExampleDomainName.com			
Server Preference:	250 (Range: 0-255, Default: 255)			
DNS Server:	Use DNS as Below 👻			
Static DNS 1 :	2001:0DB8:0000:0000:0000:0000:0002			
Static DNS 2 :	2001:0DB8:0000:0000:0000:0000:0003			
Client Lease Time:	120 minutes (0 means one day) (Range: 0 - 9999, Default: 0)			
You must save before you can edit or delete.				
IPv6 Address Pool	Table			
Start Addre	SS	End Address	IPv6 Prefix Length	
2001:0DB8:0000:0000:0000:0000:0000		2001:0DB8:0000:0000:0000:0000:FFFF	32	
2001:0DB8::0001:0000		2001:0DB8::FFFF:FFFF	32	
Add Row Edit Delete				
Save Ca	ncel			

步骤5.(可选)在Domain Name字段中,输入DHCP服务器的域名。

步骤6.在Server Preference字段中输入RV215W DHCP服务器的服务器首选项级别。如果网络中存在多个DHCP服务器,则允许具有最高优先级的服务器分配地址。

步骤7.从DNS Server下拉列表中,选择一个选项。域名系统(DNS)服务器将IP地址映射到用户 输入的域名。

·使用DNS代理 — 此选项使用代理DNS服务器。

·从ISP使用DNS — 此选项使用ISP提供的DNS服务器。

·使用DNS如下 — 此选项最多使用两个指定的DNS服务器。

IPv6 LAN Confi	guration				
IPv6					
IPv6 Address:	2001:0DB8:0000:0000:0000:0000:0001				
IPv6 Prefix Length:	32 (Range: 0-128, Default: 64)				
Server Settings(DH	CPv6)				
DHCP Status:	C Enable				
Domain Name:	ExampleDomainName.com	ExampleDomainName.com			
Server Preference:	250 (Range: 0-255, Default: 255)				
DNS Server:	Use DNS as Below 👻				
Static DNS 1 :	2001:0DB8:0000:0000:0000:0000:0002				
Static DNS 2 :	2001:0DB8:0000:0000:0000:0000:0003				
Client Lease Time:	120 minutes (0 means one day) (Range: 0 - 9999, Default: 0)				
You must save before you can edit or delete.					
IPv6 Address Pool Table					
Start Addre	SS	End Address	IPv6 Prefix Length		
2001:0DB8:0000:0000:0000:0000:0000		2001:0DB8:0000:0000:0000:0000:0000:FFFF	32		
2001:0DB8::0001:0000		2001:0DB8::FFFF:FFF	32		
Add Row Edit Delete					
Save Ca	ncel				

步骤8.如果在步骤7中选择Use DNS as Below,请在Static DNS 1字段中输入要在IPv6网络上 使用的主DNS服务器的IPv6地址。

步骤9.如果在步骤7中选择Use DNS as Below,请在Static DNS 2字段中输入要在IPv6网络上 使用的辅助DNS服务器的IPv6地址。

IPv6 LAN Confi	guration			
IPv6				
IPv6 Address:	2001:0DB8	2001:0DB8:0000:0000:0000:0000:0001		
IPv6 Prefix Length:	32 (Range: 0-128, Default: 64)			
Server Settings(DH	CPv6)			
DHCP Status:	Enable			
Domain Name:	ExampleD	omainName.com		
Server Preference:	250 (Range: 0-255, Default: 255)			
DNS Server:	Use DNS as Below 👻			
Static DNS 1 :	2001:0DB8:0000:0000:0000:0000:00002			
Static DNS 2 :	2001:0DB8:0000:0000:0000:0000:0003			
Client Lease Time:	120	minutes (0 means on	ie day) (Range: 0 - 9999, Default: 0)	
You must save befo	re you can ed	lit or delete.		
IPv6 Address Poo	l Table			
Start Addre	Start Address		End Address	IPv6 Prefix Length
2001:0DB	2001:0DB8:0000:0000:0000:0000:0004		2001:0DB8:0000:0000:0000:0000:FFFF	32
2001:0DB8::0001:0000)	2001:0DB8::FFFF:FFFF	32
Add Row	Edit	Delete		
Save Ca	ancel			

步骤10.在Client Lease Time字段中,输入地址租给客户端的时间(以分钟为单位)。值0表示

步骤11.要添加新的IPv6地址池,请单击IPv6地址池表中的Add Row,或者要编辑现有池,请 选中该池的复选框并单击Edit。地址池是分配给DHCP客户端的IP地址范围。

IPv6 LAN Configuration

IDv6				
IPv6 Address:	2001:0DB8	:0000:0000:0000:0000:000	00:0001	
IPv6 Prefix Length:	32 (Range: 0-128, Default: 64)			
Server Settings(DH)	CPv6)			
DHCP Status:	✓ Enable			
Domain Name:	ExampleDomainName.com			
Server Preference:	250	(Range: 0-255, Default	lt: 255)	
DNS Server:	Use DNS as Below 👻			
Static DNS 1 :	2001:0DB8:0000:0000:0000:0000:0002			
Static DNS 2 :	2001:0DB8:0000:0000:0000:0000:0003			
Client Lease Time:	se Time: 120 minutes (0 means one day) (Range: 0 - 9999, Default: 0)			
You must save before you can edit or delete.				
IPv6 Address Pool	Table			
Start Address			End Address	IPv6 Prefix Length
2001:0DB8:0000:0000:0000:0000:00004		000:0000:0000:0004	2001:0DB8:0000:0000:0000:0000:FFFF	32
2001:0DB8::0001:0000			2001:0DB8::FFFF:FFFF	32
Add Row Edit Delete				
Save Cancel				

步骤12.在Start Address字段中,输入IPv6地址池的第一个值。

步骤13.在End Address字段中,输入IPv6地址池的最后一个值。

步骤14.在IPv6 Prefix Length字段中,输入池的前缀长度。

步骤15.单击"**保存**"。