将VPN用户添加到RV130和RV130W上的PPTP VPN服务器

目标

远程访问VPN允许单个用户通过TCP/IP网络(例如互联网)的安全连接连接到中心站点。点 对点隧道协议(PPTP)VPN服务器最适合远程访问应用,但它们也支持LAN网际网络。

本文档的目标是向您展示如何使用点对点隧道协议配置VPN服务器,以及如何在RV130和 RV130W上添加新的PPTP VPN用户。

适用设备

·RV130

· RV130W

PPTP服务器配置

注意:在开始PPTP服务器配置过程之前,建议您更改本地网络的IP地址默认设置。默认设置 可能会与客户端的家庭网络重叠,从而导致连接问题。如果保留默认设置,则每次添加用户时 还会显示错误消息。在本指南中,我们将使用我们的网络作为10.0.0.0/24网络,路由器使用 IP地址10.0.0.1。有关更改网络的IP地址的指南,请参阅<u>在RV130和RV130W上配置IPv4 LAN</u>。

步骤1.使用配置实用程序,选择VPN > PPTP Server。将打开PPTP服务器页面:

PPTP Server	
PPTP Configuration	
PPTP Server:	Enable
IP Address for PPTP Server:	10 . 0 . 1
IP Address for PPTP Clients:	10 . 0 . 10 - 14
MPPE Encryption:	✓ Enable
PPTP User Account Table	
No. Enab	le Username Password
No data to display	
Add Row Edit	Delete
Save Cancel	

步骤2.在PPTP Configuration部分下,选中PPTP Server enable复选框。

PPTP Server	
PPTP Configuration	
PPTP Server:	DEnable
IP Address for PPTP Server: 10	. 0 . 0 . 1
IP Address for PPTP Clients: 10) . 0 . 10 - 14
MPPE Encryption:	Enable
PPTP User Account Table	
No. Enable	Username Password
No data to display	
Add Row Edit	Delete Import
Save Cancel	

步骤3.在PPTP服务器的IP地址字段中,输入RV130或RV130W的LAN IP地址。

PPTP Server
PPTP Configuration
PPTP Server: I Enable
IP Address for PPTP Server: 10 . 0 . 1
IP Address for PPTP Clients: 10 . 0 . 10 - 14
MPPE Encryption: 🗹 Enable
PPTP User Account Table
No. Enable Username Password
No data to display
Add Row Edit Delete Import
Save Cancel

步骤4.在PPTP客户端的IP地址字段中,输入要分配给用户的IP地址范围。

PPTP Server	
PPTP Configuration	
PPTP Server:	✓ Enable
IP Address for PPTP Server:	10 . 0 . 0 . 1
IP Address for PPTP Clients:	10 . 0 . 10 - 14
MPPE Encryption:	✓ Enable
PPTP User Account Table	
No. Enable	Bername Password
No data to display	
Add Row Edit	Delete Import
Save Cancel	

步骤5.选中**启用**复选框,使MPPE加密可加密点对点链路。Microsoft点对点加密(MPPE)不仅 加密点对点协议(PPP)数据包,而且使用压缩算法优化带宽使用率以支持多个同时连接。只有 启用PPTP服务器时,才能启用或禁用此选项。

PPTP Server		
PPTP Configuration		
PPTP Server:	Enable	
IP Address for PPTP Server:	10 . 0 . 0 . 1	
IP Address for PPTP Clients:	10 . 0 . 0 . 10	- 14
MPPE Encryption:	Enable	
PPTP User Account Table		
No. Enab	le Username	Password
No data to display		
Add Row Edit	Delete Import	
Save Cancel		

添加新的PPTP VPN用户

步骤1.使用配置实用程序,选择VPN > PPTP Server。PPTP Server页面打开:

PPTP Server	
PPTP Configuration	
PPTP Server:	✓ Enable
IP Address for PPTP Server:	10 . 0 . 1
IP Address for PPTP Clients:	10 . 0 . 10 - 14
MPPE Encryption:	
PPTP User Account Table	
No. Enabl	le Username Password
No data to display	
Add Row Edit	Delete
Save Cancel	

步骤2.在PPTP用*户帐户表中*,点击**添加行**。

PPTP Server	
PPTP Configuration	
PPTP Server:	✓ Enable
IP Address for PPTP Server:	10 . 0 . 1
IP Address for PPTP Clients:	10 . 0 . 10 - 14
MPPE Encryption:	Enable
PPTP User Account Table	
No. Enabl	le Username Password
No data to display	
Add Row Edit	Delete Import
Save Cancel	

步骤3.勾选新用户帐户的Enable复选框。

PPTP Server	
PPTP Configuration	
PPTP Server:	✓ Enable
IP Address for PPTP Server:	10 . 0 . 1
IP Address for PPTP Clients:	10 . 0 . 10 - 14
MPPE Encryption:	✓ Enable
You must save before you can e	dit or delete.
PPTP User Account Table	
No. Enable	e Username Password
1	cisco •••••
Add Row Edit	Delete Import
Save Cancel	

步骤4.在*用户名*字段中输入用户名,并在*密码*字段中输入用户的密码。

PPTP Server	
PPTP Configuration	
PPTP Server:	C Enable
IP Address for PPTP Server:	10 . 0 . 1
IP Address for PPTP Clients:	10 . 0 . 10 - 14
MPPE Encryption:	C Enable
You must save before you can e	dit or delete.
PPTP User Account Table	
No. Enable	e Username Password
1 🔽	
Add Row Edit	Delete Import
Save Cancel	

注意:重复步骤2-4添加其他用户帐户。

步骤5.单击**保存**应用更改。

PPTP Server	
PPTP Configuration	
PPTP Server:	✓ Enable
IP Address for PPTP Server:	10 . 0 . 0 . 1
IP Address for PPTP Clients:	10 . 0 . 10 - 14
MPPE Encryption:	✓ Enable
You must save before you can e	dit or delete.
PPTP User Account Table	
No. Enable	e Username Password
1 🗸	cisco .
Add Row Edit	Delete Import
Save Cancel	

关于此翻译

思科采用人工翻译与机器翻译相结合的方式将此文档翻译成不同语言,希望全球的用户都能通过各 自的语言得到支持性的内容。

请注意:即使是最好的机器翻译,其准确度也不及专业翻译人员的水平。

Cisco Systems, Inc. 对于翻译的准确性不承担任何责任,并建议您总是参考英文原始文档(已提供 链接)。