思科企业250/350系列交换机上的语音VLAN配置

目标

当将来自VoIP设备或电话的流量分配给特定VLAN时,会使用语音VLAN。交换机可以自动检测语音 流量,将端口成员添加到语音VLAN,并将相应的QoS(服务质量)参数分配给来自语音VLAN的语 音流量。本文介绍如何在Cisco Business 250或350系列交换机上配置语音VLAN。

适用设备 |软件版本

- CBS250<u>(产品手册)</u> |3.0.0
- CBS350<u>(产品手册)</u> |3.0.0
- CBS350-2X<u>(产品手册)</u> |3.0.0
- CBS350-4X<u>(产品手册)</u> |3.0.0

语音VLAN配置

注意:交换机默认VLAN (默认为VLAN 1) 不能用作语音VLAN。必须创建新VLAN。

步骤1.登录到Web配置实用程序,然后选择VLAN Management > Voice VLAN > Properties。



VLAN Settings

Interface Settings

Port to VLAN

Port VLAN Membership

VLAN Translation

Private VLAN Settings

GVRP Settings

VLAN Groups

Voice VLAN

2

Properties

Operational Status can be affected by Auto Voice VLAN if enabled						
Administrative Status		Operational St				
S Voice VLAN ID:	1	(Range: 1 - 4094, Default: 1)	Voice VLAN ID:	1		
CoS/802.1p:	5 v (Default: 5)		CoS/802.1p:	5		
DSCP:	46 ~ (Default: 46)		DSCP:	46		
Dynamic Voice VLAN Settings						
Dynamic Voice VLAN:	Enable Auto Voice VLAN					
	C Enable Telephony OUI					
	 Disable 					
Auto Voice VLAN Activation:	 Immediate 					
	 By external Voice VLAN trigg 	ger				

步骤2.在Voice VLAN ID字段中,输入分配给语音VLAN的VLAN ID。

"属*性"*页打开:

Properties

Properties						
Operational Status can be affected by Auto Voice VLAN if enabled						
Administrative Status	Operational Status					
• Voice VLAN ID:	1 (Range: 1 - 4094, Default: 1)	Voice VLAN ID:	1			
CoS/802.1p:	5 ~ (Default: 5)	CoS/802.1p:	5			
DSCP:	46 ~ (Default: 46)	DSCP:	46			

步骤3.在CoS/802.1p下拉列表中,选择Class of Service ID(服务类ID)。此ID告知链路层发现协 议媒体终端发现协议(LLDP-MED)哪个CoS/802.1p网络策略将用于语音VLAN。

Properties

Operational Status can be affected by Auto Voice VLAN if enabled

Administrative Status		Operational Status		
Voice VLAN ID:	1	(Range: 1 - 4094, Default: 1)	Voice VLAN ID:	1
CoS/802.1p:	5 v (Default: 5)		CoS/802.1p:	5
DSCP:	46 ~ (Default: 46)		DSCP:	46

步骤4.在DSCP下拉列表中,为LLDP选择差分服务代码点(DSCP)ID号。此值告知LLDP-MED哪个 DSCP用作语音网络策略。

Properties						
Operational Status can be affected by Auto Voice VLAN if enabled						
Administrative Status			Operational Sta	itus		
• Voice VLAN ID:	1	(Range: 1 - 4094, Default: 1)	Voice VLAN ID:	1		
CoS/802.1p:	5 ~ (Default: 5)		CoS/802.1p:	5		
DSCP:	46 ~ (Default: 46)		DSCP:	46		

步骤5.在Dynamic Voice VLAN Settings(动态语音VLAN设置)区域的Dynamic Voice VLAN(动态 语音VLAN)字段中,单击以下单选按钮之一:

- · 启用自动语音VLAN 将动态语音VLAN设置为自动语音VLAN。自动语音VLAN与Auto Smartport配合使用。启用Auto Smartport后,如果检测到电话/媒体设备,它会向语音VLAN添 加端口。
- 启用电话OUI 将动态语音VLAN设置为电话OUI(组织唯一标识符)。 如果交换机收到源 MAC地址与电话OUI匹配的数据包,则会自动将端口添加到语音VLAN。
- 禁用 禁用动态语音VLAN。

注意:如果未选择Enable Auto Voice VLAN,请跳至步骤7。



步骤7.单击"应**用"**保存更改,或单击**"取**消"放弃更改。

Properties								Apply	Cancel
Auto Smartport is currently disabled. Auto Smartport and Telephony OUI are mutually exclusive. CoS/802.1p and DSCP values are used only for LLDP MED Network Policy and Auto Voice VLAN.									
Voice VLAN Settings	Voice VLAN Settings								
Operational Status can be affected by Auto Voice VLAN if enabled									
Administrative Status			Operational St	atus					
• Voice VLAN ID:	1	(Range: 1 - 4094, Default: 1)	Voice VLAN ID:	1					
CoS/802.1p:	5 v (Default: 5)		CoS/802.1p:	5					
DSCP:	46 ~ (Default: 46)		DSCP:	46					
Dynamic Voice VLAN Settings									
Dynamic Voice VLAN:	Enable Auto Voice VLAN								
	 Disable Telephony OUI Disable 								
Auto Voice VLAN Activation:	Auto Voice VLAN Activation: O Immediate								
	 by external voice vLAN trigg 	jei							

您现在已成功学习在Cisco Business 250或350系列交换机上配置语音VLAN的步骤。

查看与本文相关的视频……

单击此处查看思科提供的其他技术讲座