

在SPA122上分配VLAN ID

目标

虚拟局域网(VLAN)允许未连接到同一交换机的一组主机通信，就像它们位于同一广播域中一样。如果VLAN被禁用，则从有线端传入的所有带有VLAN ID标记的流量都将被丢弃。如果VLAN已启用，则会转发它。本文介绍如何在SPA122 VoIP设备上配置和分配VLAN ID。

适用设备


·SPA122

软件版本


•v1.1.0

分配VLAN ID

步骤1.登录到Web配置实用程序，然后选择**Network Setup > Advanced Settings > VLAN**。VLAN页面打开：

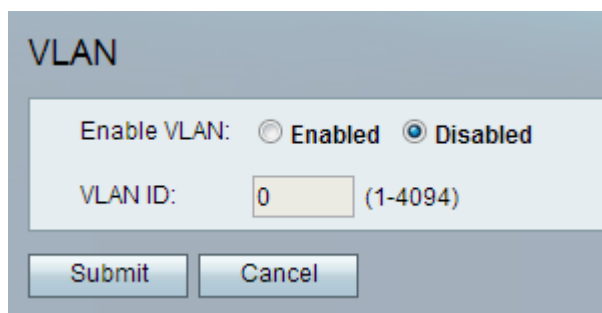

The screenshot shows the 'VLAN' configuration page. At the top, the title 'VLAN' is displayed. Below it, the 'Enable VLAN:' section has two radio buttons: 'Enabled' (which is unselected) and 'Disabled' (which is selected). Below this, the 'VLAN ID:' field contains the number '0', with '(1-4094)' indicating the valid range. At the bottom, there are two buttons: 'Submit' and 'Cancel'.

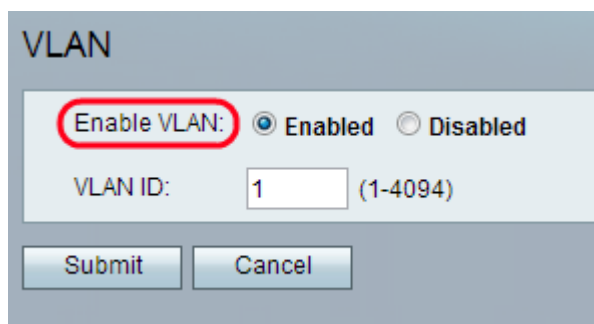

The screenshot shows the 'VLAN' configuration page. At the top, the title 'VLAN' is displayed. Below it, the 'Enable VLAN:' section has two radio buttons: 'Enabled' (which is selected and circled in red) and 'Disabled' (which is unselected). Below this, the 'VLAN ID:' field contains the number '1', with '(1-4094)' indicating the valid range. At the bottom, there are two buttons: 'Submit' and 'Cancel'.

步骤2.单击**Enabled**单选按钮，允许VLAN数据包在位于同一VLAN的有线和无线接口之间传递。

VLAN

Enable VLAN: Enabled Disabled

VLAN ID: (1-4094)

步骤3.在VLAN ID字段中输入所需的VLAN ID号。默认值为 1。

注意 : VLAN ID可以是1到4094之间的任意数字。

步骤4.单击“提交”。配置更改并更新设备。