

Cisco 867VAE平台上的WAN模式功能

目錄

[簡介](#)

[必要條件](#)

[需求](#)

[採用元件](#)

[設定](#)

[驗證](#)

[疑難排解](#)

簡介

本文檔介紹Cisco867VAE平台上的WAN模式功能以及啟用DSL網際網路服務的選項。

必要條件

需求

本文件沒有特定需求。

採用元件

本文檔中的資訊基於Cisco867VAE平台。

本文中的資訊是根據特定實驗室環境內的裝置所建立。文中使用到的所有裝置皆從已清除 (預設) 的組態來啟動。如果您的網路正在作用，請確保您已瞭解任何指令可能造成的影響。

設定

以下是在CISCO867VAE平台上啟用WAN模式的配置：

```
Cisco867VAE(config)#wan mode ?  
  
dsl          WAN interface is DSL  
  
ethernet    WAN interface is ethernet
```

DSL Mode

此模式允許在ATM或乙太網路上設定DSL引數，但不允許在任何第3層介面 (即此裝置中的Gigabitethernet 0) 上設定。

```
Cisco867VAE#sh ip int brief
```

Interface	IP-Address	OK?	Method	Status	Protocol
ATM0	unassigned	YES	NVRAM	administratively down	down
Ethernet0	unassigned	YES	NVRAM	administratively down	down
FastEthernet0	unassigned	YES	unset	up	up
FastEthernet1	unassigned	YES	unset	down	down
FastEthernet2	unassigned	YES	unset	down	down
FastEthernet3	unassigned	YES	unset	down	down
GigabitEthernet0	unassigned	YES	NVRAM	down	down
Vlan1	10.106.47.21	YES	NVRAM	up	up

以下是在DSL模式下遇到的錯誤消息：

```
Cisco867VAE(config)#wan mode dsl
```

```
% Ethernet WAN interface will be disabled.
```

```
Cisco867VAE(config)#
```

```
*Jan 18 04:35:57.931: %LINK-5-CHANGED: Interface GigabitEthernet0, changed state to administratively down
```

```
Cisco867VAE(config)#int gig 0
```

```
Cisco867VAE(config-if)#no shut
```

```
% WAN interface is DSL
```

```
Cisco867VAE(config)#controller vdsl 0
```

```
Cisco867VAE(config-controller)#no shut
```

```
Cisco867VAE(config)#int eth0
```

```
Cisco867VAE(config-if)#no shut
```

```
*Jan 18 04:40:46.507: %LINK-3-UPDOWN: Interface Ethernet0, changed state to down
```

```
Cisco867VAE(config-if)#int atm 0
```

```
Cisco867VAE(config-if)#no shut
```

```
*Jan 18 04:40:58.771: %LINK-3-UPDOWN: Interface ATM0, changed state to down
```

Ethernet Mode:

在乙太網模式下，您將無法配置任何DSL引數，但您可以將第3層Gigabitethernet介面用於外部網路

。

```
Cisco867VAE#wan mode ethernet
```

```
% DSL interfaces will be disabled.
```

```
Cisco867VAE#
```

```
*Jan 18 04:12:48.687: %CONTROLLER-5-UPDOWN: Controller VDSL 0, changed state to administratively down
```

```
Cisco867VAE(config)#controller vdsl 0
```

```
Cisco867VAE(config-controller)#no shut
```

```
% Operation not allowed when wan mode is ethernet.
```

```
Cisco867VAE#sh ip int brief
```

Interface	IP-Address	OK?	Method	Status	Protocol
ATM0	unassigned	YES	NVRAM	administratively down	down
Ethernet0	unassigned	YES	NVRAM	administratively down	down
FastEthernet0	unassigned	YES	unset	up	up
FastEthernet1	unassigned	YES	unset	down	down
FastEthernet2	unassigned	YES	unset	down	down
FastEthernet3	unassigned	YES	unset	down	down
GigabitEthernet0	unassigned	YES	NVRAM	administratively down	down
Vlan1	10.106.47.21	YES	NVRAM	up	up

```
Cisco867VAE#conf t
```

```
Enter configuration commands, one per line. End with CNTL/Z.
```

```
Cisco867VAE(config)#int atm0
```

```
Cisco867VAE(config-if)#no shut
```

```
% WAN interface is Ethernet.
```

```
Cisco867VAE(config-if)#int eth0
```

```
Cisco867VAE(config-if)#no shut
```

```
% WAN interface is Ethernet.
```

```
Cisco867VAE(config)#int gig 0
```

```
Cisco867VAE(config-if)#no shut
```

*Jan 18 04:30:08.851: %LINK-3-UPDOWN: Interface GigabitEthernet0, changed state to down
在CISCO 867平台中，當WAN模式作為DSL模式的預設模式時，無法禁用WAN模式。

但是在乙太網路模式下停用時，會變更為DSL模式。

```
Cisco867VAE(config)#no wan mode dsl
```

```
Cisco867VAE(config)#do sh run | sec wan
```

```
wan mode dsl
```

```
Cisco867VAE(config)#do sh run | sec wan
```

```
wan mode ethernet
```

```
Cisco867VAE(config)#no wan mode ethernet
```

```
% Ethernet WAN interface will be disabled.
```

附註：使用[命令查詢工具](#)(僅供[已註冊](#)客戶使用)可獲取本節中使用的命令的更多資訊。

驗證

使用本節內容，確認您的組態是否正常運作。

```
Cisco867VAE#sh run | inc wan mode
```

```
wan mode dsl
```

疑難排解

目前尚無適用於此組態的具體疑難排解資訊。