

RV130和RV130W上的基本VPN設定

目標

虛擬專用網路(VPN)通常被企業用作擴展企業網路內部網的一種方式，企業網路內部網是專為公司員工設計的站點。VPN是在公共網路基礎設施內構建的專用網路。在典型的小型企業環境中，VPN可以擴展地理連線，降低與傳統廣域網(WAN)相比的運營成本，並提高員工工作流程的工作效率。

Basic VPN Setup (基本VPN設定) 頁面允許您與其他位置網關裝置輕鬆設定網關到網關VPN隧道。VPN隧道還允許遠端使用者使用VPN客戶端軟體訪問路由器的區域網(LAN)網路。

附註： RV130和RV130W支援第三方IPSec VPN軟體。有關詳細資訊，請參閱產品管理指南。

本文檔的目的是解釋如何在RV130裝置上配置基本VPN。

適用裝置 | 韌體版本

- RV130 | 1.0.3.28版(下載[最新版](#))
- RV130W | 1.0.3.28版(下載[最新版](#))

檢視預設VPN設定

步驟1. 使用路由器配置實用程式選擇VPN > Site-to-Site IPSec VPN > Basic VPN Setup。 *Basic VPN Setup* 頁面開啟：

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

Endpoint Information

Remote Endpoint:

Remote WAN (Internet) IP Address: (Hint: 1.2.3.4 or abc.com)

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

[Save](#)

[Cancel](#)

步驟2. 按一下**View Default Settings**按鈕檢視基本VPN設定的預設值。

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

Endpoint Information

Remote Endpoint:

Remote WAN (Internet) IP Address: (Hint: 1.2.3.4 or abc.com)

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Save

Cancel

「基本VPN設定」頁面顯示預設設定：

Basic VPN Setup

Basic VPN Setup Default Values for IKE

Exchange Mode:	Main
Local WAN (Internet) ID:	Local WAN (Internet) IP Address
Remote WAN (Internet) ID:	Remote WAN (Internet) IP Address
Encryption Algorithm:	AES-128
Authentication Algorithm:	MD5
Authentication Method:	Pre-Shared Key
Diffie-Hellman (DH) Group:	Group2 (1024 bit)
SA-Lifetime:	8 Hours

Basic VPN Setup Default Values for VPN

Encryption Algorithm:	AES-128
Integrity Algorithm:	MD5
SA-Lifetime:	1 Hours
PFS Key Group:	Group 2(1024 bit)

Back

步驟3.按一下Back按鈕返回到Basic VPN Setup視窗。

Basic VPN Setup

Basic VPN Setup Default Values for IKE

Exchange Mode:	Main
Local WAN (Internet) ID:	Local WAN (Internet) IP Address
Remote WAN (Internet) ID:	Remote WAN (Internet) IP Address
Encryption Algorithm:	AES-128
Authentication Algorithm:	MD5
Authentication Method:	Pre-Shared Key
Diffie-Hellman (DH) Group:	Group2 (1024 bit)
SA-Lifetime:	8 Hours

Basic VPN Setup Default Values for VPN

Encryption Algorithm:	AES-128
Integrity Algorithm:	MD5
SA-Lifetime:	1 Hours
PFS Key Group:	Group 2(1024 bit)

Back

基本VPN設定

步驟1.使用路由器配置實用程序選擇VPN >站點到站點IPSec VPN >基本VPN設定。Basic VPN Setup頁面開啟：

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

Endpoint Information

Remote Endpoint: ▼

Remote WAN (Internet) IP Address: (Hint: 1.2.3.4 or abc.com)

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

[Save](#) [Cancel](#)

步驟2.在New Connection Name (新連線名稱) 欄位中輸入連線名稱。此名稱將用於管理，對VPN的操作沒有影響。

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

cisco_sb

Pre-Shared Key:

Endpoint Information

Remote Endpoint:

IP Address ▾

Remote WAN (Internet) IP Address:

(Hint: 1.2.3.4 or abc.com)

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address:

(Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask:

(Hint: 255.255.255.0)

Local LAN (Local Network) IP Address:

(Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask:

(Hint: 255.255.255.0)

Save

Cancel

步驟3.在 *Pre-Shared Key* 欄位中輸入預共用密鑰。VPN客戶端或網關需要此金鑰才能建立VPN連線

。

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

Endpoint Information

Remote Endpoint:

Remote WAN (Internet) IP Address: (Hint: 1.2.3.4 or abc.com)

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

[Save](#)

[Cancel](#)

步驟4.在「*Remote Endpoint*」下拉選單中，選擇IP Address或FQDN作為遠端網關用於建立連線的地址型別。

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

Endpoint Information

Remote Endpoint:

Remote WAN (Internet) IP Address: (Hint: 1.2.3.4 or abc.com)

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

[Save](#)

[Cancel](#)

可用選項定義如下：

- IP地址 — 由句點分隔的唯一數字字串，用於標識使用Internet協定通過網路進行通訊的每台電腦。
- FQDN（完全限定域名） — Internet、特定電腦或特定主機的完整域名。FQDN由兩部分組成：主機名和域名。例如，假設郵件伺服器的FQDN可能是 *mymail.companyname.org*。主機名為 *mymail*，主機位於域 *companyname.org* 中。

步驟5. 根據您在步驟4中所做的選擇，在 *Remote WAN(Internet)IP Address* 欄位中輸入IP地址或FQDN。

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

Endpoint Information

Remote Endpoint:

Remote WAN (Internet) IP Address: (Hint: 1.2.3.4 or abc.com)

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

[Save](#)

[Cancel](#)

步驟6. 在 *Remote LAN(Local Network)IP Address* 和 *Remote LAN(Local Network)Subnet Mask* 欄位中輸入遠端LAN的IP地址和子網掩碼。

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

Endpoint Information

Remote Endpoint:

Remote WAN (Internet) IP Address: (Hint: 1.2.3.4 or abc.com)

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

[Save](#)

[Cancel](#)

步驟7. 在 *Local LAN (Local Network) IP Address* 和 *Local LAN (Local Network) Subnet Mask* 欄位中輸入本地LAN的IP地址和子網掩碼。

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

Endpoint Information

Remote Endpoint:

Remote WAN (Internet) IP Address: (Hint: 1.2.3.4 or abc.com)

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

[Save](#)

[Cancel](#)

步驟8. 按一下 **Save** 以儲存設定。

Basic VPN Setup

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

[View Default Settings](#)

Connection Name and Remote IP Type

New Connection Name:

Pre-Shared Key:

Endpoint Information

Remote Endpoint:

Remote WAN (Internet) IP Address: (Hint: 1.2.3.4 or abc.com)

Secure Connection Remote Accessibility

Remote LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Remote LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

Local LAN (Local Network) IP Address: (Hint: 1.2.3.4)

Local LAN (Local Network) Subnet Mask: (Hint: 255.255.255.0)

檢視與本文相關的影片.....

[按一下此處檢視思科的其他技術對話](#)

關於此翻譯

思科已使用電腦和人工技術翻譯本文件，讓全世界的使用者能夠以自己的語言理解支援內容。請注意，即使是最佳機器翻譯，也不如專業譯者翻譯的內容準確。Cisco Systems, Inc. 對這些翻譯的準確度概不負責，並建議一律查看原始英文文件（提供連結）。