

在SG550XG和SG350XG上使用Ping和Traceroute

目標

SG550XG和SG350XG包括內建ping和traceroute工具，可用於測試交換機的網路通訊。Ping使用ICMP（網際網路控制訊息通訊協定）回應封包來測試網路中主機的連線能力，並返回來回時間和封包狀態等資訊。Traceroute顯示資料包到達網路主機時所用的路由和時間。

本文檔旨在向您展示如何在SG550XG和SG350XG上使用ping和traceroute。

適用裝置

- SG550XG

- SG350XG

軟體版本

- v2.0.0.73

使用Ping和Traceroute工具

Ping

步驟1.登入到Web配置實用程式並選擇Administration > Ping。Ping頁面隨即開啟。

Ping

Host Definition: By IP address By name

Destination IP Address/Name:

Status:

Activate Ping

Cancel

Ping Counters and Status

Number of Sent Packets: 0

Number of Received Packets: 0

Packet Lost: 0 %

Minimum Round Trip Time: 0 ms

Maximum Round Trip Time: 0 ms

Average Round Trip Time: 0 ms

Status: N/A

步驟2.在 *Host Definition* 欄位中，選擇單選按鈕以指定如何標識遠端主機。選擇 **By IP address** 以按IP地址指定主機。選擇 **By name** 以按主機名指定主機。如果您處於基本顯示模式，請跳至 [步驟7](#)(使用Web配置實用程式右上角的下拉選單可以更改顯示模式)。

Ping

Host Definition: By IP address By name

Destination IP Address/Name:

Status:

Ping Counters and Status

Number of Sent Packets:	0
Number of Received Packets:	0
Packet Lost:	0 %
Minimum Round Trip Time:	0 ms
Maximum Round Trip Time:	0 ms
Average Round Trip Time:	0 ms
Status:	N/A

步驟3.如果您在高級顯示模式下檢視Ping頁面，則還有幾個欄位可用。在「IP Version」欄位中，選擇單選按鈕以選擇交換機在ping時將使用的IP版本。選擇**版本4**以使用IPv4，選擇**版本6**以使用IPv6。

Ping

Host Definition: By IP address By name

IP Version: Version 6 Version 4

Source IP:

Destination IPv6 Address Type: Link Local Global

Link Local Interface:

Destination IP Address/Name:

Ping Interval: Use Default User Defined ms (Range: 0 - 65535, Default: 2000)

Number of Pings: Use Default User Defined (Range: 1 - 65535, Default: 4)

Status:

步驟4.在Source IP下拉式清單中，選擇交換器將從中傳送ping的IP位址。預設值為**自動**，會告訴交換器根據目的地位址計算來源位址。如果您在「IP Version」欄位中選擇了**第6版**，請繼續執行步驟5;否則，請跳至**步驟7**。

Ping

Host Definition: By IP address By name

IP Version: Version 6 Version 4

Source IP:

Destination IPv6 Address Type:

Link Local Interface:

Destination IP Address/Name:

Ping Interval: Use Default
 User Defined ms (Range: 0 - 65535, Default: 2000)

Number of Pings: Use Default
 User Defined (Range: 1 - 65535, Default: 4)

Status:

步驟5. 在目標IPv6地址型別欄位中，選擇單選按鈕以指示目標IPv6地址的型別。

Ping

Host Definition: By IP address By name

IP Version: Version 6 Version 4

Source IP:

Destination IPv6 Address Type: Link Local Global

Link Local Interface:

Destination IP Address/Name:

Ping Interval: Use Default
 User Defined ms (Range: 0 - 65535, Default: 2000)

Number of Pings: Use Default
 User Defined (Range: 1 - 65535, Default: 4)

Status:

選項包括：

- 本地鏈路 — IP地址唯一標識單個網路鏈路上的主機。鏈路本地地址的字首為FE80，不可路由，只能用於本地網路上的通訊。如果介面上存在鏈路本地地址，此條目將替換配置中的地址。
- 全域性 — 地址是可從其他網路檢視和訪問的全域性單播IPv6地址。如果選擇此選項，請跳至[步驟7](#)。

步驟6. 如果從Destination IPv6 Address Type欄位中選擇了Link Local，請從Link Local Interface下拉選單中選擇一個鏈路本地介面。

Ping

Host Definition: By IP address By name

IP Version: Version 6 Version 4

Source IP:

Destination IPv6 Address Type: Link Local Global

Link Local Interface:

Destination IP Address/Name:

Ping Interval: Use Default User Defined ms (Range: 0 - 65535, Default: 2000)

Number of Pings: Use Default User Defined (Range: 1 - 65535, Default: 4)

Status:

步驟7.在 *Destination IP Address/Name* 欄位中，輸入遠端主機的IP地址或主機名，具體取決於您在 *Host Definition* 欄位中的選擇。如果您處於基本顯示模式，請跳至 [步驟10](#)。

Ping

Host Definition: By IP address By name

Destination IP Address/Name:

Status:

Ping Counters and Status

Number of Sent Packets:	0
Number of Received Packets:	0
Packet Lost:	0 %
Minimum Round Trip Time:	0 ms
Maximum Round Trip Time:	0 ms
Average Round Trip Time:	0 ms
Status:	N/A

步驟8.在 *Ping Interval* 欄位中，選擇單選按鈕以指定交換器在兩次傳送封包之間等待的時間長度。選擇 **使用預設值** 以使用預設設定（2000毫秒），或選擇 **使用者定義** 以輸入自定義的時間長度(範圍為0-65535)。

Ping

Host Definition: By IP address By name

IP Version: Version 6 Version 4

Source IP:

Destination IPv6 Address Type: Link Local Global

Link Local Interface:

Destination IP Address/Name:

Ping Interval: Use Default User Defined ms (Range: 0 - 65535, Default: 2000)

Number of Pings: Use Default User Defined (Range: 1 - 65535, Default: 4)

Status:

步驟9. 在「*Number of Ping*」欄位中，選擇單選按鈕以指定交換器傳送到目的地的ping數量。選擇**Use Default**以使用預設設定(4 ping)，或選擇**User Defined**以輸入自定義數字(範圍為0-65535)。

Ping

Host Definition: By IP address By name

IP Version: Version 6 Version 4

Source IP:

Destination IPv6 Address Type: Link Local Global

Link Local Interface:

Destination IP Address/Name:

Ping Interval: Use Default User Defined ms (Range: 0 - 65535, Default: 2000)

Number of Pings: Use Default User Defined (Range: 1 - 65535, Default: 4)

Status:

步驟10. 單擊**Activate Ping**以啟動ping，或按一下**Cancel**以清除設定。

Ping

Host Definition: By IP address By name

Destination IP Address/Name:

Status:

Activate Ping

Ping Counters and Status

Number of Sent Packets:	0
Number of Received Packets:	0
Packet Lost:	0 %
Minimum Round Trip Time:	0 ms
Maximum Round Trip Time:	0 ms
Average Round Trip Time:	0 ms
Status:	N/A

步驟11.處理ping時，將出現一個載入欄。按一下此欄下方的停止Ping按鈕取消Ping。

Ping

Host Definition: By IP address By name


Destination IP Address/Name:

Status:

Ping Counters and Status

Number of Sent Packets:	1
Number of Received Packets:	1
Packet Lost:	0 %
Minimum Round Trip Time:	0 ms
Maximum Round Trip Time:	0 ms
Average Round Trip Time:	0 ms
Status:	Ping in progress

Processing Data

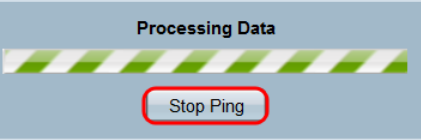

Stop Ping

步驟12.完成ping操作後，頁面上的多個欄位將透過資訊進行更新。

Ping

Host Definition: By IP address By name

Destination IP Address/Name:

Status: Ping Succeeded

Ping Counters and Status

Number of Sent Packets:	4
Number of Received Packets:	4
Packet Lost:	0 %
Minimum Round Trip Time:	10 ms
Maximum Round Trip Time:	10 ms
Average Round Trip Time:	5 ms
Status:	Success

欄位為：

- Number of Sent Packets — 顯示傳送到遠端主機的ICMP回應請求資料包總數。
- Number of Received Packets — 顯示從遠端主機接收的ICMP回應回覆封包總數。
- Packet Lost — 顯示從未收到對應回應回覆封包的回應請求封包的百分比。
- 最小往返時間 — 顯示所有傳送的資料包中最快的資料包往返時間。
- 最大往返時間 — 顯示所有傳送的資料包中最慢的資料包往返時間。
- 平均來回時間 — 顯示所有已傳送資料包的平均來回時間。
- 狀態 — 顯示ping的返回狀態。

Traceroute

步驟1.登入到Web配置實用程式，然後選擇**Administration > Traceroute**。*Traceroute*頁面隨即開啟。

Traceroute

Host Definition: By IP address By name

Host IP Address/Name:

Activate Traceroute

Cancel

步驟2. 在 *Host Definition* 欄位中，選擇單選按鈕以指定如何標識遠端主機。選擇 **By IP address** 以按主機的IPv4地址指定主機。選擇 **By name** 以按主機名指定主機。如果您處於基本顯示模式，請跳至 [步驟5](#)。如果您在此欄位中選擇了 **By name**，並且處於高級顯示模式，請跳至 [步驟4](#)。

Traceroute

Host Definition: By IP address By name

Host IP Address/Name:

Activate Traceroute

Cancel

步驟3. 如果您在「高級」顯示模式下檢視 *Traceroute* 頁，則還有幾個欄位可用(使用Web配置實用程式右上角的下拉選單可以更改顯示模式)。在「*IP Version*」欄位中，選擇單選按鈕以選擇交換器執行traceroute時將使用的IP版本。選擇 **版本4** 以使用IPv4，選擇 **版本6** 以使用IPv6。

Traceroute

Host Definition: By IP address By name

IP Version: Version 6 Version 4

Source IP:

Host IP Address/Name:

TTL: Use Default
 User Defined (Range: 1 - 255, Default: 30)

Timeout: Use Default
 User Defined sec (Range: 1 - 60, Default: 3)

Activate Traceroute

Cancel

步驟4. 在 *Source IP* 下拉清單中，選擇交換器將從中傳送traceroute的IP位址。預設值為自動，會告訴交換器根據目的地地址計算來源位址。

Traceroute

Host Definition: By IP address By name

IP Version: Version 6 Version 4

Source IP:

Host IP Address/Name:

TTL: Use Default User Defined (Range: 1 - 255, Default: 30)

Timeout: Use Default User Defined sec (Range: 1 - 60, Default: 3)

步驟5.在「主機IP地址/名稱」欄位中，輸入遠端主機的IP地址或主機名，具體取決於在「主機定義」欄位中所做選擇。如果您處於基本顯示模式，請跳至**步驟8**。

Traceroute

Host Definition: By IP address By name

Host IP Address/Name:

步驟6.在TTL欄位中，選擇單選按鈕以指定traceroute將允許的最大跳數。TTL（存留時間）功能用於防止封包陷入無限循環中；如果封包超過其TTL值，其到達的下一個路由器將會捨棄該封包，並將一個ICMP超出時間封包傳送回交換器。選擇**Use Default**以使用預設設定(30)，或選擇**User Defined**以輸入自定義數字（範圍為1-255）。

Traceroute

Host Definition: By IP address By name

IP Version: Version 6 Version 4

Source IP:


Host IP Address/Name:

TTL: Use Default User Defined (Range: 1 - 255, Default: 30)

Timeout: Use Default User Defined sec (Range: 1 - 60, Default: 3)


步驟7.在Timeout欄位中，選擇單選按鈕以指定交換器在宣告傳回封包遺失並轉送到下一個封包之前等待傳回封包的時間。選擇**Use Default**以使用預設設定（3毫秒），或選擇**User**

Defined以輸入自定義數字（範圍為1-60）。

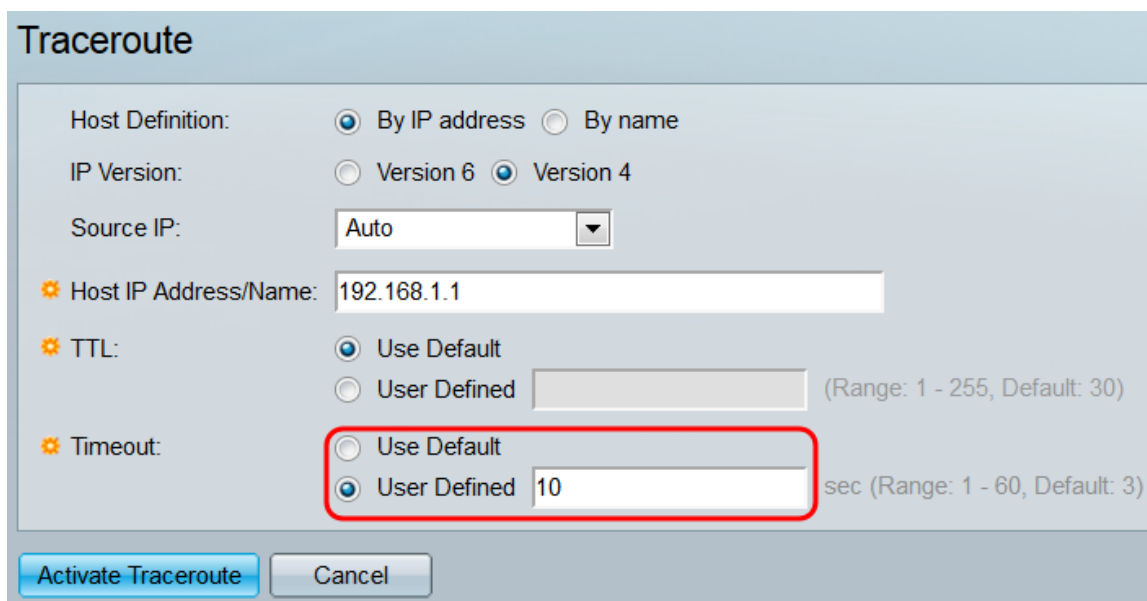


The image shows a 'Traceroute' configuration window. It has several settings: 'Host Definition' is set to 'By IP address'; 'IP Version' is set to 'Version 4'; 'Source IP' is set to 'Auto'; 'Host IP Address/Name' is '192.168.1.1'; 'TTL' is set to 'Use Default'; 'Timeout' is set to 'User Defined' with the value '10' entered in the text box. The '10' and the 'User Defined' radio button are circled in red. At the bottom, there are 'Activate Traceroute' and 'Cancel' buttons.

步驟8.單擊**Activate Traceroute**啟動traceroute，或按一下**Cancel**清除設定。

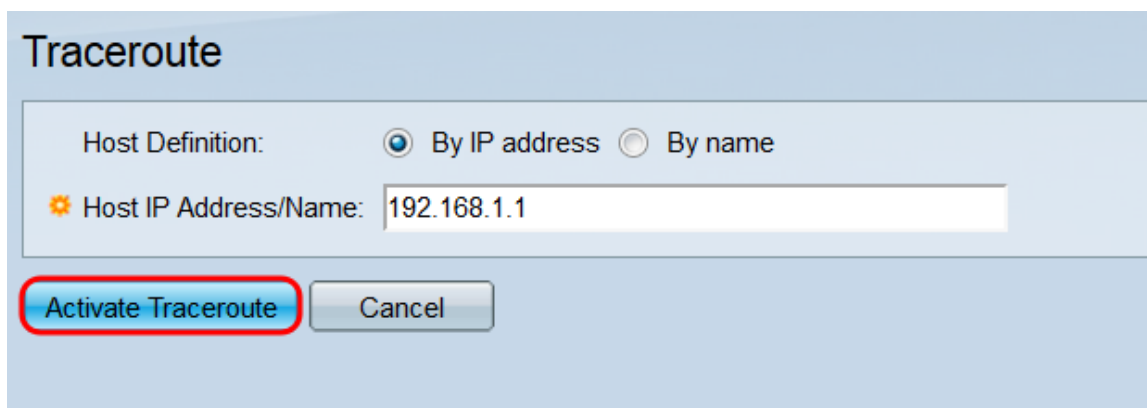

This image is similar to the previous one, but the 'Activate Traceroute' button is circled in red, indicating it should be clicked to start the traceroute.

步驟9.處理traceroute時，將出現一個載入欄。按一下此欄下方的**停止Traceroute**按鈕取消traceroute。

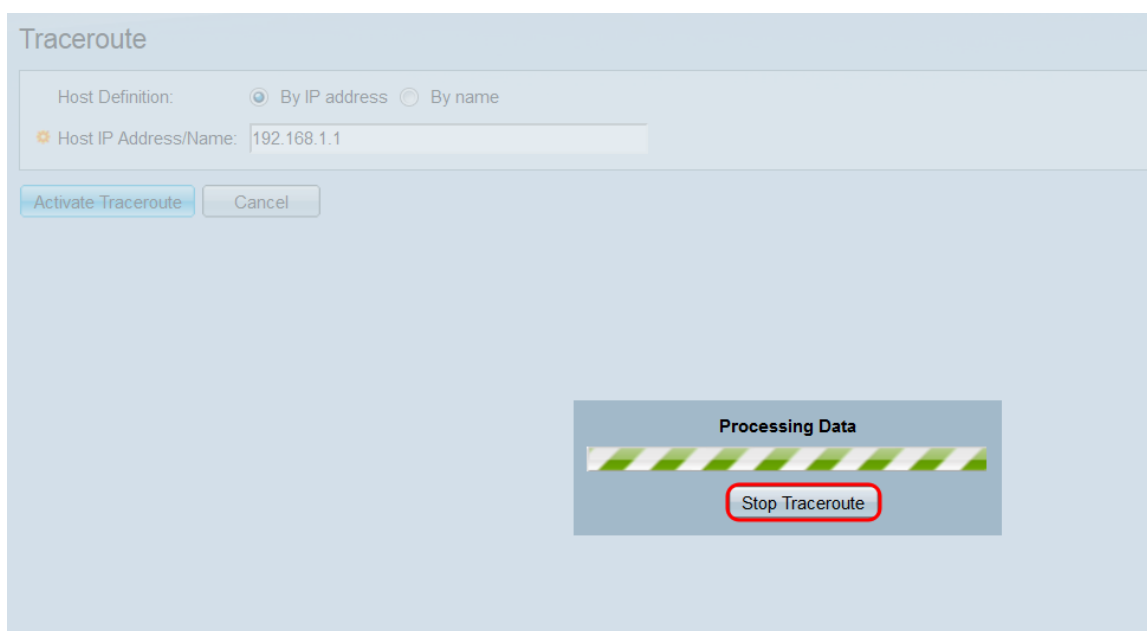

The image shows the 'Traceroute' dialog box during the process. A progress bar labeled 'Processing Data' is visible, with a green and white striped pattern. Below the progress bar, the 'Stop Traceroute' button is circled in red, indicating it should be clicked to stop the process.

步驟10.當traceroute完成時，將顯示 *Traceroute* 表，它儲存返回的所有資訊。Traceroute將三個封包傳送到遠端主機，且每個封包的個別資訊都位於每個來回行程1-3欄位下。

Traceroute

Status: Traceroute Complete

Traceroute Table

Index	Host	Round Trip 1		Round Trip 2		Round Trip 3	
		Time (ms)	Status	Time (ms)	Status	Time (ms)	Status
1	192.168.1.1	20	Succeeded	20	Succeeded	20	Succeeded

[Back](#)

欄位為：

- 索引 — 顯示跳數。
- 主機 — 顯示路由上停止點的IP地址。
- 往返時間1-3 — 顯示每個資料包的traceroute資訊。
 - 時間 (毫秒) — 顯示到達停靠站的往返時間。
 - 狀態 — 顯示資料包是否成功到達停止。