

在SPA112和SPA122的區域語音引數中配置垂直服務代碼

目標

垂直服務碼是撥入電話號碼的特殊代碼，提供特殊的電話功能。垂直服務公告代碼是一種特殊功能，允許使用者在呼叫連線之前收聽線路上的記錄，當使用者輸入該代碼時。星號由*號啟用，電話摘機。

本文的目的是解釋如何在SPA112或SPA122的區域語音設定中配置垂直服務引數。這有助於調整快捷方式，例如執行呼叫重撥所需的鍵。

適用裝置

- SPA112
- SPA122

軟體版本

- 1.3.2 (2014年)

區域語音引數中的垂直服務代碼

步驟1. 登入到Phone Adapter Configuration Utility，然後選擇Voice > Regional。Regional頁面隨即開啟：

Regional

Vertical Service Activation Codes

Call Return Code:	<input type="text" value="*69"/>	Call Redial Code:	<input type="text" value="*07"/>
Blind Transfer Code:	<input type="text" value="*98"/>	Call Back Act Code:	<input type="text" value="*66"/>
Call Back Deact Code:	<input type="text" value="*86"/>	Call Back Busy Act Code:	<input type="text" value="*05"/>
Cfwd All Act Code:	<input type="text" value="*72"/>	Cfwd All Deact Code:	<input type="text" value="*73"/>
Cfwd Busy Act Code:	<input type="text" value="*90"/>	Cfwd Busy Deact Code:	<input type="text" value="*91"/>
Cfwd No Ans Act Code:	<input type="text" value="*92"/>	Cfwd No Ans Deact Code:	<input type="text" value="*93"/>
Cfwd Last Act Code:	<input type="text" value="*63"/>	Cfwd Last Deact Code:	<input type="text" value="*83"/>
Block Last Act Code:	<input type="text" value="*60"/>	Block Last Deact Code:	<input type="text" value="*80"/>
Accept Last Act Code:	<input type="text" value="*64"/>	Accept Last Deact Code:	<input type="text" value="*84"/>
CW Act Code:	<input type="text" value="*56"/>	CW Deact Code:	<input type="text" value="*57"/>
CW Per Call Act Code:	<input type="text" value="*71"/>	CW Per Call Deact Code:	<input type="text" value="*70"/>
Block CID Act Code:	<input type="text" value="*67"/>	Block CID Deact Code:	<input type="text" value="*68"/>
Block CID Per Call Act Code:	<input type="text" value="*81"/>	Block CID Per Call Deact Code:	<input type="text" value="*82"/>
Block ANC Act Code:	<input type="text" value="*77"/>	Block ANC Deact Code:	<input type="text" value="*87"/>
DND Act Code:	<input type="text" value="*78"/>	DND Deact Code:	<input type="text" value="*79"/>
CID Act Code:	<input type="text" value="*65"/>	CID Deact Code:	<input type="text" value="*85"/>
CWCID Act Code:	<input type="text" value="*25"/>	CWCID Deact Code:	<input type="text" value="*45"/>
Dist Ring Act Code:	<input type="text" value="*26"/>	Dist Ring Deact Code:	<input type="text" value="*46"/>
Speed Dial Act Code:	<input type="text" value="*74"/>	Paging Code:	<input type="text" value="*96"/>
Secure All Call Act Code:	<input type="text" value="*16"/>	Secure No Call Act Code:	<input type="text" value="*17"/>
Secure One Call Act Code:	<input type="text" value="*18"/>	Secure One Call Deact Code:	<input type="text" value="*19"/>
Conference Act Code:	<input type="text"/>	Attn-Xfer Act Code:	<input type="text"/>
Modem Line Toggle Code:	<input type="text" value="*99"/>	FAX Line Toggle Code:	<input type="text" value="#99"/>
Media Loopback Code:	<input type="text" value="*03"/>		
Referral Services Codes:	<input type="text"/>		
Feature Dial Services Codes:	<input type="text"/>		

Vertical Service Announcement Codes

Service Annc Base Number:	<input type="text"/>
Service Annc Extension Codes:	<input type="text"/>

注意： 向下滾動到Vertical Service Activation Codes部分以配置所需的代碼。

注意： 向下滾動到Vertical Service Announcement Codes部分以配置所需的代碼。

垂直服務啟用碼

Vertical Service Activation Codes			
Call Return Code:	*69	Call Redial Code:	*07
Blind Transfer Code:	*98	Call Back Act Code:	*66
Call Back Deact Code:	*86	Call Back Busy Act Code:	*05
Cfwd All Act Code:	*72	Cfwd All Deact Code:	*73
Cfwd Busy Act Code:	*90	Cfwd Busy Deact Code:	*91
Cfwd No Ans Act Code:	*92	Cfwd No Ans Deact Code:	*93
Cfwd Last Act Code:	*63	Cfwd Last Deact Code:	*83
Block Last Act Code:	*60	Block Last Deact Code:	*80
Accept Last Act Code:	*64	Accept Last Deact Code:	*84
CW Act Code:	*56	CW Deact Code:	*57
CW Per Call Act Code:	*71	CW Per Call Deact Code:	*70
Block CID Act Code:	*67	Block CID Deact Code:	*68

步驟2.在呼叫返回代碼欄位中輸入值。此代碼呼叫最後一個呼叫方。預設值為*69。

步驟3.在Call Redial Code欄位中輸入值。此代碼重新撥打最後呼叫的號碼。預設值為*07。

步驟4.在Blind Transfer Code字段中輸入值。此代碼開始將當前呼叫盲轉接到指定分機。預設值為*98。

步驟5.在Call Back Act Code欄位中輸入值。此代碼在最後一個出站呼叫不忙時開始回撥。預設值為*66。

步驟6.在Call Back Deact Code欄位中輸入值。此代碼取消回撥。預設值為*86。

步驟7.在Call Back Busy Act Code欄位中輸入值。此代碼在最後一個出站呼叫忙時開始回撥。預設值為*05。

Vertical Service Activation Codes			
Call Return Code:	*69	Call Redial Code:	*07
Blind Transfer Code:	*98	Call Back Act Code:	*66
Call Back Deact Code:	*86	Call Back Busy Act Code:	*05
Cfwd All Act Code:	*72	Cfwd All Deact Code:	*73
Cfwd Busy Act Code:	*90	Cfwd Busy Deact Code:	*91
Cfwd No Ans Act Code:	*92	Cfwd No Ans Deact Code:	*93
Cfwd Last Act Code:	*63	Cfwd Last Deact Code:	*83
Block Last Act Code:	*60	Block Last Deact Code:	*80
Accept Last Act Code:	*64	Accept Last Deact Code:	*84
CW Act Code:	*56	CW Deact Code:	*57
CW Per Call Act Code:	*71	CW Per Call Deact Code:	*70
Block CID Act Code:	*67	Block CID Deact Code:	*68

步驟8.在Cfwd All Act Code欄位中輸入值。此代碼將所有呼叫轉發到指定的分機。預設值為*72。

步驟9.在Cfwd All Deact Code欄位中輸入值。此代碼會取消所有呼叫的呼叫前轉。預設值為*73。

步驟10.在Cfwd Busy Act Code欄位中輸入值。此代碼將忙碌呼叫轉送到指定的分機。預設值為*90。

步驟11.在 *Cfwd Busy Deact Code* 欄位中輸入值。此代碼將取消忙碌呼叫的呼叫前轉。預設值為*91。

步驟12.在 *Cfwd No Ans Act Code* 欄位中輸入值。此代碼將無應答呼叫轉發到指定的分機。預設值為*92。

步驟13.在 *Cfwd No Ans Deact Code* 欄位中輸入值。此代碼將取消無應答呼叫的呼叫前轉。預設值為*93。

Vertical Service Activation Codes			
Call Return Code:	*69	Call Redial Code:	*07
Blind Transfer Code:	*98	Call Back Act Code:	*66
Call Back Deact Code:	*86	Call Back Busy Act Code:	*05
Cfwd All Act Code:	*72	Cfwd All Deact Code:	*73
Cfwd Busy Act Code:	*90	Cfwd Busy Deact Code:	*91
Cfwd No Ans Act Code:	*92	Cfwd No Ans Deact Code:	*93
Cfwd Last Act Code:	*63	Cfwd Last Deact Code:	*83
Block Last Act Code:	*60	Block Last Deact Code:	*80
Accept Last Act Code:	*64	Accept Last Deact Code:	*84
CW Act Code:	*56	CW Deact Code:	*57
CW Per Call Act Code:	*71	CW Per Call Deact Code:	*70
Block CID Act Code:	*67	Block CID Deact Code:	*68

步驟14.在 *Cfwd Last Act Code* 字段中輸入值。此代碼將最後一個入站或出站呼叫轉發到指定的分機。預設值為*63。

步驟15.在「循環轉發最後偵錯代碼」欄位中輸入一個值。此代碼將取消最後入站或出站呼叫的呼叫前轉。預設值為*83。

步驟16.在 *Block Last Act Code* 字段中輸入值。此代碼阻止最後一個入站呼叫。預設值為*60。

步驟17.在「阻止上次偵錯代碼」欄位中輸入值。此代碼取消阻止最後一個入站呼叫。預設值為*80。

步驟18.在 *Accept Last Act Code* 欄位中輸入值。此代碼接受最後一個出站呼叫。預設值為*64。

步驟19.在「接受上一個處理代碼」欄位中輸入值。此代碼將取消接受上次出站呼叫的代碼。預設值為*84。

Vertical Service Activation Codes			
Call Return Code:	*69	Call Redial Code:	*07
Blind Transfer Code:	*98	Call Back Act Code:	*66
Call Back Deact Code:	*86	Call Back Busy Act Code:	*05
Cfwd All Act Code:	*72	Cfwd All Deact Code:	*73
Cfwd Busy Act Code:	*90	Cfwd Busy Deact Code:	*91
Cfwd No Ans Act Code:	*92	Cfwd No Ans Deact Code:	*93
Cfwd Last Act Code:	*63	Cfwd Last Deact Code:	*83
Block Last Act Code:	*60	Block Last Deact Code:	*80
Accept Last Act Code:	*64	Accept Last Deact Code:	*84
CW Act Code:	*56	CW Deact Code:	*57
CW Per Call Act Code:	*71	CW Per Call Deact Code:	*70
Block CID Act Code:	*67	Block CID Deact Code:	*68

步驟20.在「CW活動代碼」欄位中輸入值。此代碼在所有呼叫上啟用呼叫等待。預設值為*56。

步驟21.在「CW Deact Code」欄位中輸入值。此代碼禁用所有呼叫上的呼叫等待。預設值為*57。

步驟22.在「CW Per Call Act Code」欄位中輸入值。此代碼啟用呼叫等待下一次呼叫。預設值為*71。

步驟23.在「CW Per Call Deact Code」欄位中輸入值。此代碼禁用呼叫等待下一次呼叫。預設值為*70。

步驟24.在Block CID Act Code欄位中輸入值。此代碼阻止所有出站呼叫上的呼叫者ID。預設值為*67。

步驟25.在Block CID Deact Code欄位中輸入值。此代碼刪除所有出站呼叫上的來電者ID阻止。預設值為*68。

Block CID Per Call Act Code:	*81	Block CID Per Call Deact Code:	*82
Block ANC Act Code:	*77	Block ANC Deact Code:	*87
DND Act Code:	*78	DND Deact Code:	*79
CID Act Code:	*65	CID Deact Code:	*85
CWCID Act Code:	*25	CWCID Deact Code:	*45
Dist Ring Act Code:	*26	Dist Ring Deact Code:	*46
Speed Dial Act Code:	*74	Paging Code:	*96
Secure All Call Act Code:	*16	Secure No Call Act Code:	*17
Secure One Call Act Code:	*18	Secure One Call Deact Code:	*19
Conference Act Code:		Attn-Xfer Act Code:	
Modem Line Toggle Code:	*99	FAX Line Toggle Code:	#99
Media Loopback Code:	*03		

步驟26.在Block CID Per Call Act Code欄位中輸入值。此代碼在下一次出站呼叫時啟用來電者ID阻止。預設值為*81。

步驟27.在Block CID Per Call Deact Code欄位中輸入值。此代碼將取消阻止下一個出站呼叫。預設值為*82。

步驟28.在Block ANC Act Code欄位中輸入值。此代碼阻止所有匿名呼叫。預設值為*77。

步驟29.在塊ANC解碼代碼欄位中輸入值。此代碼刪除對所有匿名呼叫的阻止。預設值為*87。

步驟30.在「DND行為代碼」欄位中輸入值。此代碼啟用免打擾功能。預設值為*78。

步驟31.在「DND解碼代碼」欄位中輸入值。此代碼禁用免打擾功能。預設值為*79。

Block CID Per Call Act Code:	*81	Block CID Per Call Deact Code:	*82
Block ANC Act Code:	*77	Block ANC Deact Code:	*87
DND Act Code:	*78	DND Deact Code:	*79
CID Act Code:	*65	CID Deact Code:	*85
CWCID Act Code:	*25	CWCID Deact Code:	*45
Dist Ring Act Code:	*26	Dist Ring Deact Code:	*46
Speed Dial Act Code:	*74	Paging Code:	*96
Secure All Call Act Code:	*16	Secure No Call Act Code:	*17
Secure One Call Act Code:	*18	Secure One Call Deact Code:	*19
Conference Act Code:		Attn-Xfer Act Code:	
Modem Line Toggle Code:	*99	FAX Line Toggle Code:	#99
Media Loopback Code:	*03		

步驟32.在「CID Act Code」字段中輸入值。此代碼啟用來電者ID生成。預設值為*65。

步驟33.在CID解碼代碼欄位中輸入值。此代碼禁用來電者ID生成。預設值為*85。

步驟34.在CWCID Act Code欄位中輸入值。此代碼啟用呼叫等待、呼叫方ID生成。預設值為*25。

步驟35.在「CWCID解碼代碼」欄位中輸入值。此代碼禁用呼叫等待、呼叫方ID生成。預設值為*45。

步驟36.在Dist Ring Act Code欄位中輸入值。此代碼啟用獨特振鈴功能。預設值為*26。

步驟37.在Dist Ring Deact Code欄位中輸入值。此代碼禁用區別性振鈴功能。預設值為*46。

Block CID Per Call Act Code:	*81	Block CID Per Call Deact Code:	*82
Block ANC Act Code:	*77	Block ANC Deact Code:	*87
DND Act Code:	*78	DND Deact Code:	*79
CID Act Code:	*65	CID Deact Code:	*85
CWCID Act Code:	*25	CWCID Deact Code:	*45
Dist Ring Act Code:	*26	Dist Ring Deact Code:	*46
Speed Dial Act Code:	*74	Paging Code:	*96
Secure All Call Act Code:	*16	Secure No Call Act Code:	*17
Secure One Call Act Code:	*18	Secure One Call Deact Code:	*19
Conference Act Code:		Attn-Xfer Act Code:	
Modem Line Toggle Code:	*99	FAX Line Toggle Code:	#99
Media Loopback Code:	*03		

步驟38.在Speed Dial Act Code欄位中輸入值。此代碼分配一個快速撥號號碼。預設值為*74。

步驟39.在「尋呼代碼」字段中輸入值。此代碼用於呼叫組中的其他客戶端。預設值為*96。

步驟40.在Secure All Call Act Code欄位中輸入值。此代碼使所有出站呼叫都安全。預設值為*16。

步驟41.在Secure No Call Act Code欄位中輸入值。此代碼使所有出站呼叫都不安全。預設值為*17。

步驟42.在Secure One Call Act Code欄位中輸入值。此代碼使下一個出站呼叫安全。預設值為*18。

步驟43.在Secure One Call Deact Code欄位中輸入值。此代碼使下一個出站呼叫不安全。預設值為*19。

Block CID Per Call Act Code:	*81	Block CID Per Call Deact Code:	*82
Block ANC Act Code:	*77	Block ANC Deact Code:	*87
DND Act Code:	*78	DND Deact Code:	*79
CID Act Code:	*65	CID Deact Code:	*85
CWCID Act Code:	*25	CWCID Deact Code:	*45
Dist Ring Act Code:	*26	Dist Ring Deact Code:	*46
Speed Dial Act Code:	*74	Paging Code:	*96
Secure All Call Act Code:	*16	Secure No Call Act Code:	*17
Secure One Call Act Code:	*18	Secure One Call Deact Code:	*19
Conference Act Code:		Attn-Xfer Act Code:	
Modem Line Toggle Code:	*99	FAX Line Toggle Code:	#99
Media Loopback Code:	*03		

步驟44.在Conference Act代碼字段中輸入值。如果指定此代碼，則使用者必須在撥打第三方電話進行電話會議之前輸入此代碼。輸入電話會議的代碼。

步驟45.在Attn-Xfer Act Code欄位中輸入值。如果指定此代碼，則使用者必須先輸入此代碼，然後才能撥打第三方的來電轉駁。輸入呼叫轉接的代碼。

步驟46.在「數據機線路切換代碼」欄位輸入值。此代碼將線路切換到數據機。預設值為*99。

步驟47.在「FAX Line Toggle Code」字段中輸入值。此代碼將線路切換到傳真機。預設值為#99。

步驟48.在「Media Loopback Code」字段中輸入值。此代碼用於介質環回。預設值為*03。

Referral Services Codes:	
Feature Dial Services Codes:	

步驟49.在「推薦服務代碼」欄位中輸入值。當使用者將當前呼叫置於保留狀態並正在偵聽第二個撥號音時，使用此代碼。此代碼的最大長度為79個字元，不應與另一個服務啟用代碼衝突。可以在此欄位中配置一個或多個啟動代碼。例如，*98或*97|*98|*123等。

步驟50.在Feature Dial Services Codes欄位中輸入值。此代碼為使用者提供了在收聽第一或第二撥號時應執行的操作。此代碼的最大長度為79個字元。此欄位可配置一個或多個代碼。例如，*98或*97|*98|*123等。

步驟51.按一下Submit按鈕儲存更改。

垂直服務公告代碼

Vertical Service Announcement Codes	
Service Annc Base Number:	<input type="text"/>
Service Annc Extension Codes:	<input type="text" value="CWT: 00"/>

步驟2.在服務編號欄位中輸入值。這是用於服務公告的基本編號。預設設定為空白。

步驟3.在「*Service Annc Extension Codes*」欄位中輸入值。這些是用於服務公告的分機號。擴展代碼具有可以遵循的特定模式。示例包括CWT:00;CWF:20;胖子: 18;FAF:08;FBT:01;FBF:12;FNT:50;FNF:15.

- CWT — 用於指定啟用呼叫等待功能。
- CWF — 用於指定呼叫等待功能已禁用。
- FAT — 用於指定已啟用呼叫前轉所有功能。
- FAF — 用於指定已禁用「呼叫前轉所有功能」。
- FBT — 用於指定來電轉駁忙功能已啟用。
- FBF — 用於指定來電轉駁忙功能已禁用。
- FNT — 用於指定啟用呼叫前轉無應答功能。
- FNF — 用於指定已禁用「呼叫前轉」無應答功能。預設設定為空白。

步驟4.按一下Submit按鈕儲存更改。