

在MS-DOS平台上載入Aironet驅動程式

目錄

[簡介](#)

[必要條件](#)

[需求](#)

[採用元件](#)

[慣例](#)

[安裝Aironet的DOS驅動程式](#)

[相關資訊](#)

簡介

本文檔介紹如何在基於Microsoft DOS(MS-DOS)的筆記型電腦上安裝Cisco Aironet驅動程式。

[必要條件](#)

[需求](#)

思科建議您瞭解以下主題：

- 無線LAN(WLAN)技術及術語
- PC硬體主題
- MS-DOS配置命令

[採用元件](#)

本文中的資訊係根據以下軟體和硬體版本：

- Aironet PCM 3xx或LMC 3xx客戶端介面卡
- MS-DOS 6.22
- DOS版Aironet驅動程式6.22

[慣例](#)

如需文件慣例的詳細資訊，請參閱[思科技術提示慣例](#)。

[安裝Aironet的DOS驅動程式](#)

完成以下步驟以安裝DOS驅動程式：

1. 透過以下方式建立config.sys檔案：

```
DEVICE=A:\DOS\HIMEM.SYS
DEVICE=A:\DOS\EMM386.EXE X=D000-DFFF FRAME=NONE
DEVICEHIGH=A:\IBMDSS14.SYS
DEVICEHIGH=A:\IBMDOSCS.SYS
DEVICEHIGH=A:\DICRMU01.SYS /MA-D000-D7FF /SH=1 /IX=5,10,11,15
DEVICE=A:\NET\IFSHLP.SYS
DEVICE=A:\DOS\RAMDRIVE.SYS 2048 /e
DEVICE=A:\DOS\ANSI.SYS
DOS=HIGH,UMB
FILES=40
BUFFERS=30
LASTDRIVE=Z
SHELL=COMMAND.COM /e:512 /p
```

IBMDSS14.SYS、IBMDOSCS.SYS和DICRMU01.SYS檔案是適用於典型IBM筆記型電腦的PCMCIA卡和套接字服務。根據情況替換筆記型電腦製造商提供的相應檔案。

2. 根據個人需求自定義所包含的cscpkt.ini檔案：

```
[CSCPKT]
;Initialization file for Infrastructure operating mode

; NOTE: The following are some keyword parameters that may
;be modified. Any commented or omitted keyword parameter
;assumes the factory default. For most situations the
;factory defaults will be appropriate. In situations where
;the factory default needs to be modified, uncomment or add the
;keyword parameter line and set the appropriate keyword value.

SSID="network_ssid" ;Must match Access Point setting
;FragThreshold=2312 ;Packet size to start fragmenting
;RTSThreshold=2312 ;Packet size to start sending RTS/CTS
;DataRate1=0x02 ;(1) Mbps supported data bit rate
;DataRate2=0x04 ;(2) Mbps supported data bit rate
;DataRate3=0x0B ;(5.5) Mbps supported data bit rate
;DataRate4=0x16 ;(11) Mbps supported data bit rate
;RefreshInterval=10000 ;Inactivity time to check association
;PowerSaveMode="CAM" ;Constant Awake Mode
;MaxPowerSave="OFF" ;Maximum power save mode
NodeName="CiscoPC" ;Descriptive station name
AuthType="WEPOPEN" ;WEP with open authentication

;The adapter needs 32 16-bit I/O ports, and 1 non-sharable IRQ.
;The following lines should be uncommented and the appropriate
;values set in the following scenarios:
; 1) PCMCIA mode: Override the I/O port base and/or IRQ
; assigned by PCMCIA card services.
; 2) PCMCIA mode: PCMCIA card services is not being used.
; 3) ISA mode: Override the I/O port base and/or IRQ assigned
; by Plug and Play.
; 4) ISA mode: Non-Plug and Play operation.

;PortBase=0x140
;IRQ=5

;If the PCMCIA interface is being used without PCMCIA card services,
;uncomment the following lines and set the appropriate values.

Memory=0xD000
Socket=0

;If the PCMCIA interface is not being used, set the appropriate
;value of "ISA" or "PCI".
```

BusType="PCMCIA"

3. 啟動電腦以載入上述**config.sys**檔案。

4. 發出以下命令：

```
a:>wepdos -365 -tx1 12345678901234567890123456
```

```
setting key 1 to 12345678901234567890123456
```

```
setting transmit key index to 1
```

5. 發出以下命令：

```
a:>cscpkt 0x65
```

```
Cisco Wireless Packet Driver , version 2.04
```

```
(c) Copyright 2000 Cisco System , Inc.
```

```
All rights Reserved
```

```
Card recognized as a radio in socket 00
```

```
Driver Resources --> IO ports 0400-043F IRQ :03
```

```
350 series Firmware 4.25.30
```

```
Mac Address 00:09:7c:31:87:32
```

相關資訊

- [Cisco Aironet無線區域網客戶端介面卡配置指南](#)
- [思科無線產品](#)
- [Cisco Aironet Windows客戶端常見問題](#)
- [技術支援與文件 - Cisco Systems](#)