

EtherSwitch Service Module (ES) Configuration Example

Document ID: 82288

Contents

Introduction

Prerequisites

- Requirements
- Components Used
- Related Products
- Conventions

EtherSwitch Modules – Concepts

Configure

- Network Diagram
- Configurations
- EtherSwitch Module Initial Configuration
- Configure VTP and VLAN
- Configure Spanning Tree, Trunk and Port Channel
- Configure Access Port
- Configure Voice Port
- Configure Routing
- Configure QoS

Verify

Troubleshoot

Related Information

Introduction

This document provides a sample configuration for the EtherSwitch Service module installed in the Integrated Service Router (ISR). This document does not discuss the configuration example for the EtherSwitch Network module.

Prerequisites

Requirements

There are no specific requirements for this document.

Components Used

The information in this document is based on these software and hardware versions:

- Cisco 2800 Series Router on Cisco IOS® Software Release 12.4(10)
- NME-16ES-1G-P – 16-port 10/100 Cisco EtherSwitch Service Module

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact of any command.

Related Products

This configuration can also be used with Cisco 2600/3600/3700/3800 Series Routers.

Refer to Table 6 in Cisco EtherSwitch Service Modules – Data Sheet for more information.

Conventions

Refer to Cisco Technical Tips Conventions for more information on document conventions.

EtherSwitch Modules – Concepts

These are the two types of EtherSwitch modules available for Cisco ISRs:

- **EtherSwitch Service Module (ES)** ES modules have their own processors, switching engines, software and flash memory that run independent of the host router resources. After the ES module is installed in the router, you can console into the ES module from the host router. Then you can create VLANs, configure VLANs, spanning tree, and Virtual Terminal Protocol (VTP) from the ES module. ES modules are based on the Catalyst 3750 platform. This document shows the configuration example only for the ES module.
 - ◆ Refer to Cisco EtherSwitch Service Modules – Data Sheet for more information on ES modules.
 - ◆ Refer to Cisco EtherSwitch Service Modules Feature Guide for information on how to administrate ES modules.
 - ◆ Refer to Catalyst 3750 Series Switches – Configuration Guides for information on how to configure ES modules.
- **EtherSwitch Network Module (ESW)** ESW modules are configured by Router IOS. These modules do not run separate software. It is integrated into the host router IOS. You can create VLANs, configure VLANs, spanning tree, and VTP from the host router. The router stores the VLAN database file (vlan.dat) in the flash.
 - ◆ Refer to Cisco EtherSwitch Network Modules – Data Sheet for more information on ESW modules.
 - ◆ Refer to Cisco EtherSwitch Network Modules Feature Guide for information on how to configure ESW modules.
 - ◆ Refer to EtherSwitch Network Module (ESW) Configuration Example for information on the basic ESW module configuration.


Configure

In this section, you are presented with the information to configure the features described in this document.

Note: Use the Command Lookup Tool (registered customers only) to obtain more information on the commands used in this section.

Network Diagram

This document uses this network setup:

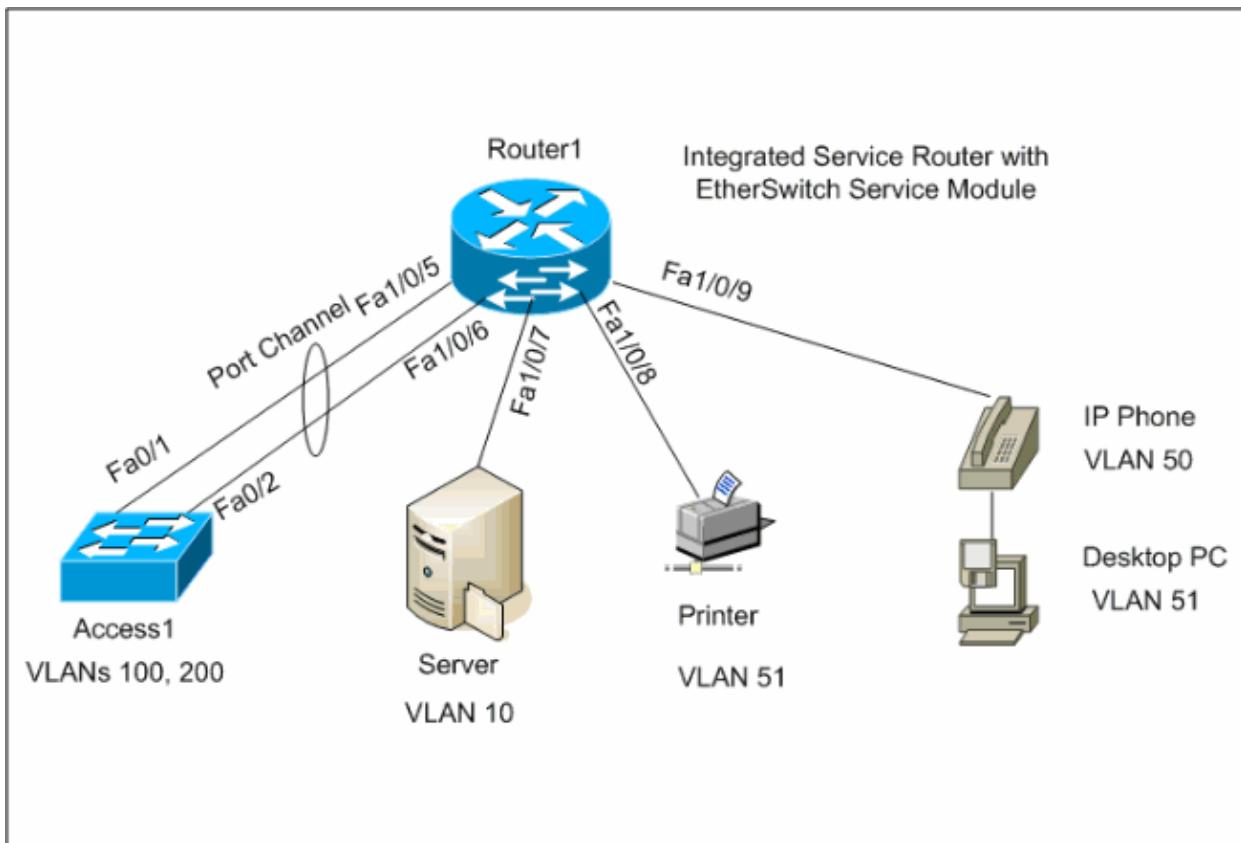

Configurations

This document uses these configurations:

- EtherSwitch Module Initial Configuration
- Configure VTP, VLAN
- Configure Spanning Tree, Trunk and Port Channel
- Configure Access Port
- Configure Voice Port
- Configure Routing
- Configure QoS

EtherSwitch Module Initial Configuration

After the ES module is installed on the router, you see a new **GigabitEthernet interface x/0** (where x is the slot number) recognized by the IOS. This output is taken after the ES module is installed on the router:

Router1#show ip interface brief	Interface	IP-Address	OK?	Method	Status	Protocol
	GigabitEthernet0/0	1.1.1.3	YES	NVRAM	up	down
	GigabitEthernet0/1	unassigned	YES	NVRAM	administratively down	down
	GigabitEthernet1/0	unassigned	YES	unset	administratively down	down
	Vlan1	unassigned	YES	NVRAM	up	

The **service-module gigabitEthernet x/0 session** command is the privileged EXEC mode command used to console into the ES module from the host router. You need to console into the ES module in order to

configure it. In order to console into the ES module, it is required to configure the IP address for the **GigabitEthernet interface x/0**. If you try to console into the module without assigning an IP address, you receive this error message:

```
Router1#service-module gigabitEthernet 1/0 session
IP address needs to be configured on interface GigabitEthernet1/0
```

Router1

Find out the router interface connected to the ES module.

```
Router1#show cdp neighbors
Capability Codes: R - Router, T - Trans Bridge, B - Source Route Bridge
                  S - Switch, H - Host, I - IGMP, r - Repeater, P - Phone

Device ID      Local Intrfce     Holdtme   Capability   Platform    Port ID
Lab-2811       Gi 1/0          157        R           NME-16ES-1G Gi 1/0/2

!--- The Local interface shows the interface
!--- on the router connected internally to the switch.
```

Configure the host router to manage the ES module.

```
Router1#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router1(config)#interface gigabitethernet 1/0

Router1(config-if)#ip address 172.16.1.1 255.255.255.0
Router1(config-if)#no shutdown
Router1(config-if)#exit
Router1(config)#exit
```

Console into the ES Module

```
Router1#service-module gigabitEthernet 1/0 session
Trying 172.16.1.1, 2066 ... Open

--- System Configuration Dialog ---

Would you like to enter the initial configuration dialog? [yes/no]: no

Would you like to terminate autoinstall? [yes]:
Switch>enable
Switch#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)#hostname Switch-ES
Switch-ES(config)#interface gigabitethernet 1/0/2

Switch-ES(config-if)#no switchport
Switch-ES(config-if)#ip address 172.16.1.2 255.255.255.0
Switch-ES(config-if)#exit

!--- GigabitEthernet 1/0/2 connects the ES module to the router.
```

```
Switch-ES(config)#line console 0
Switch-ES(config-line)#password a9913
Switch-ES(config-line)#exec-timeout 30
```

```

Switch-ES(config-line)#exit
Switch-ES(config)#line vty 0 4
Switch-ES(config-line)#password a9913
Switch-ES(config-line)#login
Switch-ES(config-line)#exec-timeout 30
Switch-ES(config-line)#exit


```

This output shows the **show ip interface brief** command from the ES module. The **GigabitEthernet1/0/2** interface connects the ES module to the **GigabitEthernet1/0** interface of the host router.

Interface	IP-Address	OK?	Method	Status	Protocol
Vlan1	unassigned	YES	unset	administratively down	down
FastEthernet1/0/1	unassigned	YES	unset	down	down
FastEthernet1/0/2	unassigned	YES	unset	down	down
FastEthernet1/0/3	unassigned	YES	unset	down	down
FastEthernet1/0/4	unassigned	YES	unset	down	down
FastEthernet1/0/5	unassigned	YES	unset	down	down
FastEthernet1/0/6	unassigned	YES	unset	down	down
FastEthernet1/0/7	unassigned	YES	unset	down	down
FastEthernet1/0/8	unassigned	YES	unset	down	down
FastEthernet1/0/9	unassigned	YES	unset	down	down
FastEthernet1/0/10	unassigned	YES	unset	down	down
FastEthernet1/0/11	unassigned	YES	unset	down	down
FastEthernet1/0/12	unassigned	YES	unset	down	down
FastEthernet1/0/13	unassigned	YES	unset	down	down
FastEthernet1/0/14	unassigned	YES	unset	down	down
FastEthernet1/0/15	unassigned	YES	unset	down	down
FastEthernet1/0/16	unassigned	YES	unset	down	down
GigabitEthernet1/0/1	unassigned	YES	unset	down	down
GigabitEthernet1/0/2	172.16.1.2	YES	manual	up	up

If the ES module or the devices connected to this ES module need to communicate to the external network via the host router, this port (GigabitEthernet1/0/2) needs to be a Layer 3 port or it needs to be a member of Layer 3 VLAN. See the Configure Routing section of this document to understand how to configure the routing on the ES module.

This diagram explains the host router and the ES module logical connectivity:

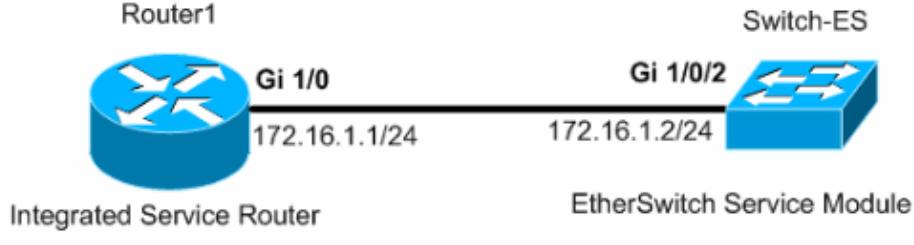

You need to press **Ctrl+Shift+6**, then **X** in order to go back to the host router.

If you need to clear the session from the router, issue the **service-module gigabitEthernet x/0 session clear** command from the router privileged EXEC mode.

Configure VTP and VLAN

By default, the VTP mode is server and the VTP domain name is null in ES module. By default, all the ports belong to vlan1. In this example, a DHCP server (172.16.10.20) is located in vlan 10. The **ip helper-address 172.16.10.20** command is configured on all the VLANs except vlan 10 in order to obtain the IP addresses from the DHCP server for the devices located in these VLANs.

Switch-ES
<p>VTP Configuration</p> <pre>Switch-ES(config)#vtp mode transparent Setting device to VTP TRANSPARENT mode. Switch-ES(config)#vtp domain LAB Changing VTP domain name from NULL to LAB Switch-ES(config)# </pre> <p>Create VLANs</p> <pre>Switch-ES(config)#vlan 10,50,51,100,200 Switch-ES(config-vlan)#exit Switch-ES(config)# </pre> <p>Configure VLANs</p> <pre>Switch-ES(config)#interface vlan 10 Switch-ES(config-if)#ip address 172.16.10.1 255.255.255.0 Switch-ES(config-if)#no shutdown Switch-ES(config-if)#interface vlan 50 Switch-ES(config-if)#ip address 172.16.50.1 255.255.255.0 Switch-ES(config-if)#ip helper-address 172.16.10.20 Switch-ES(config-if)#no shutdown Switch-ES(config-if)#interface vlan 51 Switch-ES(config-if)#ip address 172.16.51.1 255.255.255.0 Switch-ES(config-if)#ip helper-address 172.16.10.20 Switch-ES(config-if)#no shutdown Switch-ES(config-if)#interface vlan 100 Switch-ES(config-if)#ip address 172.16.100.1 255.255.255.0 Switch-ES(config-if)#ip helper-address 172.16.10.20 Switch-ES(config-if)#no shutdown Switch-ES(config-if)#interface vlan 200 Switch-ES(config-if)#ip address 172.16.200.1 255.255.255.0 Switch-ES(config-if)#ip helper-address 172.16.10.20 Switch-ES(config-if)#no shutdown </pre>

Switch-ES#**show vlan**

VLAN	Name	Status	Ports
1	default	active	Fa1/0/1, Fa1/0/2, Fa1/0/3

								Fal/0/4, Fal/0/7, Fal/0/8
								Fal/0/9, Fal/0/10, Fal/0/11
								Fal/0/12, Fal/0/13, Fal/0/14
								Fal/0/15, Fal/0/16, Gi1/0/1
								Gi1/0/2
10	VLAN0010				active			
50	VLAN0050				active			
51	VLAN0051				active			
100	VLAN0100				active			
200	VLAN0200				active			
1002	fddi-default				act/unsup			
1003	token-ring-default				act/unsup			
1004	fdnet-default				act/unsup			
1005	trnet-default				act/unsup			

VLAN	Type	SAID	MTU	Parent	RingNo	BridgeNo	Stp	BrdgMode	Trans1	Trans2
1	enet	100001	1500	-	-	-	-	-	0	0

VLAN	Type	SAID	MTU	Parent	RingNo	BridgeNo	Stp	BrdgMode	Trans1	Trans2
10	enet	100010	1500	-	-	-	-	-	0	0
50	enet	100050	1500	-	-	-	-	-	0	0
51	enet	100051	1500	-	-	-	-	-	0	0
100	enet	100100	1500	-	-	-	-	-	0	0
200	enet	100200	1500	-	-	-	-	-	0	0
1002	fddi	101002	1500	-	-	-	-	-	0	0
1003	tr	101003	1500	-	-	-	-	-	0	0
1004	fdnet	101004	1500	-	-	-	-	ieee -	0	0
1005	trnet	101005	1500	-	-	-	-	ibm -	0	0

Remote SPAN VLANs

Primary	Secondary	Type	Ports


```
Switch-ES#show vtp status
VTP Version : 2
Configuration Revision : 0
Maximum VLANs supported locally : 1005
Number of existing VLANs : 10
VTP Operating Mode : Transparent
VTP Domain Name : LAB
VTP Pruning Mode : Disabled
VTP V2 Mode : Disabled
VTP Traps Generation : Disabled
MD5 digest : 0x21 0x51 0xD5 0x4E 0x30 0xA5 0x46 0x3C
Configuration last modified by 0.0.0.0 at 10-27-06 18:28:10
```

Configure Spanning Tree, Trunk and Port Channel

This section shows the spanning-tree configuration on the ES module and the **Access1** switch. This section also shows the port channel and the trunk configuration between the ES module and the Access1 switch. This example configures the rapid spanning tree on all the switches. The ES module is configured as the spanning-tree root for all the VLANs.

Switch-ES

Spanning-Tree Configuration

```
Switch-ES(config)#spanning-tree mode rapid-pvst
Switch-ES(config)#spanning-tree vlan 10,50,51,100,200 root primary
```

Trunk & Port Channel Configuration

```
Switch-ES(config)#interface port-channel 1
Switch-ES(config-if)#switchport trunk encapsulation dot1q
Switch-ES(config-if)#switchport mode trunk
Switch-ES(config-if)#switchport trunk allowed vlan 100,200
Switch-ES(config-if)#exit

Switch-ES(config)#interface range fastethernet 1/0/5-6
Switch-ES(config-if-range)#switchport trunk encapsulation dot1q
Switch-ES(config-if-range)#switchport mode trunk
Switch-ES(config-if-range)#switchport trunk allowed vlan 100,200
Switch-ES(config-if-range)#channel-group 1 mode on
Switch-ES(config-if-range)#exit
```

Access1

Access1 switch configuration

```
Access1(config)#vtp mode transparent
Setting device to VTP TRANSPARENT mode.

Access1(config)#vtp domain LAB
Changing VTP domain name from NULL to LAB

Access1(config)#vlan 100,200
Access1(config-vlan)#exit

Access1(config)#spanning-tree mode rapid-pvst

Access1(config)#interface port-channel 1
Access1(config-if)#switchport trunk encapsulation dot1q
Access1(config-if)#switchport mode trunk
Access1(config-if)#switchport trunk allowed vlan 100,200
Access1(config-if)#exit

Access1(config)#interface range FastEthernet 0/1 - 2
Access1(config-if-range)#switchport trunk encapsulation dot1q
Access1(config-if-range)#switchport mode trunk
Access1(config-if-range)#switchport trunk allowed vlan 100,200
Access1(config-if-range)#channel-group 1 mode on
Access1(config-if-range)#exit
```

```
Switch-ES#show spanning-tree summary
Switch is in rapid-pvst mode
Root bridge for: VLAN0001, VLAN0100, VLAN0200
Extended system ID      is enabled
Portfast Default        is disabled
PortFast BPDU Guard Default  is disabled
Portfast BPDU Filter Default is disabled
Loopguard Default       is disabled
EtherChannel misconfig guard is enabled
UplinkFast              is disabled
BackboneFast             is disabled
Configured Pathcost method used is short
```

Name	Blocking	Listening	Learning	Forwarding	STP Active
------	----------	-----------	----------	------------	------------

VLAN0001	0	0	0	1	1
VLAN0100	0	0	0	1	1
VLAN0200	0	0	0	1	1
3 vlans	0	0	0	3	3

```
Switch-ES#show interface port-channel 1 trunk
```

Port Pol	Mode on	Encapsulation 802.1q	Status trunking	Native vlan 1
Port Pol	Vlans allowed on trunk 100,200			
Port Pol	Vlans allowed and active in management domain 100,200			
Port Pol	Vlans in spanning tree forwarding state and not pruned 100,200			

Configure Access Port

The access port configuration is similar to the standard LAN switch configuration.

Switch-ES
<p>Configure the port for server</p> <pre>Switch-ES(config)#interface fastEthernet 1/0/7 Switch-ES(config-if)#switchport mode access Switch-ES(config-if)#switchport access vlan 10 Switch-ES(config-if)#spanning-tree portfast Switch-ES(config-if)#speed 100 Switch-ES(config-if)#duplex full Switch-ES(config-if)#exit</pre> <p>Configure Port for Printer</p> <pre>Switch-ES(config)#interface fastethernet 1/0/8 Switch-ES(config-if)#switchport mode access Switch-ES(config-if)#switchport access vlan 51 Switch-ES(config-if)#spanning-tree portfast Switch-ES(config-if)#exit</pre>

Configure Voice Port

The voice port configuration is similar to the standard LAN switch configuration.

Switch-ES
<p>Configure the port for Voice</p> <pre>Switch-ES(config)#interface fastethernet 1/0/9 Switch-ES(config-if)#switchport mode access Switch-ES(config-if)#switchport access vlan 51 Switch-ES(config-if)#switchport voice vlan 50 Switch-ES(config-if)#spanning-tree portfast</pre>

Configure Routing

This example uses static routes to configure the routing.

Switch-ES
<pre>Configure the default route Switch-ES(config)#ip routing Switch-ES(config)#ip route 0.0.0.0 0.0.0.0 172.16.1.1</pre>

Router1
<pre>Configure the route to LAN Router1(config)#ip route 172.16.0.0 255.255.0.0 172.16.1.2</pre>

Configure QoS

This section uses auto QoS to configure QoS. Refer to Cisco AutoQoS White Paper for more information on auto QoS.

Switch-ES
<pre>Configure QoS on the port where IP phone is connected Switch-ES(config)#interface fastethernet 1/0/9 Switch-ES(config-if)#auto qos voip cisco-phone Switch-ES(config-if)#exit Configure QoS on the uplink port to the host router. Switch-ES(config)#interface gigabitEthernet 1/0/2 Switch-ES(config-if)#auto qos voip trust</pre>

Router1
<pre>Create Class map Router1(config)#class-map match-any VoIP-Control Router1(config-cmap)#match ip dscp AF31 Router1(config-cmap)#exit Router1(config)#class-map match-any VoIP-RTP Router1(config-cmap)#match ip dscp EF Router1(config-cmap)#exit Create Policy map Router1(config)#policy-map Policy-VoIP Router1(config-pmap)#class VoIP-RTP Router1(config-pmap-c)#priority percent 70 Router1(config-pmap-c)#class VoIP-Control Router1(config-pmap-c)#bandwidth percent 5 Router1(config-pmap-c)#class class-default Router1(config-pmap-c)#fair-queue</pre>

```
Router1(config-pmap-c)#exit  
Router1(config-pmap)#exit
```

Apply the policy on the interface connects to the ES Module

```
Router1(config)#interface gigabitEthernet 1/0  
Router1(config-if)#service-policy output Policy-VoIP  
Router1(config-if)#exit
```

Verify

There is currently no verification procedure available for this configuration.

Troubleshoot

There is currently no specific troubleshooting information available for this configuration.

Related Information

- [Troubleshooting Router Interfaces and Modules Issues](#)
- [Routers Support Page](#)
- [Technical Support & Documentation – Cisco Systems](#)

[Contacts & Feedback](#) | [Help](#) | [Site Map](#)

© 2014 – 2015 Cisco Systems, Inc. All rights reserved. [Terms & Conditions](#) | [Privacy Statement](#) | [Cookie Policy](#) | [Trademarks of Cisco Systems, Inc.](#)

Updated: Jun 24, 2008

Document ID: 82288
