



Advanced System Command Reference for Cisco CRS Router

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at www.cisco.com/go/offices.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2017 Cisco Systems, Inc. All rights reserved.



CONTENTS

PREFACE

Preface ix

Changes to This Document ix

Communications, Services, and Additional Information ix

CHAPTER 1

ASIC Driver Commands 1

asic-scan egressq (block number)	3
asic-scan egressq disable	5
asic-scan egressq enable	6
asic-scan egressq help-block	7
asic-scan egressq location	8
asic-scan egressq quick-scan	9
asic-scan pse egress (block number)	10
asic-scan pse egress disable	12
asic-scan pse egress enable	13
asic-scan pse egress help-block	14
asic-scan pse egress location	15
asic-scan pse egress quick-scan	16
asic-scan pse ingress (block number)	17
asic-scan pse ingress disable	19
asic-scan pse ingress enable	20
asic-scan pse ingress help-block	21
asic-scan pse ingress location	22
asic-scan pse ingress quick-scan	23
clear controller egressq queue	24
clear controller egressq queue all	25
clear controller egressq statistics	26

clear controller pse statistics	27
show controllers cpuctrl cdma channel	29
show controllers cpuctrl clients	35
show controllers cpuctrl devices	41
show controllers cpuctrl error	46
show controllers cpuctrl internal	48
show controllers cpuctrl ports	51
show controllers cpuctrl ports cpuctrl pio	55
show controllers cpuctrl summary	57
show controllers cpuctrl trace	60
show controllers cpuctrl vcdma	64
show controllers egressq eio links	66
show controllers egressq group	68
show controllers egressq interface	71
show controllers egressq port	74
show controllers egressq queue	76
show controllers egressq statistics	79
show controllers egressq trace	81
show controllers egressq resources	84
show controllers ingressq backpressure	85
show controllers ingressq block	86
show controllers plim asic ether queues	88
show controllers plim asic pla	89
show controllers plim asic pla768	91
show controllers plim asic plaspa	92
show controllers plim asic statistics	94
show controllers plim asic summary	98
show controllers pse eio links	101
show controllers pse ipc	104
show controllers pse mp	111
show controllers pse qfp classification	115
show controllers pse qfp classification feature-manager	117
show controllers pse statistics	120
show controllers pse summary	124

show controllers pse team 127
show controllers pse utilization 131
show packet-memory 133

CHAPTER 2**Troubleshooting Commands 137**

show arp trace 138
show captured packets 142
show cfgmgr trace 144
show im database 146
show imds interface brief 150
show netio chains 152
show netio clients 155
show netio db 157
show netio idb 159
show netio media-registrations 163
show netio subblock 165
show netio trace 167
show sysdb connections 170
show sysdb trace verification location 172
show sysdb trace verification shared-plane 175
show tbm hardware 177
show uidb data 180
show uidb trace 186
show uidb index 188
watchdog threshold memory 191

CHAPTER 3**Fabric Management Commands 193**

clear controller fabric statistics 195
clear controller fabricq statistics 196
clear controller ingressq statistics 198
controllers fabric bundle port 199
controllers fabric plane oim 200
controllers fabric plane shutdown 202
controllers fabric rack 203

controllers fabric statistics collection **204**
show controllers fabric bundle **205**
show controllers fabric connectivity **207**
show controllers fabric driver instance summary **209**
show controllers fabric fgid resource **211**
show controllers fabric fgid statistics **213**
show controllers fabric fsdb-pla rack all **216**
show controllers fabric link port **218**
show controllers fabric plane **221**
show controllers fabric rack all **225**
show controllers fabric sfe **226**
show controllers fabriccq barriers **228**
show controllers fabriccq block **230**
show controllers fabriccq eio **232**
show controllers fabriccq fabric-backpressure **234**
show controllers fabriccq health **237**
show controllers fabriccq link-info **239**
show controllers fabriccq summary **241**
show controllers fabriccq queue **243**
show controllers fabriccq statistics **245**
show controllers ingressq capacity **248**
show controllers ingressq clients **249**
show controllers ingressq eio **250**
show controllers ingressq fabric **252**
show controllers ingressq interfaces **254**
show controllers ingressq queues **256**
show controllers ingressq statistics **258**
show controllers ingressq vports **261**

CHAPTER 4**Tech-Support Commands **263****

show system verify **265**
show tech-support **269**
show tech-support aps **272**
show tech-support asic **285**


show tech-support bcdl	287
show tech-support bundles	289
show tech-support cef	291
show tech-support cfgmgr	294
show tech-support chdlc	296
show tech-support control-ethernet	298
show tech-support custom source-file	303
show tech-support dsc	305
show tech-support ethernet	310
show tech-support fabric	314
show tech-support gsp	317
show tech-support igmp snooping	320
show tech-support install	328
show tech-support l2tp	331
show tech-support l2vpn	336
show tech-support lrd	342
show tech-support mpls ldp	354
show tech-support mpls optical-uni	356
show tech-support mpls rsvp	358
show tech-support mpls traffic-eng	364
show tech-support multicast	369
show tech-support netflow	373
show tech-support nrs	375
show tech-support password	377
show tech-support pfi	379
show tech-support placement	381
show tech-support platform	384
show tech-support pos	388
show tech-support ppp	393
show tech-support qos	396
show tech-support rdfs	398
show tech-support rib	400
show tech-support routing bfd	402
show tech-support routing isis	405

show tech-support routing ospf 407
show tech-support routing ospfv3 410
show tech-support routing rpl 412
show tech-support serial 414
show tech-support sanitized 417
show tech-support services 419
show tech-support snmp 421
show tech-support spaipc 423
show tech-support sysdb 428
show tech-support terminal 430
show tech-support tty 435
show tty details 437

CHAPTER 5

Watchdog Commands 439

show critmon context 440
show critmon deadline 444
show critmon statistics 446
show critmon trace all 454
show critmon trace error 456
show critmon trace info 458
show critmon trace lib-error 460
show critmon trace lib-info 462
show reboot first 464
show reboot graceful 467
show reboot history 468
show reboot last 470
show reboot pcds 473
show watchdog 476

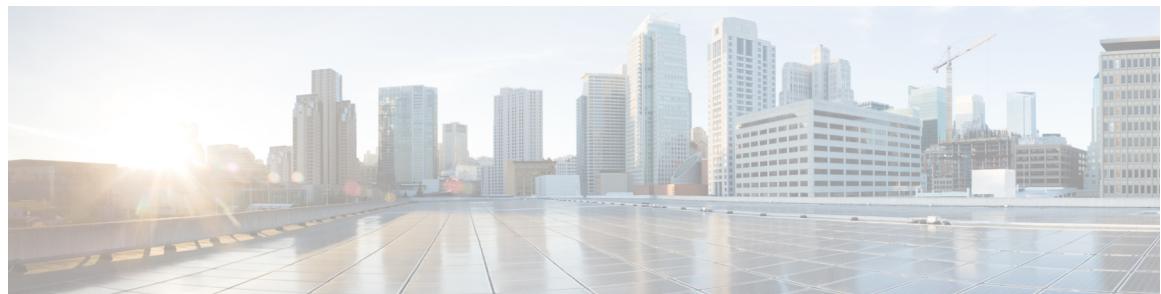

Preface

This Preface contains these sections:

- [Changes to This Document, on page ix](#)
- [Communications, Services, and Additional Information, on page ix](#)

Changes to This Document

This table lists the changes made to this document since it was first printed.

Table 1: Changes to This Document

Date	Change Summary
March 2017	Initial release of this document.
July 2017	Republished for Release 6.2.2.
March 2018	Republished for Release 6.3.2.
March 2018	Republished for Release 6.4.1.
July 2018	Republished for Release 6.5.1.
January 2019	Republished for Release 6.5.2.
March 2019	Republished for Release 6.5.3.
April 2019	Republished for Release 6.6.2
December 2019	Republished for Release 6.6.3


Communications, Services, and Additional Information

- To receive timely, relevant information from Cisco, sign up at [Cisco Profile Manager](#).
- To get the business impact you’re looking for with the technologies that matter, visit [Cisco Services](#).
- To submit a service request, visit [Cisco Support](#).

- To discover and browse secure, validated enterprise-class apps, products, solutions and services, visit [Cisco Marketplace](#).
- To obtain general networking, training, and certification titles, visit [Cisco Press](#).
- To find warranty information for a specific product or product family, access [Cisco Warranty Finder](#).

Cisco Bug Search Tool

[Cisco Bug Search Tool](#) (BST) is a web-based tool that acts as a gateway to the Cisco bug tracking system that maintains a comprehensive list of defects and vulnerabilities in Cisco products and software. BST provides you with detailed defect information about your products and software.

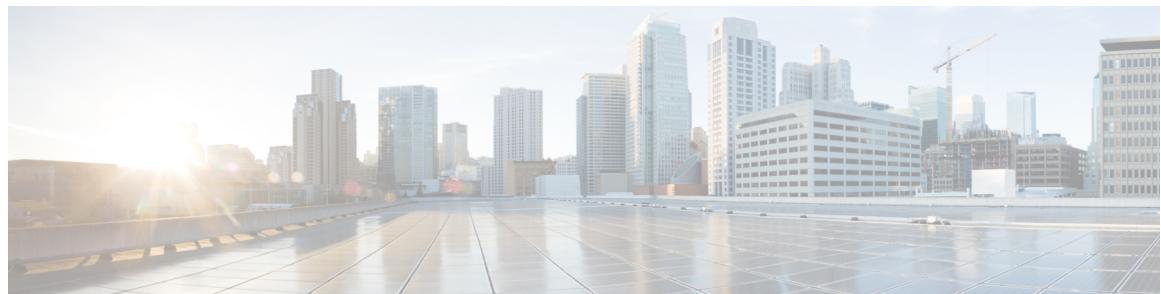

ASIC Driver Commands

This module describes the commands used to configure and monitor the application-specific integrated circuit (ASIC) driver on a router running Cisco IOS XR software.

To use commands of this module, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using any command, contact your AAA administrator for assistance.

- [asic-scan egressq \(block number\)](#), on page 3
- [asic-scan egressq disable](#), on page 5
- [asic-scan egressq enable](#), on page 6
- [asic-scan egressq help-block](#), on page 7
- [asic-scan egressq location](#), on page 8
- [asic-scan egressq quick-scan](#), on page 9
- [asic-scan pse egress \(block number\)](#), on page 10
- [asic-scan pse egress disable](#), on page 12
- [asic-scan pse egress enable](#), on page 13
- [asic-scan pse egress help-block](#), on page 14
- [asic-scan pse egress location](#), on page 15
- [asic-scan pse egress quick-scan](#), on page 16
- [asic-scan pse ingress \(block number\)](#), on page 17
- [asic-scan pse ingress disable](#), on page 19
- [asic-scan pse ingress enable](#), on page 20
- [asic-scan pse ingress help-block](#), on page 21
- [asic-scan pse ingress location](#), on page 22
- [asic-scan pse ingress quick-scan](#), on page 23
- [clear controller egressq queue](#), on page 24
- [clear controller egressq queue all](#), on page 25
- [clear controller egressq statistics](#), on page 26
- [clear controller pse statistics](#), on page 27
- [show controllers cpuctrl cdma channel](#), on page 29
- [show controllers cpuctrl clients](#), on page 35
- [show controllers cpuctrl devices](#), on page 41
- [show controllers cpuctrl error](#), on page 46
- [show controllers cpuctrl internal](#), on page 48
- [show controllers cpuctrl ports](#), on page 51

- [show controllers cpuctrl ports cpuctrl pio](#), on page 55
- [show controllers cpuctrl summary](#), on page 57
- [show controllers cpuctrl trace](#), on page 60
- [show controllers cpuctrl vcdma](#), on page 64
- [show controllers egressq eio links](#), on page 66
- [show controllers egressq group](#), on page 68
- [show controllers egressq interface](#), on page 71
- [show controllers egressq port](#), on page 74
- [show controllers egressq queue](#), on page 76
- [show controllers egressq statistics](#), on page 79
- [show controllers egressq trace](#), on page 81
- [show controllers egressq resources](#), on page 84
- [show controllers ingressq backpressure](#), on page 85
- [show controllers ingressq block](#), on page 86
- [show controllers plim asic ether queues](#), on page 88
- [show controllers plim asic pla](#), on page 89
- [show controllers plim asic pla768](#), on page 91
- [show controllers plim asic plaspa](#), on page 92
- [show controllers plim asic statistics](#), on page 94
- [show controllers plim asic summary](#), on page 98
- [show controllers pse eio links](#), on page 101
- [show controllers pse ipc](#), on page 104
- [show controllers pse mp](#), on page 111
- [show controllers pse qfp classification](#), on page 115
- [show controllers pse qfp classification feature-manager](#), on page 117
- [show controllers pse statistics](#), on page 120
- [show controllers pse summary](#), on page 124
- [show controllers pse tcam](#), on page 127
- [show controllers pse utilization](#), on page 131
- [show packet-memory](#), on page 133

asic-scan egressq (block number)

To run, enable, or disable a generic ASIC scan on a specific egress queue ASIC block ID or error cause, use the **asic-scan egressq** command in EXEC mode.

asic-scan egressq *block_number* [[*error_cause*] [{**disable** | **enable**}] | **help-cause**] **location** *node-id*

Syntax Description	<p>block_number Identifies the block on which to enable or disable the ASIC scan.</p> <p>error_cause (Optional) Identifies an error cause in the specified block. When you include the <i>error_cause</i> argument in the asic-scan egressq command syntax, the command takes place on the specified error cause.</p> <p>disable (Optional) Disables the ASIC scan on the specified block or error cause.</p> <p>enable (Optional) Enables the ASIC scan on the specified block or error cause.</p> <p>help_cause (Optional) Displays a list of all error causes in the specified block.</p>						
	<p>location node-id Identifies the location of the node hosting the egress queue on which to run, enable, or disable an ASIC scan. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.</p> <p>Note Use the show platform command to see the location of all nodes installed in the router.</p>						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.5.0</td> <td>This command was introduced.</td> </tr> <tr> <td>Release 3.6.0</td> <td>Note was added in the Usage Guidelines section that this command can adversely affect the router operation.</td> </tr> </tbody> </table>	Release	Modification	Release 3.5.0	This command was introduced.	Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.
Release	Modification						
Release 3.5.0	This command was introduced.						
Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.						
Usage Guidelines	This command should be used only with Cisco support supervision. Incorrect usage of this command can accidentally remove the relevant card from service.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>drivers</td> <td>read, write</td> </tr> </tbody> </table>	Task ID	Operations	drivers	read, write		
Task ID	Operations						
drivers	read, write						
Examples	The following example shows how to display a list of all error causes in the specified block:						

asic-scan egressq (block number)

```
RP/0/RP0/CPU0:router# asic-scan egressq 10 help-cause location 0/6/CPU0
Total 6 cause(s)

Cause Number      Cause Name
0                lbm_owl_ovl
1                scr_m4_ovl
2                scr_m3_ovl
3                scr_m2_ovl
4                scr_m1_ovl
5                scr_m0_ovl
```

The following example shows how to run a scan on the egress queue ASIC block ID 30 located on the CPU node in slot 1:

```
RP/0/RP0/CPU0:router# asic-scan egressq 30 location 0/6/CPU0
```

asic-scan egressq disable

To disable an ASIC scan on all causes in all blocks on the specified node, use the **asic-scan egressq disable** command in EXEC mode.

asic-scan egressq disable location *node-id*

Syntax Description	location <i>node-id</i> Identifies the location of the node on which to disable the ASIC scan. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Note Use the show platform command to see the location of all nodes installed in the router.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.5.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.6.0</td><td>Note was added in the Usage Guidelines section that this command can adversely affect the router operation.</td></tr> </tbody> </table>	Release	Modification	Release 3.5.0	This command was introduced.	Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.
Release	Modification						
Release 3.5.0	This command was introduced.						
Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.						
Usage Guidelines	This command should be used only with Cisco support supervision. Incorrect usage of this command can accidentally remove the relevant card from service.						
Task ID	<table> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	drivers	read, write		
Task ID	Operations						
drivers	read, write						

Examples The following example shows how to disable an ASIC scan on all causes in all blocks on the egress queue that is located on the CPU node in slot 6:

```
RP/0/RP0/CPU0:router# asic-scan egressq disable location 0/6/CPU0
```

asic-scan egressq enable

asic-scan egressq enable

To enable an ASIC scan on all causes in all blocks on the specified node, use the **asic-scan egressq enable** command in EXEC mode.

asic-scan egressq enable location node-id

Syntax Description	location node-id Identifies the location of the node on which to enable the ASIC scan. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Note Use the show platform command to see the location of all nodes installed in the router.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.5.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.6.0</td><td>Note was added in the Usage Guidelines section that this command can adversely affect the router operation.</td></tr> </tbody> </table>	Release	Modification	Release 3.5.0	This command was introduced.	Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.
Release	Modification						
Release 3.5.0	This command was introduced.						
Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.						
Usage Guidelines	This command should be used only with Cisco support supervision. Incorrect usage of this command can accidentally remove the relevant card from service.						
Task ID	<table> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	drivers	read, write		
Task ID	Operations						
drivers	read, write						

Examples

The following example shows how to enable an ASIC scan on all causes in all blocks on the egress queue that is located on the CPU node in slot 6:

```
RP/0/RP0/CPU0:router# asic-scan egressq enable location 0/6/CPU0
```

asic-scan egressq help-block

To enable an ASIC scan that lists all the blocks on the specified node, use the **asic-scan egressq help-block** command in EXEC mode.

asic-scan egressq help-block location node-id

Syntax Description	location <i>node-id</i> Identifies the location of the node on which to enable the ASIC scan. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.				
	Note Use the show platform command to see the location of all nodes installed in the router.				
Command Default	None				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.6.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.6.0	This command was introduced.
Release	Modification				
Release 3.6.0	This command was introduced.				
Usage Guidelines	This command should be used only with Cisco support supervision. Incorrect usage of this command can accidentally remove the relevant card from service.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	drivers	read, write
Task ID	Operations				
drivers	read, write				

Examples

The following example shows how to enable an ASIC scan that lists all block numbers on the egress queue that is located on the CPU node in slot 6:

```
RP/0/RP0/CPU0:router# asic-scan egressq help-block location 0/6/CPU0
```

asic-scan egressq location

asic-scan egressq location

To run an ASIC scan on all the egress queues on a specific node, use the **asic-scan egressq location** command in EXEC mode.

asic-scan egressq location *node-id*

Syntax Description	location <i>node-id</i> Identifies the location of the node hosting the egress queues on which to run the ASIC scan. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Note Use the show platform command to see the location of all nodes installed in the router.						
Command Default	None						
Command Modes	EXEC mode						
Command History	<table> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.5.0</td> <td>This command was introduced.</td> </tr> <tr> <td>Release 3.6.0</td> <td>Note was added in the Usage Guidelines section that this command can adversely affect the router operation.</td> </tr> </tbody> </table>	Release	Modification	Release 3.5.0	This command was introduced.	Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.
Release	Modification						
Release 3.5.0	This command was introduced.						
Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.						
Usage Guidelines	This command should be used only with Cisco support supervision. Incorrect usage of this command can accidentally remove the relevant card from service.						
Task ID	<table> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>drivers</td> <td>read, write</td> </tr> </tbody> </table>	Task ID	Operations	drivers	read, write		
Task ID	Operations						
drivers	read, write						

Examples

The following example shows how to run an ASIC scan on all egress queues located on the CPU node in slot 1:

```
RP/0/RP0/CPU0:router# asic-scan egressq location 0/1/CPU0
```

asic-scan egressq quick-scan

To run a quick ASIC scan on a specific file or on all bits of the chip, use the **asic-scan egressq quick-scan** command in EXEC mode.

asic-scan egressq quick-scan {filename | allscan} location node-id

Syntax Description	<p>filename Name of the .xsvf file on which to run the quick ASIC scan</p> <p>allscan Performs a quick ASIC scan on all bits of the chip, including the preread for Metro.</p> <p>location node-id Identifies the location of the node hosting the egress queue on which to run the ASIC scan. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.</p> <p>Note Use the show platform command to see the location of all nodes installed in the router.</p>						
Command Default	None						
Command Modes	EXEC mode						
Command History	<table> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.5.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.6.0</td><td>Note was added in the Usage Guidelines section that this command can adversely affect the router operation.</td></tr> </tbody> </table>	Release	Modification	Release 3.5.0	This command was introduced.	Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.
Release	Modification						
Release 3.5.0	This command was introduced.						
Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.						
Usage Guidelines	This command should be used only with Cisco support supervision. Incorrect usage of this command can accidentally remove the relevant card from service.						
Task ID	<table> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	drivers	read, write		
Task ID	Operations						
drivers	read, write						
Examples	The following example shows how to run a quick ASIC scan on all bits of the chip on the egress queue that is located on the CPU node in slot 1:						

```
RP/0/RP0/CPU0:router# asic-scan egressq quick-scan allscan location 0/1/CPU0
```

asic-scan pse egress (block number)

asic-scan pse egress (block number)

To run, enable, or disable a generic ASIC scan on a specific egress packet switching engine (PSE) device block or error cause, use the **asic-scan pse egress** command in EXEC mode.

asic-scan pse egress block_number [{error_cause] [{disable|enable}] [help-cause]} location node-id

Syntax Description	<p>block_number Identifies the block on which to enable or disable the ASIC scan.</p> <p>error_cause (Optional) Identifies an error cause in the specified block. When you include the <i>error_cause</i> argument in the asic-scan pse egress command syntax, the command takes place on the specified error cause.</p> <p>disable (Optional) Disables the ASIC scan on the specified block or error cause.</p> <p>enable (Optional) Enables the ASIC scan on the specified block or error cause.</p> <p>help_cause (Optional) Displays a list of all error causes in the specified block.</p> <p>location node-id Identifies the location of the node hosting the egress PSE device on which to run, enable, or disable an ASIC scan. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.</p> <p>Note Use the show platform command to see the location of all nodes installed in the router.</p>						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.6.0</td><td>Note was added in the Usage Guidelines section that this command can adversely affect the router operation.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.						
Usage Guidelines	This command should be used only with Cisco support supervision. Incorrect usage of this command can accidentally remove the relevant card from service.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	drivers	read, write		
Task ID	Operations						
drivers	read, write						
Examples	The following example shows how to display a list of all error causes in the specified block of a PSE device:						

```
RP/0/RP0/CPU0:router# asic-scan pse egress 10 help-cause location 0/6/CPU0
```

Total 6 cause(s)

Cause Number	Cause Name
0	lbt_owl_ovl
1	scr_m4_ovl
2	scr_m3_ovl
3	scr_m2_ovl
4	scr_m1_ovl
5	scr_m0_ovl

The following example shows how to run a scan on the PSE ASIC block ID 30 located on the CPU node in slot 1:

```
RP/0/RP0/CPU0:router# asic-scan pse egress 30 location 0/6/CPU0
```

asic-scan pse egress disable

asic-scan pse egress disable

To disable an ASIC scan on all causes in all blocks of a specific packet switching engine (PSE) device, use the **asic-scan pse egress disable** command in EXEC mode.

asic-scan pse egress disable location node-id

Syntax Description	location node-id Identifies the location of the node on which to disable the ASIC scan. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Note Use the show platform command to see the location of all nodes installed in the router.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> <tr> <td>Release 3.6.0</td> <td>Note was added in the Usage Guidelines section that this command can adversely affect the router operation.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.						

Usage Guidelines	This command should be used only with Cisco support supervision. Incorrect usage of this command can accidentally remove the relevant card from service.
-------------------------	--

Task ID	Task Operations ID
	drivers read, write

Examples	The following example shows how to disable an ASIC scan on all causes in all blocks of the egress PSE device that is located on the CPU node in slot 6:
-----------------	---

```
RP/0/RP0/CPU0:router# asic-scan pse egress disable location 0/6/CPU0
```

asic-scan pse egress enable

To enable an ASIC scan on all causes in all blocks of a specific egress packet switching engine (PSE) device, use the **asic-scan pse egress enable** command in EXEC mode.

asic-scan pse egress enable location node-id

Syntax Description	location node-id Identifies the location of the node that hosts the egress PSE on which to enable the ASIC scan. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.						
	Note Use the show platform command to see the location of all nodes installed in the router.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.6.0</td><td>Note was added in the Usage Guidelines section that this command can adversely affect the router operation.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.						
Usage Guidelines	This command should be used only with Cisco support supervision. Incorrect usage of this command can accidentally remove the relevant card from service.						
Task ID	<table> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	drivers	read, write		
Task ID	Operations						
drivers	read, write						

Examples

The following example shows how to enable an ASIC scan on all causes in all blocks on the egress PSE that is located on the CPU node in slot 6:

```
RP/0/RP0/CPU0:router# asic-scan pse egress enable location 0/6/CPU0
```

asic-scan pse egress help-block

asic-scan pse egress help-block

To enable an ASIC scan that lists all block numbers of a specific egress packet switching engine (PSE) device, use the **asic-scan pse egress help-block** command in EXEC mode.

asic-scan pse egress help-block location node-id

Syntax Description	location node-id Identifies the location of the node that hosts the egress PSE on which to enable the ASIC scan. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.				
	Note Use the show platform command to see the location of all nodes installed in the router.				
Command Default	No default behavior or values				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.6.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.6.0	This command was introduced.
Release	Modification				
Release 3.6.0	This command was introduced.				
Usage Guidelines	This command should be used only with Cisco support supervision. Incorrect usage of this command can accidentally remove the relevant card from service.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	drivers	read, write
Task ID	Operations				
drivers	read, write				

Examples

The following example shows how to enable an ASIC scan that lists all block numbers on the egress PSE that is located on the CPU node in slot 6:

```
RP/0/RP0/CPU0:router# asic-scan pse egress help-block location 0/6/CPU0
```

asic-scan pse egress location

To run an ASIC scan on a specific packet switching engine (PSE) device, use the **asic-scan pse egress location** command in EXEC mode.

asic-scan pse egress location node-id

Syntax Description	location node-id Identifies the location of the node hosting the PSE on which to run the ASIC scan. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.						
	Note Use the show platform command to see the location of all nodes installed in the router.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.6.0</td><td>Note was added in the Usage Guidelines section that this command can adversely affect the router operation.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.						
Usage Guidelines	This command should be used only with Cisco support supervision. Incorrect usage of this command can accidentally remove the relevant card from service.						
Task ID	<table> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	drivers	read, write		
Task ID	Operations						
drivers	read, write						
Examples	The following example shows how to run an ASIC scan on all egress PSE located on the CPU node in slot 1:						

```
RP/0/RP0/CPU0:router# asic-scan pse egress location 0/1/CPU0
```

asic-scan pse egress quick-scan

asic-scan pse egress quick-scan

To run a quick ASIC scan on a specific file or on all bits of the chip located on a specific packet switching engine (PSE) device, use the **asic-scan pse egress quick-scan** command in EXEC mode.

asic-scan pse egress quick-scan {filename | allscan} location node-id

Syntax Description	<p>filename Name of the .xsvf file on which to run the quick ASIC scan</p> <p>allscan Performs a quick ASIC scan on all bits of the chip, including the preread for Metro.</p> <p>location node-id Identifies the location of the node hosting the egress PSE on which to run the ASIC scan. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.</p> <p>Note Use the show platform command to see the location of all nodes installed in the router.</p>						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.6.0</td><td>Note was added in the Usage Guidelines section that this command can adversely affect the router operation.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.						

Usage Guidelines This command should be used only with Cisco support supervision. Incorrect usage of this command can accidentally remove the relevant card from service.

Task ID	Task Operations ID
	drivers read, write

Examples The following example shows how to run a quick ASIC scan on all bits of the chip on the egress PSE device that is located on the CPU node in slot 1:

```
RP/0/RP0/CPU0:router# asic-scan pse egress quick-scan allscan location 0/1/CPU0
```

asic-scan pse ingress (block number)

To run, enable, or disable a generic ASIC scan on a specific ingress packet switching engine (PSE) device block or error cause, use the **asic-scan pse ingress** command in EXEC mode.

```
asic-scan pse ingress block_number [{[error_cause] [{disable | enable}] | help-cause}] location node-id
```

Syntax Description	<p>block_number Identifies the block on which to enable or disable the ASIC scan.</p> <p>error_cause (Optional) Identifies an error cause in the specified block. When you include the <i>error_cause</i> argument in the asic-scan pse ingress command syntax, the command takes place on the specified error cause.</p> <p>disable (Optional) Disables the ASIC scan on the specified block or error cause.</p> <p>enable (Optional) Enables the ASIC scan on the specified block or error cause.</p> <p>help-cause (Optional) Displays a list of all error causes in the specified block.</p> <p>location node-id Identifies the location of the node hosting the ingress PSE device on which to run, enable, or disable an ASIC scan. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.</p> <p>Note Use the show platform command to see the location of all nodes installed in the router.</p>						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.6.0</td><td>Note was added in the Usage Guidelines section that this command can adversely affect the router operation.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.						
Usage Guidelines	This command should be used only with Cisco support supervision. Incorrect usage of this command can accidentally remove the relevant card from service.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	drivers	read, write		
Task ID	Operations						
drivers	read, write						

asic-scan pse ingress (block number)**Examples**

The following example shows how to display a list of all error causes in the specified block of a PSE device:

```
RP/0/RP0/CPU0:router# asic-scan pse ingress 10 help-cause location 0/6/CPU0
```

```
Total 6 cause(s)
```

Cause Number	Cause Name
0	lbt_owl_ovl
1	scr_m4_ovl
2	scr_m3_ovl
3	scr_m2_ovl
4	scr_m1_ovl
5	scr_m0_ovl

The following example shows how to run a scan on the PSE ASIC block ID 30 located on the CPU node in slot 1:

```
RP/0/RP0/CPU0:router# asic-scan pse ingress 30 location 0/6/CPU0
```

asic-scan pse ingress disable

To disable an ASIC scan on all causes in all blocks of a specific packet switching engine (PSE) device, use the **asic-scan pse ingress disable** command in EXEC mode.

asic-scan pse ingress disable location node-id

Syntax Description	location node-id Identifies the location of the node on which to disable the ASIC scan. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Note Use the show platform command to see the location of all nodes installed in the router.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.6.0</td><td>Note was added in the Usage Guidelines section that this command can adversely affect the router operation.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.						
Usage Guidelines	This command should be used only with Cisco support supervision. Incorrect usage of this command can accidentally remove the relevant card from service.						
Task ID	<table> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	drivers	read, write		
Task ID	Operations						
drivers	read, write						

Examples

The following example shows how to disable an ASIC scan on all causes in all blocks of the ingress PSE device that is located on the CPU node in slot 6:

```
RP/0/RP0/CPU0:router# asic-scan pse ingress disable location 0/6/CPU0
```

asic-scan pse ingress enable

asic-scan pse ingress enable

To enable an ASIC scan on all causes in all blocks of a specific ingress packet switching engine (PSE) device, use the **asic-scan pse ingress enable** command in EXEC mode.

asic-scan pse ingress enable location node-id

Syntax Description	location node-id Identifies the location of the node that hosts the ingress PSE on which to enable the ASIC scan. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Note Use the show platform command to see the location of all nodes installed in the router.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> <tr> <td>Release 3.6.0</td> <td>Note was added in the Usage Guidelines section that this command can adversely affect the router operation.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.						
Usage Guidelines	This command should be used only with Cisco support supervision. Incorrect usage of this command can accidentally remove the relevant card from service.						
Task ID	<table> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>drivers</td> <td>read, write</td> </tr> </tbody> </table>	Task ID	Operations	drivers	read, write		
Task ID	Operations						
drivers	read, write						

Examples

The following example shows how to enable an ASIC scan on all causes in all blocks on the ingress PSE that is located on the CPU node in slot 6:

```
RP/0/RP0/CPU0:router# asic-scan pse ingress enable location 0/6/CPU0
```

asic-scan pse ingress help-block

To enable an ASIC scan that lists all block numbers of a specific ingress packet switching engine (PSE) device, use the **asic-scan pse ingress help-block** command in EXEC mode.

asic-scan pse ingress help-block location node-id

Syntax Description	location <i>node-id</i> Identifies the location of the node that hosts the ingress PSE on which to enable the ASIC scan. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.				
	Note Use the show platform command to see the location of all nodes installed in the router.				
Command Default	No default behavior or values				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.6.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.6.0	This command was introduced.
Release	Modification				
Release 3.6.0	This command was introduced.				
Usage Guidelines	This command should be used only with Cisco support supervision. Incorrect usage of this command can accidentally remove the relevant card from service.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	drivers	read, write
Task ID	Operations				
drivers	read, write				
Examples	The following example shows how to enable an ASIC scan that lists all block numbers on the ingress PSE that is located on the CPU node in slot 6:				

```
RP/0/RP0/CPU0:router# asic-scan pse ingress help-block location 0/6/CPU0
```

asic-scan pse ingress location

asic-scan pse ingress location

To run an ASIC scan on a specific packet switching engine (PSE) device, use the **asic-scan pse ingress location** command in EXEC mode.

asic-scan pse ingress location node-id

Syntax Description	location node-id Identifies the location of the node hosting the PSE on which to run the ASIC scan. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Note Use the show platform command to see the location of all nodes installed in the router.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> <tr> <td>Release 3.6.0</td> <td>Note was added in the Usage Guidelines section that this command can adversely affect the router operation.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.						
Usage Guidelines	This command should be used only with Cisco support supervision. Incorrect usage of this command can accidentally remove the relevant card from service.						

Task ID	Task Operations ID
drivers	read, write

Examples	The following example shows how to run an ASIC scan on all ingress PSE located on the CPU node in slot 1:
	<pre>RP/0/RP0/CPU0:router# asic-scan pse ingress location 0/1/CPU0</pre>

asic-scan pse ingress quick-scan

To run a quick ASIC scan on a specific file or on all bits of the chip located on a specific packet switching engine (PSE) device, use the **asic-scan pse ingress quick-scan** command in EXEC mode.

asic-scan pse ingress quick-scan {filename | allscan} location node-id

Syntax Description	<p>filename Name of the .xsvf file on which to run the quick ASIC scan</p> <p>allscan Performs a quick ASIC scan on all bits of the chip, including the preread for Metro.</p> <p>location node-id Identifies the location of the node hosting the ingress PSE on which to run the ASIC scan. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.</p> <p>Note Use the show platform command to see the location of all nodes installed in the router.</p>						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.6.0</td><td>Note was added in the Usage Guidelines section that this command can adversely affect the router operation.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.6.0	Note was added in the Usage Guidelines section that this command can adversely affect the router operation.						
Usage Guidelines	This command should be used only with Cisco support supervision. Incorrect usage of this command can accidentally remove the relevant card from service.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	drivers	read, write		
Task ID	Operations						
drivers	read, write						
Examples	The following example shows how to run a quick ASIC scan on all bits of the chip on the ingress PSE device that is located on the CPU node in slot 1:						

```
RP/0/RP0/CPU0:router# asic-scan pse ingress quick-scan allscan location 0/1/CPU0
```

clear controller egressq queue

clear controller egressq queue

To clear a specific controller egress queue, use the **clear controller egressq queue** command in EXEC mode.

clear controller egressq queue *queue-id1* [*queue-id2*] location *node-id*

Syntax Description	<p><i>queue-id1</i> Queue you want to clear. Replace the <i>queue-id1</i> argument with a queue number. Range is from 1 through 8191.</p> <p><i>queue-id2</i> (Optional) Last queue in a range of queues to clear. Replace the <i>queue-id2</i> argument with a queue number. Range is from 1 through 8191.</p> <p>location <i>node-id</i> Identifies the location of the node whose egress queue you want to clear. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.</p> <p>Note Use the show platform command to see the location of all nodes installed in the router.</p>								
Command Default	No default behavior or values								
Command Modes	EXEC mode								
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.				
Release	Modification								
Release 2.0	This command was introduced.								
Usage Guidelines	If you enter the optional <i>queue-id2</i> argument after you enter the <i>queue-id1</i> argument, then the <i>queue-id1</i> argument specifies the first queue in a range of queues to be cleared. If you enter the <i>queue-id1</i> argument without specifying the <i>queue-id2</i> argument, then only the queue specified for <i>queue-id1</i> is cleared.								
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>root-system</td><td>read</td></tr> <tr> <td>basic-services</td><td>read, write</td></tr> <tr> <td>drivers</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	root-system	read	basic-services	read, write	drivers	read, write
Task ID	Operations								
root-system	read								
basic-services	read, write								
drivers	read, write								

Examples

The following example shows how to clear a specific controller egress queue:

```
RP/0/RP0/CPU0:router# clear controller egress queue 1 location 0/1/CPU0
```

clear controller egressq queue all

To clear all controller egress queues on a specific node, use the **clear controller egressq queue all** command in EXEC mode.

clear controller egressq queue all location node-id

Syntax Description	all Clears all egress queues in the specified location. location node-id Identifies the location of the egressq queue you want to clear. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Note Use the show platform command to see the location of all nodes installed in the router.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.5.0</td><td>The basic-services and root-systems were removed from this command.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.5.0	The basic-services and root-systems were removed from this command.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.5.0	The basic-services and root-systems were removed from this command.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	drivers	read, write		
Task ID	Operations						
drivers	read, write						
Examples	The following example shows how to clear all controller egress queues on a specific node:						

```
RP/0/RP0/CPU0:router# clear controller egress queue all location 0/1/CPU0
```

clear controller egressq statistics

clear controller egressq statistics

To clear the egress queue statistics in a specific location, use the **clear controller egressq statistics** command in EXEC mode.

clear controller egressq statistics location *node-id*

Syntax Description	location <i>node-id</i> Identifies the location of the egressq queue whose statistics you want to clear. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Note Use the show platform command to see the location of all nodes installed in the router.				
Command Default	No default behavior or values				
Command Modes	EXEC mode				
Command History	<table> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				
Task ID	<table> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	drivers	read, write
Task ID	Operations				
drivers	read, write				

Examples The following example shows how to clear all controller egress queue statistics on a specific node:

```
RP/0/RP0/CPU0:router# clear controller egressq statistics location 0/1/CPU0
```

clear controller pse statistics

To clear statistics maintained by the packet switching engine (PSE) on a specific node, use the **clear controller pse statistics** command in EXEC mode.

clear controller pse statistics [{egress | ingress}]location node-id

Syntax Description	egress (Optional) Clears statistics on the egress PSE device only. ingress (Optional) Clears statistics on the ingress PSE device only. location node-id Identifies the location of the node whose PSE device statistics you want to clear. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Note Use the show platform command to see the location of all nodes installed in the router.						
Command Default	If the egress or ingress keywords are not specified, the clear controller pse statistics command takes effect on both device instances.						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.5.0</td><td> <ul style="list-style-type: none"> The instance 0 and instance 1 keywords were replaced by the ingress and egress keywords. The clear controller pse statistics command was removed from the root-system task-ID. The clear controller pse statistics command was first supported under the interface task-ID. </td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.5.0	<ul style="list-style-type: none"> The instance 0 and instance 1 keywords were replaced by the ingress and egress keywords. The clear controller pse statistics command was removed from the root-system task-ID. The clear controller pse statistics command was first supported under the interface task-ID.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.5.0	<ul style="list-style-type: none"> The instance 0 and instance 1 keywords were replaced by the ingress and egress keywords. The clear controller pse statistics command was removed from the root-system task-ID. The clear controller pse statistics command was first supported under the interface task-ID. 						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>interface</td><td>read, write</td></tr> <tr> <td>drivers</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	interface	read, write	drivers	read, write
Task ID	Operations						
interface	read, write						
drivers	read, write						
Examples	<p>The following example shows how to clear all PSE statistics on a specific node (0/1/CPU0):</p> <pre>RP/0/RP0/CPU0:router# clear controller pse statistics location 0/1/CPU0</pre> <p>The following example shows how to clear all egress PSE statistics on a specific node (0/6/CPU0):</p>						

clear controller pse statistics

```
RP/0/RP0/CPU0:router# clear controller pse statistics egress location 0/6/CPU0
```

Related Commands	Command	Description
	show controllers pse summary, on page 124	Displays a summary of packet switching engine information for a specific controller or node.

show controllers cputrl cdma channel

To display information about the CPU controller Control Direct-Memory-Access (CDMA) engine, use the **show controllers cputrl cdma channel** command in EXEC mode.

```
show controllers cputrl cdma channel {0 | 1} queue {queue-id | all} {active | detail} [location node-id]
```

Syntax Description	<p>{0 1} Displays CPU controller CDMA engine information for the specified channel. Enter 0 to display CDMA engine information for channel 0, or enter 1 to display CDMA engine information for channel 1.</p> <p>queue {queue-id all} Displays CDMA information for a specific Direct-Memory-Access (DMA) queue, or for all DMA queues on the specified channel.</p> <ul style="list-style-type: none"> Enter the queue all keywords to display CDMA information for all DMA queues on the specified channel. Enter the queue keyword and <i>queue-id argument</i> to display CDMA information for a specific queue. Replace the <i>queue-id</i> argument with a queue number. Range is from 1 through 7. <p>active Displays descriptions for active DMA queues only.</p> <p>detail Displays descriptions for any DMA queues, regardless of whether they are active.</p> <p>location node-id (Optional) Identifies the location of the node whose CPU controller CDMA information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.</p>						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.5.0</td><td> <ul style="list-style-type: none"> The show controllers cputrl cdma command was replaced by the show controllers cputrl cdma channel command. The show controllers cputrl cdma channel command was first supported under the interface task-ID. </td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.5.0	<ul style="list-style-type: none"> The show controllers cputrl cdma command was replaced by the show controllers cputrl cdma channel command. The show controllers cputrl cdma channel command was first supported under the interface task-ID.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.5.0	<ul style="list-style-type: none"> The show controllers cputrl cdma command was replaced by the show controllers cputrl cdma channel command. The show controllers cputrl cdma channel command was first supported under the interface task-ID. 						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read</td></tr> <tr> <td>interface</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	drivers	read	interface	read
Task ID	Operations						
drivers	read						
interface	read						

show controllers cpuctrl cdma channel

Examples

The following example shows partial output from the **show controllers cpuctrl cdma channel all active** command with the **active** keyword.

```
RP/0/RP0/CPU0:router# show controllers cpuctrl cdma channel all active
Mon Nov  9 23:13:08.235 PST
-----
DMA queue:
Channel: 0      queue: 0          state: Inactive

-----
DMA queue:
Channel: 0      queue: 1          state: Active

    OS Interrupt Level =      108    Cpuctrl Int Level =      12
    OS Run Priority =        45      client handle =        1
    ISR context = 0x9c35c49c  Pakman/Bufman Inst = bufman/misc
    client callback function = 0x4c60df28  cleanup function = 0x4c60ded8
    Pakmode = 0x00000002      Polfflags = 0x00000000
    Total DMA transactions =      3    Queue create count =      1
    DMA transactions =        3      Bytes transferred =    67584

    DMA Out of Desc errs =      0      DMA IWA =            0
    DMA transaction errs =      0

    Descriptor list base addr = 0xe4037300  Physical address = 0x76037300
        list_size =        32  Active descriptors =        0
        current_index =       3   tx_enqueue_index =       3

-----
DMA queue:
Channel: 0      queue: 2          state: Inactive

-----
DMA queue:
Channel: 0      queue: 3          state: Active

    OS Interrupt Level =      107    Cpuctrl Int Level =      11
    OS Run Priority =        30      client handle =        0
    ISR context = 0x9c35cd84  Pakman/Bufman Inst = bufman/mipc
    client callback function = 0x4c60df28  cleanup function = 0x4c60ded8
    Pakmode = 0x00000005      Polfflags = 0x00000000
    Total DMA transactions =  115622  Queue create count =      1
    DMA transactions =      115622  Bytes transferred = 10213420

    DMA Out of Desc errs =      0      DMA IWA =            0
    DMA transaction errs =      0

    Descriptor list base addr = 0xe4051100  Physical address = 0x76051100
        list_size =        256  Active descriptors =        0
        current_index =      166   tx_enqueue_index =      166

-----
DMA queue:
Channel: 0      queue: 4          state: Active

    OS Interrupt Level =      113    Cpuctrl Int Level =      17
    OS Run Priority =        45      client handle =        5
    ISR context = 0x9c35c748  Pakman/Bufman Inst = bufman/misc
    client callback function = 0x4c60df28  cleanup function = 0x4c60ded8
    Pakmode = 0x00000002      Polfflags = 0x00000000
    Total DMA transactions =      321  Queue create count =      1
```

```

DMA transactions = 321 Bytes transferred = 42594
DMA Out of Desc errs = 0 DMA IWA = 0
DMA transaction errs = 0

Descriptor list base addr = 0xe40d2068 Physical address = 0x760d2068
list_size = 1023 Active descriptors = 0
current_index = 321 tx_enqueue_index = 321

-----
DMA queue:
Channel: 0 queue: 5 state: Active

OS Interrupt Level = 111 Cpuctrl Int Level = 15
OS Run Priority = 45 client handle = 3
ISR context = 0x9c35cad8 Pakman/Bufman Inst = bufman/misc
client callback function = 0x4c60df28 cleanup function = 0x4c60ded8
Pakmode = 0x00000002 Pollflags = 0x00000000
Total DMA transactions = 376 Queue create count = 1
DMA transactions = 376 Bytes transferred = 7674

DMA Out of Desc errs = 0 DMA IWA = 0
DMA transaction errs = 0

Descriptor list base addr = 0xe4047110 Physical address = 0x76047110
list_size = 128 Active descriptors = 0
current_index = 120 tx_enqueue_index = 120

-----
DMA queue:
Channel: 0 queue: 6 state: Active

OS Interrupt Level = 112 Cpuctrl Int Level = 16
OS Run Priority = 45 client handle = 6
ISR context = 0x9c35c9f4 Pakman/Bufman Inst = bufman/misc
client callback function = 0x4c60df28 cleanup function = 0x4c60ded8
Pakmode = 0x00000002 Pollflags = 0x00000000
Total DMA transactions = 306 Queue create count = 1
DMA transactions = 306 Bytes transferred = 394340

DMA Out of Desc errs = 0 DMA IWA = 0
DMA transaction errs = 0

Descriptor list base addr = 0xe40d7068 Physical address = 0x760d7068
list_size = 1023 Active descriptors = 0
current_index = 306 tx_enqueue_index = 306

-----
DMA queue:
Channel: 0 queue: 7 state: Active

OS Interrupt Level = 110 Cpuctrl Int Level = 14
OS Run Priority = 45 client handle = 4
ISR context = 0x9c35c580 Pakman/Bufman Inst = bufman/misc
client callback function = 0x4cad1130 cleanup function = 0x4cad058c
Pakmode = 0x00000002 Pollflags = 0x00000000
Total DMA transactions = 140344 Queue create count = 1
DMA transactions = 140344 Bytes transferred = 2344779856

DMA Out of Desc errs = 0 DMA IWA = 0
DMA transaction errs = 0

Descriptor list base addr = 0xe40cd068 Physical address = 0x760cd068
list_size = 1023 Active descriptors = 0

```

show controllers cpuctrl cdma channel

```

        current_index =          193      tx_enqueue_index =       193

-----
DMA queue:
Channel: 1      queue: 0      state: Inactive

-----
DMA queue:
Channel: 1      queue: 1      state: Active

    OS Interrupt Level =      108      Cpuctrl Int Level =      12
    OS Run Priority =         45       client handle =           1
    ISR context = 0x9c35c49c  Pakman/Bufman Inst = bufman/misc
    client callback function = 0x4c60df28   cleanup function = 0x4c60ded8
    Pakmode = 0x00000002      Pollflags = 0x00000000
    Total DMA transactions =     3      Queue create count =      1
    DMA transactions =         3      Bytes transferred =    67584

    DMA Out of Desc errs =      0      DMA IWA =             0
    DMA transaction errs =      0

    Descriptor list base addr = 0xe40370f0      Physical address = 0x760370f0
    list_size =                 32      Active descriptors =      0
    current_index =              3      tx_enqueue_index =       3

-----
DMA queue:
Channel: 1      queue: 2      state: Inactive

-----
DMA queue:
Channel: 1      queue: 3      state: Active

    OS Interrupt Level =      106      Cpuctrl Int Level =      10
    OS Run Priority =         30       client handle =           0
    ISR context = 0x9c35ce68  Pakman/Bufman Inst = bufman/mipc
    client callback function = 0x4c60df28   cleanup function = 0x4c60ded8
    Pakmode = 0x00000005      Pollflags = 0x00000000
    Total DMA transactions =  114238  Queue create count =      1
    DMA transactions =        114238  Bytes transferred =  8686924

    DMA Out of Desc errs =      0      DMA IWA =             0
    DMA transaction errs =      0

    Descriptor list base addr = 0xe4052110      Physical address = 0x76052110
    list_size =                 256     Active descriptors =      0
    current_index =              62      tx_enqueue_index =       62
--More--

```

This table describes the significant fields shown in the display.

Table 2: show controllers cpuctrl cdma channel Field Descriptions

Field	Description
DMA queue	Identifies the DMA ¹ queue.
Channel	Identifies the channel whose DMA queue is displayed. 0 is the ingress channel, and 1 is the egress channel
queue	Identifies the queue.

Field	Description
state	Current state of the queue.
OS Interrupt Level	Current interrupt level for the queue.
Cpuctrl Interrupt Level	Current interrupt level for the CPU controller.
OS Run Priority	Run priority level for this queue.
client handle	Internal identifier for the Cisco client.
ISR context	Internal information about the location of the ISR2 pointer.
Pakman/Bufman Instance	Internal information about the location of the Pakman and Bufman Instance.
client callback function pointer	Internal information about the client callback function pointer.
cleanup function	Internal information about the client cleanup function pointer.
Queue Created 1 times	Number of times this queue was regenerated.
Pakmode	Information about internal data structures and parameters.
Pollflags	Specifies whether the CDMA queue uses a polling or interrupt-driven approach for detecting CDMA operation completion notification. Note Currently, CDMA queues use interrupt driven completion only. PDMA queues use interrupt-driven and polling completion.
Total DMA transactions	Number of DMA transactions in the queue.
Queue create count	Number of times this queue was regenerated.
DMA transactions	Number of DMA transactions in the queue.
Bytes transferred	Number of bytes that have been transferred by the Control Direct-Memory-Access engine.
DMA Out of Desc errs	Number of DMA errors in the queue.
CDMA transactions	Number of CDMA transactions in the queue.
DMA IWA	Number of IWA bytes that have been processed by the Direct-Memory-Access engine.
DMA transaction errs	Number of DMA transactions that had errors.
Descriptor list base addr	Internal information about the location of the descriptor list.
Physical address	Physical address of the CPU memory that holds the descriptors in the ring used by the CDMA queue hardware.
list_size	Total number of descriptors in the ring used by the CDMA queue hardware.

show controllers cpuctrl cdma channel

Field	Description
Active descriptors	Number of descriptors that have transactions that are not cleaned after being notified of their completion. Note that the hardware may not yet have completed these transactions.
current_index	Points to the next descriptor that the hardware is expected to complete.
tx_enqueue_index	Points to the descriptor that will be added to the next operation request.
Index	Location of the descriptor in the ring.
Shadow	Internal field that manages requests that have been split into multiple descriptors.
Hdr	Internal field that manages requests that have been split into multiple descriptors.
Flags	Internal field that manages requests that have been split into multiple descriptors.
Descriptor	Descriptor heading.
Width	Width of the data on the ASIC side in bits. The DMA stride is rounded up to the next power of two bytes that contains this number of bits.
Buflen	Size of the buffer used for the transfer.
Xfersize	Number of bytes on the CPU memory that are occupied by the transfer.
Memaddr	36 bit physical address of the CPU memory in the transfer.
Squidaddr	40 bit address of the ASIC register or memory in the transfer.

¹ Direct Memory Access

Related Commands

Command	Description
show controllers cpuctrl clients, on page 35	Displays information about all CPU controller clients on the router, or for specific CPU controller clients.

show controllers cputctrl clients

To display information about all CPU controller clients on the router, or for specific CPU controller clients, use the **show controllers cputctrl clients** command in EXEC mode.

```
show controllers cputctrl clients {all | cdma clients | pdma clients} {active | detail} [location node-id]
```

Syntax Description	
all	Displays a summary information for all clients on the router.
cdma clients	Displays information about Control Direct-Memory-Access (CDMA) clients only. Replace the <i>clients</i> argument with one of the following keywords: <ul style="list-style-type: none"> • dcc—Displays information for the DCC client. • egressq—Displays information for the egressq client. • fabricq—Displays information for the Fabricq ASIC client. • fia—Displays information for the Fabric Interface ASIC (FIA) client. • ingressq—Displays information for the ingressq ASIC client. • jacketcard—Displays information for the jacketcard client. • mipc—Displays information for the Metro Inter-Process-Communication (MIPC) client. • pla768—Displays information for the ASIC client for OC-768. • plaspa—Displays information for the ASIC client for the SPA. • plim—Displays information for the PLIM client. • plimasic—Displays information for the PLIM ASIC client. • pse—Displays information for the PSE client.
pdma clients	Displays information for Packet Direct-Memory-Access (PDMA) clients only. Replace <i>clients</i> with one of the following keywords: <ul style="list-style-type: none"> • bfd—Displays information for the client bidirectional forwarding detection (BFD) PDMA packet. • diag—Displays information for the PDMA client called DIAG packet. • fabio—Displays information for the FABIO PDMA packet client. • fia—Displays information for the fabric interface ASIC packet PDMA client. • frr—Displays information for the fast reroute (FRR) packet PDMA client. • gsp—Displays information for the Group Services Packet (GSP) PDMA client. • mipc—Displays information for the MIPC packet PDMA client. • mstats—Displays information for the MSTATS packet PDMA client. • netflow—Displays information for the NetFlow packet PDMA client.
active	Displays descriptions for active queues only.
detail	Displays descriptions for any queues, regardless of whether or not they are active.
location node-id	(Optional) Identifies the location of the node whose CPU controller information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.

show controllers cputctrl clients

Command Default	No default behavior or values								
Command Modes	EXEC mode								
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.5.0</td><td>The show controllers cputctrl clients command was first supported under the interface task-ID.</td></tr> <tr> <td>Release 3.6.0</td><td>The following keywords were added: <ul style="list-style-type: none"> • bfd • fabio • pla768 • plaspa The netio keyword was removed. </td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.5.0	The show controllers cputctrl clients command was first supported under the interface task-ID.	Release 3.6.0	The following keywords were added: <ul style="list-style-type: none"> • bfd • fabio • pla768 • plaspa The netio keyword was removed.
Release	Modification								
Release 2.0	This command was introduced.								
Release 3.5.0	The show controllers cputctrl clients command was first supported under the interface task-ID.								
Release 3.6.0	The following keywords were added: <ul style="list-style-type: none"> • bfd • fabio • pla768 • plaspa The netio keyword was removed.								
Usage Guidelines	No specific guidelines impact the use of this command.								
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read</td></tr> <tr> <td>interface</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	drivers	read	interface	read		
Task ID	Operations								
drivers	read								
interface	read								
Examples	<p>The following example shows how to display information about all the CPU controller clients:</p> <pre>RP/0/RP0/CPU0:router# show controllers cputctrl clients all Mon Nov 2 15:27:45.524 UTC ----- DMA client: client_name: MIPC client_handle:0 isr_count: 2 queue_count: 2 client_pid: 90186 ----- DMA client: client_name: Pse client_handle:1 isr_count: 1 queue_count: 2 client_pid: 90186 ----- DMA client: client_name: DCC client_handle:2 isr_count: 0 queue_count: 0 client_pid: 0 ----- DMA client: client_name: PlimAsic client_handle:3 isr_count: 1 queue_count: 1 client_pid: 86063 ----- DMA client: client_name: Egressq client_handle:4 isr_count: 1 queue_count: 1 client_pid: 94283 ----- DMA client: client_name: Ingressq client_handle:5 isr_count: 1 queue_count: 1 client_pid: 65592</pre>								

```
-----  
DMA client:      client_name: Fabriccq    client_handle:6  
isr_count: 1     queue_count:   1           client_pid:    65591  
  
-----  
DMA client:      client_name: PLIM        client_handle:7  
isr_count: 0     queue_count:   0           client_pid:    0  
  
-----  
DMA client:      client_name: FIA         client_handle:8  
isr_count: 0     queue_count:   0           client_pid:    65595  
  
-----  
DMA client:      client_name: JacketCard  client_handle:9  
isr_count: 0     queue_count:   0           client_pid:    81991  
  
-----  
PKT client:      client_name: FRR         client_handle:0  
isr_count: 1     queue_count:   2           client_pid:    73794  
  
-----  
PKT client:      client_name: GSP         client_handle:1  
isr_count: 2     queue_count:   4           client_pid:    73794  
  
-----  
PKT client:      client_name: IPC         client_handle:2  
isr_count: 1     queue_count:   1           client_pid:    24602  
  
-----  
PKT client:      client_name: MIPC        client_handle:3  
isr_count: 1     queue_count:   2           client_pid:    90186  
  
-----  
PKT client:      client_name: MSTATS      client_handle:4  
isr_count: 2     queue_count:   2           client_pid:    94284  
  
-----  
PKT client:      client_name: NETFLOW     client_handle:5  
isr_count: 2     queue_count:   2           client_pid:    147612  
  
-----  
PKT client:      client_name: FABIO       client_handle:6  
isr_count: 1     queue_count:  13          client_pid:    65589  
  
-----  
PKT client:      client_name: FIA         client_handle:7  
isr_count: 0     queue_count:   0           client_pid:    0  
  
-----  
PKT client:      client_name: DIAG        client_handle:8  
isr_count: 1     queue_count:   3           client_pid:    118896  
  
-----  
PKT client:      client_name: BFD         client_handle:9  
isr_count: 1     queue_count:   2           client_pid:    118883  
  
-----  
DMA client:      client_name: MIPC        client_handle:0  
isr_count: 0     queue_count:   0           client_pid:    0  
  
-----  
DMA client:      client_name: Pse         client_handle:1  
isr_count: 0     queue_count:   0           client_pid:    0
```

show controllers cpuctrl clients

```
-----
DMA client:    client_name: DCC          client_handle:2
isr_count: 0   queue_count: 0           client_pid: 0

-----
DMA client:    client_name: PlimAsic    client_handle:3
isr_count: 0   queue_count: 0           client_pid: 0

-----
DMA client:    client_name: Egressq     client_handle:4
isr_count: 0   queue_count: 0           client_pid: 0

-----
DMA client:    client_name: Ingressq    client_handle:5
isr_count: 1   queue_count: 1           client_pid: 122941

-----
DMA client:    client_name: Fabriccq    client_handle:6
isr_count: 1   queue_count: 1           client_pid: 122939

-----
DMA client:    client_name: PLIM         client_handle:7
isr_count: 0   queue_count: 0           client_pid: 0

-----
DMA client:    client_name: FIA          client_handle:8
isr_count: 0   queue_count: 0           client_pid: 122943

-----
DMA client:    client_name: JacketCard  client_handle:9
isr_count: 0   queue_count: 0           client_pid: 0

-----
PKT client:   client_name: FRR          client_handle:0
isr_count: 1   queue_count: 2           client_pid: 122952

-----
PKT client:   client_name: GSP          client_handle:1
isr_count: 2   queue_count: 4           client_pid: 122952

-----
PKT client:   client_name: IPC          client_handle:2
isr_count: 0   queue_count: 0           client_pid: 0

-----
PKT client:   client_name: MIPC         client_handle:3
isr_count: 0   queue_count: 0           client_pid: 0

-----
PKT client:   client_name: MSTATS       client_handle:4
isr_count: 0   queue_count: 0           client_pid: 0

-----
PKT client:   client_name: NETFLOW      client_handle:5
isr_count: 0   queue_count: 0           client_pid: 0

-----
PKT client:   client_name: FABIO        client_handle:6
isr_count: 1   queue_count: 4           client_pid: 122935

-----
PKT client:   client_name: FIA          client_handle:7
isr_count: 0   queue_count: 0           client_pid: 0
```

```
-----  
PKT client:    client_name: DIAG           client_handle:8  
isr_count: 1    queue_count: 2             client_pid: 147600  
  
-----  
PKT client:    client_name: BFD            client_handle:9  
isr_count: 0    queue_count: 0             client_pid: 0  
  
-----  
DMA client:    client_name: MIPC           client_handle:0  
isr_count: 0    queue_count: 0             client_pid: 0  
  
-----  
DMA client:    client_name: Pse             client_handle:1  
isr_count: 0    queue_count: 0             client_pid: 0  
  
-----  
DMA client:    client_name: DCC             client_handle:2  
isr_count: 0    queue_count: 0             client_pid: 0  
  
-----  
DMA client:    client_name: PlimAsic        client_handle:3  
isr_count: 0    queue_count: 0             client_pid: 0  
  
-----  
DMA client:    client_name: Egressq          client_handle:4  
isr_count: 0    queue_count: 0             client_pid: 0  
  
-----  
DMA client:    client_name: Ingressq         client_handle:5  
isr_count: 0    queue_count: 0             client_pid: 0  
  
-----  
DMA client:    client_name: Fabriccq         client_handle:6  
isr_count: 1    queue_count: 1             client_pid: 147511  
  
-----  
DMA client:    client_name: PLIM            client_handle:7  
isr_count: 0    queue_count: 0             client_pid: 0  
  
-----  
DMA client:    client_name: FIA             client_handle:8  
isr_count: 0    queue_count: 0             client_pid: 0  
  
-----  
DMA client:    client_name: JacketCard       client_handle:9  
isr_count: 0    queue_count: 0             client_pid: 0  
  
-----  
PKT client:    client_name: FRR             client_handle:0  
isr_count: 1    queue_count: 2             client_pid: 155718  
  
-----  
PKT client:    client_name: GSP             client_handle:1  
isr_count: 2    queue_count: 4             client_pid: 155718  
  
-----  
PKT client:    client_name: IPC             client_handle:2  
isr_count: 0    queue_count: 0             client_pid: 0  
  
-----  
PKT client:    client_name: MIPC            client_handle:3  
isr_count: 0    queue_count: 0             client_pid: 0
```

show controllers cputctrl clients

```
-----
PKT client:      client_name: MSTATS      client_handle:4
isr_count: 0     queue_count: 0           client_pid: 0

-----
PKT client:      client_name: NETFLOW     client_handle:5
isr_count: 0     queue_count: 0           client_pid: 0

-----
PKT client:      client_name: FABIO       client_handle:6
isr_count: 1     queue_count: 4           client_pid: 147508

-----
PKT client:      client_name: FIA         client_handle:7
isr_count: 0     queue_count: 0           client_pid: 0

-----
PKT client:      client_name: DIAG        client_handle:8
isr_count: 1     queue_count: 2           client_pid: 180341

-----
PKT client:      client_name: BFD         client_handle:9
isr_count: 0     queue_count: 0           client_pid: 0
```

This table describes the significant fields shown in the display.

Table 3: show controllers cputctrl clients Field Descriptions

Field	Description
client	Client type. Value is DMA ² or PKT.
client_name	Name of the client.
client_handle	Internal client identifier.
isr_count	ISR ³ counters.
queue_count	Queue counters.
client_pid	Client PID ⁴ .

² Direct Memory Access

³ Interrupt Service Routine

⁴ Process Identifier

Related Commands

Command	Description
show controllers cputctrl summary, on page 57	Displays summarized information about all the ASICs accessed through the CPU controller ASICs on the router or on a specific node.

show controllers cputctrl devices

To display information about the CPU controller devices on the router, use the **show controllers cputctrl devices** command in EXEC mode.

```
show controllers cputctrl devices device-name {pdma queue {all | tx | rx} {active | detail} | pio} [location node-id]
```

Syntax Description	
<i>device-name</i>	Displays information about a specific CPU controller device. Replace the <i>device-name</i> argument with one of the following device names: <ul style="list-style-type: none"> • egressq—Displays information about the egressq ASIC instance 0. • epse—Displays information about the egress packet switching engine (PSE) ASIC. • fabricq instance 0—Displays information about the fabricq ASIC instance 0. • fabricq instance 1—Displays information about the fabricq ASIC instance 1. • fabricq instance 2—Displays information about the fabricq ASIC instance 2. • fabricq instance 3—Displays information about the fabricq ASIC instance 3. • fia instance 0—Displays information about the Fabric Interface ASIC (FIA) instance 0. • fia instance 1—Displays information about the FIA instance 1. • ingressq—Displays information about the ingressq ASIC. • ipse—Displays information about the ingress packet switching engine (PSE) ASIC. • jacketcard instance 0—Displays information about the jacketcard instance 0 ASIC. • jacketcard instance 1—Displays information about the jacketcard instance 1 ASIC. • jacketcard instance 2—Displays information about the jacketcard instance 2 ASIC. • plim asic instance 0—Displays information about the PLIM ASIC instance 0. • plim asic instance 1—Displays information about the PLIM ASIC instance 1. • plim asic instance 2—Displays information about the PLIM ASIC instance 2. • plim asic instance 3—Displays information about the PLIM ASIC instance 3. • plim fpga—Displays information about the field-programmable gate array (FPGA) PLIM.
pdma queue all	Displays transmit and receive Packet Direct-Memory-Access (PDMA) information for the specified queue. Replace the <i>queue</i> argument with a queue number. The range is from 0 to 7.
pdma queue tx	Displays transmit PDMA information only for the specified queue. Replace the <i>queue</i> argument with a queue number. The range is from 0 to 7.
pdma queue rx	Displays receive PDMA information only for the specified queue. Replace the <i>queue</i> argument with a queue number. The range is from 0 to 7.
pdma all	Displays transmit and receive PDMA information for all queues.
active	Displays descriptions for active queues only.
detail	Displays detailed descriptions for any queues, regardless of whether they are active.
pio	Displays transmit and receive Polled I/O (PIO) information for the specified queue.

show controllers cputctrl devices

location node-id (Optional) Identifies the location of the node whose CPU controller information you want to display. The *node-id* argument is expressed in the *rack/slot/module* notation.

Command Default No default behavior or values

Command Modes EXEC mode

Command History	Release	Modification
------------------------	----------------	---------------------

Release 2.0 This command was introduced.

Release 3.5.0 The **show controllers cputctrl devices** command was first supported under the interface task-ID.

Release 3.6.0 The following keywords were changed:

- **fabricq0** changed to **fabric instance 0**
- **fabricq1** changed to **fabric instance 1**
- **fabricq2** changed to **fabric instance 2**
- **fabricq3** changed to **fabric instance 3**
- **fia0** changed to **fia instance 0**
- **fia1** changed to **fia instance 1**
- **jacketcard0** changed to **jacketcard instance 0**
- **jacketcard1** changed to **jacketcard instance 1**
- **jacketcard2** changed to **jacketcard instance 2**
- **plimasic0** changed to **plim asic instance 0**
- **plimasic1** changed to **plim asic instance 1**
- **plimasic2** changed to **plim asic instance 2**
- **plimasic3** changed to **plim asic instance 3**
- **plimfpga** changed to **plim fpga**

Usage Guidelines No specific guidelines impact the use of this command.

Task ID	Task ID Operations
----------------	---------------------------

drivers read

interface read

Examples

The following example shows how to display transmit and receive PDMA information for all active queues on the egressq ASIC instance 0:

```
RP/0/RP0/CPU0:router# show controllers cputctrl devices egressq pdma queue all active location 0/6/CPU0
```

```
-----  
TX PKT queue:  
cputctrl net Port: 7 (Egressq ) queue: 0 state: Active
```

```

OS Interrupt Level = 127 Cpuctrl Int Level = 31
OS Run Priority = 10 client handle = 6
ISR context = 0x7810c1c8 Pakman/Bufman Inst = pakman/server
client callback function = 0x48200298 cleanup function = 0x482002bc
Pakmode = 0x00000001 Pollflags = 0x00000000
Total Packets transmitted = 660089 Queue create count = 1
Packets transmitted = 660089 Bytes transmitted = 17166002

Tx Out of Descriptor errs = 0 Tx IWA = 0
Tx oversize errs = 0 Tx EgressQ q0 errs = 0

Descriptor list base addr = 0xec348068 Physical address = 0x30348068
list_size = 1024 Active descriptors = 0
current_index = 633 tx_enqueue_index = 633

-----
TX PKT queue:
cputrl net Port: 0 (Egressq ) queue: 1 state: Inactive

-----
TX PKT queue:
cputrl net Port: 0 (Egressq ) queue: 2 state: Inactive

-----
TX PKT queue:
cputrl net Port: 0 (Egressq ) queue: 3 state: Inactive

-----
TX PKT queue:
cputrl net Port: 0 (Egressq ) queue: 4 state: Inactive

-----
TX PKT queue:
cputrl net Port: 0 (Egressq ) queue: 5 state: Inactive

-----
TX PKT queue:
cputrl net Port: 7 (Egressq ) queue: 6 state: Active

OS Interrupt Level = 118 Cpuctrl Int Level = 22
OS Run Priority = 10 client handle = 2
ISR context = 0x7810cf24 Pakman/Bufman Inst = bufman/ ipc
client callback function = 0xfc71d604 cleanup function = 0xfc71d6b8
Pakmode = 0x00000005 Pollflags = 0x00000000
Total Packets transmitted = 0 Queue create count = 1
Packets transmitted = 0 Bytes transmitted = 0

Tx Out of Descriptor errs = 0 Tx IWA = 0
Tx oversize errs = 0 Tx EgressQ q0 errs = 0

Descriptor list base addr = 0xec07a110 Physical address = 0x3007a110
list_size = 256 Active descriptors = 0
current_index = 0 tx_enqueue_index = 0

-----
TX PKT queue:
cputrl net Port: 7 (Egressq ) queue: 7 state: Active

OS Interrupt Level = 119 Cpuctrl Int Level = 23
OS Run Priority = 40 client handle = 9
ISR context = 0x7810d008 Pakman/Bufman Inst = pakman/sever
client callback function = 0xfc71d604 cleanup function = 0xfc71d6b8
Pakmode = 0x00000001 Pollflags = 0x00000000
Total Packets transmitted = 0 Queue create count = 1

```

show controllers cputrl devices

```

Packets transmitted = 0 Bytes transmitted = 0
Tx Out of Descriptor errs = 0 Tx IWA = 0
Tx oversize errs = 0 Tx EgressQ q0 errs = 0
Descriptor list base addr = 0xed63a068 Physical address = 0x3163a068
list_size = 1024 Active descriptors = 0
current_index = 0 tx_enqueue_index = 0
-----
RX PKT queue:
cputrl net Port: 7 (Egressq ) queue: 0 state: Active
OS Interrupt Level = 121 Cputrl Int Level = 25
OS Run Priority = 10 client handle = 8
ISR context = 0x7810d0ec Pakman/Bufman Inst = bufman/misc
client callback function = 0xfc71d550 cleanup function = 0xfc71d6b8
Pakmode = 0x00000001 Polfflags = 0x00000000
Requested Rx Buffer Size = 1024 Packet switchcount = 20
Actual Rx Buffer Size = 1648 Pool = 4
MTU = 12188 MTU Descriptors = 8
Total Packets received = 71080 Queue create count = 1
Packets received = 71080 Bytes received = 858219920
Rx No Buffer errs = 0 NoBufferLimit errs = 0
Rx No Packet Header errs = 0 Packet Form errs = 0
Rx Packet errs = 0
Rx Intr Stall errs = 0 Rx Intr Drop errs = 0
Descriptor list base addr = 0xec05c940 Physical address = 0x3005c940
list_size = 128 Active descriptors = 0
current_index = 64 tx_enqueue_index = 64

```

--More--

This table describes the significant fields shown in the display.

Table 4: show controllers cputrl devices Field Descriptions

Field	Description
PKT queue	Displays whether the packet queue is TX ⁵ or RX ⁶ .
cputrl net Port	Identifies the CPU controller port.
queue	Identifies the queue whose CPU controller device information is displayed.
client handle	Internal Cisco client identifier.
queue state	Current state of the queue. The queue can be <i>Active</i> or <i>Inactive</i> .

⁵ transmit

⁶ receive

Related Commands

Command	Description
show controllers cputrl summary, on page 57	Displays summarized information about all the ASICs accessed through the CPU controller ASICs on the router or on a specific node.

show controllers cpuctrl error

show controllers cpuctrl error

To display the squid error information about the CPU controller, use the **show controllers cpuctrl error** command in EXEC mode.

show controllers cpuctrl error [location node-id] [detail]

Syntax Description	location node-id (Optional) Identifies the location of the node whose internal CPU controller information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. detail (Optional) Displays detailed squid error information about the CPU controller.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.8.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.8.0	This command was introduced.		
Release	Modification						
Release 3.8.0	This command was introduced.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read</td></tr> <tr> <td>interface</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	drivers	read	interface	read
Task ID	Operations						
drivers	read						
interface	read						

Examples The following example shows how to display squid error information about the CPU controller:

```
RP/0/RP0/CPU0:router# show controllers cpuctrl error detail
Errors for node : 0/4/CPU1

INTERNAL ERRORS:
=====
      Error Interrupts =      2000
=====
RP/0/RP0/CPU0:router#show controllers cpuctrl error detail
Tue Jul 21 04:15:02.632 DST

Errors for node : 0/4/CPU1

INTERNAL ERRORS:
=====
      Error Interrupts =      2000
      Spurious Error Interrupts =      0
      SN overflow count =      0
      PM overflow count =      0
      PCIX overflow count =      0
      ISN overflow count =      0
```

```
Port overflow count = 0
Log overflow count = 0
```

show controllers cpuctrl internal

show controllers cpuctrl internal

To display internal information about the CPU controller, use the **show controllers cpuctrl internal** command in EXEC mode.

show controllers cpuctrl internal [location node-id]

Syntax Description	location node-id (Optional) Identifies the location of the node whose internal CPU controller information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.
---------------------------	---

Command Default	No default behavior or values
------------------------	-------------------------------

Command Modes	EXEC mode
----------------------	-----------

Command History	Release	Modification
	Release 2.0	This command was introduced.
	Release 3.5.0	The show controllers cpuctrl internal command was first supported under the interface task-ID.
	Release 3.6.0	The location <i>node-id</i> keyword and argument were changed from required to optional.

Usage Guidelines	No specific guidelines impact the use of this command.
-------------------------	--

Task ID	Task ID Operations
	drivers read
	interface read

Examples	The following example shows how to display internal information about the CPU controller:
-----------------	---

```
RP/0/RP0/CPU0:router# show controllers cpuctrl internal

Cpuctrl Internal Info for node 0/0/CPU0:
    Error Interrupts = 0      Spurious Error Interrupts = 0
    PCI Error Overflows = 0      PCI PM Error Overflows = 0
    PCIX Error Overflows = 0      Internal Access PCI Overflows = 0
    Port Error Overflows = 0      Error Log Overflows = 0
    cpuctrl Config Reg = 0x8357ffff  cpuctrl Physical Offset = 0x80000000
    cpuctrl Window Size = 0x40000000  cpuctrl Port Window Size = 0x04000000
    cpuctrl SHMem Size = 0x00800000  cpuctrl SHMem Used = 0x00223ee8
    cpuctrl version info: Squid FPGA v2.07 Fri Jan 23 16:21:01 2004 ykoren

Cpuctrl Internal Info for node 0/3/CPU0:
    Error Interrupts = 0      Spurious Error Interrupts = 0
    PCI Error Overflows = 0      PCI PM Error Overflows = 0
    PCIX Error Overflows = 0      Internal Access PCI Overflows = 0
    Port Error Overflows = 0      Error Log Overflows = 0
```

```
cputrl Config Reg = 0x8357ffff cputrl Physical Offset = 0x80000000
cputrl Window Size = 0x40000000 cputrl Port Window Size = 0x04000000
cputrl SHMem Size = 0x00800000 cputrl SHMem Used = 0x00223ee8
cputrl version info: Squid FPGA v2.07 Fri Jan 23 16:21:01 2004 ykoren
```

```
Cputrl Internal Info for node 0/RP0/CPU0:
Error Interrupts = 0 Spurious Error Interrupts = 0
PCI Error Overflows = 0 PCI PM Error Overflows = 0
PCIX Error Overflows = 0 Internal Access PCI Overflows = 0
Port Error Overflows = 0 Error Log Overflows = 0
cputrl Config Reg = 0x803f007f cputrl Physical Offset = 0x80000000
cputrl Window Size = 0x40000000 cputrl Port Window Size = 0x04000000
cputrl SHMem Size = 0x00800000 cputrl SHMem Used = 0x00223ee8
cputrl version info: Squid FPGA v2.07 Fri Feb 6 17:49:22 2004 ykoren
```

```
Cputrl Internal Info for node 0/RP1/CPU0:
Error Interrupts = 0 Spurious Error Interrupts = 0
PCI Error Overflows = 0 PCI PM Error Overflows = 0
PCIX Error Overflows = 0 Internal Access PCI Overflows = 0
Port Error Overflows = 0 Error Log Overflows = 0
cputrl Config Reg = 0x003f007f cputrl Physical Offset = 0x80000000
cputrl Window Size = 0x40000000 cputrl Port Window Size = 0x04000000
cputrl SHMem Size = 0x00800000 cputrl SHMem Used = 0x00223ee8
cputrl version info: Squid FPGA v2.05 Wed Sep 3 17:37:47 2003 ykoren
```

This table describes the significant fields shown in the display.

Table 5: show controllers cputrl internal Field Descriptions

Field	Description
Error Interrupts	Total of error interrupts that have occurred on this node.
Spurious Error Interrupts	Current number interrupts that have occurred on this node due to spurious errors.
PCI Error Overflows	Number of times the PCI1 error buffer overflowed on the node.
PCI PM Error Overflows	Number of times PCI PM2 error buffer overflowed on this node.
PCIX Error Overflows	Number of times the PCI-X error buffer overflowed on this node.
Internal Access PCI Overflows	Number of times the Internal Access PCI buffer overflowed on this node.
Port Error Overflows	Number of times the port error buffer overflowed on this node.
Error Log Overflows	Number of times the error log buffer overflowed on this node.
cputrl Config Reg	CPU controller configuration register, expressed in hexadecimal format.
cputrl Physical Offset	CPU controller physical offset, expressed in hexadecimal format.
cputrl Window Size	CPU controller window size, expressed in hexadecimal format.
cputrl Port Window Size	CPU controller port window size, expressed in hexadecimal format.
cputrl SHMem Size	CPU controller shared memory size, expressed in hexadecimal format.

show controllers cpuctrl internal

Field	Description
cpuctrl SHMem Used	CPU controller shared memory that has been used already, expressed in hexadecimal format.
cpuctrl version info	Provides version information for the CPU controller. The information displayed is: <ul style="list-style-type: none"> • Squid version • Date of the last version installation or upgrade

[7](#) [8](#)

Related Commands

Command	Description
show controllers cpuctrl summary, on page 57	Displays summarized information about all the ASICs accessed through the CPU controller ASICs on the router or on a specific node.

⁷ 1. Peripheral Component Interconnect

⁸ 2. port manager

show controllers cputctrl ports

To display port information for the specified CPU controller ASIC, use the **show controllers cputctrl ports** command in EXEC mode.

```
show controllers cputctrl ports asic_id {pdma queue {queue-id | all} direction {all | rx | tx} {active | detail} | pio} [location node-id]
```

Syntax Description	
<i>asic_id</i>	Identifies the CPU controller ASIC whose port information you want to display. Replace the <i>asic_id</i> argument with one of the following keywords: <ul style="list-style-type: none"> • cputctrl—Displays port information for the CPU controller ASIC instance 0. • egressq—Displays port information for instance 0 of the egressq ASIC. • epse—Displays port information for the egress packet switching engine (EPSE) ASIC. • fabricq instance 0—Displays port information for instance 0 of the fabricq ASIC. • fabricq instance 1—Displays port information for instance 1 of the fabricq ASIC. • fabricq instance 2—Displays port information for instance 2 of the fabricq ASIC. • fabricq instance 3—Displays port information for instance 3 of the fabricq ASIC. • fia instance 0—Displays port information for instance 0 of the fabric Interface ASIC (FIA). • fia instance 1—Displays port information for instance 1 of the FIA. • ingressq—Displays port information for the ingressq ASIC. • ipse—Displays port information for the ingress packet switching engine (PSE) ASIC. • jacketcard instance 0—Displays port information for instance 0 of the jacketcard ASIC. • jacketcard instance 1—Displays port information for instance 1 of the jacketcard ASIC. • jacketcard instance 2—Displays port information for instance 2 of the jacketcard ASIC. • pla768—Displays port information for the OC768 plim ASIC. • plaspa instance 0—Displays port information for instance 0 of the SPA plim ASIC. • plaspa instance 1—Displays port information for instance 1 of the SPA plim ASIC. • plim asic instance 0—Displays port information for instance 0 of the plim ASIC. • plim asic instance 1—Displays port information for instance 1 of the plim ASIC. • plim asic instance 2—Displays port information for instance 2 of the plim ASIC. • plim asic instance 3—Displays port information for instance 3 of the plim ASIC.
pdma queue <i>queue-id</i>	Displays transmit and receive Packet Direct-Memory-Access (PDMA) information for the specified queue.
pdma queue all	Displays transmit and receive PDMA information for all queues. The information displayed pertains to the ASIC indicated in the show controllers cputctrl ports command.
direction all	Displays transmit and receive Packet Direct-Memory-Access (PDMA) information for the specified queue. The information displayed pertains to the ASIC you specified for the <i>asic_id</i> argument.

show controllers cputrl ports

direction rx	Displays receive PDMA information only for the specified queue. The information displayed pertains to the ASIC you specified for the <i>asic_id</i> argument.
direction tx	Displays transmit PDMA information only for the specified queue. The information displayed pertains to the ASIC you specified for the <i>asic_id</i> argument.
active	Displays descriptions for active queues only.
detail	Displays descriptions for any queues, regardless of whether they are active.
pio	Displays transmit and receive Polled I/O (PIO) information for the specified queue.
location node-id	(Optional) Identifies the location of the node whose CPU controller port information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.

Command Default No default behavior or values

Command Modes EXEC mode

Command History	Release	Modification
	Release 2.0	This command was introduced.
	Release 3.5.0	The show controllers cputrl ports command was first supported under the interface task-ID. The queue and direction keywords were added to the show controllers cputrl ports command.

Usage Guidelines No specific guidelines impact the use of this command.

Task ID	Task ID Operations
	drivers read
	interface read

Examples This example shows how to display port information for the transmit and receive PIO queues on the EPSE ASIC:

```
RP/0/RP0/CPU0:router# show controllers cputrl ports epse pio

client name: PSE          device instance: 1
cputrl net port: 6         pci base: 0x98000000
map reg: 0x6076a12c       OS interrupt level: 102
Cputrl interrupt level: 6  OS Run priority: 6
config reg: 0x00000000    channels reg: 0x00000000
int_cause_asic_mask: 0x00000010 int_cause_error_mask: 0x00000020
int_cause_link_error_mask: 0x00000040
crc_errors: 0 sync_errors: 0 reframe_events: 0

client name: PSE          device instance: 1
cputrl net port: 6         pci base: 0x98000000
```

```

map reg: 0x6076a12c          OS interrupt level: 102
Cpuctrl interrupt level: 6    OS Run priority: 6
config reg: 0x00000000         channels reg: 0x00000000
int_cause_asic_mask: 0x00000010 int_cause_error_mask: 0x00000020
int_cause_link_error_mask: 0x00000040
crc_errors: 0     sync_errors: 0   reframe_events: 0

```

device PSE instance 1 is not detected on node 201/

This table describes the significant fields shown in the display.

Table 6: show controllers cpuctrl ports Field Descriptions

Field	Description
client name	Identifies the client whose port CPU controller information is displayed.
device instance	The client device instance for which the port CPU controller information is displayed.
cpuctrl net port	Identifies the CPU controller net port.
pci base	PCI ⁹ base.
map reg	Client map register.
OS interrupt level	Level of interrupt configured for the port. Interrupts are triggered by arrival of a packet that causes the CPU to postpone other tasks and handle the packet.
Cpuctrl interrupt level	Level of CPU controller interrupt configured for the port.
OS Run priority	Software priority.
config reg	Configuration register, expressed in hexadecimal format.
channels reg	Channel register, expressed in hexadecimal format.
int_cause_asic_mask	Internal ASIC masking information.
int_cause_error_mask	Internal error masking information.
int_cause_link_error_mask	Internal link error masking information.
crc_errors	Number of CRC ¹⁰ errors that have occurred on this port.
sync_errors	Number of synchronization errors that have occurred on this port.
reframe_events	Number of reframe events that have occurred on this port.

⁹ Peripheral Component Interconnect

show controllers cputctrl ports

¹⁰ cyclic redundancy check

Related Commands	Command	Description
	show controllers cputctrl summary, on page 57	Displays summarized information about all the ASICs accessed through the CPU controller ASICs on the router or on a specific node.

show controllers cputctrl ports cputctrl pio

To display polled I/O (PIO) information for the specified CPU controller ASIC, use the **show controllers cputctrl ports cputctrl pio** command in EXEC mode.

show controllers cputctrl ports *asic_id* cputctrl pio [location *node-id*]

Syntax Description	<p><i>asic_id</i> Identifies the CPU controller ASIC whose port information you want to display. Replace the <i>asic_id</i> argument with one of the following keywords:</p> <ul style="list-style-type: none"> • cputctrl—Displays port information for the CPU controller ASIC instance 0. • egressq—Displays port information for instance 0 of the egressq ASIC. • epse—Displays port information for the egress packet switching engine (EPSE) ASIC. • fabricq instance 0—Displays port information for instance 0 of the fabricq ASIC. • fabricq instance 1—Displays port information for instance 1 of the fabricq ASIC. • fabricq instance 2—Displays port information for instance 2 of the fabricq ASIC. • fabricq instance 3—Displays port information for instance 3 of the fabricq ASIC. • fia instance 0—Displays port information for instance 0 of the fabric Interface ASIC (FIA). • fia instance 1—Displays port information for instance 1 of the FIA. • ingressq—Displays port information for the ingressq ASIC. • ipse—Displays port information for the ingress packet switching engine (PSE) ASIC. • jacketcard instance 0—Displays port information for instance 0 of the jacketcard ASIC. • jacketcard instance 1—Displays port information for instance 1 of the jacketcard ASIC. • jacketcard instance 2—Displays port information for instance 2 of the jacketcard ASIC. • pla768—Displays port information for the OC768 plim ASIC. • dma—Displays port PDMA information. • io—Displays port Polled I/O (PIO) information. • plaspa instance 0—Displays port information for instance 0 of the SPA plim ASIC. • plaspa instance 1—Displays port information for instance 1 of the SPA plim ASIC. • plim asic instance 0—Displays port information for instance 0 of the plim ASIC. • plim asic instance 1—Displays port information for instance 1 of the plim ASIC. • plim asic instance 2—Displays port information for instance 2 of the plim ASIC. • plim asic instance 3—Displays port information for instance 3 of the plim ASIC. 				
location	(Optional) Identifies the location of the node whose CPU controller port information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.				
Command Default	No default behavior or values				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				

show controllers cputrl ports cputrl pio

Release	Modification
Release 3.5.0	The show controllers cputrl ports command was first supported under the interface task-ID. The queue and direction keywords were added to the show controllers cputrl ports command.

Usage Guidelines No specific guidelines impact the use of this command.

Task ID	Task Operations ID
drivers	read
interface	read

Examples The following example shows how to display port information for the transmit and receive PIO queues on the EPSE ASIC:

```
RP/0/RP0/CPU0:router# show controllers cputrl ports cputrl pio location 0/1/CPU0
client name: Cputrl          device instance: 0
cputrl net port: 0           pci base: 0x80000000
map reg: 0x00000000          OS interrupt level: 96
Cputrl interrupt level: 0    OS Run priority: 0
config reg: 0x00000000       channels reg: 0x00000000
int_cause_asic_mask: 0x00000000 int_cause_error_mask: 0x00000000

int_cause_link_error_mask: 0x00000000
crc_errors: 0 sync_errors: 0 reframe_events: 0
```

Related Commands	Command	Description
	show controllers cputrl ports, on page 51	Displays port information for the specified CPU controller ASIC.
	show controllers cputrl summary, on page 57	Displays summarized information about all the ASICs accessed through the CPU controller ASICs on the router or on a specific node.

show controllers cputrl summary

To display summarized information about all the ASICS accessed through the CPU controller ASICS on the router or on a specific node, use the **show controllers cputrl summary** command in EXEC mode.

show controllers cputrl summary [location node-id]

Syntax Description	location node-id (Optional) Identifies the location of the node whose CPU controller ASIC information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.5.0</td><td>The show controllers cputrl summary command was first supported under the interface task-ID.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.5.0	The show controllers cputrl summary command was first supported under the interface task-ID.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.5.0	The show controllers cputrl summary command was first supported under the interface task-ID.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read</td></tr> <tr> <td>interface</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	drivers	read	interface	read
Task ID	Operations						
drivers	read						
interface	read						
Examples	<p>The following example shows how to display summarized information about all the ASICS accessed through the CPU controller ASICS on a specific node:</p> <pre>RP/0/RP0/CPU0:router# show controllers cputrl summary location 0/0/CPU0 Cputrl discovered 11 device on node 0/0/CPU0: Cputrl HW version string for this node is: Squid FPGA v2.07 Fri Jan 23 16:21:01 2004 ykoren ----- device_name: Fabriccq device instance: 0 Cputrl net port: 3 pci_base: 0x8c000000 ----- device_name: Fabriccq device instance: 1 Cputrl net port: 4 pci_base: 0x90000000 ----- device_name: Ingresssq device instance: 0 Cputrl net port: 8 pci_base: 0xa0000000</pre>						

show controllers cpuctrl summary

```

device_name:      Egressq    device instance:  0
Cpuctrl net port: 7          pci_base:        0x9c000000
-----
device_name:      FIA        device instance:  0
Cpuctrl net port: 1          pci_base:        0x84000000
-----
device_name:      FIA        device instance:  1
Cpuctrl net port: 2          pci_base:        0x88000000
-----
device_name:      Cpuctrl    device instance:  0
Cpuctrl net port: 0          pci_base:        0x80000000
-----
device_name:      PSE        device instance:  1
Cpuctrl net port: 6          pci_base:        0x98000000
--More--

RP/0/RP0/CPU0:router# show controllers cpuctrl summary location 0/5/CPU0
Cpuctrl discovered 2 device on node 0/5/CPU0
-----
Device Name: NPU      Device Instance: 16
Cpuctrl Port: 16     PCI Base Address: 0x1000000000
:                  PCI Window Size: 0x00000000
-----
Device Name: NPU      Device Instance: 0
Cpuctrl Port: 216    PCI Base Address: 0xd800000000
:                  PCI Window Size: 0x00000000

```

This table describes the significant fields shown in the display.

Table 7: show controllers cpuctrl summary Field Descriptions

Field	Description
device_name	Identifies the device whose CPU controller information is displayed.
device instance	Identifies the CPU device whose information is displayed.
Cpuctrl net port	Identifies the CPU controller network port.
pci_base	PCI ¹¹ base, in hexadecimal format.

¹¹ Peripheral Component Interconnect

Related Commands

Command	Description
show controllers cpuctrl clients, on page 35	Displays information about all CPU controller clients on the router, or for specific CPU controller clients.
show controllers cpuctrl devices, on page 41	Displays information about the CPU controller devices on the router.

Command	Description
show controllers cpuctrl ports, on page 51	Displays port information for the specified CPU controller ASIC.

show controllers cputrl trace

show controllers cputrl trace

To display the trace information about all the ASICs accessed through the CPU controller ASICs on the router or on a specific node, use the **show controllers cputrl trace** command in EXEC mode.

show controllers cputrl trace [{all | client | queue | server}]

Syntax Description	all client queue server	Displays the trace information of all the devices. Displays all the trace information of all the cdma or pdma clients. Displays all the trace information of all the ASIC queues. Displays all the server trace information.
Command Default	No default behavior or values	
Command Modes	EXEC mode	
Command History	Release	Modification
	Release 3.8.0 This command was introduced.	
Usage Guidelines	No specific guidelines impact the use of this command.	
Task ID	Task ID	Operations
	drivers	read
	interface	read

Examples

The following example shows how to display statistics information of all the CDMA CPU controller ASIC queues:

```
RP/0/RP0/CPU0:router# show controllers cputrl trace queue all cdma stats
/dev/shmem/ltrace/squid/queue/dma/chan0/queue4: 278 searches, 462 elements, 1.7h
/dev/shmem/ltrace/squid/queue/dma/chan0/queue6: 51 searches, 85 elements, 1.7 eh
/dev/shmem/ltrace/squid/queue/dma/chan0/queue4 unique: 3.584 Mbytes/sec for 64 s
/dev/shmem/ltrace/squid/queue/dma/chan0/queue6 unique: inf Mbytes/sec for 64 ens
10 unique entries (128 possible, 0 filtered)
Jul 14 19:29:06.548 squid/queue/dma/chan0/queue6 0/RP0/CPU0 1# t1 INI:DMA:000:0
Jul 14 19:29:06.936 squid/queue/dma/chan0/queue4 0/RP0/CPU0 1# t1 INI:DMA:000:0
Jul 14 19:29:11.192 squid/queue/dma/chan0/queue4 0/RP0/CPU0 1# t5 BOT:HWC:011:0
Jul 14 20:50:56.795 squid/queue/dma/chan0/queue6 0/RP0/CPU0 17# t12 TOP:DMA:0101
Jul 14 20:50:56.803 squid/queue/dma/chan0/queue6 0/RP0/CPU0 17# t5 BOT:HWC:0120
```

```

Jul 14 20:50:56.803 squid/queue/dma/chano/queue6 0/RP0/CPU0 14# t5 BOT:HWC:0101
Jul 14 20:50:56.803 squid/queue/dma/chano/queue6 0/RP0/CPU0 2# t5 BOT:HWC:011:1
Jul 14 20:54:34.970 squid/queue/dma/chano/queue4 0/RP0/CPU0 92# t12 TOP:DMA:0101
Jul 14 20:54:34.970 squid/queue/dma/chano/queue4 0/RP0/CPU0 92# t5 BOT:HWC:010b
Jul 14 20:54:34.970 squid/queue/dma/chano/queue4 0/RP0/CPU0 92# t5 BOT:HWC:0120
/dev/shmem/ltrace/squid/queue/dma/chano/queue4 wrapping: inf Mbytes/sec for 128s
/dev/shmem/ltrace/squid/queue/dma/chano/queue6 wrapping: inf Mbytes/sec for 128s
176 wrapping entries (256 possible, 0 filtered, 329 total)
Jul 14 19:29:06.548 squid/queue/dma/chano/queue6 0/RP0/CPU0 t1 INI:DMA:000: Cr0
Jul 14 19:29:08.586 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:010: DM0
Jul 14 19:29:08.586 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:011: DM0
Jul 14 19:29:13.214 squid/queue/dma/chano/queue6 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:29:13.217 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:010: DM0
Jul 14 19:29:13.217 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:29:13.219 squid/queue/dma/chano/queue6 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:29:13.224 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:010: DM1
Jul 14 19:29:13.224 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:29:13.233 squid/queue/dma/chano/queue6 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:29:13.237 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:010: DM2
Jul 14 19:29:13.237 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:29:13.241 squid/queue/dma/chano/queue6 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:29:13.243 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:010: DM3
Jul 14 19:29:13.243 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:29:13.249 squid/queue/dma/chano/queue6 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:29:13.253 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:010: DM4
Jul 14 19:29:13.253 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:29:13.265 squid/queue/dma/chano/queue6 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:29:13.269 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:010: DM5
Jul 14 19:29:13.269 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:29:19.212 squid/queue/dma/chano/queue6 0/RP0/CPU0 t1 TOP:DMA:010: DM1
Jul 14 19:29:19.212 squid/queue/dma/chano/queue6 0/RP0/CPU0 t1 TOP:DMA:010: DM1
Jul 14 19:29:19.212 squid/queue/dma/chano/queue6 0/RP0/CPU0 t1 TOP:DMA:010: DM1
Jul 14 19:29:19.218 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:010: DM6
Jul 14 19:29:19.218 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:29:19.218 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:29:19.218 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:29:19.218 squid/queue/dma/chano/queue6 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:29:19.226 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:010: DM9
Jul 14 19:29:19.226 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:29:19.235 squid/queue/dma/chano/queue6 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:29:19.241 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:010: DMa
Jul 14 19:29:19.241 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:29:19.249 squid/queue/dma/chano/queue6 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:29:19.256 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:010: DMb
Jul 14 19:29:19.256 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:29:19.262 squid/queue/dma/chano/queue6 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:29:19.269 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:010: DMc
Jul 14 19:29:19.269 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:30:04.148 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DM2
Jul 14 19:30:04.148 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:30:04.149 squid/queue/dma/chano/queue4 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:30:04.151 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DM3
Jul 14 19:30:04.151 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:30:05.160 squid/queue/dma/chano/queue4 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:30:05.161 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DM4
Jul 14 19:30:05.161 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:30:05.163 squid/queue/dma/chano/queue4 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:30:05.168 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DM5
Jul 14 19:30:05.168 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:30:06.172 squid/queue/dma/chano/queue4 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:30:06.175 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DM6
Jul 14 19:30:06.175 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:30:06.175 squid/queue/dma/chano/queue4 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:30:06.182 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DM7

```

show controllers cputrl trace

```

Jul 14 19:30:17.328 squid/queue/dma/chano/queue4 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:30:17.332 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DMd
Jul 14 19:30:17.332 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:30:18.338 squid/queue/dma/chano/queue4 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:30:18.339 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DMe
Jul 14 19:30:18.339 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:30:18.340 squid/queue/dma/chano/queue4 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:30:18.340 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DMf
Jul 14 19:30:18.340 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:30:19.342 squid/queue/dma/chano/queue4 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:30:19.346 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DM0
Jul 14 19:30:19.346 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:30:19.350 squid/queue/dma/chano/queue4 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:30:19.354 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DM1
Jul 14 19:30:19.354 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:30:20.360 squid/queue/dma/chano/queue4 0/RP0/CPU0 t1 TOP:DMA:010: DM0
Jul 14 19:30:20.364 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DM2
Jul 14 19:30:20.364 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:32:06.165 squid/queue/dma/chano/queue4 0/RP0/CPU0 t12 TOP:DMA:010: DM1
Jul 14 19:32:06.166 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DM3
Jul 14 19:32:06.166 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:32:06.614 squid/queue/dma/chano/queue4 0/RP0/CPU0 t12 TOP:DMA:010: DM1
Jul 14 19:32:06.622 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DM4
Jul 14 19:32:06.622 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:32:26.670 squid/queue/dma/chano/queue4 0/RP0/CPU0 t12 TOP:DMA:010: DM1
Jul 14 19:32:26.675 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DM5
Jul 14 19:32:26.675 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:32:26.878 squid/queue/dma/chano/queue4 0/RP0/CPU0 t12 TOP:DMA:010: DM1
Jul 14 19:32:26.887 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DM6
Jul 14 19:32:26.887 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:32:26.927 squid/queue/dma/chano/queue4 0/RP0/CPU0 t12 TOP:DMA:010: DM1
Jul 14 19:32:26.935 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DM7
Jul 14 19:32:26.935 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 19:32:27.144 squid/queue/dma/chano/queue4 0/RP0/CPU0 t12 TOP:DMA:010: DM1
Jul 14 19:32:27.150 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DM8
Jul 14 19:32:27.150 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 20:50:56.806 squid/queue/dma/chano/queue6 0/RP0/CPU0 t12 TOP:DMA:010: DM1
Jul 14 20:50:56.806 squid/queue/dma/chano/queue6 0/RP0/CPU0 t12 TOP:DMA:010: DM1
Jul 14 20:50:56.816 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:010: DMd
Jul 14 20:50:56.816 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 20:50:56.816 squid/queue/dma/chano/queue6 0/RP0/CPU0 t12 TOP:DMA:010: DM1
Jul 14 20:50:56.817 squid/queue/dma/chano/queue6 0/RP0/CPU0 t12 TOP:DMA:010: DM1
Jul 14 20:50:56.825 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 20:50:56.825 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 20:50:56.825 squid/queue/dma/chano/queue6 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 20:51:30.093 squid/queue/dma/chano/queue4 0/RP0/CPU0 t12 TOP:DMA:010: DM1
Jul 14 20:51:30.117 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DM9
Jul 14 20:51:30.117 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 20:54:00.889 squid/queue/dma/chano/queue4 0/RP0/CPU0 t12 TOP:DMA:010: DM1
Jul 14 20:54:00.890 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DMa
Jul 14 20:54:00.890 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0
Jul 14 20:54:34.993 squid/queue/dma/chano/queue4 0/RP0/CPU0 t12 TOP:DMA:010: DM1
Jul 14 20:54:34.993 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:010: DMb
Jul 14 20:54:34.993 squid/queue/dma/chano/queue4 0/RP0/CPU0 t5 BOT:HWC:012: Us0

```

The following example shows how to display trace information for internal unique entries of the CPU controller:

show controllers cpuctrl vcdma

show controllers cpuctrl vcdma

To display the information about all the show commands in the VCDMA library, use the **show controllers cpuctrl vcdma** command in EXEC mode.

show controllers cpuctrl vcdma [{cdma | trace}]

Syntax Description

cdma	Displays the information related to a specific or all cdma channels.
trace	Displays the trace information of a specified controller ASIC.
all	Displays the trace information of all the controller ASICS.
client	Displays the trace information of the cdma clients.
queue	Displays the trace information of all the ASIC queues.

Command Default

No default behavior or values

Command Modes

EXEC mode

Command History

Release	Modification
Release 3.8.0	This command was introduced.

Usage Guidelines

No specific guidelines impact the use of this command.

Task ID

Task ID	Operations
drivers	read
interface	read

Examples

The following example shows how to display the cdma channel information of the active queue descriptors accessed by the CPU controller ASICs:

```
RP/0/RP0/CPU0:router# show controllers cpuctrl vcdma cdma channel all active
No queue present for channel 0, queue 0 on 0/1/CPU0
No queue present for channel 0, queue 1 on 0/1/CPU0
No queue present for channel 0, queue 2 on 0/1/CPU0
No queue present for channel 0, queue 3 on 0/1/CPU0
No queue present for channel 0, queue 4 on 0/1/CPU0
No queue present for channel 0, queue 5 on 0/1/CPU0
No queue present for channel 0, queue 6 on 0/1/CPU0
-----
VCDMA queue:
```

```

Channel: 0      queue: 7      vqueue state: 0x1

    client handle =      4      client pid =      81997
    client event handle = 0x5001a998  client callback = 0x4c9d13e8
    descriptor ring size = 1024
    Queue create count = 1      Queue delete count = 0
    Total VCDMA Batches = 200227  VCDMA Batches = 200227
    Total DMA transactions = 211808 DMA transactions = 211808
    Total bytes = 3645826297   bytes = 3645826297
    Total Out of desc errs = 0     Out of desc errs = 0
VCDMA Batches active on this queue: 0

```

```

No queue present for channel 1, queue 0 on 0/1/CPU0
No queue present for channel 1, queue 1 on 0/1/CPU0
No queue present for channel 1, queue 2 on 0/1/CPU0
No queue present for channel 1, queue 3 on 0/1/CPU0
No queue present for channel 1, queue 4 on 0/1/CPU0
No queue present for channel 1, queue 5 on 0/1/CPU0
No queue present for channel 1, queue 6 on 0/1/CPU0
No queue present for channel 1, queue 7 on 0/1/CPU0
No queue present for channel 0, queue 0 on 0/6/CPU0
No queue present for channel 0, queue 1 on 0/6/CPU0
No queue present for channel 0, queue 2 on 0/6/CPU0
No queue present for channel 0, queue 3 on 0/6/CPU0
No queue present for channel 0, queue 4 on 0/6/CPU0
No queue present for channel 0, queue 5 on 0/6/CPU0
No queue present for channel 0, queue 6 on 0/6/CPU0

```

VCDMA queue:
Channel: 0 queue: 7 vqueue state: 0x1

```

    client handle =      4      client pid =      81980
    client event handle = 0x5001a998  client callback = 0x4c9ba3e8
    descriptor ring size = 1024
    Queue create count = 1      Queue delete count = 0
    Total VCDMA Batches = 200238  VCDMA Batches = 200238
    Total DMA transactions = 211819 DMA transactions = 211819
    Total bytes = 3646313721   bytes = 3646313721
    Total Out of desc errs = 0     Out of desc errs = 0
VCDMA Batches active on this queue: 0

```

```

No queue present for channel 1, queue 0 on 0/6/CPU0
No queue present for channel 1, queue 1 on 0/6/CPU0
No queue present for channel 1, queue 2 on 0/6/CPU0
No queue present for channel 1, queue 3 on 0/6/CPU0
No queue present for channel 1, queue 4 on 0/6/CPU0
No queue present for channel 1, queue 5 on 0/6/CPU0
No queue present for channel 1, queue 6 on 0/6/CPU0
No queue present for channel 1, queue 7 on 0/6/CPU0

```

show controllers egressq eio links

show controllers egressq eio links

To display Elastic I/O (EIO) information for the egress queueing ASIC, use the **show controllers egressq eio links** command in EXEC mode.

show controllers egressq eio links {link-id | all} location node-id

Syntax Description	link-id Identifies the EIO link whose egress queueing ASIC information you want to display. Replace the <i>link-id</i> argument with a link identifier. Range is from 0 to 4294967295. all Displays egress queueing ASIC information for all links on the specified node. location node-id Identifies the location of the egress queue manager whose EIO link information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.
---------------------------	---

Command Default	No default behavior or values
------------------------	-------------------------------

Command Modes	EXEC mode
----------------------	-----------

Command History	Release	Modification
	Release 3.2	This command was introduced.

Usage Guidelines	No specific guidelines impact the use of this command.
-------------------------	--

Task ID	Task ID	Operations
	drivers	read
	interface	read

Examples	The following example shows how to display information for all EIO links on a node's egress queueing ASIC:
-----------------	--

```
RP/0/RP0/CPU0:router# show controllers egressq eio links all location 0/2/CPU0
Node: 0/2/CPU0:
-----
EIO links:
-----
ASIC Id    Peer Id      Type Link-Id Attempts Accept Failed State
-----
EGRESSQ_0   PSE_1       RX   11     1      1      0      EIO_LINK_TRAINED
EGRESSQ_0   PSE_1       TX   64     0      0      0      EIO_LINK_TRAINED
EGRESSQ_0   PLIM-ASIC_0 TX   60     0      0      0      EIO_LINK_TRAINED
EGRESSQ_0   PLIM-ASIC_1 TX   61     0      0      0      EIO_ADD_LINK
EGRESSQ_0   PLIM-ASIC_2 TX   62     0      0      0      EIO_ADD_LINK
```

EGRESSQ_0	PLIM-ASIC_3	TX	63	0	0	0	EIO_ADD_LINK
-----------	-------------	----	----	---	---	---	--------------

This table describes the significant fields shown in the display.

Table 8: show controllers egressq eio links Field Descriptions

Field	Description
ASIC Id	Identifies the ASIC that is associated with the link whose information is displayed.
Peer Id	Identifies the ASIC peer.
Type	Indicates whether the AISC is receiving (RX) or transmitting (TX).
Link-Id	Link identifier.
Attempts	Number of attempts made to send or receive information on the specified link.
Accept	Number of consecutive EIO requests for the link made by the PSE driver to the peer that were accepted.
Failed	Number of consecutive EIO requests for the link that failed.
State	Current link state.

Related Commands

Command	Description
show controllers egressq group, on page 68	Displays information about egress queue groups.
show controllers egressq port, on page 74	Displays egress queue information for a port, or for several ports.

show controllers egressq group

show controllers egressq group

To display information about egress queue groups, use the **show controllers egressq group** command in EXEC mode.

show controllers egressq group {group1 [group2] | all | limits {max | min}} location node-id

Syntax Description	group1 First group whose information you want to display. Range is from 1 to 2047. group2 (Optional) Last group whose information you want to display. Range is from 1 to 2047. all Indicates that you want to display information about all egress queue groups on a specific node. limits Indicates that you want to display the limits table. Follow the keyword with max to display the maximum limits table, or min to display the minimum limits table. max Display the maximum limits table. min Display the minimum limits table. location node-id Identifies the location of the egress queue whose group information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 3.2	This command was introduced.		
Release	Modification						
Release 3.2	This command was introduced.						
Usage Guidelines	If you do not specify a group number for the <i>group2</i> argument, information is displayed only for the egress queue you specified for the <i>group1</i> argument. If you specify <i>group1</i> and <i>group2</i> , information is displayed for all groups within the range from <i>group1</i> through <i>group2</i> .						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>drivers</td> <td>read</td> </tr> <tr> <td>interface</td> <td>read</td> </tr> </tbody> </table>	Task ID	Operations	drivers	read	interface	read
Task ID	Operations						
drivers	read						
interface	read						
Examples	The following example shows how to display information for a specific range of egress queue groups on the CPU node in slot 2:						

```
RP/0/RP0/CPU0:router# show controllers egressq group 1 3 location 0/2/CPU0
```

```
-----
          Group 1
-----
Port : 0
Priority : Low
Max LB Tokens : 7812
Max LB Limit Index : 38
Min LB Tokens : 0
Min LB Limit Index : 0
Quantum : 27
Default Queue : 1
High Priority Queue : N/A
Low Priority Queue : 1
-----
          Group 2
-----
Port : 1
Priority : Low
Max LB Tokens : 7812
Max LB Limit Index : 38
Min LB Tokens : 0
Min LB Limit Index : 0
Quantum : 27
Default Queue : 2
High Priority Queue : N/A
Low Priority Queue : 2
-----
          Group 3
-----
Port : 256
Priority : Low
Max LB Tokens : 7812
Max LB Limit Index : 38
Min LB Tokens : 0
Min LB Limit Index : 0
Quantum : 27
Default Queue : 3
High Priority Queue : N/A
Low Priority Queue : 3
-----
```

This table describes the significant fields shown in the display.

Table 9: show controllers egressq group Field Descriptions

Field	Description
Port	Port identifier.
Priority	Group priority.
Max LB Tokens	Maximum number of port LB tokens.
Max LB Limit Index	Maximum LB limit.
Min LB Tokens	Minimum number of port LB tokens.
Min LB Limit Index	Minimum LB limit.

show controllers egressq group

Field	Description
Quantum	Quantum value for this group.
Default Queue	Default queue for this group.
High Priority Queue	High priority queue identifier.
Low Priority Queue	Low priority queue identifier.

Related Commands

Command	Description
show controllers egressq eio links, on page 66	Displays Elastic I/O (EIO) information for the egress queueing ASIC.
show controllers egressq port, on page 74	Displays egress queue information for a port, or for several ports.

show controllers egressq interface

To display information about interfaces associated with an egress queue, use the **show controllers egressq interface** command in EXEC mode.

show controllers egressq interface [{type interface-path-id | all}] location node-id

Syntax Description

type interface-path-id Identifies a physical interface or a virtual interface.

Note Use the **show interfaces** command to see a list of all possible interfaces currently configured on the router.

all

Indicates that you want to display egress queue information for all interfaces in the specified **location**.

location node-id

Identifies the location of the interface whose egress queue information you want to display. The *node-id* argument is expressed in the *rack/slot/module* notation.

Command Default

No default behavior or values

Command Modes

EXEC mode

Command History

Release Modification

Release 3.2 This command was introduced.

Usage Guidelines

No specific guidelines impact the use of this command.

Task ID

Task ID Operations

interface read

drivers read

Examples

The following example shows how to display egress queue information for all configured interfaces on the router:

```
RP/0/RP0/CPU0:router# show controllers egressq interface all
-----
          Interface POS0/0/0/15
-----
          Port 776
-----
          Max LB Tokens      : 18720
          Max LB Limit Index : 41
          Quantum           : 27
          Default Group     : 24
          High Priority Group : N/A
          Low Priority Group  : 24
-----
```

show controllers egressq interface

```
-----
      Interface POS0/0/0/14
-----
      Port 780
-----
Max LB Tokens      : 18720
Max LB Limit Index : 41
Quantum            : 27
Default Group      : 23
High Priority Group: N/A
Low Priority Group : 23
-----
      Interface POS0/0/0/13
-----
      Port 778
-----
Max LB Tokens      : 18720
Max LB Limit Index : 41
Quantum            : 27
Default Group      : 22
High Priority Group: N/A
Low Priority Group : 22
-----
      Interface POS0/0/0/12
-----
      Port 782
-----
Max LB Tokens      : 18720
Max LB Limit Index : 41
Quantum            : 27
Default Group      : 21
High Priority Group: N/A
Low Priority Group : 21
-----
      Interface POS0/0/0/11
-----
      Port 520
-----
Max LB Tokens      : 18720
Max LB Limit Index : 41
Quantum            : 27
Default Group      : 20
High Priority Group: N/A
Low Priority Group : 20
-----
      Interface POS0/0/0/10
-----
      Port 524
-----
Max LB Tokens      : 18720
Max LB Limit Index : 41
Quantum            : 27
Default Group      : 19
High Priority Group: N/A
Low Priority Group : 19
-----
      Interface POS0/0/0/9
-----
      Port 522
```

```
-----
Max LB Tokens      : 18720
Max LB Limit Index : 41
Quantum           : 27
Default Group     : 18
High Priority Group: N/A
Low Priority Group : 18
-----
-----
Interface POS0/0/0/8
-----
Port 526
-----
Max LB Tokens      : 18720
Max LB Limit Index : 41
Quantum           : 27
Default Group     : 17
High Priority Group: N/A
Low Priority Group : 17
-----
```

This table describes the significant fields shown in the display.

Table 10: show controllers egressq interface Field Descriptions

Field	Description
Interface	Interface identifier, in the <type>rack/slot/module/port format.
Port	Port to which the specified interface belongs.
Max LB Tokens	Maximum number of port LB tokens.
Max LB Limit Index	Maximum LB limit.
Quantum	Average number of bytes in the interface egress queue.
Default Group	Default group for this interface.
High Priority Group	High priority group identifier.
Low Priority Group	Low priority group identifier.

Related Commands	Command	Description
	show controllers egressq eio links, on page 66	Displays Elastic I/O (EIO) information for the egress queueing ASIC.
	show controllers egressq group, on page 68	Displays information about egress queue groups.
	show controllers egressq port, on page 74	Displays egress queue information for a port, or for several ports.

show controllers egressq port

show controllers egressq port

To display egress queue information for a port, or for several ports, use the **show controllers egressq port** command in EXEC mode.

show controllers egressq port {port1 [port2] | all | limits max} location node-id

Syntax Description	<p>port1 Identifies the port whose egress queue information you want to display. Replace the <i>port1</i> argument with a port identifier. Range is from 0 to 1023.</p> <p>port2 Identifies the last port whose egress queue information you want to display. Replace the <i>port2</i> argument with a port identifier. Range is from 0 to 1023.</p> <p>all Indicates that you want to display egress queue information for all ports on the node in the specified location.</p> <p>limits max Indicates that you want to display the maximum limits table.</p> <p>location node-id Identifies the location of the egress queue whose group information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.</p>						
Command Default	No default behavior or values						
Command Modes	EXEC						
Command History	<table> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.2</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.2	This command was introduced.		
Release	Modification						
Release 3.2	This command was introduced.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>interface</td><td>read</td></tr> <tr> <td>drivers</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	interface	read	drivers	read
Task ID	Operations						
interface	read						
drivers	read						

Examples

The following example shows how to display egress queue information for ports 1, 2, and 3 on the CPU node in slot 2:

```
RP/0/RP0/CPU0:router# show controllers egressq port 1 3 location 0/2/CPU0
-----
          Port 1
-----
Max LB Tokens      : 7812
Max LB Limit Index : 38
```

```

Quantum : 27
Default Group : 2
High Priority Group : N/A
Low Priority Group : 2
-----
-----
Port 2
-----
Port is not allocated
-----
Port 3
-----
Port is not allocated

```

This table describes the significant fields shown in the display.

Table 11: show controllers egressq port Field Descriptions

Field	Description
Port	Port identifier.
Max LB Tokens	Maximum number of port LB tokens.
Max LB Limit Index	Maximum LB limit.
Quantum	Quantum value for this interface.
Default Group	Default group.
High Priority Group	High priority group identifier.
Low Priority Group	Low priority group identifier.

Related Commands	Command	Description
	show controllers egressq eio links, on page 66	Displays Elastic I/O (EIO) information for the egress queueing ASIC.
	show controllers egressq group, on page 68	Displays information about egress queue groups.

show controllers egressq queue

show controllers egressq queue

To display information about a specific egress queue, or a range of egress queues, use the **show controllers egressq queue** command in EXEC mode.

```
show controllers egressq queue {queue1 [queue2] | from-group {group-id | all} | from-interface {type instance | all} | from-port {port-id | all} | limits {max | min} | all} location node-id
```

Syntax Description					
queue1	Identifies the first port whose egress queue information you want to display. Replace the <i>queue1</i> argument with a queue identifier. Range is from 1 through 8191.				
queue2	(Optional) Identifies the last port whose egress queue information you want to display. Replace the <i>queue2</i> argument with a queue identifier. Range is from 1 through 8191.				
from-group group-id	Displays egress queue information for a specific port group. Replace the <i>group-id</i> argument with the number that identifies the port group whose information is to be displayed. Range is from 1 through 2047.				
from-group all	Displays egress queue information for all port groups on the specified location.				
from-interface type instance	Displays egress queue information for a specific interface. Replace the <i>type instance</i> argument with a physical interface ID or a virtual interface ID. Note Use the show interfaces command to see a list of all possible interfaces currently configured on the router.				
from-interface all	Displays egress queue information for all interfaces on the specified location.				
from-port port-id	Displays egress queue information for a specific port. Replace the <i>port-id</i> argument with a port ID. Range is from 0 to 1023.				
from-port all	Displays egress queue information for all ports on the specified location.				
limits max	Displays the maximum limits table.				
limits min	Displays the minimum limits table.				
all	Displays detailed information about all egress queues on the specified location.				
location node-id	Identifies the location of the node whose egress queue information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.				
Command Default	No default behavior or values				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 3.2	This command was introduced.
Release	Modification				
Release 3.2	This command was introduced.				

Release	Modification
Release 3.5.0	The context keyword and <i>max_elements</i> argument were removed from the show controllers egressq queue command. The following keywords and arguments were added to the show controllers egressq queue command:

- **from-group** { *group-id* | **all** }
- **from-interface** { *type instance* | **all** }
- **from-port** { *port-id* | **all** }

Usage Guidelines	No specific guidelines impact the use of this command.
-------------------------	--

Task ID	Task ID	Operations
	drivers	read
	interface	read

Examples	The following example shows how to display information about egress queues 1 and 2 on the CPU node in slot 2:
-----------------	---

```
RP/0/RP0/CPU0:router# show controllers egressq queue 1 2 location 0/2/CPU0
-----
          Queue 1
-----
Group           : 1
Priority        : Low
Max LB Tokens  : 7812
Max LB Limit Index : 38
Min LB Tokens  : 0
Min LB Limit Index : 0
Quantum         : 27
Instantaneous length : 0
Length high watermark : 0
-----
          Queue 2
-----
Group           : 2
Priority        : Low
Max LB Tokens  : 7812
Max LB Limit Index : 38
Min LB Tokens  : 0
Min LB Limit Index : 0
Quantum         : 27
Instantaneous length : 0
Length high watermark : 0
```

show controllers egressq queue

This table describes the significant fields shown in the display.

Table 12: show controllers egressq queue Field Descriptions

Field	Description
Group	Group identifier.
Priority	Group priority.
Max LB Tokens	Maximum number of port LB tokens.
Max LB Limit Index	Maximum LB limit.
Min LB Tokens	Minimum number of port LB tokens.
Min LB Limit Index	Minimum LB limit.
Quantum	Quantum value for this queue.
Instantaneous length	Egress queue instantaneous length.
Length high watermark	Length high watermark register.

Related Commands	Command	Description
	show controllers egressq eio links, on page 66	Displays Elastic I/O (EIO) information for the egress queueing ASIC.
	show controllers egressq group, on page 68	Displays information about egress queue groups.
	show controllers egressq port, on page 74	Displays egress queue information for a port, or for several ports.

show controllers egressq statistics

To display egress queue manager statistics, use the **show controllers egressq statistics** command in EXEC mode.

show controllers egressq statistics location node-id

Syntax Description	location node-id Identifies the location of the egress queue whose statistics you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.2</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.2	This command was introduced.		
Release	Modification						
Release 3.2	This command was introduced.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read</td></tr> <tr> <td>interface</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	drivers	read	interface	read
Task ID	Operations						
drivers	read						
interface	read						
Examples	The following example shows how to display egress queue manager statistics:						
	<pre>RP/0/RP0/CPU0:router# show controllers egressq statistics location 0/2/CPU0 ----- Egressq Statistics ----- egressq ASIC version: 1 egressq ASIC state: Normal plimasic link0 output packets: 0 plimasic link0 output bytes: 0 plimasic link1 output packets: 0 plimasic link1 output bytes: 0 plimasic link2 output packets: 0 plimasic link2 output bytes: 0 plimasic link3 output packets: 0 plimasic link3 output bytes: 0 cpuctrl input packets: 0 cpuctrl output bytes: 1433250 pse input packets: 29250 pse dropped packets: 0 cpuctrl dropped packets: 0</pre>						

show controllers egressq statistics

This table describes the significant fields shown in the display.

Table 13: show controllers egressq statistics Field Descriptions

Field	Description
egressq ASIC version	Version identifier for the egress queue ASIC.
egressq ASIC state	Current state of the egress queue ASIC.
plimasic link0 output packets	Number of output packets on link 0 of the ASIC.
plimasic link0 output bytes	Output bytes on link 0 of the ASIC.
plimasic link1 output packets	Number of output packets on link 1 of the ASIC.
plimasic link1 output bytes	Number of output packets on link 1 of the ASIC.
plimasic link2 output packets	Number of output packets on link 2 of the ASIC
plimasic link2 output bytes	Number of output packets on link 2 of the ASIC.
plimasic link3 output packets	Number of output packets on link 3 of the ASIC.
plimasic link3 output bytes	Number of output packets on link 3 of the ASIC.
cputrl input packets	Number of CPU controller input packets received on this ASIC.
cputrl output bytes	CPU controller output bytes transmitted on this ASIC.
pse input packets	Number of PSE input packets received on this ASIC.
pse dropped packets	Number of PSE packets that were dropped by this ASIC due to errors.
cputrl dropped packets	Number of CPU controller packets that were dropped by this ASIC due to errors.

Related Commands

Command	Description
show controllers egressq eio links, on page 66	Displays Elastic I/O (EIO) information for the egress queueing ASIC.
show controllers egressq group, on page 68	Displays information about egress queue groups.
show controllers egressq port, on page 74	Displays egress queue information for a port, or for several ports.

show controllers egressq trace

To display the internal trace buffer information for Egressq on a specific controller or node, use the **show controllers egressq trace** command in EXEC mode.

```
show controllers egressq trace [{all | c2c | cdma | detail | errors | func | info | interrupt | periodic}]
location node-id
```

Syntax Description	all (Optional) Displays the internal trace (Itrace) information for all of the egressq errors and events. c2c (Optional) Displays the internal trace for C2C or EIO link processing information. cdma (Optional) Displays the internal trace information for egressq cdma/vcdma processing events. detail (Optional) Displays the detailed processing internal trace data for egressq events. errors (Optional) Displays the internal trace information for all kinds of egressq processing errors. func (Optional) Displays the internal trace data for egressq function entry/exit events. info (Optional) Displays the internal trace data for general information with processing events. interrupt (Optional) Displays the internal trace data for general information with interrupt events. periodic (Optional) Displays the internal trace data for general information with periodic events. location node-id Identifies the location of the egress queue whose statistics you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.9.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 3.9.0	This command was introduced.		
Release	Modification						
Release 3.9.0	This command was introduced.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>cisco-support</td> <td>read</td> </tr> <tr> <td>interface</td> <td>read</td> </tr> </tbody> </table>	Task ID	Operations	cisco-support	read	interface	read
Task ID	Operations						
cisco-support	read						
interface	read						

show controllers egressq trace

Examples

The following example shows how to display the internal trace information of Egressq for a specific controller instance:

```
RP/0/RP0/CPU0:router# show controllers egressq trace info reverse location 0/2/CPU0

516 wrapping entries (16384 possible, 0 filtered, 516 total)
Oct 16 14:26:47.165 egressq/info 0/2/CPU0 t1 SHARQ-INFO: sharq_rsm_send_dma - Complete
VCDMA requests (succeed)
Oct 16 14:26:47.151 egressq/info 0/2/CPU0 t1 SHARQ-INFO: sharq_rsm_send_dma - Start sending
VCDMA requests (elems 15)
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: Sharq remapping
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: port 526 default group is set to
16
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: group 16 default queues are set
to LPQ 23 HPQ 24
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: queue1: 23 (priority 2) & queue2:
24 (priority2 1) are created under group1 16 and group2 16 respectively
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: Sharq ID is: 3
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: Set queue params: queue 24,
max_lb_token 0, max_lb_index 33, min_lb_token 39063, min_lb_index: 57, weight 10, quantum
27
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: queue 24 weight is set to 10
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: queue 24 burst size is set to max
312504, min 312504
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: queue 24 BW is set to max
10000128Kbps, min 10000128Kbps
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: queue 24 is allocated for group
16 / port 526
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: queue1 23 (priority 2) is created
for group1 16
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: Sharq ID is: 3
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: Set queue params: queue 23,
max_lb_token 39063, max_lb_index 43, min_lb_token 0, min_lb_index: 0, weight 10, quantum
27
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: queue 23 weight is set to 10
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: queue 23 burst size is set to max
312504, min 0
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: queue 23 BW is set to max
10000128Kbps, min 0Kbps
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: queue 23 is allocated for group
16 / port 526
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: Set group params: group 16,
max_lb_token 39023, max_lb_index 43, min_lb_token 40, min_lb_index: 34, quantum 27, priority
2
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: group 16 weight is set to 10
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: group 16 burst size is set to max
312504, min 320
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: group 16 BW is set to max
10000128Kbps, min 10240Kbps
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: group 16 is allocated for port
526
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: Set port params: port 526,
max_lb_token 39063, max_lb_index 43, quantum 27, default_group: 4294967295, first_group
4294967295, hp-group 4294967295
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: port 526 weight is set to 10
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: Port 526 Max burst is set to
312504
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SHARQ-INFO: port 526 MaxBW is set to
10000128Kbps
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SERVER-INFO: Create interfaces - intf type
1, port 526, default_priority 2
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SERVER-INFO: added interface: ifh 0x01280120,
```

```
if TenGigE0/2/0/7, port 526, type 1, local_if 7, spa 0
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SERVER-INFO: Dispatch create interfaces -
handle 0x1904a, numOfParamEntries 1, tuningBestEffort 1, bulk_req 0x9bffdा58, req_params
0x9bffdा74
Oct 16 14:26:47.150 egressq/info 0/2/CPU0 t1 SERVER-INFO: egressq_read_msg_buffer -Received
message length is 80
```

show controllers egressq resources

show controllers egressq resources

To display the Egressq resource usage on a specific controller or node, use the **show controllers egressq resources** command in EXEC mode.

show controllers egressq resources location node-id

Syntax Description	location node-id Identifies the location of the egress queue whose statistics you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.							
Command Default	No default behavior or values							
Command Modes	EXEC mode							
Command History	Release	Modification						
	Release 3.9.0	This command was introduced.						
Usage Guidelines	No specific guidelines impact the use of this command.							
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>interface</td> <td>read</td> </tr> <tr> <td>drivers</td> <td>read</td> </tr> </tbody> </table>		Task ID	Operations	interface	read	drivers	read
Task ID	Operations							
interface	read							
drivers	read							

Examples

The following example shows how to display the internal trace information of Egressq for a specific controller instance:

```
RP/0/RP0/CPU0:router# show controllers egressq resources location 0/1/CPU0
```

Resource	Total	Used	Free
Ports	1024	29	995
Groups	2048	30	2018
Queues	8192	50	8142

show controllers ingressq backpressure

To display the ingressq backpressure details, on a specific controller or node, use the **show controllers ingressq backpressure** command in EXEC mode.

```
show controllers ingressq backpressure {all | bpmem | hiccup | maptab}
```

Syntax Description	all Displays backpressure details for all controllers. bpmem Displays backpresssure bitmap memory content. hiccup Displays hiccup details. maptab Displays FGID mapping tables.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 4.0.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 4.0.0	This command was introduced.		
Release	Modification						
Release 4.0.0	This command was introduced.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>interface</td><td>read</td></tr> <tr> <td>drivers</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	interface	read	drivers	read
Task ID	Operations						
interface	read						
drivers	read						

Examples The following example shows how to display the internal trace information of Egressq for a specific controller instance:

```
RP/0/RP0/CPU0:router# show controllers ingressq backpressure all
```

show controllers ingressq block

show controllers ingressq block

To display the ingressq asic block details, on a specific controller or node, use the **show controllers ingressq block** command in EXEC mode.

```
show controllers ingressq block {brm | cri | dcm | dqp | dqs | eproc | fbm | fqm | help | internal | isq | lns | mti | pfi | pgi | pii | pmi | qdm | seg | spi | sqe | ssm | tfi}
```

Syntax Description

brm	Displays Barrier Manager (BRM) details.
cri	Displays Crab Interface (CRI) statistics.
dcm	Displays Discard Manager (DCM) details.
dqp	Displays Destination Queue (DQP) details.
dqs	Displays Destination Queue Scheduler (DQS) details.
eproc	Displays EPROC block data.
fbm	Displays Free Block Manager (FBM) details.
fqm	Displays Free Queue Manager (FQM) details.
help	Displays supported block names.
internal	Displays ingressq internal datastructure.
isq	Displays Input Shape Queue (ISQ) details.
lns	Displays Link Scheduler (LNS) details.
mti	Displays pse interface control data.
pfi	Displays Plane Fabric Interface (PFI) details.
pgi	Displays Pogo Interface (PGI) details.
pii	Displays Packet Ingress Interface (PII) control data.
pmi	Displays Packet Memory Interface (PMI) control data.
qdm	Displays QDM details.
seg	Displays segmentation unit details.
spi	Displays ingressq interface control data.
sqe	Displays Shape Queue Engine (SQE) details.
ssm	Displays Show Start Manager (SSM) details.
tfi	Displays To Fabric Interface (TFI) CLI.

Command Default	No default behavior or values	
Command Modes	EXEC mode	
Command History	Release	Modification
	Release 4.0.0	This command was introduced.
Usage Guidelines	No specific guidelines impact the use of this command.	
Task ID	Task ID	Operations
	interface	read
	drivers	read

Examples The following example shows how to display the internal trace information of Egressq for a specific controller instance:

```
RP/0/RP0/CPU0:router# show controllers ingressq block isq
```

show controllers plim asic ether queues

show controllers plim asic ether queues

To display the ethernet PLIM asic information, use the **show controllers plim asic ether queues** command in EXEC mode.

show controllers plim asic ether queues location [{node-idname}]

Syntax Description	location [node-id / name] Identifies the location of the ethernet. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 4.0.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 4.0.0	This command was introduced.		
Release	Modification						
Release 4.0.0	This command was introduced.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>interface</td> <td>read</td> </tr> <tr> <td>drivers</td> <td>read</td> </tr> </tbody> </table>	Task ID	Operations	interface	read	drivers	read
Task ID	Operations						
interface	read						
drivers	read						

Examples The following example shows how to display the internal trace information of Egressq for a specific controller instance:

```
RP/0/RP0/CPU0:router# show controllers plim asic ether queues location 0/1/CPU0
```

show controllers plim asic pla

To display physical layer interface module (PLIM) ASIC line-card information for the plane card, use the **show controllers plim asic pla** command in EXEC mode.

```
show controllers plim asic pla {clients | eio {link_id | all} | error | packet mbp instance number | pointers | sbp} [location node-id]
```

Syntax Description	
clients	Displays information for PLA clients.
eio	Displays information about EIO commands for PLA.
link_id	Displays PLA information for a specific link ID. Range is from 0 to 4294967295.
all	Displays PLA information for all links.
error	Displays PLA error information.
packet	Displays information for the dump packet.
mbp	Displays MBP buffer information.
instance number	Displays the PLA instance number for a specific instance. Range is from 0 to 3.
pointers	Displays information for PLA pointers.
sbp	Displays sharp back-pressure (SBP) table.
location node-id	Identifies the location of the node whose PLIM ASIC information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Note Use the show platform command to see the location of all nodes installed in the router.

Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.8.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 3.8.0	This command was introduced.		
Release	Modification						
Release 3.8.0	This command was introduced.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>interface</td> <td>read</td> </tr> <tr> <td>drivers</td> <td>read</td> </tr> </tbody> </table>	Task ID	Operations	interface	read	drivers	read
Task ID	Operations						
interface	read						
drivers	read						

```
show controllers plim asic pla
```

Task ID	Operations
cisco-support	read

Examples

The following example shows how to display PLIM ASIC PLA information for an interface on a router:

```
RP/0/RP0/CPU0:router# show controllers plim asic pla eio links?  
<0-4294967295> link id  
all show all links
```

show controllers plim asic pla768

To display physical layer interface module (PLIM) ASIC line-card information for the OC-768 card, use the **show controllers plim asic pla768** command in EXEC mode.

show controllers plim asic pla768 {ports | eio {link_id | all}} [location node-id]

Syntax Description	ports Displays port mapping information. eio Displays information about Elastic I/O (EIO) commands for the Reindeer ASIC. link_id Displays OC-768 information for a specific link ID. Range is from 0 to 4294967295. all Displays PLA information for all links. location node-id Identifies the location of the node whose PLIM ASIC information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Note Use the show platform command to see the location of all nodes installed in the router.								
Command Default	No default behavior or values								
Command Modes	EXEC mode								
Command History	<table> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.8.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.8.0	This command was introduced.				
Release	Modification								
Release 3.8.0	This command was introduced.								
Usage Guidelines	No specific guidelines impact the use of this command.								
Task ID	<table> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>interface</td><td>read</td></tr> <tr> <td>drivers</td><td>read</td></tr> <tr> <td>cisco-support</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	interface	read	drivers	read	cisco-support	read
Task ID	Operations								
interface	read								
drivers	read								
cisco-support	read								

Examples The following example shows how to display PLIM ASIC PLA768 information for an interface:

```
RP/0/RP0/CPU0:router# show controllers plim asic pla768 ?
eio      Show eio commands for the Reindeer ASIC
ports   Port mapping information
```

```
show controllers plim asic plaspa
```

show controllers plim asic plaspa

To display physical layer interface module (PLIM) ASIC line-card information for the shared port adapters (SPA), use the **show controllers plim asic plaspa** command in EXEC mode.

```
show controllers plim asic plaspa {eio {link_id | all} | error | ifhandle | instance | num-list | queues | sbp | txport | uidb {entry instance | map instance | table instance}} [location node-id]
```

Syntax Description	eio link_id Displays EIO commands for PLASPA information for a specific link ID. Range is from 0 to 4294967295. all Displays PLA information for all links. error Displays PLASPA error information. ifhandle Displays the name associated with the interface. instance Displays instance information of the PLASPA ASIC. Range is from 0 to 1. num-inst Displays number of instances of the PLASPA ASIC. queues Displays PLASPA queue information. sbp Displays egress queue back-pressure table information. txport Displays egressq port information. Range of shared port adapters (SPA) instance is from 0 to 5. uidb Displays PLASPA uidb hash table information. location node-id Identifies the location of the node whose PLIM ASIC information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.				
Command Default	No default behavior or values				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.8.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 3.8.0	This command was introduced.
Release	Modification				
Release 3.8.0	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>interface</td> <td>read</td> </tr> </tbody> </table>	Task ID	Operations	interface	read
Task ID	Operations				
interface	read				

Task ID	Operations
drivers	read
cisco-support	read

Examples

The following example shows how to display PLIM ASIC PLASPA information for an interface on the router:

```
RP/0/RP0/CPU0:router# show controllers plim asic plaspa eio links all location 0/3/CPU0
```

```
Wed Sep 10 04:52:27.452 UTC
```

```
Node: 0/3/CPU0:
```

```
EIO links:
```

ASIC Id	Peer Id	Type	Link-Id	Attempts	Accept	Failed	State
PLASPA_1	PSE_0	TX	2	0	0	0	EIO_LINK_TRAINED
PLASPA_1	EGRESSQ_0	RX	61	1	1	0	EIO_LINK_TRAINED

show controllers plim asic statistics

show controllers plim asic statistics

To display physical layer interface module (PLIM) ASIC statistics for a specific node or interface, use the **show controllers plim asic statistics** command in EXEC mode.

show controllers plim asic statistics {interface type interface-path-id|summary} [location node-id]

Syntax Description	<p>type Interface type. For more information, use the question mark (?) online help function.</p> <p>interface-path-id Physical interface or virtual interface.</p> <p>Note Use the show interfaces command to see a list of all interfaces currently configured on the router.</p> <p>For more information about the syntax for the router, use the question mark (?) online help function.</p>
summary	Displays a summarized information for PLIM ASICs on a specified node, or for all interfaces on the router.
location node-id	Identifies the location of the node whose PLIM ASIC information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.
	Note Use the show platform command to see the location of all nodes installed in the router.

Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.		
Release	Modification						
Release 2.0	This command was introduced.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>interface</td> <td>read</td> </tr> <tr> <td>root-system</td> <td>read</td> </tr> </tbody> </table>	Task ID	Operations	interface	read	root-system	read
Task ID	Operations						
interface	read						
root-system	read						

Examples	The following example shows how to display PLIM ASIC statistics information for a POS interface:
	<pre>RP/0/RP0/CPU0:router# show controllers plim asic statistics interface POS 0/2/0/0 Node: 0/2/CPU0 ----- POS0/2/0/0 Tx Statistics</pre>

```
-----
TotalOctets      : 78904040
UnicastPkts     : 1622308
BroadcastPkts   : 0
64Octets        : 0
128to255Octets  : 0
512to1023Octets : 0
1519to1548Octets: 0
>9216Octet      : 0
802.1QPkts      : 0
Runt             : 0
PausePkts       : 0
DeferralAbort    : 0
CollisionAbort   : 0
MultiCollision   : 0
TotalDefer       : 0
LengthAbort      : 0

TotalPkts        : 1622308
MulticastPkts   : 0
<64Octets       : 1610433
65to127Octets   : 11875
256to511Octets  : 0
1024to1518Octets: 0
1549to9216Octets: 0
BadCRCPkts      : 0
Underrun         : 0
Giant            : 0
Jabbers          : 0
LateCollision    : 0
OneCollision     : 0
TotalCollisions  : 0
LateCollisionAbort: 0
TxBP count       : 0

POS0/2/0/0 Rx Statistics
-----
--More-- failed to get stats
TotalOctets      : 91010808
TotalPkts        : 1815571
MulticastPkts   : 0
64Octets        : 63846
128to255Octets  : 7
512to1023Octets : 0
1519to1548Octets: 0
>9216Octets     : 0
BadCodedPkts    : 0
ShortPkts       : 1739874
Drop             : 0
ControlPkts     : 0
BadPreamble     : 0

UnicastPkts     : 1815571
BroadcastPkts   : 0
65to127Octets   : 11844
256to511Octets  : 0
1024to1518Octets: 0
1549to9216Octets: 0
BadCRCPkts      : 0
Runt             : 0
802.1QPkts      : 0
PausePkts       : 0
Jabbers          : 0

POS0/2/0/0 Drop
-----
RxFiFO Drop      : 0
TxFIFO Drop      : 0
PAR Tail Drop    : 0
```

This table describes the significant fields shown in the display.

Table 14: show controllers plim asic statistics Field Descriptions

Field	Description
TotalOctets	Number of octets received or transmitted on the interface.
TotalPkts	Number of total packets received or transmitted on the interface.
UnicastPkts	Number of unicast packets received or transmitted on the interface.
MulticastPkts	Number of multicast packets received or transmitted on the interface. Received packets were directed to the multicast address.
BroadcastPkts	Number of good broadcast packets received or transmitted. Received packets were directed to the broadcast address.
64Octets	Number of packets (including bad packets) received or transmitted that were less than 64 octets in length (excluding framing bits but including FCS octets).

show controllers plim asic statistics

Field	Description
64Octets	Number of packets (including bad packets) received or transmitted that were 64 octets in length (excluding framing bits but including FCS octets).
65to127Octets	Number of packets (including bad packets) received or transmitted that were between 65 and 127 octets in length inclusive (excluding framing bits but including FCS octets).
128to255Octets	Number of packets (including bad packets) received or transmitted that were between 128 and 255 octets in length inclusive (excluding framing bits but including FCS octets).
256to511Octets	Number of packets (including bad packets) received or transmitted that were between 256 and 511 octets in length inclusive (excluding framing bits but including FCS octets).
512to1023Octets	Number of packets (including bad packets) received or transmitted that were between 512 and 1023 octets in length inclusive (excluding framing bits but including FCS octets).
1024to1518Octets	Number of packets (including bad packets) received or transmitted that were between 1024 and 1518 octets in length inclusive (excluding framing bits but including FCS octets).
1519to1548Octets	Number of packets (including bad packets) received or transmitted that were between 1519 and 1548 octets in length inclusive (excluding framing bits but including FCS octets).
1549to9216Octets	Number of packets (including bad packets) received or transmitted that were between 1549 and 9216 octets in length inclusive (excluding framing bits but including FCS octets).
>9216Octet	Number of packets (including bad packets) received or transmitted that were greater than 9216 octets in length (excluding framing bits but including FCS octets).
BadCRCPkts	Number of packets received or transmitted that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS error) or a bad FCS with a non integral number of octets (alignment error).
802.1QPkts	Number of 802.1QPkts received or transmitted on the interface.
Underrun	Number of packets that were not retrieved quickly enough from shared memory to be transmitted or received.
Runt	Number of packets received or transmitted that were less than 64 octets long (excluding framing bits, but including FCS octets) and were otherwise well formed.
Giant	Number of packets received or transmitted that were longer than 1518 octets (excluding framing bits, but including FCS octets) and were otherwise well formed.
PausePkts	Number of pause packets transmitted/received on the interface. Pause packets that tell remote devices to delay sending more packets for a specified period of time.

Field	Description
Jabbers	Number of packets received or transmitted that were longer than 1518 octets (excluding framing bits but including FCS octets) and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS error) or a bad FCS with a non-integral number of octets (assigned error).
DeferralAbort	Number of deferral terminations that occurred on this segment.
LateCollision	Number of late collisions on this segment
CollisionAbort	Number of collisions that were terminated.
OneCollision	Number of single collisions that occurred on this segment.
MultiCollision	Number multiple collisions that occurred on this segment.
TotalCollisions	Number of collisions on this segment.
TotalDefer	Number of deferrals on this segment.
LateCollisionAbort	Number of late collision terminations that occurred on this segment.
LengthAbort	Number of length terminations that occurred on this segment.
TxBP count	Number of transmit BP on this segment.
Rx Statistics	Indicates the statistics that follow were received by the interface.
TX statistics	Indicates the statistics that follow were transmitted by the interface.
RxFIFO Drop	Displays the receive FIFO drop information.
PAR Tail Drop	Displays PAR tail drop information.
TxFIFO Drop	Displays transmitted FIFO drop information.

show controllers plim asic summary

show controllers plim asic summary

To display summarized physical layer interface module (PLIM) ASIC information for a specific node or interface, use the **show controllers plim asic** command in EXEC mode.

show controllers plim asic summary [location node-id]

Syntax Description	location node-id Identifies the location of the node whose PLIM ASIC information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Note Use the show platform command to see the location of all nodes installed in the router.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.		
Release	Modification						
Release 2.0	This command was introduced.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>interface</td><td>read</td></tr> <tr> <td>root-system</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	interface	read	root-system	read
Task ID	Operations						
interface	read						
root-system	read						

Examples The following example shows how to display summarized PLIM ASIC information for all locations:

```
RP/0/RP0/CPU0:router# show controllers plim asic summary

Node: 0/1/CPU0
-----
Instance# 0      Summary info:
-----
Name      : PLASPA    Version  : 2

Port 0
Jacket slot: 1      SPA type : SPA_NAME_UNKNOWN
Port 1
Jacket slot: 3      SPA type : SPA_NAME_UNKNOWN
Port 2
Jacket slot: 0      SPA type : 4xOC3 POS SPA

Instance# 1      Summary info:
-----
Name      : PLASPA    Version  : 2

Port 0
```

```

Jacket slot: 2           SPA type : SPA_NAME_UNKNOWN
Port 1
Jacket slot: 4           SPA type : 4xOC48 POS/RPR HHSPA
Port 2
Jacket slot: 5           SPA type : 8xGE SPA

IFName      : POS0/1/0/0
Inst#       : 0            Port      : 2
RxLPORT     : 0x80         TxLPORT   : 0x48
Uidb        : 0x2          Key       : 0x80
Hkey        : 209          Hkey idx : 0

IFName      : POS0/1/0/1
Inst#       : 0            Port      : 2
RxLPORT     : 0x81         TxLPORT   : 0x49
Uidb        : 0x4          Key       : 0x81
Hkey        : 28           Hkey idx : 0

IFName      : POS0/1/0/2
Inst#       : 0            Port      : 2
RxLPORT     : 0x82         TxLPORT   : 0x4a
Uidb        : 0x6          Key       : 0x82
Hkey        : 183          Hkey idx : 0

```

This table describes the significant fields shown in the display.

Table 15: show controllers plim asic summary Field Descriptions

Field	Description
Node	Node whose information is displayed. Information is displayed for each node's SPA and its interfaces.
Instance	PLIM ASIC identifier. This is the PLIM ASIC associated with the specified location.
Summary info (for SPA)	Displays the following info for all SPAs installed in the router: <ul style="list-style-type: none"> • Name—Identifies the SPA.whose information is displayed. • Version—Version identifier for the PLIM ASIC. • Jacket slot—Identifies the slot containing the jacket card for the specified SPA. • SPA type —Describes the SPA whose information is displayed. • Port—Port associated with the PLIM ASIC. • Inst#—SPA ASIC instance Identifier.
Summary info (for interfaces)	Displays the following info for all interfaces associated with the specified SPA: <ul style="list-style-type: none"> • Intf name—Identifies the SPA.whose information is displayed. • Inst#—ASIC associated with this interface. • Port—Port associated with the PLIM ASIC. • RxLPORT—Receive port, in hexadecimal format. • TxLPORT—Transmit port, in hexadecimal format. • Uidb—UIDB¹² assigned by the software, in hexadecimal format. • Key—AISC key, in hexadecimal format. • Hkey—ASIC registry key. • Hkey idx—ASIC registry key index.

```
show controllers plim asic summary
```

¹² Universal interface descriptor block

show controllers pse eio links

To display packet switching engine (PSE) information for Elastic I/O (EIO) links, use the **show controllers pse eio links** command in EXEC mode.

show controllers pse eio links {link-number | all} [location node-id]

Syntax Description	links link-number Displays PSE information for the specified link. Replace the <i>link_number</i> argument with a link number in the range from 0 to 4294967295.
---------------------------	---

Note Use the **show controllers pse eio links all location node-id** command to display all available EIO link IDs on a node.

links all	Displays PSE information for all links on the specified node.
------------------	---

location node-id	(Optional) Displays all EIO links on a specific node only. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.
-------------------------	--

Note Use the **show platform** command to see the location of all nodes installed in the router.

Command Default	No default behavior or values
------------------------	-------------------------------

Command Modes	EXEC mode
----------------------	-----------

Command History	Release	Modification
------------------------	----------------	---------------------

Release 2.0 This command was introduced.

Release 3.6.0 The *link-number* argument range of 1 through 4294967295 has changed to 0 to 4294967295.

Usage Guidelines	No specific guidelines impact the use of this command.
-------------------------	--

Task ID	Task ID	Operations
	drivers	read
	interface	read

Examples	The following is sample output from the show controllers pse eio links command for a specific EIO link:
-----------------	--

```
RP/0/RP0/CPU0:router# show controllers pse eio links 1
Node: 0/0/CPU0:
-----
EIO link: 1
```

show controllers pse eio links

ASIC Id	Peer Id	Type	Link-Id	Attempts	Accept	Failed	State
PSE_0	PLASPA_0	RX	1	1	1	0	EIO_LINK_TRAINED
<hr/>							
Macro-id	Windage	Diag	status				
0	4	0x0000					
1	4	0x0000					
2	4	0x0000					
3	4	0x0000					

The following is sample output from the show controllers pse eio links command for all EIO links:

```
RP/0/RP0/CPU0:router#show controllers pse eio links all
```

```
Node: 0/0/CPU0:
```

EIO links:

ASIC Id	Peer Id	Type	Link-Id	Attempts	Accept	Failed	State
PSE_1	FABRICQ_0	RX	50	1	1	0	EIO_LINK_TRAINED
PSE_1	FABRICQ_1	RX	51	1	1	0	EIO_LINK_TRAINED
PSE_1	EGRESSQ_0	RX	64	1	1	0	EIO_LINK_TRAINED
PSE_1	EGRESSQ_0	TX	11	0	0	0	EIO_LINK_TRAINED
PSE_0	PLASPA_0	RX	1	1	1	0	EIO_LINK_TRAINED
PSE_0	PLASPA_1	RX	2	1	1	0	EIO_LINK_TRAINED
PSE_0	INGRESSQ_0	RX	24	1	1	0	EIO_LINK_TRAINED
PSE_0	INGRESSQ_0	TX	10	0	0	0	EIO_LINK_TRAINED

This table describes the significant fields shown in the display.

Table 16: show controllers pse eio links Field Descriptions

Field	Description
Node	Node whose PSE information is displayed.
EIO link	EIO link whose information is displayed.
ASIC Id	ASIC associated with this EIO link.
Peer Id	ASIC of the remote peer of this EIO link.
Type	Indicates whether this link is receiving or transmitting (re)training requests.
Link-Id	Unique ID assigned by the system to the EIO link.
Attempts	Number of consecutive EIO training requests for the link made by the PSE driver to the peer.
Note	Typically, the PSE driver at the receive end of a link initiates the training of that EIO link. Therefore, the EIO links whose PSE driver is at the transmit end show a value of 0 for the <i>Attempts</i> field, even though those links are in the EIO_LINK_TRAINED state.

Field	Description
Accept	<p>Number of PSE driver requests for training that were accepted by the peer. When a PSE driver request is accepted, training is started.</p> <p>Note Typically, the PSE driver at the receive end of a link initiates the training of that EIO link. Therefore, the EIO links whose PSE driver is at the transmit end show a value of 0 for the <i>Accept</i> field, even though those links are in the EIO_LINK_TRAINED state.</p>
Failed	Number of times the training for this link failed for any reason.
State	Current state of the EIO link.
Macro-id Windage Diag status	<p>Windage value used for the training, and the final status of the training for that windage.</p> <p>Note The Macro-id Windage Diag status field is displayed only when you ask EIO info for specific link.</p>

Related Commands

Command	Description
show controllers pse mp, on page 111	displays packet switching engine information for the maintenance processor on a specific controller or node.
show controllers pse summary, on page 124	Displays a summary of packet switching engine information for a specific controller or node.

show controllers pse ipc

show controllers pse ipc

To display packet switching engine (PSE) device information for interprocess communication (IPC) connections, or for a specific IPC controller, use the **show controllers pse ipc** command in EXEC mode.

show controllers pse ipc {client-connection {connID | all} | cputrlif} [{egress | ingress}] [location node-id]

Syntax Description	client-connection connID Displays IPC information about the specified client connection. Replace the <i>connID</i> argument with the client connection ID. Range is from 0 to 255. client-connection all Displays IPC information about the all client connection. cputrlif Displays IPC information about the specified PSE IPC CPU controller instance. egress (Optional) Displays IPC information for the egress PSE device. Note Follow the egress argument with the location <i>node-id</i> keyword and argument to restrict the command to a specific node containing the specified device instance.								
ingress	(Optional) Displays IPC information for the ingress PSE device. Note Follow the ingress argument with the location <i>node-id</i> keyword and argument to restrict the command to a specific node containing the specified device instance.								
location node-id	(Optional) Identifies the location of the node whose PSE device information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Note Use the show platform command to see the location of all nodes installed in the router. Note Include the egress or ingress argument before the location <i>node-id</i> keyword and argument to restrict the command to a specific device instance on the specified node.								
Command Default	No default behavior or values								
Command Modes	EXEC mode								
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> <tr> <td>Release 3.5.0</td> <td>The instance { 0 1 } keywords were replaced by the egress and ingress keywords.</td> </tr> <tr> <td>Release 3.6.0</td> <td>The <i>connID</i> argument range of 1 to 255 has changed to 0 to 255.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.5.0	The instance { 0 1 } keywords were replaced by the egress and ingress keywords.	Release 3.6.0	The <i>connID</i> argument range of 1 to 255 has changed to 0 to 255.
Release	Modification								
Release 2.0	This command was introduced.								
Release 3.5.0	The instance { 0 1 } keywords were replaced by the egress and ingress keywords.								
Release 3.6.0	The <i>connID</i> argument range of 1 to 255 has changed to 0 to 255.								

Usage Guidelines

To display client connection IPC information for a specific device instance, include the **egress** or **ingress** argument with the command, as shown in the following examples:

```
show controllers pse ipc client-connection connId egress
show controllers pse ipc client-connection connId ingress
```

To display client connection IPC information for a specific node location, include the **location node-id** keyword and argument with the command, as shown in the following example:

```
show controllers pse ipc client-connection connId location node-id
```

Task ID	Operations ID
interface	read
drivers	read

Examples

The following command shows how to display PSE information for all IPC client-connections:

```
RP/0/RP0/CPU0:router# show controllers pse ipc client-connection all
Mon Nov  2 15:20:06.228 UTC

Node: 0/0/CPU0:
-----
PSE IPC Conn Info:
-----
ConnId:      0 (Backdoor)
ConnOptions: 0x1
Clinfos:    0 (Notif) 0 (Reply)
ConnStateFlags: 0
ConnNotifFlags: 0
SendReqs:    0 (iHP) 5976 (iNP) 0 (eHP) 11404 (eNP)
SendFiltered: 0 (iHP) 0 (iNP) 0 (eHP) 0 (eNP)
SendFailed:  0 (iHP) 0 (iNP) 0 (eHP) 0 (eNP)
RecvReqs:    0
RecvReqTouts: 0
RecvDatTouts: 2
RecvQState:  0/16

PSE IPC Conn Info:
-----
ConnId:      1 (uidb-mipc)
ConnOptions: 0
Clinfos:    0x50074180 (Notif) 0 (Reply)
ConnStateFlags: 0
ConnNotifFlags: 0xc0c2
SendReqs:    0 (iHP) 189 (iNP) 0 (eHP) 190 (eNP)
SendFiltered: 0 (iHP) 0 (iNP) 0 (eHP) 0 (eNP)
SendFailed:  0 (iHP) 0 (iNP) 0 (eHP) 0 (eNP)
RecvReqs:    0
RecvReqTouts: 0
RecvDatTouts: 0
RecvQState:  0/16
```

show controllers pse ipc

```
PSE IPC Conn Info:
-----
ConnId:      2 (stats_svr)
ConnOptions: 0
Clinfos:    0x50074f94 (Notif) 0 (Reply)
ConnStateFlags: 0
ConnNotifFlags: 0x1003002
SendReqs:   0 (iHP) 72 (iNP) 0 (eHP) 327 (eNP)
SendFiltered: 0 (iHP) 0 (iNP) 0 (eHP) 0 (eNP)
SendFailed:  0 (iHP) 0 (iNP) 0 (eHP) 0 (eNP)
RecvReqs:   0
RecvReqTouts: 0
RecvDatTouts: 0
RecvQState:  0/16

PSE IPC Conn Info:
-----
ConnId:      3 (TCAM Mgr)
ConnOptions: 0
Clinfos:    0x50073d9c (Notif) 0 (Reply)
ConnStateFlags: 0
ConnNotifFlags: 0x30e06
SendReqs:   0 (iHP) 291 (iNP) 0 (eHP) 163 (eNP)
SendFiltered: 0 (iHP) 0 (iNP) 0 (eHP) 0 (eNP)
SendFailed:  0 (iHP) 0 (iNP) 0 (eHP) 0 (eNP)
RecvReqs:   21
RecvReqTouts: 0
RecvDatTouts: 0
RecvQState:  0/16

PSE IPC Conn Info:
-----
ConnId:      4 (hfr_pm)
ConnOptions: 0
Clinfos:    0x500778e0 (Notif) 0 (Reply)
ConnStateFlags: 0
ConnNotifFlags: 0xc0006
SendReqs:   0 (iHP) 21 (iNP) 0 (eHP) 5 (eNP)
SendFiltered: 0 (iHP) 0 (iNP) 0 (eHP) 0 (eNP)
SendFailed:  0 (iHP) 0 (iNP) 0 (eHP) 0 (eNP)
RecvReqs:   0
RecvReqTouts: 0
RecvDatTouts: 0
RecvQState:  0/16

PSE IPC Conn Info:
-----
ConnId:      5 (PLU-TLU-Mgr-118869)
ConnOptions: 0
Clinfos:    0x500785b0 (Notif) 0 (Reply)
ConnStateFlags: 0
ConnNotifFlags: 0x1fe
SendReqs:   0 (iHP) 59 (iNP) 0 (eHP) 779 (eNP)
SendFiltered: 0 (iHP) 0 (iNP) 0 (eHP) 0 (eNP)
SendFailed:  0 (iHP) 0 (iNP) 0 (eHP) 0 (eNP)
RecvReqs:   126
RecvReqTouts: 0
RecvDatTouts: 0
RecvQState:  0/16
```

```
PSE IPC Conn Info:
-----
ConnId:      6 (PLU-TLU-Mgr-118878)
ConnOptions: 0
Clinfos:    0x50079218 (Notif) 0 (Reply)
ConnStateFlags: 0
ConnNotifFlags: 0x1fe
SendReqs:   0 (iHP) 72038 (iNP) 0 (eHP) 65852 (eNP)
SendFiltered: 0 (iHP) 0 (iNP) 0 (eHP) 0 (eNP)
SendFailed: 0 (iHP) 0 (iNP) 0 (eHP) 0 (eNP)
RecvReqs:   0
RecvReqTouts: 0
RecvDatTouts: 0
RecvQState: 0/16

PSE IPC Conn Info:
-----
ConnId:      7 (PLU-TLU-Mgr-118875)
ConnOptions: 0
Clinfos:    0x50079ea4 (Notif) 0 (Reply)
ConnStateFlags: 0
ConnNotifFlags: 0x1fe
SendReqs:   0 (iHP) 3 (iNP) 0 (eHP) 0 (eNP)
SendFiltered: 0 (iHP) 0 (iNP) 0 (eHP) 0 (eNP)
SendFailed: 0 (iHP) 0 (iNP) 0 (eHP) 0 (eNP)
RecvReqs:   0
RecvReqTouts: 0
RecvDatTouts: 0
RecvQState: 0/16

PSE IPC Conn Info:
-----
ConnId:      8 (PLU-TLU-Mgr-118876)
ConnOptions: 0
Clinfos:    0x5007ab30 (Notif) 0 (Reply)
ConnStateFlags: 0
ConnNotifFlags: 0x1fe
SendReqs:   0 (iHP) 21 (iNP) 0 (eHP) 18 (eNP)
SendFiltered: 0 (iHP) 0 (iNP) 0 (eHP) 0 (eNP)
SendFailed: 0 (iHP) 0 (iNP) 0 (eHP) 0 (eNP)
RecvReqs:   0
RecvReqTouts: 0
RecvDatTouts: 0
RecvQState: 0/16
```

This table describes the significant fields shown in the display.

Table 17: show controllers pse ipc client-connection Field Descriptions

Field	Description
ConnId	Connection identifier.
ConnOptions	Connection bind time options requested by the client creating this connection.
Clinfos	Client information (clinfo) index number. The memory database is organized as a table of clinfos, which are indexed by the region id and maintained in shared memory.
ConnStateFlags	Bitmask containing the current state of the connection.

show controllers pse ipc

Field	Description
ConnNotifFlags	Bitmask of the types of notifications that the client creating this connection has registered for.
SendReqs	Number of PSE IPC send requests that client has made on this connection.
SendFiltered	Number of send requests that were filtered out (dropped) from the PSE driver due to any internal filter policy.
SendFailed	Number of send requests that could not be handled by the PSE driver due to error conditions such as hardware I/O failures, lack of buffering space, and so forth.
RecvReqs	Number of data receive requests that the client has made on this connection.
RecvReqTouts	Number of data receive requests from the client that timed out because no data was received from PSE device.
RecvDatTouts	Number of times data was received from PSE device, but timed out because there was no receive request from client to pick up that data from the connection.
RecvQState	Current state of the internal data receive FIFO queue. The internal data receive FIFO queue buffers data arriving from the PSE device for the connection, until the client sends a receive request for that data. The RecvQState is expressed in the X/Y notation, where X is current depth of the queue, and Y is the maximum depth allowed for the queue.

The following command shows how to display PSE information for a specific IPC controller connection:

```
RP/0/RP0/CPU0:router# show controllers pse ipc cputrlif

Node: 0/0/CPU0:
-----
Pse IPC cputrl if Information
-----
Cputrl interface is up
Normal Priority Tx I/F:
    BufBase 0x112190 BufSize 32768 PadBufp 0xec0af118 Seqnum 854
    RORRegNum 10 RORRegVal 0x49f0 WORRegNum 2 WORRegVal 0x49f0
    CDMACH 0 CDMAQ 3
    HoldQ 0/512 CDMAPendQ 0/128 UnackQ 0/256
    NumEnqs 854 NumRejs 0 NumDmaReqFails 0
    NumDmaPendFails 0 NumMbxSpcFails 0 NumHldqOvfloows 0
Normal Priority Rx I/F:
    NumPDMAEntries 64 NumEnqs 15 NumRejs 0

Pse IPC cputrl if Information
-----
Cputrl interface is up
Normal Priority Tx I/F:
    BufBase 0x112190 BufSize 32768 PadBufp 0xec0af14c Seqnum 424
    RORRegNum 10 RORRegVal 0x1c60 WORRegNum 2 WORRegVal 0x1c60
    CDMACH 1 CDMAQ 3
    HoldQ 0/512 CDMAPendQ 0/128 UnackQ 0/256
    NumEnqs 424 NumRejs 0 NumDmaReqFails 0
    NumDmaPendFails 0 NumMbxSpcFails 0 NumHldqOvfloows 0
Normal Priority Rx I/F:
```

```

NumPDMAEntries 64 NumEnqs 2 NumRejs 0

Node: 0/3/CPU0:
-----
Pse IPC cpuctrl if Information
-----
Cpuctrl interface is up
Normal Priority Tx I/F:
    BufBase 0x112190 BufSize 32768 PadBufp 0xec0af118 Seqnum 833
    RORegNum 10 RORegVal 0xdb8 WORegNum 2 WORegVal 0xdb8
    CDMACH 0 CDMAQ 3
    HoldQ 0/512 CDMAPendQ 0/128 UnackQ 0/256
    NumEnqs 833 NumRejs 0 NumDmaReqFails 0
    NumDmaPendFails 0 NumMbxSpcFails 0 NumHldqOvflows 0
Normal Priority Rx I/F:
    NumPDMAEntries 64 NumEnqs 9 NumRejs 0

Pse IPC cpuctrl if Information
-----
Cpuctrl interface is up
Normal Priority Tx I/F:
    BufBase 0x112190 BufSize 32768 PadBufp 0xec0af14c Seqnum 409
    RORegNum 10 RORegVal 0x5f70 WORegNum 2 WORegVal 0x5f70
    CDMACH 1 CDMAQ 3
    HoldQ 0/512 CDMAPendQ 0/128 UnackQ 0/256
    NumEnqs 409 NumRejs 0 NumDmaReqFails 0
    NumDmaPendFails 0 NumMbxSpcFails 0 NumHldqOvflows 0
Normal Priority Rx I/F:
    NumPDMAEntries 64 NumEnqs 2 NumRejs 0

```

This table describes the significant fields shown in the display.

Table 18: show controllers pse ipc cpuctrlif Field Descriptions

Field	Description
Cpuctrl interface is up	Whether the connection is currently up or down.
Cpuctrl interface is down	

show controllers pse ipc

Field	Description
Normal Priority Tx I/F	Displays the following transmit buffer information for the connection: <ul style="list-style-type: none"> • BufBase • BufSize • PadBufp • Seqnum • RORegNum • RORegVal • WORegNum • WORegVal • CDMACh • CDMAQ • HoldQ • CDMAPendQ • UnackQ • NumEnqs • NumRejs • NumDmaReqFails • NumDmaPendFails • NumMbxSpcFails • NumHldqOvflows
Normal Priority Rx I/F:	Displays the following receive buffer information for the connection: <ul style="list-style-type: none"> • NumPDMAEntries • NumEnqs • NumRejs

Related Commands

Command	Description
show controllers pse eio links, on page 101	Displays packet switching engine information for Elastic I/O links.
show controllers pse mp, on page 111	Displays packet switching engine information for the maintenance processor on a specific controller or node.
show controllers pse summary, on page 124	Displays a summary of packet switching engine information for a specific controller or node.

show controllers pse mp

To display packet switching engine (PSE) information for the maintenance processor on a specific controller or node, use the **show controllers pse mp** command in EXEC mode.

show controllers pse mp [{egress | ingress}] [location node-id]

Syntax Description	egress (Optional) Displays information for the egress PSE device only. Note Follow the egress argument with the location node-id keyword and argument to restrict the command to a specific node.						
ingress	(Optional) Displays information for the ingress PSE device only. Note Follow the ingress argument with the location node-id keyword and argument to restrict the command to a specific node.						
location node-id	(Optional) Identifies the location of the node whose PSE device information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Note Use the show platform command to see the location of all nodes installed in the router. Note Include the instance {0 1} argument before the location node-id keyword and argument to restrict the command to a specific device instance on the specified node.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.		
Release	Modification						
Release 2.0	This command was introduced.						
Usage Guidelines	The instance and location optional keywords are not mutually exclusive. The instance keyword directs the command to a specific PSE device, and the location keyword directs the command to that device or devices on the specified modular services card. You can specify the instance and location options together in the same command. If you do not specify the instance {0 1} and location node-id keywords and argument, the show controllers pse mp command takes effect on both device instances on all modular services cards.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>interface</td> <td>read</td> </tr> <tr> <td>drivers</td> <td>read</td> </tr> </tbody> </table>	Task ID	Operations	interface	read	drivers	read
Task ID	Operations						
interface	read						
drivers	read						

show controllers pse mp

Examples

The following command shows how to display PSE maintenance processor information for a specific controller instance:

```
RP/0/RP0/CPU0:router# show controllers pse mp instance 1

Node: 0/0/CPU0:
-----
PSE 1, MP Info:
-----
MIPC Subtask Context Information
    High Priority MIPC Mbox Info
        NumProc 0 NumUnsupp 0
        NxtSeqNum 0 NumOOSeq 0
    Norm Priority MIPC Mbox Info
        NumProc 429 NumUnsupp 0
        NxtSeqNum 425 NumOOSeq 0
        NumMsgsGtred 93 NumDMAErrDrops 5 NumGtrDisDrops 2
MSTAT Subtask Context Information
    NumSegs 9 CntrsPerBrst 93 MinCycleMsecs 4000
    ----- Seg[0] config -----
    SegId 0 SegBeg 0 SegEnd 3071
    ExpBeg 0 ExpEnd 0 ExpRate 0 CycBefExp 0
    ----- Seg[1] config -----
    SegId 1 SegBeg 3072 SegEnd 74239
    ExpBeg 3072 ExpEnd 3072 ExpRate 0 CycBefExp 0
    ----- Seg[2] config -----
    SegId 2 SegBeg 74240 SegEnd 107007
    ExpBeg 74240 ExpEnd 74240 ExpRate 0 CycBefExp 0
    ----- Seg[3] config -----
    SegId 3 SegBeg 107008 SegEnd 262143
    ExpBeg 107008 ExpEnd 107008 ExpRate 0 CycBefExp 0
    ----- Seg[4] config -----
    SegId 4 SegBeg 262144 SegEnd 265215
    ExpBeg 262144 ExpEnd 262144 ExpRate 0 CycBefExp 0
    ----- Seg[5] config -----
    SegId 5 SegBeg 265216 SegEnd 336383
    ExpBeg 265216 ExpEnd 265216 ExpRate 0 CycBefExp 0
    ----- Seg[6] config -----
    SegId 6 SegBeg 336384 SegEnd 442367
    ExpBeg 336384 ExpEnd 336385 ExpRate 1 CycBefExp 1
    ----- Seg[7] config -----
    SegId 7 SegBeg 442368 SegEnd 458751
    ExpBeg 442368 ExpEnd 442368 ExpRate 0 CycBefExp 0
    ----- Seg[8] config -----
    SegId 8 SegBeg 458752 SegEnd 491519
    ExpBeg 458752 ExpEnd 458752 ExpRate 0 CycBefExp 0
    CurrTokens 9 MaxTokens 44 MinTokens 11
    CurrSeg 5 CurrCntr 289954 CntrsExp 66532
    PktsExp 33266 DMAErrDrops 0 REDDrops 0
    REDDelays 0 GtrDisDelays 0
    CfgUpdsApp 1 SegUpdsApp 10 UpdsRej 0

Node: 0/3/CPU0:
-----
PSE 1, MP Info:
-----
MIPC Subtask Context Information
    High Priority MIPC Mbox Info
        NumProc 0 NumUnsupp 0
        NxtSeqNum 0 NumOOSeq 0
```

```

Norm Priority MIPC Mbox Info
    NumProc 416 NumUnsupp 0
    NxtSeqNum 412 NumOOSeq 0
    NumMsgsGtred 71 NumDMAErrDrops 4 NumGtrDisDrops 3
MSTAT Subtask Context Information
    NumSegs 9 CntrsPerBrst 93 MinCycleMsecs 4000
    ----- Seg[0] config -----
    SegId 0 SegBeg 0 SegEnd 3071
    ExpBeg 0 ExpEnd 0 ExpRate 0 CycBefExp 0
    ----- Seg[1] config -----
    SegId 1 SegBeg 3072 SegEnd 74239
    ExpBeg 3072 ExpEnd 3072 ExpRate 0 CycBefExp 0
    ----- Seg[2] config -----
    SegId 2 SegBeg 74240 SegEnd 107007
    ExpBeg 74240 ExpEnd 74240 ExpRate 0 CycBefExp 0
    ----- Seg[3] config -----
    SegId 3 SegBeg 107008 SegEnd 262143
    ExpBeg 107008 ExpEnd 107008 ExpRate 0 CycBefExp 0
    ----- Seg[4] config -----
    SegId 4 SegBeg 262144 SegEnd 265215
    ExpBeg 262144 ExpEnd 262144 ExpRate 0 CycBefExp 0
    ----- Seg[5] config -----
    SegId 5 SegBeg 265216 SegEnd 336383
    ExpBeg 265216 ExpEnd 265216 ExpRate 0 CycBefExp 0
    ----- Seg[6] config -----
    SegId 6 SegBeg 336384 SegEnd 442367
    ExpBeg 336384 ExpEnd 336415 ExpRate 1 CycBefExp 0
    ----- Seg[7] config -----
    SegId 7 SegBeg 442368 SegEnd 458751
    ExpBeg 442368 ExpEnd 442368 ExpRate 0 CycBefExp 0
    ----- Seg[8] config -----
    SegId 8 SegBeg 458752 SegEnd 491519
    ExpBeg 458752 ExpEnd 458752 ExpRate 0 CycBefExp 0
    CurrTokens 5 MaxTokens 44 MinTokens 11
    CurrSeg 6 CurrCntr 398633 CntrsExp 1064256
    PktsExp 33258 DMAErrDrops 0 REDDrops 0
    REDDelays 0 GtrDisDelays 0
    CfgUpdsApp 1 SegUpdsApp 10 UpdsRej 0

```

This table describes the significant fields shown in the display.

Table 19: show controllers pse mp Field Descriptions

Field	Description
MIPC Subtask Context Information	<p>MIPC subtask information from the following mailboxes (queues):</p> <ul style="list-style-type: none"> • High Priority MIPC Mbox • Norm Priority MIPC Mbox <p>Note The MIPC MBox is a chunk of the MP DMEM that receives MIPC messages. The Norm Priority mailbox has buffer of 32 KB, while the High Priority Mbox has an 8 KB buffer.</p>

show controllers pse mp

Field	Description
High Priority MIPC Mbox Info	<p>Mailbox (or queue) that receives high-priority MIPC messages. The following information is displayed for the High Priority MIPC Mbox:</p> <ul style="list-style-type: none"> • NumProc—Number of MIPC messages that have been processed. • NumUnsupp—Number of unsupported MIPC messages. • NxtSeqNum—Sequence number of the message with respect to other messages sent on the same MIPC channel. • NumOOSeq—Number of MIPC messages that were received out of sequence.
Norm Priority MIPC Mbox info	<p>Mailbox (or queue) that receives normal-priority MIPC messages. The following information is displayed for the High Priority MIPC Mbox:</p> <ul style="list-style-type: none"> • NumProc—Number of MIPC messages that have been processed. • NumUnsupp—Number of unsupported MIPC messages. • NxtSeqNum—Identifies the sequence number of the message with respect to other messages sent on the same MIPC channel. • NumOOSeq—Number of MIPC messages that were received out of sequence.
NumMsgsGtred	Number of MIPC gather messages that have been processed.
NumDMAErrDrops	Number of MIPC gather messages that were dropped due to DMA errors.
NumGtrDisDrops	Number of MIPC gather messages that were dropped due to distribution errors.
MSTAT Subtask Context Information	<p>MSTAT subtask information from the following queues:</p> <ul style="list-style-type: none"> • High Priority MIPC Mbox • Norm Priority MIPC Mbox <p>The MIPC MBox is a chunk of the MP DMEM that receives MIPC messages. The Norm Priority mailbox has buffer of 32 KB, while the High Priority Mbox has an 8 KB buffer.</p>

Related Commands

Command	Description
show controllers pse eio links, on page 101	Displays packet switching engine information for Elastic I/O links.
show controllers pse summary, on page 124	Displays a summary of packet switching engine information for a specific controller or node.

show controllers pse qfp classification

To display ACL class group ID, which is used to view Ternary Content Addressable Memory(TCAM) entry, use the **show controllers pse qfp classification** command in EXEC mode.

show controllers pse qfp classification class-group-manager class-group all location node-ID

Syntax Description	class-group-manager Displays the class group manager. class-group Displays the class group. all Displays the ACL class group ID for all class groups. location node-ID Displays the ACL class group ID for a specific location. The node-ID argument is entered in the rack/slot/module notation.								
Command Default	None								
Command Modes	EXEC mode								
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>4.3.1</td><td>This command was introduced</td></tr> </tbody> </table>	Release	Modification	4.3.1	This command was introduced				
Release	Modification								
4.3.1	This command was introduced								
Usage Guidelines	No specific guidelines impact the use of this command.								
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operation</th></tr> </thead> <tbody> <tr> <td>sonet sdh or dwdm</td><td>read</td></tr> <tr> <td>interface</td><td>read</td></tr> <tr> <td>root-system</td><td>read</td></tr> </tbody> </table>	Task ID	Operation	sonet sdh or dwdm	read	interface	read	root-system	read
Task ID	Operation								
sonet sdh or dwdm	read								
interface	read								
root-system	read								

Example

This command shows how to display ACL class group ID, which is used to view TCAM entry:

```
RP/0/RP0/CPU0:router# show controllers pse qfp classification class-group-manager class-group all location 0/2/cpu0

QFP classification class client all group
  class-group [acl:1]
  class-group [acl:2]
  class-group [acl:3]
  class-group [acl:4]
  class-group [lpts:2]
  class-group [lpts:3]
```

show controllers pse qfp classification

```
class-group [lpts:4]
class-group [li:1]
class-group [li:2]
```

Related Commands

Command	Description
show controllers pse qfp classification feature-manager, on page 117	Displays TCAM entries.

show controllers pse qfp classification feature-manager

To display Ternary Content Addressable Memory(TCAM) entries, use the **show controllers pse qfp classification feature-manager** command in EXEC mode.

show controllers pse qfp classification feature-manager class-group ce-data client *class-group-ID* interface-path-id location *node-ID*

Syntax Description	
class-group	Displays the class group.
ce-data	Displays the ce-data.
client	Specifies type of client. The available options are: <ul style="list-style-type: none"> • acl - ACL client • cce - CCE client, includes QoS, Firewall, and FPM • dbg - Conditional debug client • ess - ESS client • fw-pam - Firewall PAM(Port-Application-Mapping) client • ipsec - IPSec client • lpts - LPTS client • nat - NAT client • pbr - PBR client • tc - ESS TC client • v6comp - V6 Compression client • wccp - WCCP client
class-group-ID	Displays the class group ID for all class groups.

```
show controllers pse qfp classification feature-manager
```

interface-path-id Either a physical interface instance or a virtual interface instance as follows:

- Physical interface instance. Naming notation is *rack/slot/module/port*; a slash between values is required as part of the notation.
 - rack*: Chassis number of the rack.
 - slot*: Physical slot number of the modular services card or line card.
 - module*: Module number. A physical layer interface module (PLIM) is always 0.
 - port*: Physical port number of the interface.

Note In references to a Management Ethernet interface located on a route processor card, the physical slot number is alphanumeric (RSP0) and the module is CPU0. Example: interface MgmtEth0/RSP0/CPU0/0.

- Virtual interface instance. Number range varies depending on interface type.

For more information about the syntax for the router, use the question mark (?) online help function.

location node-id	Displays the ACL class group ID for a specific location. The node-id argument is entered in the rack/slot/module notation.
-------------------------	--

Command Default	None
------------------------	------

Command Modes	EXEC mode
----------------------	-----------

Command History	Release	Modification
------------------------	----------------	---------------------

Release 4.3.1	This command was introduced
------------------	--------------------------------

Usage Guidelines	No specific guidelines impact the use of this command.
-------------------------	--

Task ID	Task ID	Operation
----------------	----------------	------------------

sonet sdh or dwdm		read
----------------------	--	------

interface		read
-----------	--	------

root-system		read
-------------	--	------

Example

This command shows how to display TCAM entries:

```
RP/0/RP0/CPU0:router# show controllers pse qfp classification feature-manager class-group  
ce-data acl 2 interface pos0/2/1/2.1 detail location 0/2/cPU0
```

```

QFP TCAM information for qfp_num 0

CPP classification class group TCAM
class-group [acl-cg:2] (classes: 2, total number of vmrs: 2)
key name: 160_01 value size: 160 result size: 4
    region id: 1 vmr id: 2 number of vmrs: 2
    Value : : 33000001 06000000 00500050 29000001 00020001
    Mask : : ffffffff ff000000 ffffffff ffffffff ffff0009
Result : : 01000002 89c54800 00000000 00000000

    Value : : 00000000 00000000 00000000 00000000 00020001
    Mask : : 00000000 00000000 00000000 00000000 ffff0009
Result : : 02000002 89c54810 00000000 00000000

QFP TCAM information for qfp_num 1

CPP classification class group TCAM
class-group [acl-cg:2] (classes: 2, total number of vmrs: 2)
key name: 160_01 value size: 160 result size: 4
    region id: 1 vmr id: 1 number of vmrs: 2
    Value : : 33000001 06000000 00500050 29000001 00010001
    Mask : : ffffffff ff000000 ffffffff ffffffff ffff0009
Result : : 01000002 8986d800 00000000 00000000

    Value : : 00000000 00000000 00000000 00000000 00010001
    Mask : : 00000000 00000000 00000000 00000000 ffff0009
Result : : 02000002 8986d810 00000000 00000000

```

Related Commands

Command	Description
show controllers pse qfp classification, on page 115	Display ACL class group ID which is used to dump TCAM entries.

show controllers pse statistics

show controllers pse statistics

To display packet switching engine (PSE) statistics for a specific controller instance, or for a specific node, use the **show controllers pse statistics** command in EXEC mode.

show controllers pse statistics [all] [{egress | ingress}] [location node-id]

Syntax Description	all (Optional) Displays all counters. egress (Optional) Displays statistics for the egress PSE device only. Note Follow the egress argument with the location node-id keyword and argument to restrict the command to a specific node. ingress (Optional) Displays statistics for the ingress PSE device only. Note Follow the ingress argument with the location node-id keyword and argument to restrict the command to a specific node. location node-id (Optional) Identifies the location of the node whose PSE device information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Note Use the show platform command to see the location of all nodes installed in the router. Note Include the egress or ingress keyword before the location node-id keyword and argument to restrict the command to a specific device instance on the specified node.								
Command Default	If you do not specify the egress or ingress and location node-id keywords and argument, the show controllers pse statistics command displays statistical information for both device instances on all modular services cards.								
Command Modes	EXEC mode								
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> <tr> <td>Release 3.5.0</td> <td>The instance { 0 1 } keywords were replaced by the egress and ingress keywords.</td> </tr> <tr> <td>Release 3.6.0</td> <td>The all keyword was changed from required to optional.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.5.0	The instance { 0 1 } keywords were replaced by the egress and ingress keywords.	Release 3.6.0	The all keyword was changed from required to optional.
Release	Modification								
Release 2.0	This command was introduced.								
Release 3.5.0	The instance { 0 1 } keywords were replaced by the egress and ingress keywords.								
Release 3.6.0	The all keyword was changed from required to optional.								
Usage Guidelines	The optional egress or ingress and location keywords are not mutually exclusive. The egress and ingress keywords direct the command to specific PSE device, and the location keyword directs the command to that device or devices on the specified modular services card. You can specify the egress or ingress and location options together in the same command. If you do not specify the egress or ingress and location node-id keywords and argument, the show controllers pse statistics command displays statistical information for both device instances on all modular services cards.								

GigabitEthernet shared port adapters(SPA) support all types of ethernet packets. A line card drops a packet only if the packet is of an invalid ethernet type. This eventually increases the L2 protocol unknown count in the output of the **show controller pse statistics ingress location node-ID** command.

Task ID	Task ID Operations
	interface read
	drivers read

Examples

The following command shows how to display PSE statistics:

```
RP/0/RP0/CPU0:router# show controllers pse statistics

Node 0/0/CPU0 Ingress PSE Stats
-----
Punt Stats          Punted          Policed & Dropped
-----
L2 low priority    8383            0
L2 control         133708          0
CDP                145926          0
ARP                8389            0
Bundle Control    156877          0
IPv4 TTL expiration 39179           0
IPv4 BFD async     128348286        0
IPv4 BFD echo      6543965          0
ACL log            39142667         0
IPv6 link local   511927           0
IPv6 BFD async     1380652214        0
EOAM CFM CCM pkts 57390870          0
EOAM EFM pkts     956527            0
SPA IPC punt       2551214           0

Drop Stats          Dropped
-----
IFIB policer drop 225
Service lookup miss 2137
IPv4 not enabled   1
IPv4 interface down 5
IPv4 MC not enabled 60380
IPv6 not enabled   1
EOAM EFM feature disable drop 176

Debug Stats          Count
-----
PPE idle counter    84330433181953

Node 0/0/CPU0 Egress PSE Stats
-----
Punt Stats          Punted          Policed & Dropped
-----
IPv4 L2LI punt     1               0
ACL log             1               0
IPv6 L2LI punt     9               0

Drop Stats          Dropped
-----
```

show controllers pse statistics

Pre-route no adjacency in PIT	8
Debug Stats	Count
-----	-----
PPE idle counter	84334688870964
Recirculate UIDB index	31864

The following command shows how to display PSE statistics for a specific controller instance:

```
RP/0/RP0/CPU0:router# show controllers pse statistics instance 0

Node 0/0/CPU0 Ingress PSE Stats
-----
Punt Stats                               Punted          Policed & Dropped
-----                                     -----
L2 low priority                          8383           0
L2 control                             133708         0
CDP                                    145932         0
ARP                                    8389           0
Bundle Control                         156883         0
IPv4 TTL expiration                    39182          0
IPv4 BFD async                         128354734      0
IPv4 BFD echo                          6543965        0
ACL log                                39144634       0
IPv6 link local                        511927          0
IPv6 BFD async                         1380721157     0
EOAM CFM CCM pkts                     57393762        0
EOAM EFM pkts                          956575          0
SPA IPC punt                           2551214         0

Drop Stats                               Dropped
-----                                     -----
IFIB policer drop                      225
Service lookup miss                   2137
IPv4 not enabled                      1
IPv4 interface down                   5
IPv4 MC not enabled                  60385
IPv6 not enabled                      1
EOAM EFM feature disable drop        176

Debug Stats                             Count
-----                                     -----
PPE idle counter                       84334518624455
```

This table describes the significant fields shown in the display.

Table 20: show controllers pse statistics Field Descriptions

Field	Description
Node	Identifies the node whose PSE statistics are displayed. The node ID is expressed in the <i>rack/slot/module</i> notation.

Field	Description
PSE 0, Statistics Info	Displays all statistics maintained by the PSE.

Related Commands	Command	Description
	show controllers pse eio links, on page 101	Displays packet switching engine information for Elastic I/O links.
	show controllers pse ipc, on page 104	Displays packet switching engine device information for interprocess communication connections, or for a specific IPC controller.
	show controllers pse mp, on page 111	Displays packet switching engine information for the maintenance processor on a specific controller or node.
	show controllers pse summary, on page 124	Displays a summary of packet switching engine information for a specific controller or node.

show controllers pse summary

show controllers pse summary

To display a summary of packet switching engine (PSE) information for a specific controller or node, use the **show controllers pse summary** command in EXEC mode.

show controllers pse summary [{egress | ingress}] [location node-id]

Syntax Description	<p>egress (Optional) Displays information for the egress PSE device only.</p> <p>Note Follow the egress argument with the location node-id keyword and argument to restrict the command to a specific node.</p> <hr/> <p>ingress (Optional) Displays information for the ingress PSE device only.</p> <p>Note Follow the ingress keyword with the location node-id keyword and argument to restrict the command to a specific node.</p> <hr/> <p>location node-id (Optional) Identifies the location of the node whose PSE device information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.</p> <p>Note Use the show platform command to see the location of all nodes installed in the router.</p> <p>Note Include the instance {0 1} argument before the location node-id keyword and argument to restrict the command to a specific device instance on the specified node.</p> <hr/>						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> <tr> <td>Release 3.5.0</td> <td>The instance {0 1} keywords were replaced by the egress and ingress keywords.</td> </tr> </tbody> </table> <hr/>	Release	Modification	Release 2.0	This command was introduced.	Release 3.5.0	The instance {0 1} keywords were replaced by the egress and ingress keywords.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.5.0	The instance {0 1} keywords were replaced by the egress and ingress keywords.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>interface</td> <td>read</td> </tr> <tr> <td>drivers</td> <td>read</td> </tr> </tbody> </table> <hr/>	Task ID	Operations	interface	read	drivers	read
Task ID	Operations						
interface	read						
drivers	read						
Examples	The following command shows how to display a summary of PSE information for a specific controller instance:						

```

RP/0/RP0/CPU0:router# show controllers pse summary ingress

Node: 0/1/CPU0:
-----
Ingress PSE, Summary Info:
-----
IBM P/N      : LotNum      :
SerialNum    : 0xffffffff BadPPECls   : 0000
Version       : 3          CpuctrlPort : 5
DeviceState   : 0 (UP)
StartupOpts  : 00000000  MmappedBase : 0x61111000
ClsDisMask   : 0000      NFusedPPEs  : 4 (0 hwf, 4 swf)
MPUcodeName  : /pkg/ucode/crs/pse/ingress_mp_v3.mucode
PPEUcodeName : /pkg/ucode/crs/pse/metro_ingress_turbo_plim2_v3.mucode
INTR-Status  : 00000000  INTR-Enable : 0x7ffffe
NColdResets  : 1          NWarmResets : 0
NPPEucDlds   : 1          NResetRetry : 0
NIntrtps     : 1          NIIntrptThrot: 0

Node: 0/6/CPU0:
-----
Ingress PSE, Summary Info:
-----
IBM P/N      : LotNum      :
SerialNum    : 0xffffffff BadPPECls   : 0000
Version       : 3          CpuctrlPort : 5
DeviceState   : 0 (UP)
StartupOpts  : 00000000  MmappedBase : 0x61111000
ClsDisMask   : 0000      NFusedPPEs  : 4 (0 hwf, 4 swf)
MPUcodeName  : /pkg/ucode/crs/pse/ingress_mp_v3.mucode
PPEUcodeName : /pkg/ucode/crs/pse/metro_ingress_turbo_plim2_v3.mucode
INTR-Status  : 00000000  INTR-Enable : 0x7ffffe
NColdResets  : 1          NWarmResets : 0
NPPEucDlds   : 1          NResetRetry : 0
NIntrtps     : 1          NIIntrptThrot: 0

```

This table describes the significant fields shown in the display.

Table 21: show controllers pse summary Field Descriptions

Field	Description
Node	Node whose PSE information is displayed.
IBM P/N	IBM part number.
SerialNum	Serial number of the node.
BadPPECls	Number of bad PPECIs on the PSE.
Version	PSE version.
CpuctrlPort	Cpuctrl port associated with the PSE instance.
DeviceState	Whether the node is up (active) or down (inactive).
StartupOpts	Internal information about the PSE startup options.

show controllers pse summary

Field	Description
MmappedBase	Internal mapping information.
ClsDisMask	Internal masking information.
NFusedPPEs	Internal PPE information.
MPUcodeName	Information about the MPU code.
PPEUcodeName	Information about the PPEU code.
INTR-Status	Internal status information.
INTR-Enable	Internal enable information.
NColdResets	Number of cold resets experienced by the router.
NWarmResets	Number of warm resets experienced by the router.
NPPEUcDlds	Internal information about the PSE.
NResetRetry	Number of times the router attempted to reset itself.
NIntrtps	Internal information about interrupts on the PSE.
NIntrptThrot	Internal throttling information for the PSE.

Related Commands

Command	Description
show controllers pse eio links, on page 101	Displays packet switching engine information for Elastic I/O links.
show controllers pse ipc, on page 104	Displays packet switching engine device information for interprocess communication connections, or for a specific IPC controller.
show controllers pse mp, on page 111	Displays packet switching engine information for the maintenance processor on a specific controller or node.
show controllers pse summary, on page 124	Displays a summary of packet switching engine information for a specific controller or node.

show controllers pse tcam

To display the ternary content addressable memory (TCAM) manager module information for a packet switching engine (PSE) on a specific controller or node, use the **show controllers pse tcam** command in EXEC mode.

```
show controllers pse tcam [{connections | contents | lookup | prefix-compression | region-addrs | region-list | rlb-range-map | rsm | summary | trace}] [{egress | ingress}] [location node-id]
```

Syntax Description	
connections	(Optional) Displays the summary information for the client and server connections.
contents	(Optional) Displays the contents of TCAM entries/registers and range logic block (RLB) entries.
lookup	(Optional) Displays the results of a lookup operation in a specific bank.
prefix-compression	(Optional) Displays the failed prefixes in the IPv6 prefix compression.
region-addrs	(Optional) Displays the CAM addresses used by a specific region.
region-list	(Optional) Displays region handles for a feature in a specific bank.
rlb-range-map	(Optional) Displays the mapping of specified port range to fields in TCAM entries.
rsm	(Optional) Display resource shadow memory (RSM) data.
summary	(Optional) Displays the summary of CAM free space or entries for a region.
trace	(Optional) Displays the TCAM manager trace data.
egress	(Optional) Displays information for the egress PSE device only. Note Follow the egress argument with the location node-id keyword and argument to restrict the command to a specific node.
ingress	(Optional) Displays information for the ingress PSE device only. Note Follow the ingress keyword with the location node-id keyword and argument to restrict the command to a specific node.
location node-id	(Optional) Identifies the location of the node whose PSE device information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Note Use the show platform command to see the location of all nodes installed in the router. Note Include the instance {0 1} argument before the location node-id keyword and argument to restrict the command to a specific device instance on the specified node.

Command Default No default behavior or values

show controllers pse tcam

Command Modes	EXEC mode								
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.8.0</td> <td>This command was introduced.</td> </tr> <tr> <td>Release 5.1.3</td> <td>The lpts-ipv6-compression keyword was added under region-list and prefix-compression. The show command output was updated to display local packet transport services (LPTS) IPv6 compression information.</td> </tr> </tbody> </table>	Release	Modification	Release 3.8.0	This command was introduced.	Release 5.1.3	The lpts-ipv6-compression keyword was added under region-list and prefix-compression . The show command output was updated to display local packet transport services (LPTS) IPv6 compression information.		
Release	Modification								
Release 3.8.0	This command was introduced.								
Release 5.1.3	The lpts-ipv6-compression keyword was added under region-list and prefix-compression . The show command output was updated to display local packet transport services (LPTS) IPv6 compression information.								
Usage Guidelines	The optional egress or ingress and location keywords are not mutually exclusive. The egress and ingress keywords direct the command to specific PSE device, and the location keyword directs the command to that device or devices on the specified modular services card. You can specify the egress or ingress and location options together in the same command.								
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>acl</td> <td>read</td> </tr> <tr> <td>interface</td> <td>read</td> </tr> <tr> <td>drivers</td> <td>read</td> </tr> </tbody> </table>	Task ID	Operations	acl	read	interface	read	drivers	read
Task ID	Operations								
acl	read								
interface	read								
drivers	read								

Examples

The following command shows how to display a summary of PSE TCAM information for a specific controller instance:

```
RP/0/RP0/CPU0:router# show controllers pse tcam summary ingress location 0/1/cpu0

TCAM Device Information for Ingress Metro, CAM channel 0:
Device size: 18M (256K array entries of 72-bits), 260014 available
Current mode of operation: Turbo
Software Initialization:
    Memory management state: complete
    Range block state: complete
    IPv6 prefix compression state: complete
Hardware Initialization:
    Device registers: complete
    CAM/SRAM Memory: complete
    Default entries for applications: complete
    Range Logic Block registers: complete
    IPv6 prefix compression region: complete
Feature specific information:
    packet filtering (id 0):
        Owner client id: 3. Limit 260096 cells
        Total 1 regions using 76 CAM cells
    QoS (id 1):
        Owner client id: 1. Limit 260096 cells
        Duplication enabled in Turbo mode into CAM channel 1
    Fab QoS (id 2):
        Owner client id: 1. Limit 260096 cells
        Duplication enabled in Turbo mode into CAM channel 1
    ipv6 prefix compress (id 10):
        Owner client id: 13. Limit 260096 cells
        Total 1 regions using 2 CAM cells
```

```

Entry duplication enabled in Turbo and Feature modes into CAM c1
tcam_mgr (id 11):
    Owner client id: 13. Limit 260096 cells
    Total 1 regions using 4 CAM cells
L2FIB (id 12):
    Owner client id: 14. Limit 260096 cells
    Total 1 regions using 2048 CAM cells
LI (id 13):
    Owner client id: 3. Limit 262144 cells
    Total 1 regions using 0 CAM cells
    Duplication enabled in Turbo mode into CAM channel 1
TCAM Device Information for Ingress Metro, CAM channel 1:
Device size: 18M (256K array entries of 72-bits), 261760 available
Current mode of operation: Turbo
Software Initialization:
    Memory management state: complete
    Range block state: complete
    IPv6 prefix compression state: complete
Hardware Initialization:
    Device registers: complete
    CAM/SRAM Memory: complete
    Default entries for applications: complete
    Range Logic Block registers: complete
    IPv6 prefix compression region: complete
Feature specific information:
Pre-IFIB (id 4):
    Owner client id: 10. Limit 260096 cells
    Total 3 regions using 302 CAM cells
ipv6 prefix compress (id 10):
    Owner client id: 13. Limit 260096 cells
    Total 1 regions using 2 CAM cells
tcam_mgr (id 11):
    Owner client id: 13. Limit 260096 cells
    Total 2 regions using 80 CAM cells
L2FIB (id 12):
    Owner client id: 14. Limit 260096 cells
    Total 1 regions using 0 CAM cells
LI (id 13):
    Owner client id: 3. Limit 262144 cells
    Total 1 regions using 0 CAM cells

```

The following command shows how to display LPTS IPv6 compression information of PSE TCAM at a specific controller instance:

```

RP/0/RP0/CPU0:router# show controllers pse tcam region-list ingress lpts-ipv6-compression
location 0/1/cpu0
Number of regions for feature 36 in Ingress PSE, bank 0 is: 1
Region:          LPTS IPv6 pref compr ACL ID 0x000f id_len 4 region ID 7 region duplicate
ID 7 entries 7

TCAM logical region information:
Ingress PSE, CAM bank 0, region name LPTS IPv6 pref compr
region ID 7 region duplicate ID 7
for feature lpts ipv6 prefix compress owner-id 15
Region size 7 entries (Max allowed 16000) of 144 bits (Result entry size 16 bytes)
ACL ID 0x f of width 4 bits allocated from bucket (calculated) 0x6f msb 0x60
CAM cells in Ingress PSE, bank 0 used by region 7:
entry 0x01d02-0x01d0f, offset 0 - 13, result 0x01d02-0x01d0f, map 1 result allocated
Total cells: 14
Frame index: 7
Frame index bitmap: 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x80
Total Frame used: 1

Number of regions for feature 36 in Ingress PSE, bank 1 is: 1

```

```
show controllers pse tcam
```

```
Region: LPTS IPv6 pref compr ACL ID 0x000f id_len 4 region ID 7 region duplicate
ID 0 entries 7

TCAM logical region information:
Ingress PSE, CAM bank 1, region name LPTS IPv6 pref compr
region ID 7 region duplicate ID 0
for feature lpts ipv6 prefix compress owner-id 15
Region size 7 entries (Max allowed 16000) of 144 bits (Result entry size 16 bytes)
ACL ID 0x f of width 4 bits allocated from bucket (calculated) 0x6f msb 0x60
CAM cells in Ingress PSE, bank 1 used by region 7:
entry 0x01802-0x01803, offset 0 - 1, result 0x01802-0x01803, map 1 result allocated
entry 0x0180e-0x01819, offset 2 - 13, result 0x0180e-0x01819, map 1 result allocated
Total cells: 14
Frame index: 6
Frame index bitmap: 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x0 0x40
Total Frame used: 1
```

show controllers pse utilization

To display the packet processing engine (PPE) utilization information in the packet switching engine (PSE) on a specific controller or node, use the **show controllers pse utilization** command in EXEC mode. The PPE processes each packet individually within the PSE ASIC and there are multiple PPEs present in the PSE.

show controllers pse utilization [{egress | ingress}]

Syntax Description

egress (Optional) Displays the PPE utilization information for the egress PSE device only.

Note Follow the **egress** argument with the **location node-id** keyword and argument to restrict the command to a specific node.

ingress (Optional) Displays PPE utilization information for the ingress PSE device only.

Note Follow the **ingress** keyword with the **location node-id** keyword and argument to restrict the command to a specific node.

location node-id (Optional) Identifies the location of the node whose PPE utilization information you want to display. The *node-id* argument is expressed in the *rack/slot/module* notation.

Command Default

No default behavior or values

Command Modes

EXEC mode

Command History

Release Modification

Release 3.8.0 This command was introduced.

Usage Guidelines

The optional **egress** or **ingress** and **location** keywords are not mutually exclusive. The **egress** and **ingress** keywords direct the command to specific PSE device, and the **location** keyword directs the command to that device or devices on the specified modular services card. You can specify the **egress** or **ingress** and **location** options together in the same command.

Task ID

Task Operations ID

interface read

drivers read

Examples

The following command shows how to display the PPE utilization information of all the ingress locations:

```
RP/0/RP0/CPU0:router# show controllers pse utilization ingress location all
```

```
PPE Utilization
```

show controllers pse utilization

Node	Ingress	Egress
0/1/CPU0:	0.0	
0/6/CPU0:	0.1	

The following command shows how to display the PPE utilization information of all the nodes having access to a PSE:

```
RP/0/RP0/CPU0:router# show controllers pse utilization

PPE Utilization
  Node          Ingress   Egress
=====
  0/1/CPU0:      0.0       0.0
  0/6/CPU0:      0.0       1.0
```

show packet-memory

To display information for packet memory, use the **show packet-memory** command in EXEC mode.

```
show packet-memory [{clients | corrupt | failures | hssd | ifinput | ifoutput | internal | inuse | job | mutex | old | reserved | summary | trace | watch}] [location node-id]
```

Syntax Description	clients (Optional) Displays the packet manager clients.	
corrupt	(Optional) Displays the information about corrupted packets.	
failures	(Optional) Displays the packet buffer, header, hardware buffer allocation failures.	
hssd	(Optional) Displays High Speed Small Data (HSSD).	
ifinput	(Optional) Displays packets from a specific interface.	
ifoutput	(Optional) Displays packets to a specific interface.	
internal	(Optional) Displays the packet memory along with actual number of particles in free list.	
inuse	(Optional) Displays the total number of packets in use	
job	(Optional) Displays the number of packets owned by a specific process.	
mutex	(Optional) Displays the pakman mutex monitoring configuration.	
old	(Optional) Displays the total number of packets older than one minute.	
reserved	(Optional) Displays the reserved memory information.	
summary	(Optional) Displays the packet memory usage summary information.	
trace	(Optional) Displays the packet-memory traces.	
watch	(Optional) Displays the pakman watch configuration.	
location node-id	(Optional) Displays detailed packet memory information for the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.	
Command Default	Displays information about all packet memory.	
Command Modes	EXEC mode	
Command History	Release	Modification
	Release 2.0	This command was introduced .

show packet-memory

Release	Modification
Release 3.9.0	Included the following keywords:
	<ul style="list-style-type: none"> • clients • corrupt • failures • fsv • hssd • ifinput • ifoutput • internal • inuse • job • mutex • old • reserved • summary • trace • watch

Usage Guidelines

The **show packet-memory** command can be used to display the total number of packet and particle headers, along with the packet memory that is currently allocated in the system.

Task ID	Task ID	Operations
	basic-services	read

Examples

The following example shows how to display packet memory information:

```
RP/0/RP0/CPU0:router# show packet-memory

Packet memory statistics :
=====
Packet headers
total: 32000, free: 32000, size: 448
Particle Pools(8)
Pool(0):total: 8000, free: 8000, size: 256
fallback: 0, region: 0
Pool(1):total: 4000, free: 3968, size: 512
fallback: 1, region: 0
Pool(2):total: 16, free: 16, size: 512
fallback: 2, region: 0
Pool(3):total: 8000, free: 7936, size: 768
fallback: 3, region: 0
Pool(4):total: 12800, free: 9172, size: 1648
fallback: 4, region: 0
Pool(5):total: 320, free: 320, size: 2560
fallback: 5, region: 0
Pool(6):total: 1600, free: 1088, size: 4608
fallback: 6, region: 0
Pool(7):total: 640, free: 640, size: 6240
```

```

fallback: 7, region: 0
Particle clone
total: 8000, free: 8000, size: 256
Packet Feature Specific Variable (FSV)
total: 16000, free: 16000, size: 88
Packet trace
total: 16384, free: 16384, size: 40

```

This table describes the significant fields shown in the display.

Table 22: show packet memory Field Descriptions

Field	Description
Packet headers	Data structure that defines and controls an aggregation of data structures, collectively known as a packet. Includes information about every packet in the system.
Particle Pools	Data structure that describes a particle and may be chained to other particles in a linked list. Includes information about the actual data of the packet and other particle headers in this packet if present in this packet.
Particle clone	Duplicate particle header that points to a previously allocated particle. Differs from a particle header in that a particle clone shares the particle with another particle header.
Packet Feature Specific Variable (FSV)	Scratch pad shared among the features in the packet path, listing hangs of the packet header.
Packet trace	Data associated with the packet header to help tracing a packet in the system.

show packet-memory



Troubleshooting Commands

This module describes commands used for troubleshooting routers running Cisco IOS XR software.

The commands in this chapter with the cisco-support task ID are used in the *Cisco IOS XR Troubleshooting Guide for Cisco CRS-1 Router* as part of the troubleshooting process. For information about commands with the cisco-support task ID that are not documented in this chapter, please contact Cisco Technical Support.



Caution

These Cisco support commands are normally reserved for use by Cisco Technical Support personnel only. There is some risk that they may cause performance or other issues that impact products without proper usage, and we highly recommend that you contact Cisco Technical Support prior to using any of these commands.

To use commands of this module, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using any command, contact your AAA administrator for assistance.

- [show arp trace , on page 138](#)
- [show captured packets, on page 142](#)
- [show cfgmgr trace , on page 144](#)
- [show im database, on page 146](#)
- [show imds interface brief , on page 150](#)
- [show netio chains, on page 152](#)
- [show netio clients, on page 155](#)
- [show netio db, on page 157](#)
- [show netio idb , on page 159](#)
- [show netio media-registrations, on page 163](#)
- [show netio subblock, on page 165](#)
- [show netio trace, on page 167](#)
- [show sysdb connections, on page 170](#)
- [show sysdb trace verification location , on page 172](#)
- [show sysdb trace verification shared-plane , on page 175](#)
- [show tbm hardware , on page 177](#)
- [show uidb data, on page 180](#)
- [show uidb trace, on page 186](#)
- [show uidb index , on page 188](#)
- [watchdog threshold memory, on page 191](#)

show arp trace

show arp trace

To display Address Resolution Protocol (ARP) entries in the buffer, use the **show arp trace** command in EXEC mode.

show arp trace

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes EXEC mode

Command History	Release	Modification
-----------------	---------	--------------

Release 2.0 This command was introduced.

Usage Guidelines Use the **show arp trace** command to display ARP entries in the buffer.

Task ID	Task ID	Operations
	cisco-support	read

Examples The following example shows the output of the **show arp trace** command:

```
RP/0/RP0/CPU0:router# show arp trace events
Tue Nov 10 04:13:22.766 PST

22 unique entries (4096 possible, 54 filtered)
Nov 5 19:48:27.624 ipv4_arp/slow 0/RP0/CPU0 1# t1 ARP-EVENT: Repopulating AIB
Nov 5 19:48:49.768 ipv4_arp/slow 0/RP0/CPU0 1# t1 ARP-DEV-EVENT: Unbinding frs
Nov 5 19:49:01.590 ipv4_arp/slow 0/RP0/CPU0 1# t1 ARP-EVENT: IM ORE received
Nov 5 19:54:12.448 ipv4_arp/slow 0/RP0/CPU0 5# t1 ARP-EVENT: Processing MAC c3
Nov 5 19:54:12.467 ipv4_arp/slow 0/RP0/CPU0 5# t1 ARP-EVENT: Interface attrib2
Nov 5 19:54:12.555 ipv4_arp/fast 0/RP0/CPU0 10# t1 ARP-EVENT: received interf3
Nov 5 19:54:12.595 ipv4_arp/fast 0/RP0/CPU0 5# t1 ARP-EVENT: Copying MAC addr3
Nov 5 19:54:12.614 ipv4_arp/fast 0/RP0/CPU0 6# t1 ARP-EVENT: Received VLAN ID)
Nov 5 19:54:12.614 ipv4_arp/fast 0/RP0/CPU0 3# t1 ARP-EVENT: Processing VLAN )
Nov 5 19:54:15.434 ipv4_arp/slow 0/RP0/CPU0 5# t1 ARP-EVENT: Interface not up0
Nov 5 19:54:15.437 ipv4_arp/slow 0/RP0/CPU0 1# t3 ARP-EVENT: IMP caps add suc0
Nov 5 19:54:15.581 ipv4_arp/fast 0/RP0/CPU0 5# t1 ARP-EVENT: Completing IDB i0
Nov 5 19:54:15.673 ipv4_arp/slow 0/RP0/CPU0 1# t1 ARP-EVENT: interface_entry 0
Nov 5 19:54:15.793 ipv4_arp/pkt 0/RP0/CPU0 1# t1 ARP-EVENT: Discarding arp pa2
Nov 5 19:57:22.531 ipv4_arp/fast 0/RP0/CPU0 4# t1 ARP-EVENT: received DPC for1
Nov 5 21:30:08.234 ipv4_arp/slow 0/RP0/CPU0 9# t1 ARP-EVENT: clearing ARP AIB1
Nov 5 21:46:04.169 ipv4_arp/slow 0/RP0/CPU0 18# t1 ARP-EVENT: updating arp-id)
Nov 5 21:46:04.169 ipv4_arp/slow 0/RP0/CPU0 9# t1 ARP-EVENT: adding ARP AIB e1
Nov 5 21:46:04.316 ipv4_arp/fast 0/RP0/CPU0 18# t1 ARP-EVENT: Interface Bundl1
Nov 6 17:03:53.443 ipv4_arp/pkt 0/RP0/CPU0 3# t1 PROBE: Timer expired on Mgmt1
Nov 6 17:04:23.052 ipv4_arp/pkt 0/RP0/CPU0 3# t1 PROBE: MgmtEth0/RP0/CPU0/0 ee
Nov 6 17:23:16.156 ipv4_arp/slow 0/RP0/CPU0 46# t1 ARP-EVENT: updated aib ent0
160 wrapping entries (4096 possible, 805 filtered, 965 total)
```

```

Nov  5 19:48:27.771 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: Repopulating AIB
Nov  5 19:48:49.915 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-DEV-EVENT: Unbinding from s
Nov  5 19:49:01.737 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: IM ORE received
Nov  5 19:49:01.761 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Copying MAC address0
Nov  5 19:49:01.761 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: Interface attribute2
Nov  5 19:49:01.761 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: Processing MAC chan6
Nov  5 19:49:01.769 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: received interface 0
Nov  5 19:49:01.769 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: received interface 0
Nov  5 19:54:12.258 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: received interface 0
Nov  5 19:54:12.258 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: received interface 8
Nov  5 19:54:12.294 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Copying MAC address8
Nov  5 19:54:12.294 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: Interface attribute2
Nov  5 19:54:12.294 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: Processing MAC chan3
Nov  5 19:54:12.555 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: received interface 1
Nov  5 19:54:12.555 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: received interface 2
Nov  5 19:54:12.555 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: received interface 3
Nov  5 19:54:12.555 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: received interface 1
Nov  5 19:54:12.555 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: received interface 2
Nov  5 19:54:12.555 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: received interface 3
Nov  5 19:54:12.595 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Copying MAC address1
Nov  5 19:54:12.595 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Copying MAC address2
Nov  5 19:54:12.595 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Copying MAC address3
Nov  5 19:54:12.595 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Received VLAN ID no)
Nov  5 19:54:12.595 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Received VLAN ID no)
Nov  5 19:54:12.595 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Received VLAN ID no)
Nov  5 19:54:12.595 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: Interface attribute2
Nov  5 19:54:12.595 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: Processing MAC chan3
Nov  5 19:54:12.595 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: Processing MAC chan3
Nov  5 19:54:12.595 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: Processing MAC chan3
Nov  5 19:54:12.595 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: Interface attribute2
Nov  5 19:54:12.614 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Received VLAN ID no)
Nov  5 19:54:12.614 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Processing VLAN ID )
Nov  5 19:54:12.614 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Received VLAN ID no)
Nov  5 19:54:12.614 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Processing VLAN ID )
Nov  5 19:54:12.614 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Received VLAN ID no)
Nov  5 19:54:12.614 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Processing VLAN ID )
Nov  5 19:54:12.614 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: Interface attribute2
Nov  5 19:54:12.692 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Interface Bundle-Etn
Nov  5 19:54:12.692 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Interface Bundle-Etn
Nov  5 19:54:12.692 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Interface Bundle-Etn
Nov  5 19:54:12.692 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Interface Bundle-Etn
Nov  5 19:54:12.692 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: updating arp-idb ip)
Nov  5 19:54:12.692 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: clearing ARP AIB en8
Nov  5 19:54:12.692 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updating arp-idb ip)
Nov  5 19:54:12.692 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: clearing ARP AIB en1
Nov  5 19:54:12.692 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updating arp-idb ip)
Nov  5 19:54:12.692 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: clearing ARP AIB en2
Nov  5 19:54:12.692 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updating arp-idb ip)
Nov  5 19:54:12.692 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: clearing ARP AIB en3
Nov  5 19:54:12.749 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Completing IDB ifh:8
Nov  5 19:54:12.749 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Completing IDB ifh:1
Nov  5 19:54:12.749 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Completing IDB ifh:2
Nov  5 19:54:12.749 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Completing IDB ifh:3
Nov  5 19:54:12.749 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: Interface not up ca8
Nov  5 19:54:12.749 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: Interface not up ca1
Nov  5 19:54:12.749 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: Interface not up ca2
Nov  5 19:54:12.749 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: Interface not up ca3
Nov  5 19:54:15.567 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Interface MgmtEth0/n
Nov  5 19:54:15.567 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updating arp-idb ip)
Nov  5 19:54:15.567 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: clearing ARP AIB en0
Nov  5 19:54:15.581 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Completing IDB ifh:0
Nov  5 19:54:15.581 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: Interface not up ca0
Nov  5 19:54:15.584 ipv4_arp/slow 0/RP0/CPU0 t3 ARP-EVENT: IMP caps add succeed
Nov  5 19:54:15.793 ipv4_arp/pkt 0/RP0/CPU0 t1 ARP-EVENT: Discarding arp packe2

```

show arp trace

```

Nov 5 19:54:15.819 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Interface MgmtEth0/p
Nov 5 19:54:15.819 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updating arp-idb ip)
Nov 5 19:54:15.819 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: adding ARP AIB entr0
Nov 5 19:54:15.820 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 19:54:15.820 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: interface_entry (170
Nov 5 19:57:21.623 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 19:57:22.463 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: received DPC for if8
Nov 5 19:57:22.531 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: received DPC for if3
Nov 5 19:57:22.531 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: received DPC for if2
Nov 5 19:57:22.531 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: received DPC for if1
Nov 5 19:57:29.136 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 20:27:42.950 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 20:27:42.969 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 20:27:43.202 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 20:27:54.590 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 20:30:38.679 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 20:30:38.943 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 20:30:45.788 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 20:30:46.342 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 20:30:46.458 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 20:32:57.516 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 20:33:38.988 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Interface Bundle-Etp
Nov 5 20:33:38.988 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updating arp-idb ip)
Nov 5 20:33:39.065 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: adding ARP AIB entr8
Nov 5 20:33:39.065 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Interface Bundle-Etp
Nov 5 20:33:39.065 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Interface Bundle-Etp
Nov 5 20:33:39.065 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Interface Bundle-Etp
Nov 5 20:33:39.065 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updating arp-idb ip)
Nov 5 20:33:39.065 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: adding ARP AIB entr2
Nov 5 20:33:39.065 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updating arp-idb ip)
Nov 5 20:33:39.065 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: adding ARP AIB entr1
Nov 5 20:41:37.128 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 20:41:37.144 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 21:23:17.059 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 21:23:18.347 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 21:26:41.271 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 21:30:08.361 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Interface Bundle-Etn
Nov 5 21:30:08.361 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updating arp-idb ip)
Nov 5 21:30:08.361 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: clearing ARP AIB en8
Nov 5 21:30:08.367 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Interface Bundle-Etn
Nov 5 21:30:08.367 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updating arp-idb ip)
Nov 5 21:30:08.367 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: clearing ARP AIB en3
Nov 5 21:30:08.373 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Interface Bundle-Etn
Nov 5 21:30:08.373 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updating arp-idb ip)
Nov 5 21:30:08.373 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: clearing ARP AIB en2
Nov 5 21:30:08.381 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Interface Bundle-Etn
Nov 5 21:30:08.381 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updating arp-idb ip)
Nov 5 21:30:08.381 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: clearing ARP AIB en1
Nov 5 21:46:04.302 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Interface Bundle-Etp
Nov 5 21:46:04.302 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updating arp-idb ip)
Nov 5 21:46:04.302 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: adding ARP AIB entr8
Nov 5 21:46:04.316 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Interface Bundle-Etp
Nov 5 21:46:04.316 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Interface Bundle-Etp
Nov 5 21:46:04.316 ipv4_arp/fast 0/RP0/CPU0 t1 ARP-EVENT: Interface Bundle-Etp
Nov 5 21:46:04.316 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updating arp-idb ip)
Nov 5 21:46:04.316 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: adding ARP AIB entr3
Nov 5 21:46:04.316 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updating arp-idb ip)
Nov 5 21:46:04.316 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: adding ARP AIB entr2
Nov 5 21:46:04.316 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updating arp-idb ip)
Nov 5 21:46:04.316 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: adding ARP AIB entr1
Nov 5 22:39:30.728 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0
Nov 5 23:32:03.427 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0

```

```

Nov  5 23:32:03.625 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  5 23:33:37.230 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  5 23:33:37.765 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  5 23:35:13.706 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  5 23:35:45.392 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  5 23:43:24.043 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  5 23:45:39.659 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  5 23:56:36.519 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  5 23:56:47.521 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  5 23:56:54.402 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  5 23:57:12.595 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  5 23:57:22.204 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  5 23:57:23.449 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  6 00:10:29.938 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  6 00:15:14.864 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  6 00:20:46.274 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  6 00:22:13.307 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  6 00:24:17.723 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  6 00:25:17.797 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  6 02:33:04.239 ipv4_arp/pkt 0/RP0/CPU0 t1 PROBE: Timer expired on MgmtEth1
Nov  6 02:33:30.807 ipv4_arp/pkt 0/RP0/CPU0 t1 PROBE: MgmtEth0/RP0/CPU0/0 exceE
Nov  6 12:23:26.295 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  6 13:16:12.876 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  6 13:16:13.026 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  6 13:17:37.082 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  6 13:17:37.130 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  6 14:54:55.415 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)
Nov  6 16:12:07.269 ipv4_arp/pkt 0/RP0/CPU0 t1 PROBE: Timer expired on MgmtEth1
Nov  6 16:12:35.727 ipv4_arp/pkt 0/RP0/CPU0 t1 PROBE: MgmtEth0/RP0/CPU0/0 exceE
Nov  6 17:03:53.443 ipv4_arp/pkt 0/RP0/CPU0 t1 PROBE: Timer expired on MgmtEth1
Nov  6 17:04:23.052 ipv4_arp/pkt 0/RP0/CPU0 t1 PROBE: MgmtEth0/RP0/CPU0/0 exceE
Nov  6 17:23:16.303 ipv4_arp/slow 0/RP0/CPU0 t1 ARP-EVENT: updated aib entry (0)

```

Related Commands

Command	Description
show arp	Displays the ARP.

show captured packets

show captured packets

To display information on packets that are switched and punted in the software, use the **show captured packets** command in EXEC mode.

```
show captured packets {ingress|egress} [interface type interface-path-id] [hexdump] [last number]
[single-line] location node-id
```

Syntax Description	<p>ingress Specifies ingress dropped packets.</p> <p>egress Specifies egress dropped packets.</p> <p>interface (Optional) Specifies an interface.</p> <p>type Interface type. For more information, use the question mark (?) online help function.</p> <p>interface-path-id Physical interface or virtual interface.</p> <p>Note Use the show interfaces command to see a list of all interfaces currently configured on the router.</p> <p>For more information about the syntax for the router, use the question mark (?) online help function.</p>				
hexdump	(Optional) Displays the packet contents in hex.				
last number	(Optional) Specifies the last number of packets in the queue to display.				
single-line	(Optional) Displays a one-line summary of the captured packets to facilitate the use of the include and exclude operators.				
location node-id	Displays packet information for a specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
Command Default	No default behavior or values				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				
Usage Guidelines	<p>Use the show captured packets command to display information on packets that are switched and punted in the software.</p> <p>The capture software packets command must be enabled at the interface level to use this command.</p>				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>cisco-support</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	cisco-support	read
Task ID	Operations				
cisco-support	read				

Examples

The following example shows the output of the **show captured packets** command:

```
RP/0/RP0/CPU0:router# show captured packets ingress interface tengige0/0/0/3 location
0/0/CPU0

-----
packets captured on interface in ingress direction buffer overflow pkt drops:0, current:
6, non wrapping: 0 maximum: 200
-----
Wrapping entries
-----
[1] Mar 22 16:30:43.797, len: 114, hits: 1, i/p i/f: TenGigE0/0/0/3
    [punt reason: IFIB]
    [ether dst: 0015.fa99.590b src: 0010.a4e6.22fc type/len: 0x800]
    [IPV4: source 172.18.2.2, dest 172.18.2.1 ihl 5, ver 4, tos 0
      id 22556, len 100, prot 1, ttl 64, sum c655, offset 0]
      00008612 51010000 abcdabcd abcdabcd abcdabcd abcdabcd abcdabcd
      abcdabcd abcdabcd abcdabcd abcdabcd abcdabcd abcdabcd abcdabcd
```

This table describes the significant fields shown in the display.

Table 23: show captured packets Field Descriptions

Field	Description
punt reason: IFIB	Packet was switched in the software due to the Internal Forwarding Information Base (IFIB) entry.
ether	Source, destination, and type or length values in the Ethernet header.
IPV4	Depending on the type of packet, the layer 3 packet header follows.

show cfgmgr trace

show cfgmgr trace

To display trace information for the configuration manager (CFGMGR), use the **show cfgmgr trace** command in EXEC mode.

show cfgmgr trace

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes EXEC mode

Command History	Release	Modification
	Release 2.0	This command was introduced.

Usage Guidelines Use the **show cfgmgr trace** command to display cfgmgr trace information.

The following lines of the **show cfgmgr trace** command output indicate that the startup configuration has started and that it has completed on the active RP:

```
Feb  6 21:28:37.145 /ltrace/cfgmgr/common 0/RP0/CPU0 t5  Startup config
g apply requested with option '0x1'
Feb  6 21:31:30.874 /ltrace/cfgmgr/common 0/RP0/CPU0 t7  Startup config
g done (and infra band already ready)
```



Note These traces are not present if the original active RP has ever reloaded (for example, if there have been any RP switchover events since the system first booted).

Task ID	Task ID	Operations
	cisco-support	read

Examples The following example shows the output of the **show cfgmgr trace** command:

```
RP0/RP0/CPU0:router#show cfgmgr trace

130 wrapping entries (2048 possible, 0 filtered, 130 total)
Apr 23 21:15:58.587 cfgmgr/common 0/RP0/CPU0 t5 Req '4': Save interface config]
Apr 23 21:15:58.707 cfgmgr/common 0/RP0/CPU0 t5 Req '4': Save node specific co]
Apr 23 21:15:59.000 cfgmgr/common 0/RP0/CPU0 t5 OIR announcement made for 'nod'
Apr 23 21:17:40.975 cfgmgr/common 0/RP0/CPU0 t5 The request queue IS NOT curren
Apr 23 21:17:40.975 cfgmgr/common 0/RP0/CPU0 t5 Process OIR save request.
Apr 23 21:17:41.040 cfgmgr/common 0/RP0/CPU0 t5 Validating 'LR' configuration ]
Apr 23 21:17:41.055 cfgmgr/common 0/RP0/CPU0 t5 Validating 'admin' configurati]
Apr 23 21:17:41.304 cfgmgr/common 0/RP0/CPU0 t5 Req '5': Save interface config]
Apr 23 21:17:41.349 cfgmgr/common 0/RP0/CPU0 t5 Req '5': Save interface config]
```

```

Apr 23 21:17:41.995 cfgmgr/common 0/RP0/CPU0 t5 Req '5': Save interface config]
Apr 23 21:17:42.041 cfgmgr/common 0/RP0/CPU0 t5 Req '5': Save interface config]
Apr 23 21:17:42.254 cfgmgr/common 0/RP0/CPU0 t5 Req '5': Save interface config]
Apr 23 21:17:42.356 cfgmgr/common 0/RP0/CPU0 t5 Req '5': Save node specific co]
Apr 23 21:17:42.580 cfgmgr/common 0/RP0/CPU0 t5 OIR announcement made for 'nod'
Apr 25 15:26:49.372 cfgmgr/common 0/RP0/CPU0 t1 Config media returned from dis.
Apr 25 18:15:06.142 cfgmgr/common 0/RP0/CPU0 t1 Config media returned from dis.
Apr 26 03:35:10.170 cfgmgr/common 0/RP0/CPU0 t1 Config media returned from dis.
Apr 26 05:54:37.528 cfgmgr/common 0/RP0/CPU0 t1 Config media returned from dis.
Apr 26 06:18:47.118 cfgmgr/common 0/RP0/CPU0 t1 Config media returned from dis.
Apr 26 09:07:01.662 cfgmgr/common 0/RP0/CPU0 t1 Config media returned from dis.
Apr 26 09:28:22.311 cfgmgr/common 0/RP0/CPU0 t1 Config media returned from dis.
Apr 26 11:56:55.677 cfgmgr/common 0/RP0/CPU0 t1 Config media returned from dis.

```

Related Commands	Command	Description
	show cfgmgr commitdb	Displays the contents of the commit database for the configuration manager.

show im database

show im database

To display the information stored in the shared memory database of interface manager (IM), use the **show im database** command in EXEC mode.

```
show im database [{brief | detail | ifhandle | interface | summary | verbose | view}] interface-type
interface-instance location node-id
```

Syntax Description	brief (Optional) Displays brief information about IM database. detail (Optional) Displays detailed information about IM database. ifhandle (Optional) Select a specific interface by handle. interface (Optional) Select a specific interface by name. summary (Optional) Displays IM database summary information. verbose (Optional) Displays verbose information about IM database. view (Optional) Specify a database view to filter the information based on the view interface-type Interface type. For more information, use the question mark (?) online help function. interface-instance Either a physical interface instance or a virtual interface instance as follows: <ul style="list-style-type: none"> Physical interface instance. Naming notation is <i>rack/slot/module/port</i> and a slash between values is required as part of the notation. <ul style="list-style-type: none"> <i>rack</i>: Chassis number of the rack. <i>slot</i>: Physical slot number of the modular services card or line card. <i>module</i>: Module number. A physical layer interface module (PLIM) is always 0. <i>port</i>: Physical port number of the interface. Virtual interface instance. Number range varies depending on interface type. <p>For more information about the syntax for the router, use the question mark (?) online help function.</p>
location node-id	Displays IM database information for a specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
Command Default	No default behavior or values
Command Modes	EXEC mode

Command History	Release	Modification
	Release 3.8.0	This command was introduced.
Usage Guidelines	No specific guidelines impact the use of this command.	
Task ID	Task ID	Operations
	cisco-support	read
	interface	read

Examples

The following example shows the output of the **show im database** command:

```
RP/0/RP0/CPU0:router# show im database verbose interface null 0
Mon Nov  9 22:10:37.964 PST

View: OWN - Owner, L3P - Local 3rd Party, G3P - Global 3rd Party,
      LDP - Local Data Plane, GDP - Global Data Plane, RED - Redundancy

Node 0/RP0/CPU0 (0x201)

Interface Null0, ifh 0x00080030 (up, 1500)
  Interface flags:          0x00010097 (IFINDEX|VIRTUAL|CONFIG|VIS|DATA|CONTRO
  Encapsulation:            null
  Interface type:          IFT_NULL
  Views:                   GDP[LDP|G3P|L3P|OWN
  Control location:        0/RP0/CPU0
  Owner Private:           92 bytes
    Flags:                  <none>
    State Transitions:      1
    Dampening Config:       NO
    Shared Locks:           0
    MTU default:            1500
    MTU ovh for bc/subif:   0/0
    MTU min/max:            0/0
    MTU avail/child:         0/1500
    MTU actual/notified:    1500/1500
    State (constraint):     UP (UP)
    Callback:                OWN GROUP OWNER - ID 17[-]
    Ctrl Flags:              CFG_RDY|RDY|DNLD|INTF
  Instance ID:              31
  Checkpoint:               48 bytes
  Resource in NetIO:        TRUE

  Protocol      Caps (state, mtu)
  -----  -----
  None          null (up, 1500)
    Views:                   LDP|G3P|L3P|OWN
    Owner Private:           92 bytes
      Flags:                  <none>
      MTU min/max:            0/0
      MTU avail/child:         1500/1500
      MTU actual/notified:    1500/1500
      State (constraint):     UP (UP)
      Callback:                OWN GROUP OWNER - ID 17[-]
      Ctrl Flags:              CFG_RDY|RDY|DNLD
    Instance ID:              31
```

show im database

```
Checkpoint:          20 bytes
Resource in NetIO: TRUE
Demux limit:       0x00000000
```

This table describes the significant fields shown in the display.

Table 24: show im database Field Descriptions

Field	Description
nodeid	Identifier associated with the node.
Interface	Interface name.
Protocol	Protocol encapsulations associated with the interface.
Caps (state, mtu)	Capsulation names with associated state and MTU values.

The following example shows the output of the **show im database** command:

```
RP/0/RP0/CPU0:router# show im database brief location 0/0/CPU0

View: OWN - Owner, L3P - Local 3rd Party, G3P - Global 3rd Party,
      LDP - Local Data Plane, GDP - Global Data Plane, RED - Redundancy

Node 0/0/CPU0 (0x1)

Handle | Name           | State   | MTU | #P|#C| Views
-----+-----+-----+-----+---+---+-----+
0x01080020 FI0/0/CPU0    up      8000 11 12 GDP|LDP|L3P|OWN
0x01080060 Gi0/0/0/0    up      9212  3  3 GDP|LDP|L3P|OWN
0x01080080 Gi0/0/0/1    up      1514  3  3 GDP|LDP|L3P|OWN
0x010800a0 Gi0/0/0/2    up      1514  3  3 GDP|LDP|L3P|OWN
0x010800c0 Gi0/0/0/3    down    1514  4  4 GDP|LDP|L3P|OWN
0x010800e0 Gi0/0/0/4    up      1514  3  3 GDP|LDP|L3P|OWN
0x01080100 Gi0/0/0/5    up      1514  3  3 GDP|LDP|L3P|OWN
0x01080120 Gi0/0/0/6    up      1514  8 17 GDP|LDP|L3P|OWN
0x01080140 Gi0/0/0/7    down    1514  6  9 GDP|LDP|L3P|OWN
0x010801c0 Gi0/0/0/6.1   up      1518  4  5 GDP|LDP|L3P|OWN
0x010801e0 Gi0/0/0/6.101 up      1518  5 13 GDP|LDP|L3P|OWN
0x01080200 Gi0/0/0/6.102 up      1518  5 13 GDP|LDP|L3P|OWN
0x01080220 Gi0/0/0/6.103 up      1518  5 13 GDP|LDP|L3P|OWN
0x01080240 Gi0/0/0/6.104 up      1518  5 13 GDP|LDP|L3P|OWN
0x01080260 Gi0/0/0/6.105 up      1518  4 12 GDP|LDP|L3P|OWN
0x01080280 Gi0/0/0/6.106 up      1518  4 12 GDP|LDP|L3P|OWN
0x010802a0 Gi0/0/0/6.107 up      1518  4 12 GDP|LDP|L3P|OWN
0x010802c0 Gi0/0/0/6.108 up      1518  4 10 GDP|LDP|L3P|OWN
0x010802e0 Gi0/0/0/6.109 up      1518  4 10 GDP|LDP|L3P|OWN
0x01080300 Gi0/0/0/6.110 up      1518  4 10 GDP|LDP|L3P|OWN
0x01080320 Gi0/0/0/6.111 up      1518  4 10 GDP|LDP|L3P|OWN
0x01080340 Gi0/0/0/6.112 up      1518  4 10 GDP|LDP|L3P|OWN
0x01080360 Gi0/0/0/6.113 up      1518  4 10 GDP|LDP|L3P|OWN
0x01080380 Gi0/0/0/6.114 up      1518  4 10 GDP|LDP|L3P|OWN
0x010803a0 Gi0/0/0/6.115 up      1518  4 10 GDP|LDP|L3P|OWN
0x010803c0 Gi0/0/0/6.116 up      1518  4 10 GDP|LDP|L3P|OWN
0x010803e0 Gi0/0/0/6.117 up      1518  4 10 GDP|LDP|L3P|OWN
0x01080400 Gi0/0/0/6.118 up      1518  4 10 GDP|LDP|L3P|OWN
0x01080420 Gi0/0/0/6.119 up      1518  4 10 GDP|LDP|L3P|OWN
0x01080440 Gi0/0/0/6.120 up      1518  4 10 GDP|LDP|L3P|OWN
```

0x01080460	Gi0/0/0/6.121	up	1518	4	6	GDP LDP L3P OWN
0x01080480	Gi0/0/0/6.122	up	1518	4	6	GDP LDP L3P OWN
0x010804a0	Gi0/0/0/6.123	up	1518	4	6	GDP LDP L3P OWN
0x010804c0	Gi0/0/0/6.124	up	1518	4	6	GDP LDP L3P OWN
0x010804e0	Gi0/0/0/6.125	up	1518	4	6	GDP LDP L3P OWN
0x01080500	Gi0/0/0/6.126	up	1518	4	6	GDP LDP L3P OWN
0x01080520	Gi0/0/0/6.127	up	1518	4	6	GDP LDP L3P OWN
0x01080540	Gi0/0/0/6.128	up	1518	4	6	GDP LDP L3P OWN
0x01080560	Gi0/0/0/6.129	up	1518	4	6	GDP LDP L3P OWN
0x01080580	Gi0/0/0/6.130	up	1518	4	6	GDP LDP L3P OWN
0x010805a0	Gi0/0/0/6.131	up	1518	4	6	GDP LDP L3P OWN
0x010805c0	Gi0/0/0/6.132	up	1518	4	6	GDP LDP L3P OWN
0x010805e0	Gi0/0/0/6.133	up	1518	4	6	GDP LDP L3P OWN
0x01080600	Gi0/0/0/6.134	up	1518	4	6	GDP LDP L3P OWN
0x01080620	Gi0/0/0/6.135	up	1518	4	6	GDP LDP L3P OWN
0x01080640	Gi0/0/0/6.136	up	1518	4	6	GDP LDP L3P OWN
0x01080660	Gi0/0/0/6.137	up	1518	4	6	GDP LDP L3P OWN
0x01080680	Gi0/0/0/6.138	up	1518	4	6	GDP LDP L3P OWN
0x010806a0	Gi0/0/0/6.139	up	1518	4	6	GDP LDP L3P OWN
0x010806c0	Gi0/0/0/6.140	up	1518	4	6	GDP LDP L3P OWN
0x010806e0	Gi0/0/0/6.141	up	1518	4	6	GDP LDP L3P OWN
0x01080700	Gi0/0/0/6.142	up	1518	4	6	GDP LDP L3P OWN
0x01080720	Gi0/0/0/6.143	up	1518	4	6	GDP LDP L3P OWN
0x01080740	Gi0/0/0/6.144	up	1518	4	6	GDP LDP L3P OWN
0x01080760	Gi0/0/0/6.145	up	1518	4	6	GDP LDP L3P OWN
0x01080780	Gi0/0/0/6.146	up	1518	4	6	GDP LDP L3P OWN
0x010807a0	Gi0/0/0/6.147	up	1518	4	6	GDP LDP L3P OWN
0x010807c0	Gi0/0/0/6.148	up	1518	4	6	GDP LDP L3P OWN
0x010807e0	Gi0/0/0/6.149	up	1518	4	6	GDP LDP L3P OWN
0x01080800	Gi0/0/0/6.150	up	1518	4	6	GDP LDP L3P OWN
0x01080820	Gi0/0/0/7.1	down	1518	2	5	GDP LDP L3P OWN
0x01080840	Gi0/0/0/7.2	down	1518	4	6	GDP LDP L3P OWN
0x01080860	Gi0/0/0/7.3	down	1518	3	4	GDP LDP L3P OWN
0x01080880	Gi0/0/0/7.4	down	1518	3	4	GDP LDP L3P OWN
0x010808a0	Gi0/0/0/7.5	down	1518	3	4	GDP LDP L3P OWN
0x010808c0	Gi0/0/0/7.6	down	1518	3	4	GDP LDP L3P OWN
0x010808e0	Gi0/0/0/7.7	down	1518	3	4	GDP LDP L3P OWN
0x01080900	Gi0/0/0/7.8	down	1518	3	4	GDP LDP L3P OWN
0x01080920	Gi0/0/0/7.9	down	1518	3	4	GDP LDP L3P OWN
0x01080940	Gi0/0/0/7.10	down	1518	3	4	GDP LDP L3P OWN
0x01080960	Gi0/0/0/7.11	down	1518	3	4	GDP LDP L3P OWN
0x01100020	Mg0/1/CPU1/0	N/A	-	0	0	GDP
0x01100040	FI0/1/CPU1	N/A	-	0	0	GDP
0x01180020	FI0/1/CPU0	N/A	-	0	0	GDP
0x01180040	Mg0/1/CPU0/0	N/A	-	0	0	GDP
0x01180030	Nu0	N/A	-	0	0	GDP
0x01180050	En0	N/A	-	2	2	GDP LDP
0x01180070	En6tunnel0	N/A	-	2	2	GDP LDP
0x01180090	Lo0	N/A	-	0	0	GDP
0x011800b0	Lo1	N/A	-	0	0	GDP
0x011800d0	Lo2	N/A	-	0	0	GDP
0x011800f0	Lo3	N/A	-	0	0	GDP
0x01180110	Lo5	N/A	-	0	0	GDP
0x01180130	Lo6	N/A	-	0	0	GDP
0x01180150	Lo7	N/A	-	0	0	GDP
0x01180170	BE102	N/A	-	0	0	GDP
0x01180190	BE1080	N/A	-	3	4	GDP LDP
0x011801b0	BE1083	N/A	-	3	4	GDP LDP
0x011801d0	BE1084	N/A	-	3	4	GDP LDP
0x011801f0	BE1085	N/A	-	5	12	GDP LDP
0x01180210	BE1085.1	N/A	-	4	6	GDP LDP
0x01180230	BE1085.102	N/A	-	4	7	GDP LDP

show imds interface brief

show imds interface brief

To display interface information for the interface manager distribution server (IMDS), use the **show imds interface brief** command in EXEC mode.

show imds interface brief

Syntax Description This command has no keywords or arguments.

Command Default No default behavior or values

Command Modes EXEC mode

Command History	Release	Modification
-----------------	---------	--------------

Release 2.0	This command was introduced.
-------------	------------------------------

Usage Guidelines Use the **show imds interface brief** command to display IMDS interface information. Use the command output to determine if the state, encapsulation being used, maximum transmission unit (MTU), and interface handle (ifhandle) for each interface are as expected.

Task ID	Task ID	Operations
	cisco-support	read

Examples The following example shows the output of the **show imds interface brief** command:

```
RP/0/RP0/CPU0:router show imds interface brief

IMDS BRIEF INTERFACE DATA (Node 0x201)
  handle      name      flags    state     mtu     encaps
  -----
0x00080000 FINT0/RP0/CPU0      0x0007 up       8000    91 (fint_base)
0x00080010 Null0                0x100ab up      1500    17 (null)
0x00080020 MgmtEth0/RP0/CPU0/0  0x1002f up      1514    30 (ether)
0x00080030 Loopback0            0x100ab up      1514    16 (loopback)
0x00080050 Bundle-POS24        0x104ab up      4474    14 (hdlc)
0x00080070 Bundle-Ether28        0x104ab up      1514    30 (ether)
0x00080090 Bundle-Ether28.1      0x10cab up      1500    107 (dot1q)
0x000800b0 Bundle-Ether28.2      0x10cab up      1500    107 (dot1q)
0x000800d0 Bundle-Ether28.3      0x10cab up      1500    107 (dot1q)
0x01180000 FINT0/1/CPU0        0x0007 up       8000    91 (fint_base)
0x01180020 GigabitEthernet0/1/5/0 0x1002f up      1514    30 (ether)
0x01180040 GigabitEthernet0/1/5/1 0x1002f up      1514    30 (ether)
0x01180060 GigabitEthernet0/1/5/2 0x1002f up      1514    30 (ether)
0x01180080 GigabitEthernet0/1/5/3 0x1002f admin-down 1514    30 (ether)
0x011800a0 GigabitEthernet0/1/5/4 0x1002f down     1514    30 (ether)
0x011800c0 GigabitEthernet0/1/5/5 0x1002f admin-down 1514    30 (ether)

.
.

0x01680480 SONET0/6/4/5          0x1006d up       10000   0 (Unknown)
```

0x016804a0	SonetPath0/6/4/5	0x10005	up	10000	0	(Unknown)
0x016804c0	POS0/6/4/5	0x1002f	up	4474	14	(hdlc)
0x016804e0	SONET0/6/4/6	0x1006d	up	10000	0	(Unknown)
0x01680500	SonetPath0/6/4/6	0x10005	up	10000	0	(Unknown)
0x01680520	POS0/6/4/6	0x1002f	up	4474	14	(hdlc)
0x01680540	SONET0/6/4/7	0x1006d	up	10000	0	(Unknown)
0x01680560	SonetPath0/6/4/7	0x10005	down	10000	0	(Unknown)
0x01680580	POS0/6/4/7	0x1002f	admin-down	4474	14	(hdlc)

This table describes the significant fields shown in the display.

Table 25: show imds interface brief Field Descriptions

Field	Description
name	Interface name.
state	Interface state.
mtu	MTU associated with the interface.
encap	Base encapsulation associated with the interface.

show netio chains

show netio chains

To display Network Input and Output (Netio) chains information for an interface, use the **show netio chains** command in EXEC mode.

show netio chains *interface-type* *interface-instance* [location** *node-id*]**

Syntax Description	<p><i>interface-type</i> Interface type. For more information, use the question mark (?) online help function.</p> <p><i>interface-instance</i> Either a physical interface instance or a virtual interface instance as follows:</p> <ul style="list-style-type: none"> Physical interface instance. Naming notation is <i>rack/slot/module/port</i> and a slash between values is required as part of the notation. <ul style="list-style-type: none"> <i>rack</i>: Chassis number of the rack. <i>slot</i>: Physical slot number of the modular services card or line card. <i>module</i>: Module number. A physical layer interface module (PLIM) is always 0. <i>port</i>: Physical port number of the interface. <p>Note In references to a Management Ethernet interface located on a route processor card, the physical slot number is alphanumeric (RP0 or RP1) and the module is CPU0. Example: interface MgmtEth0/RP1/CPU0/0.</p> <ul style="list-style-type: none"> Virtual interface instance. Number range varies depending on interface type. <p>For more information about the syntax for the router, use the question mark (?) online help function.</p>								
location <i>node-id</i>	(Optional) Displays Netio chains information for a specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.								
Command Default	No default behavior or values.								
Command Modes	EXEC mode								
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.8.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.9.0</td><td>No modifications.</td></tr> <tr> <td>Release 4.0.0</td><td>No modifications.</td></tr> </tbody> </table>	Release	Modification	Release 3.8.0	This command was introduced.	Release 3.9.0	No modifications.	Release 4.0.0	No modifications.
Release	Modification								
Release 3.8.0	This command was introduced.								
Release 3.9.0	No modifications.								
Release 4.0.0	No modifications.								
Usage Guidelines	No specific guidelines impact the use of this command.								

Task ID	Task ID	Operation
	cisco-support	read

Example

The following example shows the output of the **show netio chains** command:

```
RP/0/RP0/CPU0:router# show netio chains gigabitEthernet 0/4/0/1

GigabitEthernet0/4/0/1 (handle: 0x05000500, nodeid 0x40) netio chains:
-----
Base decap chain:
    ether_shim      <130> <0x79d99950, 0x0807bc84> <      0,      0>
    ether          <30> <0x79d7eb14, 0x08079318> <      0,      0>

Protocol chains:
-----
<Protocol number> (name)  Stats
    Type  Chain_node      <caps num> <function, context> <drop pkts, drop bytes>
<7> (arp)   Stats IN: 279 pkts, 16740 bytes; OUT: 279 pkts, 11718 bytes
        Encap:
            ether_shim      <130> <0x79d99858, 0x081c649c> <      0,      0>
            l2_adj_rewrite  <86> <0x7952437c, 0x081c5e4c> <      0,      0>
            txm_nopull     <60> <0x79516cd0, 0x0817cbd8> <      0,      0>
        Decap:
            arp           <24> <0x79a9ba14, 0x00000000> <      0,      0>
        Fixup:
            l2_adj_rewrite  <86> <0x795236c0, 0x081c5eb8> <      0,      0>
            txm_nopull     <60> <0x79516cd0, 0x0817cbd8> <      0,      0>
<12> (ipv4)   Stats IN: 0 pkts, 0 bytes; OUT: 48 pkts, 9578 bytes
        Encap:
            ipv4          <26> <0x79aa2004, 0x0816c204> <      0,      0>
            ether          <30> <0x79d7f634, 0x08079318> <      0,      0>
            ether_shim      <130> <0x79d99858, 0x081c0ebc> <      0,      0>
            l2_adj_rewrite  <86> <0x7952437c, 0x081c280c> <      0,      0>
            txm_nopull     <60> <0x79516cd0, 0x0817cbd8> <      0,      0>
        Decap:
            ipv4          <26> <0x79aa2054, 0x00000000> <      0,      0>
        Fixup:
            l2_adj_rewrite  <86> <0x795236c0, 0x081c2878> <      0,      0>
            txm_nopull     <60> <0x79516cd0, 0x0817cbd8> <      0,      0>
<13> (mpls)   Stats IN: 0 pkts, 0 bytes; OUT: 0 pkts, 0 bytes
        Encap:
            mpls          <25> <0x79bd5f7c, 0x00000000> <      0,      0>
            ether          <30> <0x79d7f634, 0x08079318> <      0,      0>
            ether_shim      <130> <0x79d99858, 0x081cf838> <      0,      0>
            l2_adj_rewrite  <86> <0x7952437c, 0x081cf52c> <      0,      0>
            txm_nopull     <60> <0x79516cd0, 0x0817cbd8> <      0,      0>
        Decap:
            mpls          <25> <0x79bd3130, 0x00000000> <      0,      0>
        Fixup:
            l2_adj_rewrite  <86> <0x795236c0, 0x081cf598> <      0,      0>
            txm_nopull     <60> <0x79516cd0, 0x0817cbd8> <      0,      0>
<22> (ether_sock) Stats IN: 0 pkts, 0 bytes; OUT: 0 pkts, 0 bytes
        Encap:
            ether_sock     <98> <0x79d80aac, 0x08079318> <      0,      0>
            ether_shim      <130> <0x79d99858, 0x0807bcfc> <      0,      0>
            l2_adj_rewrite  <86> <0x7952437c, 0x0807b9a4> <      0,      0>
            txm_nopull     <60> <0x79516cd0, 0x0817cbd8> <      0,      0>
```

show netio chains

```

Decap:
ether_sock <98> <0x79d80ca8, 0x08079318> < 0, 0>
Fixup:
l2_adj_rewrite <86> <0x795236c0, 0x0807ba10> < 0, 0>
txm_nopull <60> <0x79516cd0, 0x0817cbd8> < 0, 0>

Protocol SAFI counts:
-----
Protocol      SAFI      Pkts In      Bytes In      Pkts Out      Bytes Out
-----      -----
    ipv4      Unicast    24330016    233944        8412          41
    ipv4      Multicast     3240           60            0            0
    ipv4      Broadcast       0           0            0            0
    ipv6      Unicast       0           0            0            0
    ipv6      Multicast       0           0            0            0

Node drop accounting:
-----
No drops

```

Related Commands

Command	Description
show netio clients	Displays Netio clients information.
show netio db	Displays Netio database information.
show netio idb	Displays Netio IDB information.
show netio media registrations	Displays protocol registrations for media changes.
show netio subblock	Displays Netio subblock information.
show netio trace	Displays Netio trace data.

show netio clients

To display Network Input and Output (Netio) clients information, use the **show netio clients** command in EXEC mode.

show netio clients [location node-id]

Syntax Description	location node-id (Optional) Displays Netio clients information for a specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
---------------------------	---

Command Default	No default behavior or values.
------------------------	--------------------------------

Command Modes	EXEC mode
----------------------	-----------

Command History	Release	Modification
	Release 3.8.0	This command was introduced.
Release 3.9.0		No modifications.
	Release 4.0.0	No modifications.

Usage Guidelines	No specific guidelines impact the use of this command.
-------------------------	--

Task ID	Task ID	Operation
	cisco-support	read

The following example shows the output of the **show netio clients** command:

```
RP/0/RP0/CPU0:router# show netio clients location 0/3/2

XIPC: OutputQ [0:0]/[6000] HighOutputQ [0:18]/[2000] PuntbackQ [0:0]/[6000]
XIPC drops/total: OutputQ: 0/0 HighOutputQ: 0/15682677 PuntbackQ: 0/0
Counters (error/total): Output (0/15682677) Puntback (0/0) Jump (0/0)
```

ClientID	Input Drop/Total	Punt Drop/Total	XIPC InputQ Cur/High/Max	XIPC PuntQ Cur/High/Max
ipv6_icmp	0/0	0/0	0/0/1000	0/0/1000
icmp	0/0	0/0	0/0/1000	0/0/1000
clns	0/0	0/0	L 0/0/1000	0/0/0
			H 0/0/1000	
chdlc_socket	0/802651	0/0	0/2/1000	0/0/0
fr_socket	0/4454002	0/0	0/6/2000	0/0/0
pre_route	0/0	0/0	0/0/1024	0/0/1024
ipv6_io	0/0	0/0	0/0/1000	0/0/1000
ipv6_nd	0/0	0/0	0/0/1000	0/0/1000
l2snoop	0/0	0/0	0/0/1000	0/0/0
icmpv6_unreach_jump	0/0	0/0		

show netio clients

arp	0/0	0/0	0/0/1000	0/0/1000
ppp	0/10432525	0/0	0/17/1000	0/0/0
mpls_io	0/0	0/0	0/0/1000	0/0/1000
ipv4	0/0	0/0	0/0/1000	0/0/1000
ipv6	0/0	0/0	0/0/1000	0/0/1000

Key:

L = queue for lower priority packets
 H = queue for higher priority packets

Related Commands

Command	Description
show netio chains	Displays Netio chains information.
show netio db	Displays Netio database information.
show netio idb	Displays Netio IDB information.
show netio media registrations	Displays protocol registrations for media changes.
show netio subblock	Displays Netio subblock information.
show netio trace	Displays Netio trace data.

show netio db

To display Network Input and Output (Netio) database information for an interface, use the **show netio db** command in EXEC mode.

```
show netio db {caps | dll namedll-name | proto} [location node-id]
```

Syntax Description

caps	Displays the encapsulations in the Netio database.
dll	Displays the dlls loaded in the Netio database.
namedll-name	(Optional) Specifies a DLL name.
proto	Displays the protocol in the Netio database.
location node-id	(Optional) Displays Netio database information for a specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values.

Command Modes

EXEC mode

Command History

Release	Modification
Release 3.8.0	This command was introduced.
Release 3.9.0	No modifications.
Release 4.0.0	No modifications.

Usage Guidelines

No specific guidelines impact the use of this command.

Task ID

Task ID	Operation
cisco-support	read

The following example shows the output of the **show netio db** command.

```
RP/0/RP0/CPU0:router# show netio db caps location 0/1/0
```

Capsulation (ID)	Load Count	DLL Name	Refcount
chdlc(13)	1	libchdlc_netio.dll	3
hdlc(14)	2	libhdlc_netio.dll	3
clns(15)	2	libclns_netio.dll	2
ipv4_acl_in(22)	1	libipv4_netio_acl_filter.dll	2
ipv4_acl_out(23)	1	libipv4_netio_acl_filter.dll	2
arp(24)	1	libipv4_netio.dll	6
mpls(25)	22	libmpls_netio.dll	3
ipv4(26)	18	libipv4_netio.dll	6

show netio db

pim_enc(28)	2 libpim_encaps_netio.dll	1
pim_null(29)	5 libpim_null_netio.dll	1
ether(30)	2 libether_netio.dll	3
mpls_te(36)	32 libmpls_netio.dll	3
txm_nopull(60)	67 libsched_netio.dll	1
lpts(81)	2 liblpts_netio.dll	2
ipv6(82)	2 libipv6_netio.dll	5
l2_adj_rewrite(86)	67 libl2_adj_netio.dll	1
ipv6_preswitch(90)	1 libipv6_netio.dll	5
fint_base(91)	10 libfint_netio.dll	1
fint_n2n(92)	2 libfint_n2n.dll	2
ether_sock(98)	2 libether_netio.dll	3
ipv6_pfilter_in(102)	1 libipv6_netio_pfilter.dll	2
ipv6_pfilter_out(103)	1 libipv6_netio_pfilter.dll	2
netio_debug(110)	1 libnetio_debugnode.dll	1
ipv4_preroute(115)	2 libipv4_netio.dll	6
fint_l2transport(125)	2 libl2fib_netio.dll	2
ipv6_preroute(128)	2 libipv6_netio.dll	5
ether_shim(130)	4 libether_shim_netio.dll	1
pos_shim(132)	3 libpos_shim_netio.dll	1
fint_caps_tp(134)	2 libfint_netio_tp.dll	2

Related Commands

Command	Description
show netio chains	Displays Netio chains information.
show netio clients	Displays Netio clients information.
show netio idb	Displays Netio IDB information.
show netio media registrations	Displays protocol registrations for media changes.
show netio subblock	Displays Netio subblock information.
show netio trace	Displays Netio trace data.

show netio idb

To display network input and output (Netio) interface descriptor block (IDB) information for an interface, use the **show netio idb** command in EXEC mode.

show netio idb {interface-type interface-instance} [location node-id]

Syntax Description	<p><i>interface-type</i> Interface type. For more information, use the question mark (?) online help function.</p> <p><i>interface-instance</i> Either a physical interface instance or a virtual interface instance as follows:</p> <ul style="list-style-type: none"> Physical interface instance. Naming notation is <i>rack/slot/module/port</i> and a slash between values is required as part of the notation. <ul style="list-style-type: none"> <i>rack</i>: Chassis number of the rack. <i>slot</i>: Physical slot number of the modular services card or line card. <i>module</i>: Module number. A physical layer interface module (PLIM) is always 0. <i>port</i>: Physical port number of the interface. <p>Note In references to a Management Ethernet interface located on a route processor card, the physical slot number is alphanumeric (RP0 or RP1) and the module is CPU0. Example: interface MgmtEth0/RP1/CPU0/0.</p> <ul style="list-style-type: none"> Virtual interface instance. Number range varies depending on interface type. <p>For more information about the syntax for the router, use the question mark (?) online help function.</p>										
location node-id	(Optional) Displays Netio IDB information for a specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.										
Command Default	No default behavior or values										
Command Modes	EXEC mode										
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> <tr> <td>Release 3.8.0</td> <td>Changed the <i>interface-type interface-instance</i> arguments to required ones.</td> </tr> <tr> <td>Release 3.9.0</td> <td>No modifications.</td> </tr> <tr> <td>Release 4.0.0</td> <td>No modifications.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.8.0	Changed the <i>interface-type interface-instance</i> arguments to required ones.	Release 3.9.0	No modifications.	Release 4.0.0	No modifications.
Release	Modification										
Release 2.0	This command was introduced.										
Release 3.8.0	Changed the <i>interface-type interface-instance</i> arguments to required ones.										
Release 3.9.0	No modifications.										
Release 4.0.0	No modifications.										
Usage Guidelines	Use the show netio idb command to display control plane information for the software switching path. The output provides useful statistics for determining software forwarding issues.										

show netio idb

Task ID	Task ID	Operations
	cisco-support	read

Examples

The following example shows the output of the **show netio idb** command:

```
RP/0/RP0/CPU0:router# show netio idb tenGigE 0/1/1/0 location 0/1/cpu0

TenGigE0/1/1/0 (handle: 0x01180020, nodeid:0x11) netio idb:
-----
name: TenGigE0_1_1_0
interface handle: 0x01180020
interface global index: 2
physical media type: 30
dchain ptr: <0x482ae8e0>
echain ptr: <0x482d791c>
fchain ptr: <0x482d79b8>
driver cookie: <0x4824ad58>
driver func: <0x4824ad44>
number of subinterfaces: 4096
subblock array size: 3
DSNCNF: 0x00000000
interface stats info:
    IN unknown proto pkts: 0
    IN unknown proto bytes: 0
    IN multicast pkts: 0
    OUT multicast pkts: 0
    IN broadcast pkts: 0
    OUT broadcast pkts: 0
    IN drop pkts: 0
    OUT drop pkts: 0
    IN errors pkts: 0
    OUT errors pkts: 0

Chains
-----
Base decap chain:
    ether <30> <0xfd7aef88, 0x48302824> < 0, 0>

Protocol chains:
-----
<Protocol number> (name) Stats
    Type Chain_node <caps num> <function, context> <drop pkts, drop bytes>
<7> (arp) Stats IN: 0 pkts, 0 bytes; OUT: 0 pkts, 0 bytes

    Encap:
        12_adj_rewrite <86> <0xfccec7a88, 0x4834fefec> < 0, 0>
        queue_fifo <56> <0xfcdda68, 0x482dbe4> < 0, 0>
        txm_nopull <60> <0xfcea2a5c, 0x482dc11c> < 0, 0>
    Decap:
        queue_fifo <56> <0xfcdda4c, 0x482dbe4> < 0, 0>
        arp <24> <0xfd1082cc, 0x00000000> < 0, 0>
    Fixup:
        12_adj_rewrite <86> <0xfccec745c, 0x00000000> < 0, 0>
        queue_fifo <56> <0xfcdda68, 0x482dbe4> < 0, 0>
        txm_nopull <60> <0xfcea2a5c, 0x482dc11c> < 0, 0>
<12> (ipv4) Stats IN: 0 pkts, 0 bytes; OUT: 0 pkts, 0 bytes
    Encap:
        ipv4 <26> <0xfd10f41c, 0x482d7724> < 0, 0>
        ether <30> <0xfd7aeb44, 0x48302824> < 0, 0>
        12_adj_rewrite <86> <0xfccec7a88, 0x4834f104> < 0, 0>
```

```

queue_fifo          <56> <0xfcdda68, 0x482dbe4> <      0,      0>
txm_nopull         <60> <0xfcea2a5c, 0x482dc11c> <      0,      0>
Decap:
queue_fifo          <56> <0xfcdda4c, 0x482dbe4> <      0,      0>
ipv4               <26> <0xfd10f474, 0x00000000> <      0,      0>
Fixup:
l2_adj_rewrite     <86> <0xfcec745c, 0x00000000> <      0,      0>
queue_fifo          <56> <0xfcdda68, 0x482dbe4> <      0,      0>
txm_nopull         <60> <0xfcea2a5c, 0x482dc11c> <      0,      0>
<22> (ether_sock) Stats IN: 0 pkts, 0 bytes; OUT: 0 pkts, 0 bytes
Encap:
ether_sock          <98> <0xfd7b1630, 0x48302824> <      0,      0>
l2_adj_rewrite     <86> <0xfcec7a88, 0x48304c1c> <      0,      0>
queue_fifo          <56> <0xfcdda68, 0x482dbe4> <      0,      0>
txm_nopull         <60> <0xfcea2a5c, 0x482dc11c> <      0,      0>
Decap:
queue_fifo          <56> <0xfcdda4c, 0x482dbe4> <      0,      0>
ether_sock          <98> <0xfd7b1874, 0x48302824> <      0,      0>
Fixup:
l2_adj_rewrite     <86> <0xfcec745c, 0x00000000> <      0,      0>
queue_fifo          <56> <0xfcdda68, 0x482dbe4> <      0,      0>
txm_nopull         <60> <0xfcea2a5c, 0x482dc11c> <      0,      0>

```

Protocol SAFI counts:

Protocol	SAFI	Pkts In	Bytes In	Pkts Out	Bytes Out
ipv4	Unicast	0	0	0	0
ipv4	Multicast	0	0	0	0
ipv4	Broadcast	0	0	0	0
ipv6	Unicast	0	0	0	0
ipv6	Multicast	0	0	0	0

This table describes the significant fields shown in the display.

Table 26: show netio idb Field Descriptions

Field	Description
name	Netio name associated with the interface.
interface handle	Value assigned to the interface by the netio for identification.
IN unknown proto pkts	Number of packets sent to netio that had an unknown protocol type.
IN unknown proto bytes	Number of bytes sent to netio that had an unknown protocol type.
IN multicast pkts	Number of ingress multicast packets for the interface.
OUT multicast pkts	Number of egress multicast packets for the interface.
IN broadcast pkts	Number of ingress broadcast packets for the interface.
OUT broadcast pkts	Number of egress broadcast packets for the interface.
IN drop pkts	Number of ingress dropped packets for the interface.
OUT drop pkts	Number of egress dropped packets for the interface.

show netio idb

Field	Description
IN errors pkts	Number of ingress errored packets for the interface.
OUT errors pkts	Number of egress errored packets for the interface.
Base decap chain	Lowest-level decap chain assigned to the interface.
Protocol chains	Layer 3 protocol chains assigned to the interface.
Type	Layer 3 protocol type.
drop pkts, drop bytes	Dropped packet and byte counters associated with the protocol.
Endcap	Processing steps in the encap chain.
Decap	Processing steps in the decap chain.
Fixup	Processing steps in the fixup chain.
Protocol SAFI counts	Unicast or multicast counts associated with the protocol.
Protocol	Protocol type.
SAFI	Secondary address family identifier type.
Pkts In	Number of packets in for the address family.
Bytes In	Number of bytes in for the address family.
Pkts Out	Number of packets out for the address family.
Bytes Out	Number of bytes out for the address family.

Related Commands

Command	Description
show netio chains	Displays Netio chains information.
show netio clients	Displays Netio clients information.
show netio db	Displays Netio database information.
show netio media registrations	Displays protocol registrations for media changes.
show netio subblock	Displays Netio subblock information.
show netio trace	Displays Netio trace data.

show netio media-registrations

To display Network Input and Output (Netio) protocol registrations for media changes, use the **show netio media-registrations** command in EXEC mode.

show netio media-registrations[location node-id]

Syntax Description	location node-id (Optional) Displays Netio protocol registrations for media changes for a specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.								
Command Default	No default behavior or values.								
Command Modes	EXEC mode								
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.8.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.9.0</td><td>No modifications.</td></tr> <tr> <td>Release 4.0.0</td><td>No modifications.</td></tr> </tbody> </table>	Release	Modification	Release 3.8.0	This command was introduced.	Release 3.9.0	No modifications.	Release 4.0.0	No modifications.
Release	Modification								
Release 3.8.0	This command was introduced.								
Release 3.9.0	No modifications.								
Release 4.0.0	No modifications.								
Usage Guidelines	No specific guidelines impact the use of this command.								

Task ID	Task ID	Operation
cisco-support	read	

The following example shows the output of the **show netio media-registrations** command:

```
RP/0/RP0/CPU0:router# show netio media-registrations location 0/2/0

Registrations by L3 for media (change/upgrade) changes
L3 Protocol      Callback      L2 Media
-----
clns            0x795f978c  atm_mux_vc
                  atm_nlpid_vc
                  atm_snap_vc
                  atm_sub
                  dot1q
                  ether
                  fint_base
                  fr_sub_base
                  fr_vc_base
                  hdlc
                  srp
ipv4           0x79af58e8  atm_mux_vc
                  atm_nlpid_vc
                  atm_snap_vc
                  atm_sub
```

show netio media-registrations

```

dot1q
ether
fint_base
fr_sub_base
fr_vc_base
hdlc
srp
ipv6          0x796a45e8 atm_mux_vc
                  atm_npid_vc
                  atm_snap_vc
                  atm_sub
                  dot1q
                  ether
                  fint_base
                  fr
                  hdlc
                  srp
mpls          0x79c66d14 atm_npid_vc
                  atm_snap_vc
                  atm_sub
                  dot1q
                  ether
                  fint_base
                  hdlc
                  ppp
                  srp
lpts           0x79563174 fint_base
ipv6_preroute 0x796a456c fint_base

```

Related Commands

Command	Description
show netio chains	Displays Netio chains information.
show netio clients	Displays Netio clients information.
show netio db	Displays Netio database information.
show netio idb	Displays Netio IDB information.
show netio subblock	Displays Netio subblock information.
show netio trace	Displays Netio trace data.

show netio subblock

To display Network Input and Output (Netio) subblock information, use the **show netio subblock** command in EXEC mode.

show netio subblock {idb {interface-typeinterface-instance} | registrations } [location node-id]

Syntax Description	<table border="0"> <tr> <td>idb</td><td>Displays subblock information for an interface.</td></tr> <tr> <td>registrations</td><td>Displays all the registered subblocks.</td></tr> <tr> <td><i>interface-type</i></td><td>Interface type. For more information, use the question mark (?) online help function.</td></tr> <tr> <td><i>interface-instance</i></td><td> <p>Either a physical interface instance or a virtual interface instance as follows:</p> <ul style="list-style-type: none"> • Physical interface instance. Naming notation is <i>rack/slot/module/port</i> and a slash between values is required as part of the notation. <ul style="list-style-type: none"> • <i>rack</i>: Chassis number of the rack. • <i>slot</i>: Physical slot number of the modular services card or line card. • <i>module</i>: Module number. A physical layer interface module (PLIM) is always 0. • <i>port</i>: Physical port number of the interface. <p>Note In references to a Management Ethernet interface located on a route processor card, the physical slot number is alphanumeric (RP0 or RP1) and the module is CPU0. Example: interface MgmtEth0/RP1/CPU0/0.</p> <ul style="list-style-type: none"> • Virtual interface instance. Number range varies depending on interface type. <p>For more information about the syntax for the router, use the question mark (?) online help function.</p> </td></tr> <tr> <td>location node-id</td><td>(Optional) Displays Netio subblock information for a specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.</td></tr> </table>	idb	Displays subblock information for an interface.	registrations	Displays all the registered subblocks.	<i>interface-type</i>	Interface type. For more information, use the question mark (?) online help function.	<i>interface-instance</i>	<p>Either a physical interface instance or a virtual interface instance as follows:</p> <ul style="list-style-type: none"> • Physical interface instance. Naming notation is <i>rack/slot/module/port</i> and a slash between values is required as part of the notation. <ul style="list-style-type: none"> • <i>rack</i>: Chassis number of the rack. • <i>slot</i>: Physical slot number of the modular services card or line card. • <i>module</i>: Module number. A physical layer interface module (PLIM) is always 0. • <i>port</i>: Physical port number of the interface. <p>Note In references to a Management Ethernet interface located on a route processor card, the physical slot number is alphanumeric (RP0 or RP1) and the module is CPU0. Example: interface MgmtEth0/RP1/CPU0/0.</p> <ul style="list-style-type: none"> • Virtual interface instance. Number range varies depending on interface type. <p>For more information about the syntax for the router, use the question mark (?) online help function.</p>	location node-id	(Optional) Displays Netio subblock information for a specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
idb	Displays subblock information for an interface.										
registrations	Displays all the registered subblocks.										
<i>interface-type</i>	Interface type. For more information, use the question mark (?) online help function.										
<i>interface-instance</i>	<p>Either a physical interface instance or a virtual interface instance as follows:</p> <ul style="list-style-type: none"> • Physical interface instance. Naming notation is <i>rack/slot/module/port</i> and a slash between values is required as part of the notation. <ul style="list-style-type: none"> • <i>rack</i>: Chassis number of the rack. • <i>slot</i>: Physical slot number of the modular services card or line card. • <i>module</i>: Module number. A physical layer interface module (PLIM) is always 0. • <i>port</i>: Physical port number of the interface. <p>Note In references to a Management Ethernet interface located on a route processor card, the physical slot number is alphanumeric (RP0 or RP1) and the module is CPU0. Example: interface MgmtEth0/RP1/CPU0/0.</p> <ul style="list-style-type: none"> • Virtual interface instance. Number range varies depending on interface type. <p>For more information about the syntax for the router, use the question mark (?) online help function.</p>										
location node-id	(Optional) Displays Netio subblock information for a specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.										
Command Default	No default behavior or values.										
Command Modes	EXEC mode										

show netio subblock

Command History	Release	Modification
	Release 3.8.0	This command was introduced.
	Release 3.9.0	No modifications.
	Release 4.0.0	No modifications.

Usage Guidelines No specific guidelines impact the use of this command.

Task ID	Task ID	Operation
	cisco-support	read

The following example shows the output of the **show netio subblock** command:

```
RP/0/RP0/CPU0:router# show netio subblock registrations location 0/2/2

Feature Name      Subblock List   Destroy Func          Handle
<subblock addr> <intf handle> <intf name>        <refcnt>
-----  -----  -----  -----
ipv6-switch       0x0811cbfc  0x796ae090          1
<0x0806a6b0> <0x03000100> <FINTO_2_CPU0>      > < 3>
ether-caps        0x08198ba0  0x79f350b4          2
<0x0807aa44> <0x03000600> <FastEthernet0_2_2_0>  > < 3>
<0x0807aa88> <0x03000700> <FastEthernet0_2_2_1>  > < 3>
<0x0807aacc> <0x03000800> <FastEthernet0_2_2_2>  > < 3>
<0x081c2758> <0x03000900> <FastEthernet0_2_2_3>  > < 3>
<0x081c279c> <0x03000a00> <FastEthernet0_2_2_4>  > < 3>
<0x081c27e0> <0x03000b00> <FastEthernet0_2_2_5>  > < 3>
<0x081c2824> <0x03000c00> <FastEthernet0_2_2_6>  > < 3>
<0x081c2868> <0x03000d00> <FastEthernet0_2_2_7>  > < 4>
fr_control_vc_base_caps 0x081bdf6c  0x7a0209c8          3
<0x081c2978> <0x03001a00> <POS0_2_0_0_0_vc_0> > < 2>
<0x081c29bc> <0x03001b00> <POS0_2_0_1_0_vc_0> > < 2>
<0x081c2a00> <0x03001c00> <POS0_2_0_0_0_vc_1023> > < 2>
<0x081c2a44> <0x03001d00> <POS0_2_0_1_0_vc_1023> > < 2>
fr_vc_base_caps    0x08206424  0x7a020890          4
<0x081c2a88> <0x03001e00> <POS0_2_0_0_1>        > < 2>
<0x081c2acc> <0x03001f00> <POS0_2_0_1_1>        > < 2>
```

Related Commands	Command	Description
	show netio chains	Displays Netio chains information.
	show netio clients	Displays Netio clients information.
	show netio db	Displays Netio database information.
	show netio idb	Displays Netio IDB information.
	show netio media registrations	Displays protocol registrations for media changes.
	show netio trace	Displays Netio trace data.

show netio trace

To display Network Input and Output (Netio) trace information, use the **show netio trace** command in EXEC mode.

```
show netio trace {all | chains | control | dpc | error | interface | LC | packet}
[ {filehexdumplastlocationreversestatstailfuniqueverbosewrapping}]
```

Syntax Description	
all	Displays all Netio trace data
chains	Displays Netio chains trace data
control	Displays Netio control trace data
dpc	Displays Netio DPC trace data
error	Displays Netio error trace data
interface	Displays Netio interface trace data
LC	Displays Netio trace information for LC processes data
packet	Displays Netio packet drop error messages trace data
<i>file</i>	(Optional) A specific file name traces in hexadecimal
<i>hexdump</i>	(Optional) Display traces in hexadecimal
<i>last</i>	(Optional) Displays the last n entries
<i>location</i>	(Optional) Displays the card location
<i>reverse</i>	(Optional) Displays the latest traces first
<i>stats</i>	(Optional) Displays statistics
<i>tailf</i>	(Optional) Displays new traces as added
<i>unique</i>	(Optional) Displays unique entries with counts
<i>verbose</i>	(Optional) Displays internal debugging information

show netio trace

<i>wrapping</i>	(Optional) Displays wrapping entries								
Command Default	No default behavior or values.								
Command Modes	EXEC mode								
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.8.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.9.0</td><td>No modifications.</td></tr> <tr> <td>Release 4.0.0</td><td>No modifications.</td></tr> </tbody> </table>	Release	Modification	Release 3.8.0	This command was introduced.	Release 3.9.0	No modifications.	Release 4.0.0	No modifications.
Release	Modification								
Release 3.8.0	This command was introduced.								
Release 3.9.0	No modifications.								
Release 4.0.0	No modifications.								
Usage Guidelines	No specific guidelines impact the use of this command.								
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operation</th></tr> </thead> <tbody> <tr> <td>cisco-support</td><td>read</td></tr> </tbody> </table>	Task ID	Operation	cisco-support	read				
Task ID	Operation								
cisco-support	read								

The following example shows the output of the **show netio trace** command:

```
RP/0/RP0/CPU0:router# show netio trace chains stats location 0/0/CPU0

/net/node0_0_CPU0/dev/shmem/ltrace/netio/chains--- wrapping: inf Mbytes/sec for 1024 entries
361 wrapping entries (1024 possible, 0 filtered, 361 total)
Jan 11 15:04:14.695 netio/chains--- 0/0/CPU0 t1 Chains: update IDB chain, ifhandle
0x01000100, prot
o 0 (base), caps 91 (fint_base), op ADD, chain BD, data len 0
Jan 11 15:04:15.070 netio/chains--- 0/0/CPU0 t1 Chains: update IDB chain, ifhandle
0x01000100, prot
o 18 (lpts), caps 81 (lpts), op ADD, chain D, data len 4
Jan 11 15:04:16.265 netio/chains--- 0/0/CPU0 t1 Chains: update IDB chain, ifhandle
0x01000100, prot
o 18 (lpts), caps 86 (l2_adj_rewrite), op ADD, chain E, data len 0
Jan 11 15:04:16.274 netio/chains--- 0/0/CPU0 t1 Chains: update IDB chain, ifhandle
0x01000100, prot
o 18 (lpts), caps 60 (txm_nopull), op ADD, chain E, data len 0
Jan 11 15:04:16.542 netio/chains--- 0/0/CPU0 t1 Chains: update IDB chain, ifhandle
0x01000100, prot
o 18 (lpts), caps 86 (l2_adj_rewrite), op ADD, chain F, data len 0
Jan 11 15:04:16.542 netio/chains--- 0/0/CPU0 t1 Chains: update IDB chain, ifhandle
0x01000100, prot
o 18 (lpts), caps 60 (txm_nopull), op ADD, chain F, data len 0
Jan 11 15:04:16.542 netio/chains--- 0/0/CPU0 t1 Chains: update IDB chain, ifhandle
0x01000100, prot
o 18 (lpts), caps 91 (fint_base), op ADD, chain E, data len 0
Jan 11 15:04:16.542 netio/chains--- 0/0/CPU0 t1 Chains: update IDB chain, ifhandle
0x01000100, prot
o 18 (lpts), caps 81 (lpts), op ADD, chain E, data len 4
Jan 11 15:04:16.562 netio/chains--- 0/0/CPU0 t1 Chains: update IDB chain, ifhandle
0x01000100, prot
o 6 (fint_n2n), caps 92 (fint_n2n), op ADD, chain D, data len 0
Jan 11 15:04:16.646 netio/chains--- 0/0/CPU0 t1 Chains: update IDB chain, ifhandle
0x01000100, prot
o 6 (fint_n2n), caps 86 (l2_adj_rewrite), op ADD, chain E, data len 0
Jan 11 15:04:16.646 netio/chains--- 0/0/CPU0 t1 Chains: update IDB chain, ifhandle
```

```

0x01000100, prot
o 6 (fint_n2n), caps 60 (txm_nopull), op ADD, chain E, data len 0
Jan 11 15:04:16.646 netio/chains--- 0/0/CPU0 t1 Chains: update IDB chain, ifhandle
0x01000100, prot
o 6 (fint_n2n), caps 86 (l2_adj_rewrite), op ADD, chain F, data len 0
Jan 11 15:04:16.646 netio/chains--- 0/0/CPU0 t1 Chains: update IDB chain, ifhandle
0x01000100, prot
o 6 (fint_n2n), caps 60 (txm_nopull), op ADD, chain F, data len 0
Jan 11 15:04:16.646 netio/chains--- 0/0/CPU0 t1 Chains: update IDB chain, ifhandle
0x01000100, prot
o 6 (fint_n2n), caps 91 (fint_base), op ADD, chain E, data len 0
Jan 11 15:04:16.646 netio/chains--- 0/0/CPU0 t1 Chains: update IDB chain, ifhandle
0x01000100, prot
.
.
.
```

Command	Description
show netio chains	Displays Netio chains information.
show netio clients	Displays Netio clients information.
show netio db	Displays Netio database information.
show netio idb	Displays Netio IDB information.
show netio media registrations	Displays protocol registrations for media changes.
show netio subblock	Displays Netio subblock information.

show sysdb connections

show sysdb connections

To display the client connection information for the system database (SYSDB), use the **show sysdb connections** command in EXEC mode.

show sysdb connections [{detail | job | path | location | shared-plane}]

Syntax Description	detail (Optional) Displays the detailed client connection information. job job-id (Optional)Specify a Job ID. pathpath-filter (Optional) Specify a path filter. location node-id (Optional)Specify a location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. shared-plane (Optional) Displays the shared-plane data.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	Release Modification Release 2.0 This command was introduced.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>sysmgr</td> <td>read</td> </tr> <tr> <td>cisco-support</td> <td>read</td> </tr> </tbody> </table>	Task ID	Operations	sysmgr	read	cisco-support	read
Task ID	Operations						
sysmgr	read						
cisco-support	read						

Examples

The following example shows the output of the **show sysdb connections** command.

```
RP/0/RP0/CPU0:router# show sysdb connections detail location 0/1/CPU0

SysDB Connections:
  "/debug/node/11/LR/sysdb/client/"
  From:      shwin_svr (jid 76, nid 0/1/CPU0, tid 1)
  Connid:   00000001 Refcount: 0002 Options:  00000032
  Connected: Y In trans: N Verf susp: N
  Client connid: 00000000
  Connected at: Jul 14 19:31:47.304
  "/debug/node/11/LR/packet/"
  From:      packet (jid 218, nid 0/1/CPU0, tid 1)
  Connid:   00000002 Refcount: 0002 Options:  00000032
  Connected: Y In trans: N Verf susp: N
  Client connid: 00000000
  Connected at: Jul 14 19:31:47.305
```

```
"/debug/node/11/LR/cdm/qsm/"
From:      qsm (jid 246, nid 0/1/CPU0, tid 4)
Connid:    00000003 Refcount: 0002 Options:  00000032
Connected:   Y In trans:   N Verf susp:   N
Client connid: 00000000
Connected at: Jul 14 19:31:47.305
"/debug/node/11/LR/eem/"
From:      wdsysmon (jid 361, nid 0/1/CPU0, tid 5)
Connid:    00000005 Refcount: 0002 Options:  00000032
Connected:   Y In trans:   N Verf susp:   N
Client connid: 00000000
Connected at: Jul 14 19:31:47.316
"/debug/node/11/LR/sysmgr/"
From:      sysmgr (jid 79, nid 0/1/CPU0, tid 7)
Connid:    00000013 Refcount: 0002 Options:  00000032
...
...
```

show sysdb trace verification location

show sysdb trace verification location

To display trace verification information for the system database (SYSDB), use the **show sysdb trace verification location** command in EXEC mode.

show sysdb trace verification location *node-id*

Syntax Description	<i>node-id</i> Specific node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
Command Default	No default behavior or values				
Command Modes	EXEC mode				
Command History	<table> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				
Usage Guidelines	Use the show sysdb trace verification shared-plane location command to display details of recent verification sysDB transactions and changes on local plane configurations. The command output allows you to confirm that configuration were verified and accepted.				

Task ID	Task ID	Operations
	sysmgr	read
	cisco-support	read

Examples The following example shows the output of the **show sysdb trace verification shared-plane location** command. The output shows that changes to the SysDB local plane were verified and accepted.

```
RP/0/RP0/CPU0:router# show sysdb trace verification location 0/3/CPU0
Timestamp          jid      tid    reg handle connid      action
                  path
323 wrapping entries (4096 possible, 299 filtered, 622 total)
Jul  7 20:10:36.212    260      1     90      8782      apply reply
'--'
Jul  7 20:10:35.476    260      1     90      4912      Apply/abort called
'cfg/if/act/GigabitEthernet0_3_4_0.1/a/sub_vlan/0x2/_____/Gigab
itEthernet0_3_4_0/
'--'
Jul  7 20:10:35.475    260      1     90      4912      verify reply: accep
t
'--'
Jul  7 20:10:35.471    260      1     90      4912      Verify called
'cfg/if/act/GigabitEthernet0_3_4_0.1/a/sub_vlan/0x2/_____/Gigab
itEthernet0_3_4_0/
'--'
Jul  7 20:10:35.471    144      1      4      8782      apply reply
'--'
Jul  7 20:10:35.471    144      1      4      8782      apply reply
'--'
Jul  7 20:10:35.471    144      1      4      8782      apply reply
'--'
```

```

Jul  7 20:10:35.471      144      1      4      8782    apply reply
'--'
Jul  7 20:10:35.471      144      1      4      8782    apply reply
Jul  7 20:10:35.471      144      1      4      8782    apply reply
Jul  7 20:10:35.471      144      1      4      8782    apply reply
Jul  7 20:10:35.471      144      1      4      8782    apply reply
Jul  7 20:10:35.471      144      1      4      8782    apply reply
Jul  7 20:10:35.470      144      1      4      474     Apply/abort batch e
nded
Jul  7 20:10:35.470      144      1      4      474     Apply/abort called
'cfg/if/act/GigabitEthernet0_3_4_0/ord_x/im/shutdown'
Jul  7 20:10:35.470      144      1      4      474     Apply/abort called
'cfg/if/act/GigabitEthernet0_3_4_1/ord_x/im/shutdown'
Jul  7 20:10:35.470      144      1      4      474     Apply/abort called
'cfg/if/act/GigabitEthernet0_3_4_2/ord_x/im/shutdown'
Jul  7 20:10:35.470      144      1      4      474     Apply/abort called
'cfg/if/act/GigabitEthernet0_3_4_3/ord_x/im/shutdown'
Jul  7 20:10:35.470      144      1      4      474     Apply/abort called
'cfg/if/act/GigabitEthernet0_3_4_4/ord_x/im/shutdown'
Jul  7 20:10:35.469      144      1      4      474     Apply/abort called
'cfg/if/act/GigabitEthernet0_3_4_5/ord_x/im/shutdown'
Jul  7 20:10:35.469      144      1      4      474     Apply/abort called
'cfg/if/act/GigabitEthernet0_3_4_6/ord_x/im/shutdown'
Jul  7 20:10:35.469      144      1      4      474     Apply/abort called
'cfg/if/act/GigabitEthernet0_3_4_7/ord_x/im/shutdown'
Jul  7 20:10:35.469      144      1      4      474     Apply/abort batch s
tarted
'--'
Jul  7 20:10:35.469      144      1      4      474     verify reply: accep
t
'--'
Jul  7 20:10:35.469      144      1      4      474     verify reply: accep
t
'--'
Jul  7 20:10:35.469      144      1      4      474     verify reply: accep
t
!
!
!
```

This table describes the significant fields shown in the display.

Table 27: show sysdb trace verification location Field Descriptions

Field	Description
Timestamp	Time of the verification.
jid	Job identifier of the verification.
tid	Thread identifier.
reg handle	Registration handle.
connid	Connection identifier.
action	Action occurring between the sysDB server and client.
apply reply	SysDB notification that the client that an apply action has occurred.
Apply/abort called	SysDB notification for the client that an apply or process termination has been initiated.

show sysdb trace verification location

Field	Description
verify reply: accept	Verifier has accepted the verification request.

Related Commands

Command	Description
show sysdb connection path shared-plane	Displays system database client connection shared plane data for a specific path.

show sysdb trace verification shared-plane

To display trace verification information for the system database (SYSDB), use the **show sysdb trace verification shared-plane** command in EXEC mode.

```
show sysdb trace verification shared-plane [{file | hexdump | last | location | reverse | stats | tailf | unique | verbose | wrapping}]
```

Syntax Description

file	(Optional) Specifies the name of a file.
hexdump	(Optional) Displays the packet contents in hexadecimal format.
last	(Optional) Specifies the last number of packets in the queue to display.
location	(Optional) Displays the card location.
reverse	(Optional) Specifies the new traces as they are added.
stats	(Optional) Displays trace statistics information.
tailf	(Optional) Displays new traces as they are added.
unique	(Optional) Displays a list of unique entries with counts.
verbose	(Optional) Displays internal debugging information.
wrapping	(Optional) Displays wrapping entries of all trace information.

Command Default

No default behavior or values

Command Modes

EXEC mode

Command History

Release	Modification
Release 2.0	This command was introduced.
Release 3.8.0	All optional arguments were added with their descriptions.

Usage Guidelines

Use the **show sysdb trace verification shared-plane** command to display details of recent verification sysDB transactions and changes on the shared plane. The command output allows you to confirm whether the configuration was verified correctly.

Specifying a path using the **| include** keyword and *path* argument filters the data to display only the sysDB path for the router. Use the **describe** command to determine the path.

Task ID

Task ID	Operations
sysmgr	read
cisco-support	read

show sysdb trace verification shared-plane

Examples

The following example shows the output of the **show sysdb trace verification shared-plane** command. The output shows that changes to the SysDB shared plane were verified and accepted.

```
RP/0/RP0/CPU0:router# show sysdb trace verification shared-plane | include g1/a/hostname
May 18 19:16:17.143      340      3    210     962      Apply/abort called
          'cfg/g1/a/hostname'
May 18 19:16:17.132      340      3    210     962      Verify called
          'cfg/g1/a/hostname'
May 18 19:16:17.126      340      3    210     962      Apply/abort called
          'cfg/g1/a/hostname'
May 18 19:16:17.109      340      3    210     962      Verify called
          'cfg/g1/a/hostname'
May 18 18:43:16.065      340      3    210     962      register
          'cfg/g1/a/hostname'
May 18 18:41:41.048      340      3     16     362      register
          'cfg/g1/a/hostname'
```

This table describes the significant fields shown in the display.

Table 28: show sysdb trace verification shared-plane Field Descriptions

Field	Description
Apply/abort called	SysDB server has either applied or terminated the action requiring verification.
Verify called	Client has issued a verify request to the sysDB server.
register	Client has registered with sysDB server for verification.

Related Commands

Command	Description
show sysdb connection path shared-plane	Displays sysDB client connection shared plane data for a specific path.

show tbm hardware

To displays tree bitmap hardware-related information, use the **show tbm hardware** command in EXEC mode.

```
show tbm hardware {ipv4 | ipv6 | mpls | vpnv4 | table-id | afi-all | sw-only | dual | egress | ingress} {unicast | multicast | safi-all} {dual | egress | ingress | sw-only} {brief | detail | lookup | prefix} prefix-hex-string} location node-id
```

Syntax Description	
ipv4	Specifies IP Version 4 address prefixes.
ipv6	Specifies IP Version 6 address prefixes.
mpls	Specifies MPLS-related tree bitmap information.
vpnv4	Specifies VPNv4-related tree bitmap information.
table-id	Specifies tree bitmap information for a specific table ID.
afi-all	Specifies IPv4 and IPv6 commands.
sw-only	Specifies software-only tree bitmap information.
dual	Specifies tree bitmap information for dual, ingress, and egress, modes.
egress	Specifies egress tree bitmap information.
ingress	Specifies ingress tree bitmap information.
unicast	Specifies unicast address prefixes.
multicast	Specifies multicast address prefixes. This option is supported for IPv4 address families.
safi-all	For subaddress family, specifies prefixes for all subaddress families. This option is supported for IPv4 address families.
dual	Specifies ingress and egress tree bitmap information.
brief	Displays brief information.
detail	Displays detailed information.
lookup	Displays key or address information to look up (longest match) in the table.
prefix	Displays prefix-related information.
location node-id	Displays tree bitmap hardware-related information for a specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default No default behavior or values

Command Modes EXEC mode

show tbm hardware

Command History	Release	Modification
	Release 2.0	This command was introduced.
Usage Guidelines	Use the show tbm hardware command to display hardware-related ingress and egress information for the tree bitmap.	
Task ID	Task ID	Operations
	cisco-support	read

Examples

The following example shows the output of the **show tbm hardware** command:

```
RP/0/RP0/CPU0:router# show tbm hardware ipv4 unicast dual detail location 0/6/cpu0

TBM Table Type: IPv4 Unicast
-----
TBM: number of pulses: 71
TBM: number of Err fix attempts: 0
    No current failures
Past failures: leaf(0), mem(0), mipc(0), flush_mipc(0)
                post_compact(0), pre_compact(0)

PLU Bucket Statistics:
-----
Bucket 0: 44
Bucket 1: 44
Bucket 2: 327
Bucket 3: 44
Bucket 4: 44
Bucket 5: 43
Bucket 6: 43
Bucket 7: 45

Ingress PLU Info
-----
PLU: Num Writes : 3064
PLU: Num Copies : 2197

PLU Memory Channel Statistics:
-----
Number of compactions: 0
    FCRAM0 Chan:      110 (Pages: 5, 1% used)
    FCRAM1 Chan:      125 (Pages: 8, 0% used)
    FCRAM2 Chan:      127 (Pages: 8, 0% used)
    FCRAM3 Chan:      148 (Pages: 8, 0% used)
    FCRAM4 Chan:      124 (Pages: 8, 0% used)

Egress PLU Info
-----
PLU: Num Writes : 3064
PLU: Num Copies : 2197

PLU Memory Channel Statistics:
-----
Number of compactions: 0
    FCRAM0 Chan:      110 (Pages: 5, 1% used)
    FCRAM1 Chan:      125 (Pages: 8, 0% used)
```

FCRAM2 Chan:	127 (Pages: 8, 0% used)
FCRAM3 Chan:	148 (Pages: 8, 0% used)
FCRAM4 Chan:	124 (Pages: 8, 0% used)

This table describes the significant fields shown in the display.

Table 29: show tbm hardware Field Descriptions

Field	Description
Past failures	Number of times there was a failure in programming hardware.
PLU: Num Writes	Number of writes to the PLU portion of the hardware.
PLU: Num Copies	Number of copies to the PLU portion of the hardware.
PLU Memory Channel Statistics	Usage levels of each channel in the PLU memory.

show uidb data

show uidb data

To display index data information for the micro-interface descriptor block (uIDB), use the **show uidb data** command in EXEC mode.

show uidb data [shadow] [{ingress | egress}] [interface-type interface-instance] location node-id

Syntax Description	<p>shadow (Optional) Displays uIDB data from shadow copy Route Skill Mapping (RSM) instead of Metro HW.</p> <p>ingress (Optional) Displays ingress PSE-related information.</p> <p>egress (Optional) Displays egress PSE-related information.</p> <p>interface-type (Optional) Interface type. For more information, use the question mark (?) online help function.</p> <p>interface-instance Either a physical interface instance or a virtual interface instance as follows:</p> <ul style="list-style-type: none"> Physical interface instance. Naming notation is <i>rack/slot/module/port</i> and a slash between values is required as part of the notation. <ul style="list-style-type: none"> rack: Chassis number of the rack. slot: Physical slot number of the modular services card or line card. module: Module number. A physical layer interface module (PLIM) is always 0. port: Physical port number of the interface. <p>Note In references to a Management Ethernet interface located on a route processor card, the physical slot number is alphanumeric (RP0 or RP1) and the module is CPU0. Example: interface MgmtEth0/RP1/CPU0/0.</p> <ul style="list-style-type: none"> Virtual interface instance. Number range varies depending on interface type. <p>For more information about the syntax for the router, use the question mark (?) online help function.</p> <p>location node-id (Optional) Displays micro-IDB index data information for a specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.</p>						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> <tr> <td>Release 3.5.0</td> <td>Index and operation modes were not supported.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.5.0	Index and operation modes were not supported.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.5.0	Index and operation modes were not supported.						

Release	Modification
Release 3.7.0	The following keywords were added: <ul style="list-style-type: none">• shadow• ingress• egress

Usage Guidelines	Use the show uidb index command to display micro-IDB index data information including, from a software perspective, features that are enabled on a selected interface.
-------------------------	---

Task ID	Task ID	Operations
	cisco-support	read

Examples

```
RP/0/RP0/CPU0:router# show uidb data bundle-ether 1 location 0/1/cpu0
-----
Location = 0/1/CPU0
Ifname/Ifhandle = Bundle-Ether1 / 0x80070
Index = 15
Pse direction = INGRESS
=====
*      (Not programmed in hardware)      *
-----
RSM STATUS: 0x7c000000
-> used: 0x1f
->dirty: 0x00
->badck: 0x00
-> prog: DONE
->count: 0
-----
TUNNEL IFHANDLE: 0
L2 ENCAP: 3
=====

General 16 bytes:
-----
IFHANDLE: 0x8007
STATUS: 1
ISSU State: 0
IPV4 ENABLE: 0
IPV6 ENABLE: 0
MPLS ENABLE: 0
STATS POINTER: 0x7ff48
SPRAYER QUEUE: 46
IPV4 MULTICAST: 0
IPV6 MULTICAST: 0
USE TABLE ID IPV4: 0
USE TABLE ID IPV6: 0
USE TABLE ID MPLS: 0
TABLE ID: 0
QOS ENABLE: 0
QOS ID: 0
NETFLOW SAMPLING PERIOD: 0
L2 PKT DROP: 0
L2 QOS ENABLE: 0
BUNDLE IFHANDLE: 1
```

show uidb data

```

SRC FWDING: 0
*[CHECKSUM]*: 0x12ee9a

IPv4 and MPLS 16 bytes:
-----
IPV4 ICMP PUNT: 1
IPV4 NETFLOW SAMPLING ENABLE: 0
IPV4 BGP POLICY ACCOUNTING: 0
IPV4 BGP POLICY ACCOUNTING SRC: 0
IPV4 BGP POLICY ACCOUNTING DST: 0
IPV4 BGP POLICY ACCOUNTING STATS POINTER: 0x0
IPV4 QoS POLICY PROPAGATE VIA BGP (QPPB) SRC: Disabled (0)
IPV4 QoS POLICY PROPAGATE VIA BGP (QPPB) DST: Disabled (0)
IPV4 ACL COUNT: 0
IPV4 ACL ENABLE: 0
IPV4 ACL ID: 0
IPV4 ACL TTL PRESENT: 0
IPV4 ACL STATS INDEX: 0
IPV4 ACL ACCOUNTING DISABLED: 0
IPV4 RPF CHECK: 0
IPV4 RPF ALLOW SELF PING: 0
IPV4 RPF ALLOW DEFAULT: 0
IPV4 RPF STRICT: 0
IPV4 SRC LOOKUP NEEDED: 0
MPLS NETFLOW SAMPLING ENABLE: 0
IPV4 MPLS UIDB TLU EXTENSION: 0
TLU POINTER TO UTI HDR: 0
*[CHECKSUM]*: 0xfffff8000

IPv6 16 bytes:
-----
IPV6 ICMP PUNT: 1
IPV6 NETFLOW SAMPLING ENABLE: 0
IPV6 BGP POLICY ACCOUNTING: 0
IPV6 BGP POLICY ACCOUNTING SRC: 0
IPV6 BGP POLICY ACCOUNTING DST: 0
IPV6 BGP POLICY ACCOUNTING STATS POINTER: 0x0
IPV6 ACL COUNT: 0
IPV6 ACL ENABLE: 0
IPV6 ACL ID: 0
IPV6 ACL STATS INDEX: 0
IPV6 ACL ACCOUNTING DISABLED: 0
IPV6 MULTICAST BOUNDARY ACL: 0
IPV6 RPF CHECK: 0
IPV6 RPF ALLOW SELF PING: 0
IPV6 RPF ALLOW DEFAULT: 0
IPV6 RPF STRICT: 0
IPV6 SRC LOOKUP NEEDED: 0
IPV6 EFFECTIVE UIDB INDEX: 15
*[CHECKSUM]*: 0xfffffb000

IPv4 MCAST EXTN 16 bytes:
-----
INPUT IF PRI. IP: 0.0.0.0 (right shift 0)
INPUT IF SEC. IP: 0.0.0.0 (right shift 0)
INPUT EFFECTIVE UIDB INDEX: 15
BOUNDARY ACL: NO
*[CHECKSUM]*: 0xfffffffff1
-----
Location = 0/1/CPU0
Ifname/Ifhandle = Bundle-Ether1 / 0x80070
Index = 15
Pse direction = EGRESS
=====

```

```

*      (Not programmed in hardware)      *
-----
RSM STATUS: 0x7c000000
-> used: 0x1f
->dirty: 0x00
->badck: 0x00
-> prog: DONE
->count: 0
-----

TUNNEL IFHANDLE: 0
=====

General 16 bytes:
-----
IFHANDLE: 0x8007
STATUS: 1
LINE STATUS DOWN: 0
STATS POINTER: 0x7dbf1
USE TABLE ID IPV4: 0
USE TABLE ID IPV6: 0
USE TABLE ID MPLS: 0
TABLE ID: 0
L2 QOS ENABLE: 0
QOS ENABLE: 0
QOS ID: 0
NETFLOW SAMPLING PERIOD: 0
SE DATA SVI FLAG: 0
BUNDLE IFHANDLE: 1
*[CHECKSUM]*: 0x479df8f

IPv4 and MPLS 16 bytes:
-----
IPV4 ICMP PUNT: 1
IPV4 NETFLOW SAMPLING ENABLE: 0
IPV4 BGP POLICY ACCOUNTING: 0
IPV4 BGP POLICY ACCOUNTING SRC: 0
IPV4 BGP POLICY ACCOUNTING DST: 0
IPV4 BGP POLICY ACCOUNTING STATS POINTER: 0x0
IPV4 ACL COUNT: 0
IPV4 ACL ENABLE: 0
IPV4 ACL ID: 0
IPV4 ACL TTL PRESENT: 0
IPV4 ACL STATS INDEX: 0
IPV4 ACL ACCOUNTING DISABLED: 0
IPV4 FRR ACTIVE: 0
IPV4 MULTICAST BOUNDARY ACL: 0
IPV4 MULTICAST TTL: 0
MPLS NETFLOW SAMPLING ENABLE: 0
IPV4 MPLS UIDB TLU EXTENSION: 0
SRC MAC: 0000.0000.0000
UIDB_MPLS_ADJ_COUNTER: 0x0
UIDB_GRE_MPLS_ADJ_PTR: 0x0
*[CHECKSUM]*: 0xffff8000

IPv6 16 bytes:
-----
IPV6 ICMP PUNT: 1
IPV6 NETFLOW SAMPLING ENABLE: 0
IPV6 BGP POLICY ACCOUNTING: 0
IPV6 BGP POLICY ACCOUNTING SRC: 0
IPV6 BGP POLICY ACCOUNTING DST: 0
IPV6 BGP POLICY ACCOUNTING STATS POINTER: 0x0
IPV6 ACL COUNT: 0

```

show uidb data

```

IPV6 ACL ENABLE: 0
IPV6 ACL ID: 0
IPV6 ACL STATS INDEX: 0
IPV6 ACL ACCOUNTING DISABLED: 0
IPV6 MULTICAST BOUNDARY ACL: 0
IPV6 MULTICAST TTL: 0
SRC MAC: 0000.0000.0000
*[CHECKSUM]*: 0xfffff8000

IPV4 MCAST EXTN 16 bytes:
-----
MVPN TUNNEL MTU: 0
MVPN MASTER LC:
*[CHECKSUM]*: 0x0

```

The following example shows the output of the **show uidb data** command:

```

RP/0/RP0/CPU0:router# show uidb data shadow ingress gigabitEthernet 0/2/4/4 loc 0/2/CPU0
-----
Location = 0/2/CPU0
Ifname/Ifhandle = GigabitEthernet0_2_4_4 / 0x12800a0
Index = 5
Pse direction = INGRESS
=====
* (Not programmed in hardware) *
-----
RSM STATUS: 0x7c000000
-> used: 0x1f
->dirty: 0x00
->badck: 0x00
-> prog: DONE
->count: 0
-----
BUNDLE IFHANDLE: 0
TUNNEL IFHANDLE: 0
L2 ENCAP: 3
=====

General 16 bytes:
-----
IFHANDLE: 0x12800a
STATUS: 1
ISSU State: 0
IPV4 ENABLE: 1
IPV6 ENABLE: 1
MPLS ENABLE: 0
STATS POINTER: 0x7ffd8
SPRAYER QUEUE: 36
IPV4 MULTICAST: 0
IPV6 MULTICAST: 0
USE TABLE ID IPV4: 0
USE TABLE ID IPV6: 0
USE TABLE ID MPLS: 0
TABLE ID: 0
QOS ENABLE: 0
QOS ID: 0
NETFLOW SAMPLING PERIOD: 0
L2 PKT DROP: 0
L2 QOS ENABLE: 0
SRC FWDDING: 0
*[CHECKSUM]*: 0xff70f28c

```

This table describes the significant fields shown in the display.

Table 30: show uidb data Field Descriptions

Field	Description
Location	Node in system where the interface resides.
Ifname/Ifhandle	Name associated with the interface.
SPRAYER QUEUE LSB	Sprayer queue identifier.
ICMP PUNT FLAG	Flag indicating ICMP punts are enabled for the protocol.

The following example shows the output of the **show uidb data ingress loc 0/0/cpu0** command:

```
RP/0/RP0/CPU0:router# show uidb data ingress loc 0/0/cpu0
```

```
-----
Wed May 13 21:01:23.757 UTC
Location = 0/0/CPU0
Index = 0
Pse direction = INGRESS
=====
* (Not programmed in hardware) *
-----
RSM STATUS: 0x4000000
-> used: 0x01
->dirty: 0x00
->badck: 0x00
-> prog: DONE
->count: 0
-----
=====
Global 16 bytes:
-----
ROUTER_ID: 185.127.121.191
MINIMUM MASK DESTINATION: 0 / 0
MINIMUM MASK SOURCE: 0 / 0
BYTES OF SNIFF PACKET: 0
SUPPRESS PUNT ACL: 0
MPLS PROPAGATE TTL FLAG: 1
LOAD BALANCING HASH: 7 tuple(1)
PARITY: 0
FABRIC QOS ENABLE FLAG: 0
GLOBAL LI ENABLE FLAG: 0
GLOBAL FRR FLAG: 0
GLOBAL L2TPV3 BISCUIT FLAG: 1
P2MP L3FIB RESET: 0
*[CHECKSUM]*: 0x46804630
-----
```

Related Commands

Command	Description
show uidb trace, on page 186	Displays UIDB trace data debugging information that helps in troubleshooting the problem.
show uidb data-dump	Displays UIDB data information in hexadecimal format.

show uidb trace

show uidb trace

To display trace data information for the micro-interface descriptor block (IDB), use the **show uidb trace** command in EXEC mode.

```
show uidb trace {all | errors | events | init | rsm}[file file-name] [hexdump] [last entries] [reverse]
[stats] [tailf] [unique] [usec] [verbose] [wide] [wrapping] [location {node-id | all | mgmt-nodes}]
```

Syntax Description	
all	Displays all UIDB trace information.
errors	Displays information related to UIDB errors trace.
events	Displays information related to UIDB events trace.
init	Displays information related to UIDB init trace.
rsm	Displays information related to UIDB rsm trace.
file	(Optional) Displays a specific file.
<i>filename</i>	Name of a specific file.
hexdump	(Optional) Displays traces in hexadecimal format.
last	(Optional) Displays trace information for a specific number of entries
<i>entries</i>	Number of entries. Replace entries with the number of entries you want to display. For example, if you enter 5, the display shows the last 5 entries in the trace data. The range is from 1 to 65536.
reverse	(Optional) Displays the latest traces first.
stats	(Optional) Displays the statistics in the command output.
tailf	(Optional) Displays the new traces as they are added in the command output.
usec	(Optional) Displays timestamp w/usec detail.
wide	(Optional) Do not display buffer name, node name, and thread-id.
unique	(Optional) Displays the unique entries with counts in the command output.
verbose	(Optional) Displays the information for internal debugging in the command output.
wrapping	(Optional) Displays the wrapping entries in the command output.
location node-id	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
location all	(Optional) Specifies all locations.
location mgmt-nodes	(Optional) Specifies all management nodes.

Command Default	No default behavior or values				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>cisco-support</td> <td>read</td> </tr> </tbody> </table>	Task ID	Operations	cisco-support	read
Task ID	Operations				
cisco-support	read				

Examples The following example shows the sample output from the **show uidb trace** command:

```
RP/0/RP0/CPU0:router sh uidb trace init loc 0/6/CPU0
-----
28 wrapping entries (512 possible, 0 filtered, 28 total)
Mar 31 02:27:35.368 uidb_svr/initlog 0/6/CPU0 t1 Entering : Event manager init
Mar 31 02:27:36.641 uidb_svr/initlog 0/6/CPU0 t1 Successful : Event manager int
Mar 31 02:27:36.641 uidb_svr/initlog 0/6/CPU0 t1 Entering : Debug init
Mar 31 02:27:36.816 uidb_svr/initlog 0/6/CPU0 t1 Successful : Debug init
Mar 31 02:27:36.816 uidb_svr/initlog 0/6/CPU0 t1 Entering : MIPC bund
Mar 31 02:27:51.695 uidb_svr/initlog 0/6/CPU0 t1 Successful : MIPC bind
Mar 31 02:27:51.695 uidb_svr/initlog 0/6/CPU0 t1 PSE RSM : Init - main() : (50s
Mar 31 02:27:51.803 uidb_svr/initlog 0/6/CPU0 t1 Successful : PSE RSM Init sucd
Mar 31 02:27:51.803 uidb_svr/initlog 0/6/CPU0 t1 Entering : Metro bind
Mar 31 02:27:51.828 uidb_svr/initlog 0/6/CPU0 t1 Successful : Metro bind
Mar 31 02:27:51.828 uidb_svr/initlog 0/6/CPU0 t1 Entering : PLIM ASIC register
Mar 31 02:27:51.922 uidb_svr/initlog 0/6/CPU0 t1 Successful : PLIM ASIC registr
Mar 31 02:27:51.922 uidb_svr/initlog 0/6/CPU0 t1 Entering : UIDB checkpoint int
Mar 31 02:27:51.944 uidb_svr/initlog 0/6/CPU0 t1 Successful : UIDB checkpoint t
Mar 31 02:27:51.944 uidb_svr/initlog 0/6/CPU0 t1 Entering : UIDB shadow memoryt
Mar 31 02:27:51.944 uidb_svr/initlog 0/6/CPU0 t1 Successful : UIDB shadow memot
Mar 31 02:27:51.944 uidb_svr/initlog 0/6/CPU0 t1 Entering : UIDB EDM init
Mar 31 02:27:51.951 uidb_svr/initlog 0/6/CPU0 t1 Successful : UIDB EDM init
Mar 31 02:27:51.951 uidb_svr/initlog 0/6/CPU0 t1 Entering : Checkpoint ingresse
Mar 31 02:27:51.951 uidb_svr/initlog 0/6/CPU0 t1 Successful : Checkpoint ingree
Mar 31 02:27:51.951 uidb_svr/initlog 0/6/CPU0 t1 Entering : Checkpoint egress e
```

Mar 31 02:27:51.951 uidb_svr/initlog 0/6/CPU0 t1 Successful : Checkpoint egrce

Related Commands	Command	Description
	show uidb data, on page 180	Displays UIDB index data information.
	show uidb data-dump	Displays UIDB data information in hexadecimal format.

show uidb index

show uidb index

To display micro-interface descriptor block (IDB) index information, use the **show uidb index** command inEXEC mode.

show uidb index [interface-type interface-instance] location node-id

Syntax Description	<p><i>interface-type</i> (Optional) Interface type. For more information, use the question mark (?) online help function.</p> <p><i>interface-instance</i> Either a physical interface instance or a virtual interface instance as follows:</p> <ul style="list-style-type: none"> Physical interface instance. Naming notation is <i>rack/slot/module/port</i> and a slash between values is required as part of the notation. <ul style="list-style-type: none"> <i>rack</i>: Chassis number of the rack. <i>slot</i>: Physical slot number of the modular services card or line card. <i>module</i>: Module number. A physical layer interface module (PLIM) is always 0. <i>port</i>: Physical port number of the interface. <p>Note In references to a Management Ethernet interface located on a route processor card, the physical slot number is alphanumeric (RP0 or RP1) and the module is CPU0. Example: interface MgmtEth0/RP1/CPU0/0.</p> <ul style="list-style-type: none"> Virtual interface instance. Number range varies depending on interface type. <p>For more information about the syntax for the router, use the question mark (?) online help function.</p>				
location node-id	Displays UIDB index information for a specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
Command Default	No default behavior or values				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				
Usage Guidelines	Use the show uidb index command to display the micro-IDB index assigned by the software.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>cisco-support</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	cisco-support	read
Task ID	Operations				
cisco-support	read				

Examples

The following example shows the output of the **show uidb index** command:

```
RP/0/RP0/CPU0:router# show uidb index
```

Location	Interface-name	Interface-Type	Ingress-index	Egress-index
0/1/CPU0	0		0	0
0/1/CPU0	GigabitEthernet0_1_5_0	Main interface	1	
1				
0/1/CPU0	GigabitEthernet0_1_5_1	Main interface	2	
2				
0/1/CPU0	GigabitEthernet0_1_5_2	Main interface	3	
3				
0/1/CPU0	GigabitEthernet0_1_5_3	Main interface	4	
4				
0/1/CPU0	GigabitEthernet0_1_5_4	Main interface	5	
5				
0/1/CPU0	GigabitEthernet0_1_5_5	Main interface	6	
6				
0/1/CPU0	GigabitEthernet0_1_5_6	Main interface	7	
7				
0/1/CPU0	GigabitEthernet0_1_5_7	Main interface	8	
8				
0/1/CPU0	POS0_1_0_0	Main interface	9	9
0/1/CPU0	POS0_1_4_0	Main interface	10	10
0/1/CPU0	POS0_1_0_1	Main interface	11	11
0/1/CPU0	POS0_1_4_1	Main interface	12	12
0/1/CPU0	POS0_1_0_2	Main interface	13	13
0/1/CPU0	POS0_1_4_2	Main interface	14	14
0/1/CPU0	POS0_1_0_3	Main interface	15	15
0/1/CPU0	POS0_1_4_3	Main interface	16	16
0/1/CPU0	Bundle-POS24	Bundle Interface	17	17
0/1/CPU0	Bundle-Ether28	Bundle Interface18	18	
0/1/CPU0	Bundle-Ether28.1	Sub-interface	19	19
0/1/CPU0	Bundle-Ether28.2	Sub-interface	20	20
0/1/CPU0	Bundle-Ether28.3	Sub-interface	21	21
0/6/CPU0	0		0	0
0/6/CPU0	GigabitEthernet0_6_5_0	Main interface	1	
1				
0/6/CPU0	GigabitEthernet0_6_5_1	Main interface	2	
2				
0/6/CPU0	GigabitEthernet0_6_5_2	Main interface	3	
3				
0/6/CPU0	GigabitEthernet0_6_5_3	Main interface	4	
4				
0/6/CPU0	GigabitEthernet0_6_5_4	Main interface	5	
5				
0/6/CPU0	GigabitEthernet0_6_5_5	Main interface	6	
6				
0/6/CPU0	GigabitEthernet0_6_5_6	Main interface	7	
7				
0/6/CPU0	GigabitEthernet0_6_5_7	Main interface	8	
8				
0/6/CPU0	POS0_6_0_0	Main interface	9	9
0/6/CPU0	POS0_6_4_0	Main interface	10	10
0/6/CPU0	POS0_6_0_1	Main interface	11	11
0/6/CPU0	POS0_6_4_1	Main interface	12	12
0/6/CPU0	POS0_6_0_2	Main interface	13	13
0/6/CPU0	POS0_6_4_2	Main interface	14	14
0/6/CPU0	POS0_6_0_3	Main interface	15	15
0/6/CPU0	POS0_6_4_3	Main interface	16	16
0/6/CPU0	POS0_6_4_4	Main interface	17	17

show uidb index

0/6/CPU0 POS0_6_4_5	Main interface	18	18
0/6/CPU0 POS0_6_4_6	Main interface	19	19
0/6/CPU0 POS0_6_4_7	Main interface	20	20

This table describes the significant fields shown in the display.

Table 31: show uidb index Field Descriptions

Field	Description
Location	Node where index is located.
Interface-name	Name of the interface.
Interface-Type	Type of interface.
Ingress-index	Value associated with ingress processing on the interface.
Egress-index	Value associated with egress processing on the interface.

Related Commands

Command	Description
show uidb data, on page 180	Displays micro-interface descriptor block index data information.
show uidb data-dump	Displays micro-interface descriptor block data information in hexadecimal format.

watchdog threshold memory

To configure the value of memory available for each alarm threshold, use the **watchdog threshold memory** command in global configuration or interface configuration mode. To revert to the default threshold memory, use the **no** form of this command.

```
watchdog memory threshold [location node-id] minor percentage-memory-available severe
percentage-memory-available critical percentage-memory-available
no watchdog memory threshold [location node-id] minor percentage-memory-available severe
percentage-memory-available critical percentage-memory-available
```

Syntax Description	location node-id Configures the threshold memory for a specified node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
	minor Specifies the threshold for the minor state.
	percentage-memory-available Memory consumption percentage. Range is from 5 to 40.
	severe Specifies the threshold for the severe state.
	critical Specifies the threshold for the critical state.

Command Default None

Command Modes Global configuration
Interface configuration

Command History	Release	Modification
	Release 3.4.0	This command was introduced.

Usage Guidelines Use the **watchdog threshold memory** command to configure the memory thresholds. Threshold values can be applied to all nodes or a specific node using the **location node-id** keyword and argument. If the local threshold settings are removed, the local settings return to those set globally. In addition, you can view default and configured thresholds.

This table lists the recommended memory threshold value calculations if the minor threshold is set to 20 percent, the severe threshold is set to 10 percent, and the critical threshold is set to 5 percent.

Table 32: Recommended Memory Threshold Values

Total Available Memory (MB)	Minor Threshold (20 percent of available memory)	Severe Threshold (10 percent of available memory)	Critical Threshold (5 percent of available memory)
128	25.6	12.8	6.4
256	51.2	25.6	12.8
512	102.4	51.2	25.6

watchdog threshold memory


Total Available Memory (MB)	Minor Threshold (20 percent of available memory)	Severe Threshold (10 percent of available memory)	Critical Threshold (5 percent of available memory)
1024	204.8	102.4	51.2
2048	409.6	204.8	102.4
4096	819.2	409.6	204.8

Task ID	Task ID	Operations
cisco-support	read, write	

Examples

The following example shows how to configure the memory available for each alarm threshold:

```
RP/0/RP0/CPU0:router #configure
RP/0/RP0/CPU0:router(config)# watchdog threshold memory location 0/RP0/CPU0 minor 30 severe
20 critical 10
```

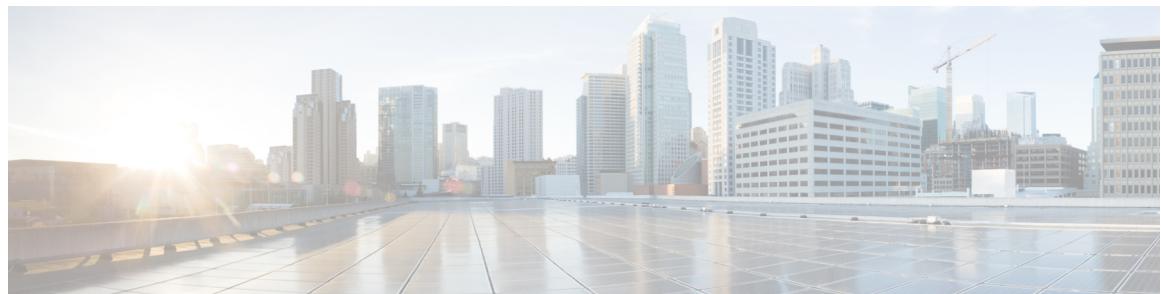

Fabric Management Commands

This module describes the Cisco IOS XR software commands used to monitor and control application-specific integrated circuit (ASIC) fabric queues for modular services cards .

To use commands of this module, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using any command, contact your AAA administrator for assistance.

- [clear controller fabric statistics, on page 195](#)
- [clear controller fabricq statistics, on page 196](#)
- [clear controller ingressq statistics, on page 198](#)
- [controllers fabric bundle port, on page 199](#)
- [controllers fabric plane oim, on page 200](#)
- [controllers fabric plane shutdown, on page 202](#)
- [controllers fabric rack, on page 203](#)
- [controllers fabric statistics collection, on page 204](#)
- [show controllers fabric bundle, on page 205](#)
- [show controllers fabric connectivity, on page 207](#)
- [show controllers fabric driver instance summary, on page 209](#)
- [show controllers fabric fgid resource, on page 211](#)
- [show controllers fabric fgid statistics, on page 213](#)
- [show controllers fabric fsdb-pla rack all, on page 216](#)
- [show controllers fabric link port, on page 218](#)
- [show controllers fabric plane, on page 221](#)
- [show controllers fabric rack all, on page 225](#)
- [show controllers fabric sfe, on page 226](#)
- [show controllers fabricq barriers, on page 228](#)
- [show controllers fabricq block, on page 230](#)
- [show controllers fabricq eio, on page 232](#)
- [show controllers fabricq fabric-backpressure, on page 234](#)
- [show controllers fabricq health, on page 237](#)
- [show controllers fabricq link-info, on page 239](#)
- [show controllers fabricq summary, on page 241](#)
- [show controllers fabricq queue, on page 243](#)
- [show controllers fabricq statistics, on page 245](#)
- [show controllers ingressq capacity, on page 248](#)

- [show controllers ingressq clients, on page 249](#)
- [show controllers ingressq eio, on page 250](#)
- [show controllers ingressq fabric, on page 252](#)
- [show controllers ingressq interfaces, on page 254](#)
- [show controllers ingressq queues, on page 256](#)
- [show controllers ingressq statistics, on page 258](#)
- [show controllers ingressq vports, on page 261](#)

clear controller fabric statistics

To clear fabric plane statistics from the counters information table, use the **clear controller fabric statistics** command in administration EXEC mode.

clear controller fabric statistics plane [{plane-id | all}]

Syntax Description	plane <i>plane-id</i> (Optional) The fabric plane and plane ID. Range is from 0 to 7.
---------------------------	--

all	(Optional) Specifies fabric statistics for all planes.
------------	--

Command Default	Information for all planes is cleared.
------------------------	--

Command Modes	EXEC mode
----------------------	-----------

Command History	Release Modification
------------------------	------------------------------------

Release 2.0	This command was introduced.
-------------	------------------------------

Usage Guidelines	The clear controller fabric statistics command clears the fabric statistics for the specified fabric plane or all planes.
-------------------------	--

Task ID	Task ID Operations
----------------	----------------------------------

root-system	read, write, execute
-------------	----------------------

fabric	read, write
--------	-------------

Examples	The following example shows how to clear all fabric plane statistics from the router:
-----------------	---

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# clear controller fabric statistics plane all
```

clear controller fabricq statistics

clear controller fabricq statistics

On linecards, RPs and DRPs, the fabricq ASICs receive the cells from the fabric planes and reassembles them into packets. To clear the statistics on fabricq ASICs, use the **clear controller fabricq statistics** command in EXEC mode.

clear controller fabricq statistics [instance *asic_instance*] [location *node-id*]

Syntax Description	instance <i>asic_instance</i> (Optional) Identifies the fabric queue instance whose ASIC statistics you want to clear. Range is from 0 to 3. location <i>node-id</i> (Optional) Identifies a node on which to clear ASIC statistics for a specific fabric queue, or for all fabric queues. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.						
Command Default	The default is to enter the clear controller fabricq statistics command without any optional keyword arguments to clear ASIC statistics for all fabric queues on the router.						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> <tr> <td>Release 3.6.0</td> <td>The <i>asic_instance</i> argument range of 1 to 3 was changed to 0 to 3.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.6.0	The <i>asic_instance</i> argument range of 1 to 3 was changed to 0 to 3.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.6.0	The <i>asic_instance</i> argument range of 1 to 3 was changed to 0 to 3.						
Usage Guidelines	<p>Only locations that contain a fabric queue ASIC can be specified for the location <i>node-id</i>.</p> <p>This command is intended for use while performing special maintenance, test, or debugging procedures. It should not be necessary to use this command when fabric connectivity is performing normally.</p>						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>root-system</td> <td>execute</td> </tr> <tr> <td>drivers</td> <td>read, write</td> </tr> </tbody> </table>	Task ID	Operations	root-system	execute	drivers	read, write
Task ID	Operations						
root-system	execute						
drivers	read, write						

Examples

The following example shows how to clear ASIC statistics on all fabric queues on the node located in 0/1/CPU0:

```
RP/0/RP0/CPU0:router# clear controller fabricq statistics location 0/1/CPU0
```

The following example shows how to clear ASIC statistics for a specific fabric queue on all nodes that are installed in the router:

```
RP/0/RP0/CPU0:router# clear controller fabricq statistics instance 2
```

The following example shows how to clear ASIC statistics for a specific fabric queue on a specific node:

```
RP/0/RP0/CPU0:router# clear controller fabricq statistics instance 2 location 0/1/CPU0
```

clear controller ingressq statistics

clear controller ingressq statistics

To clear application-specific integrated circuit (ASIC) statics from the ingress fabric queue on a specific node, or on all nodes installed in the router, use the **clear controller ingressq statistics** command in EXEC mode.

clear controller ingressq statistics location node-id

Syntax Description	location node-id Identifies the node whose ASIC statistics you want to clear from the ingress fabric queue. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.						
Command Default	Enter the clear controller ingressq statistics command without the optional location node-id keyword and argument to clear the ASIC statistics from the ingress queues on all nodes that are installed in the router.						
Command Modes	EXEC mode						
Command History	<table> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.6.0</td><td>The location node-id keyword and argument were changed from optional to required.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.6.0	The location node-id keyword and argument were changed from optional to required.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.6.0	The location node-id keyword and argument were changed from optional to required.						
Usage Guidelines	<p>Only locations that contain a fabric queue ASIC can be specified for the <i>node-id</i> argument.</p> <p>The clear controller ingressq statistics command is intended for use while performing special maintenance, test, or debugging procedures. You do not need to use this command when fabric connectivity is performing normally.</p>						
Task ID	<table> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	drivers	read, write		
Task ID	Operations						
drivers	read, write						
Examples	The following example shows how to use the clear controller ingressq statistics command to clear all ASIC statistics in the ingress fabric queue from the location 0/1/CPU0:						

```
RP/0/RP0/CPU0:router# clear controller ingressq statistics location 0/1/CPU0
```

Related Commands	Command	Description
	show controllers plim asic egress-channel bay	Displays statistical information for the ingress queue ASIC.

controllers fabric bundle port

To put a specific switch fabric bundle port into the shut down state, use the **controllers fabric bundle** command in Admin Configuration mode. To return the switch fabric bundle port to an up state, use the **no** form of this command.

```
controllers fabric bundle port port-id shutdown
no controllers fabric bundle port port-id shutdown
```

Syntax Description	<p>port-id Identifies the switch fabric bundle port you want to put into the shutdown state. The <i>port-id</i> argument is entered in the <i>rack/slot/module/port</i> notation.</p> <p>shutdown Puts the specified bundle port into a shutdown state.</p>												
Command Default	No default behavior or values												
Command Modes	Admin Configuration mode												
Command History	<table> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.5.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.6.0</td><td>No modification.</td></tr> <tr> <td>Release 3.7.0</td><td>No modification.</td></tr> <tr> <td>Release 3.8.0</td><td>No modification.</td></tr> <tr> <td>Release 3.9.0</td><td>No modification.</td></tr> </tbody> </table>	Release	Modification	Release 3.5.0	This command was introduced.	Release 3.6.0	No modification.	Release 3.7.0	No modification.	Release 3.8.0	No modification.	Release 3.9.0	No modification.
Release	Modification												
Release 3.5.0	This command was introduced.												
Release 3.6.0	No modification.												
Release 3.7.0	No modification.												
Release 3.8.0	No modification.												
Release 3.9.0	No modification.												
Usage Guidelines	No specific guidelines impact the use of this command.												
Task ID	<table> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>fabric</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	fabric	read, write								
Task ID	Operations												
fabric	read, write												

Examples The following example shows put a switch fabric bundle port into the shut down state:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(config)# configure
RP/0/RP0/CPU0:router(admin-config)# controllers fabric bundle port 0/1/CPU0/10 shutdown
```

controllers fabric plane oim

controllers fabric plane oim

To configure optical interface module (OIM) fabric plane properties, use the **controllers fabric plane** command in Admin Configuration mode. To return the OIM fabric plane properties to the default configuration, use the **no** form of this command.

```
controllers fabric plane plane-id oim {count {1|3} | width {1|2} | instance oim-instance location {node-id | all}}

no controllers fabric plane plane-id oim {count {1|3} | width {1|2} | instance oim-instance location {node-id | all}}
```

Syntax Description	<p>plane-id Identifies the fabric plane. Range is from 0 to 7.</p> <p>count {1 3} Configures the number of OIMs used in this plane. Enter 1 to configure all cables in the plane to connect to the same OIM. Enter 3 to configure the cables from each fabric card to connect to different OIMs.</p> <p>width {1 2} Width of OIMs in the current fabric plane. Enter 1 to indicate a single-width OIM that covers one slot only. Enter 2 to indicate a dual-width OIM that covers two slots.</p> <p>instance {oim-instance} Specifies the properties of a specific OIM. Range is from 0 to 2.</p> <p>location node-id Identifies the node whose OIM fabric plane properties you want to configure. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.</p> <p>location all Configures the OIM fabric plane properties on all nodes installed in the router.</p>						
Command Default	No default behavior or values						
Command Modes	Admin Configuration mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> <tr> <td>Release 3.3.0</td><td> <ul style="list-style-type: none"> The topology keyword was removed from the controllers fabric plane command syntax. The oim, count, width, and instance keywords were added to the controllers fabric plane command syntax. </td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.	Release 3.3.0	<ul style="list-style-type: none"> The topology keyword was removed from the controllers fabric plane command syntax. The oim, count, width, and instance keywords were added to the controllers fabric plane command syntax.
Release	Modification						
Release 2.0	This command was introduced.						
Release 3.3.0	<ul style="list-style-type: none"> The topology keyword was removed from the controllers fabric plane command syntax. The oim, count, width, and instance keywords were added to the controllers fabric plane command syntax. 						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>fabric</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	fabric	read, write		
Task ID	Operations						
fabric	read, write						

Examples

The following example shows how to configure all cables in the fabric plane to connect to the same OIM:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# configure
RP/0/RP0/CPU0:router(admin-config)# controllers fabric plane 3 oim count 1
```

controllers fabric plane shutdown

controllers fabric plane shutdown

To shut down the state of a fabric plane, use the **controllers fabric plane shutdown** command in Admin Configuration mode. To disable the state of a fabric plane, use the **no** form of this command.

controllers fabric plane *plane-id* shutdown

Syntax Description	<i>plane-id</i> Fabric plane identifier. Range is from 0 to 7.				
Command Default	The controller fabric plane is not shut down, and data continues to flow through the plane.				
Command Modes	Admin Configuration mode				
Command History	<table> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				
Usage Guidelines	Use the controllers fabric plane shutdown command to perform a graceful shutdown of the fabric plane before a fabric reconfiguration or fabric plane migration. This ensures that data is not flowing through the plane.				
Task ID	<table> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>fabric</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	fabric	read, write
Task ID	Operations				
fabric	read, write				
Examples	The following example shows fabric plane 3 being shut down:				

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# configure
RP/0/RP0/CPU0:router(admin-config)# controllers fabric plane 3 shutdown
```

controllers fabric rack

To put the rack into installation mode so that no traffic is sent over the switch fabric, use the **controllers fabric rack** command in Admin Configuration mode. To enable traffic to be sent over the switch fabric, use the **no** form of this command.

controllers fabric rack *rack_number* install-mode

Syntax Description

rack_number Rack number. Range is from 0 to 17.

install-mode Puts the specified rack into installation mode, so that no traffic is sent over the switch fabric.

Command Default

No default behavior or values

Command Modes

Admin Configuration mode

Command History

Release	Modification
Release 3.3.0	This command was introduced.

Usage Guidelines

No specific guidelines impact the use of this command.

Task ID

Task ID	Operations
fabric	read, write

Examples

The following example shows how to put the rack into installation mode so that no traffic is sent over the switch fabric:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(config)# configure
RP/0/RP0/CPU0:router(admin-config)# controllers fabric rack 1 install-mode
```

controllers fabric statistics collection

To enable the collection of fabric statistics data and configure the interval at which statistics are collected, use the **controllers fabric statistics collection** command in Admin Configuration mode. To return the system to the default interval setting, use the **no** form of this command.

controllers fabric statistics collection {control [refresh] | interval seconds}

Syntax Description	control Enables fabric statistics data collection. refresh (Optional) Causes the system to collect data immediately. interval seconds Specifies the interval, in seconds, between collection of data for fabric statistics. Range is from 10 to 180 seconds. Default is 30 seconds.				
Command Default	Control of fabric statistics data collection = enabled Interval= 30 seconds.				
Command Modes	Admin Configuration mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>fabric</td> <td>read, write</td> </tr> </tbody> </table>	Task ID	Operations	fabric	read, write
Task ID	Operations				
fabric	read, write				

Examples The following example shows statistic data collection on the fabric being disabled:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# configure
RP/0/RP0/CPU0:router(admin-config)# controllers fabric statistics collection control disable
```

show controllers fabric bundle

To display fabric card bundle information, use the **show controllers fabric bundle** command in Admin EXEC mode.

```
show controllers fabric bundle {node-id [{brief|detail}]|all [{brief|detail}]|port port-id [{brief|detail|statistics}]|summary}
```

Syntax Description	<p>node-id Identifies a node whose fabric bundle information you want to display. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.</p> <p>Follow the <i>node-id</i> argument with one of the following optional keywords to display the data a specific format:</p> <ul style="list-style-type: none"> brief (Optional) Displays brief information about the specified fabric bundle port or ports. This is the default. detail (Optional) Displays detailed information about the specified fabric bundle port or ports. all Displays bundle information for all fabric bundles. <p>Follow the all keyword with one of the following optional keywords to display the data in a specific format:</p> <ul style="list-style-type: none"> • brief—Displays brief information about the fabric bundles. • detail —Displays detailed information about the fabric bundles. <p>port port-id Identifies a port whose fabric bundle information you want to display. The <i>port-id</i> argument is entered in the <i>rack/slot/module/port</i> notation.</p> <p>Follow the <i>port-id</i> argument with one of the following optional keywords to display the data a specific format:</p> <ul style="list-style-type: none"> • brief—Displays brief information about the fabric bundle. • detail —Displays detailed information about the fabric bundle. • statistics —Displays fabric bundle statistics for the specified port. <p>statistics Displays fabric bundle statistics.</p> <p>summary Displays summarized fabric bundle information.</p>	
Command Default	Information is displayed for all fabric bundle ports on the router.	
Command Modes	Admin EXEC mode	
Command History	Release	Modification
	Release 3.3.0	This command was introduced.
Usage Guidelines	No specific guidelines impact the use of this command.	

show controllers fabric bundle

Task ID	Task Operations ID
	fabric read

Examples

The following is sample output from the **show controllers fabric bundle** command:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# show controllers fabric bundle ?

WORD      Bundle location <Rack>/<Slot>/<Module>/<Port#>
all       Show all fabric bundle ports.
port      Fabric bundle port option
summary   Show summary of bundle data
```

show controllers fabric connectivity

To display controller fabric connectivity information, use the **show controllers fabric connectivity** command in Admin EXEC mode.

show controllers fabric connectivity {all|node-id} [{brief | detail}]

Syntax Description

all	Specifies all controller fabric ports.
<i>node id</i>	Specifies the fabric port associated with the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
brief	(Optional) Specifies brief information about controller fabric connectivity. This is the default.
detail	(Optional) Specifies detailed information about controller fabric connectivity.

Command Default

Brief information about controller fabric connectivity is displayed.

Command Modes

Admin EXEC mode

Command History

Release Modification

Release 2.0 This command was introduced.

Usage Guidelines

Use the **show controllers fabric connectivity** command to monitor a modular services card as it sends data to the fabric or receives data from the fabric.

Task ID

Task Operations

ID

fabric read

Examples

The following is sample output from the **show controllers fabric connectivity** command that displays fabric connectivity information in brief form for all resources:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# show controllers fabric connectivity all brief

      Card      In  Tx Planes   Rx Planes   Monitored      Total
Percent
      R/S/M      Use 01234567  01234567  For (s)      Uptime (s)
      Uptime

-----
0/2/CPU0    1   .1.....   .1.....   20913        20913
100.0000
0/RP0/CPU0   1   .1.....   .1.....   20913        20913
```

show controllers fabric connectivity

The following is sample output from the **show controllers fabric connectivity** command that displays detailed fabric connectivity information for all resources:

```
RP/0/RP0/CPU0:router(admin) # show controllers fabric connectivity all
```

Card R/S/M	In Use	Tx Planes 01234567	Rx Planes 01234567	Monitored For (s)	Total Uptime (s)	Percent Uptime
0/1/CPU0	1	.1.....	.1.....	8561	8561	100.0000
0/2/CPU0	1	.1.....	.1.....	8561	8561	100.0000
0/RP1/CPU0	1	.1.....	.1.....	8561	8561	100.0000

The following is sample output from the **show controllers fabric connectivity** command that displays fabric connectivity information for the modular services card on node 0/0/CPU0:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router# show controller fabric connectivity 0/0/CPU0
```

Card R/S/M	In Use	Tx Planes 01234567	Rx Planes 01234567	Monitored For (s)	Total Uptime (s)	Percent Uptime
0/0/CPU0	1	.1.....	.1.....	8805	8805	100.0000

This table describes the significant fields shown in the display.

Table 33: show controllers fabric connectivity Field Descriptions

Field	Description
Card R/S/M	Identifies the fabric card, in the format <i>rack/slot/module</i> .
In Use	Indicates the number of fabric ports that are in use on the card.
Tx Planes	Indicates activity on the transmit fabric plane.
Rx Planes	Indicates activity on the receive fabric plane.
Monitored For (s)	Elapsed time in seconds since monitoring began.
Total Uptime	Total uptime expressed in seconds.
Percent Uptime	Percentage of time the card has been up since monitoring began.

show controllers fabric driver instance summary

To obtain information about a specific Switch Fabric Element (SFE) ASIC on a particular board, use the **show controllers fabric driver instance summary** command in Admin EXEC mode.

```
show controller fabric driver instance asic_instance {backpressure | block | link-info | summary}
location node-id
```

Syntax Description

instance asic_instance	Specifies ASIC instance. The range is from 0 to 4294967295.
backpressure	Displays detailed information for fabric back-pressure.
block	Displays detailed information for ASIC block.
link-info	Displays information for the ASIC transmit (Tx) and receiver (Rx) link port.
summary	Displays summarized information about all fabric queue ASICS in the system.
location node	Displays information for the fabric queue ASICS on a particular node. Note Use the show platform command to see a list of all nodes currently installed in your system.

Command Default

No default behavior or values

Command Modes

Admin EXEC mode

Command History

Release Modification

Release 3.2 This command was introduced.

Usage Guidelines

No specific guidelines impact the use of this command.

Task ID

Task Operations ID

fabric read

Examples

The following example shows how to obtain information about an SFE ASIC on a particular board from the router:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# show controllers fabric driver instance 5 summary location
0/SM0/SP
-----
s3/0/SM0/SP/1 Summary :
```

show controllers fabric driver instance summary

```
Node ID:0/SM0/SP

Chip ID : 0x2024E049      PLD Version : 0000001E
Top Interrupt Status : 0x00000000 Top Interrupt Enable : 0000003F
Oper Status : UP          Enable Status : ENABLE
```

show controllers fabric fgid resource

To display information about the fabric resources that are allocated to specific secure domain router (SDR) fabric group IDs (FGIDs), use the **show controllers fabric fgid resource** command in Admin EXEC mode.

```
show controllers fabric fgid resource {all | sdr Owner {all | application {CLI | GSP | LPTS} id fabric_fgid [elements number_of_fgids]}}
```

Syntax Description					
all	Displays FGID resource information for all SDRs on the current system.				
sdr Owner	Specifies the owner SDR.				
all all	Displays information for all resources allocated to the specified SDRs.				
application	Displays information for a specific resource allocated to the owner SDRs. Follow the sdr Owner application keywords with one of the following keywords to specify a particular resource application: <ul style="list-style-type: none"> • CLI • GSP • LPTS 				
CLI	Displays command-line interface (CLI) information for the owner SDR.				
GSP	Displays Gateway Service Protocol (GSP) information for the owner SDR.				
LPTS	Displays Local Packet Transport Services (LPTS) information for the owner SDR.				
id fabric_fgid	Fabric FGID whose SDR resource information you want to display. Replace with an FGID. Range is from 0 to 1000000				
elements number_of_fgids	(Optional) Number of fabric FGIDs to display in the command output. Replace the <i>number_of_fgids arguments</i> with the number of FGIDs to list in the command output. Range is from 1 through 1000000.				
Command Default	No default behavior or values				
Command Modes	Admin EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.4.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 3.4.0	This command was introduced.
Release	Modification				
Release 3.4.0	This command was introduced.				
Usage Guidelines	Use the show controllers fabric fgid resource command to verify the multicast resource ID for the fabric card multicast bit set.				

show controllers fabric fgid resource

Task ID	Task Operations ID
	fabric read

Examples

The following example shows sample output from the **show controllers fabric fgid resource** command. In this example, LPTS information is displayed for the SDR owner FGID 1000:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# show controllers fabric fgid resource sdr Owner application
lpts id 1000 elements 1
```

```
=====
Displaying FGID Info for:
SDR: Owner APPLICATION : LPTS
**** No FGID's allocated ****
RP/0/RP0/CPU0:P1_CRS-8(admin)#show controllers fabric fgid resource sdr Owner $
```

```
=====
Displaying FGID Info for:
SDR: Owner APPLICATION : LPTS
**** No FGID's allocated ****
```

The following example shows sample output from the **show controllers fabric fgid resource** command. In this example, fabric resource information is displayed for all SDRs in the system:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# show controllers fabric fgid resource all
```

```
=====
Displaying FGID Info for:
SDR: Owner APPLICATION : CLI
**** No FGID's allocated ****
```

```
=====
Displaying FGID Info for:
SDR: Owner APPLICATION : GSP
1024, 1025, 1026, 1027, 1028, 1029, 1030, 1031, 1032, 1033
1034, 1035, 1036, 1037, 1038, 1039, 1040, 1041, 1042, 1043
1044, 1045, 1046, 1047, 1048, 1049, 1050, 1051, 1052, 1053
1054, 1055, 1056, 1057, 1058, 1059, 1060, 1061, 1062, 1063
1064, 1065, 1066, 1067, 1068, 1069, 1070, 1071, 1072, 1073
1074, 1075, 1076, 1077, 1078, 1079, 1080, 1081, 1082, 1083
1084, 1085, 1086, 1087, 1088, 1089, 1090, 1091, 1092, 1093
1094, 1095, 1096, 1097, 1098, 1099, 1100, 1101, 1102, 1103
1104, 1105, 1106, 1107, 1108, 1109, 1110, 1111, 1112, 1113
1114, 1115, 1116, 1117, 1118, 1119, 1120, 1121, 1122, 1123
1124, 1125, 1126, 1127, 1128, 1129, 1130, 1131, 1132, 1133
1134, 1135, 1136, 1137, 1138, 1139, 1140, 1141, 1142, 1143
1144, 1145, 1146, 1147, 1148, 1149, 1150, 1151, 1152, 1153
1154, 1155, 1156, 1157, 1158, 1159, 1160, 1161, 1162, 1163
1164, 1165, 1166, 1167, 1168, 1169, 1170, 1171, 1172, 1173
```

show controllers fabric fgid statistics

To display resource statistical information for the fabric group ID (FGID), use the **show controllers fabric fgid statistics** command in Admin EXEC mode.

show controllers fabric fgid statistics {all | pool | sdr | system} [{brief | detail}]

Syntax Description	all Specifies all FGID resource statistical information for the logical router and FGID resource pools. sdr Specifies FGID resource statistics about the secure domain router (SDR). pool Specifies FGID statistical information about the resource pool. system Specifies FGID resource statistics for the entire physical router. brief (Optional) Specifies brief information about FGIDs. This is the default. detail (Optional) Specifies detailed information about FGIDs.
---------------------------	---

Command Default	Brief information is displayed.
------------------------	---------------------------------

Command Modes	Admin EXEC mode
----------------------	-----------------

Command History	Release	Modification
	Release 2.0	This command was introduced.

Usage Guidelines	Use the show controllers fabric fgid statistics command to monitor FGID resource usage based on a system, pool, or client view.
-------------------------	--

Task ID	Task ID	Operations
	fabric	read
	root-system	read, execute

Examples	The following is sample output from the show controllers fabric fgid statistics command that displays resource statistics for the fabric FGID in detailed form with all resources activated:
-----------------	---

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# show controllers fabric fgid statistics all detail

Fabric FGID Resource Statistics Information:

System wide Fabric multicast resource statistics:

    Total number of FGIDs in the system is 1000000
    Current number of InUse FGIDs in the system is 500
```

show controllers fabric fgid statistics

High Water Mark of InUse FGIDs in the system is 500

Per SDR basis Fabric multicast resource statistics:

Secure Domain Router Name is Owner
InUse FGIDs is 500
High Water Mark InUse FGIDs is 500

Per client basis FGID resource utilization:

	Appl Name	Appl ID	Pool ID	Current InUse FGIDs	HighWater Mark InUse FGIDs
	CLI	0	2	0	0
	LPTS	1	1	0	0
	GSP	2	0	500	500

Per Pool basis Fabric multicast resource statistics:

Pool Identifier is 0
Pool Name is GSP
Pool type is Dedicated
The starting FGID of this pool is 1024
Total FGIDs of this pool is 10240
InUse FGIDs of this pool is 500
High Water Mark InUse FGIDs of this pool is 500

Pool Identifier is 1
Pool Name is LPTS
Pool type is Dedicated
The starting FGID of this pool is 11264
Total FGIDs of this pool is 32768
InUse FGIDs of this pool is 0
High Water Mark InUse FGIDs of this pool is 0

Pool Identifier is 2
Pool Name is COMMON
Pool type is Shared
The starting FGID of this pool is 44032
Total FGIDs of this pool is 955968
InUse FGIDs of this pool is 0
High Water Mark InUse FGIDs of this pool is 0

This table describes the significant fields shown in the display.

Table 34: show controllers fabric fgid statistics Field Descriptions

Field	Description
Total number of FGIDs in the system	Total number of fabric FGIDs in the system.
Current number of Inused FGIDs in the system	Total number of fabric FGIDs in use in the system.
High Water Mark of Inused FGIDs in the system	Number of in-use fabric FGIDs at the highest point within the system.
Secure Domain Router Name	Name of the SDR.
Inused FGIDs	Inused (in-use) fabric FGID.

Field	Description
High Water Mark inused FGIDs	Number of inused (in-use) FGIDs since monitoring started.
Appl Name	Application name.
Appl ID	Application ID.
Pool ID	Pool ID.
Current InUsed FGIDs	Current number of inused (in-use) FGIDs.
Pool Identifier	Group pool identifier number.
Pool Name	Group pool name.
Pool type	Group pool type.
Total FGIDs of this pool	Number of FGIDs in the pool.
Inused FGIDs of this pool	Number of FGIDs inused (in-use) in the pool.
High Water Mark inused FGIDs of this pool	Number of FGIDs in the pool since the start of monitoring.

show controllers fabric fsdb-pla rack all

show controllers fabric fsdb-pla rack all

To display plane availability status information for all racks in the system, use the **show controllers fabric fsdb-pla rack all** command in Admin EXEC mode.

show controllers fabric fsdb-pla rack all

Syntax Description	rack Specifies the rack number. Range varies from 0-48.				
Command Default	No default behavior or values				
Command Modes	Admin EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.3.1</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.3.1	This command was introduced.
Release	Modification				
Release 3.3.1	This command was introduced.				
Usage Guidelines	Use the show controllers fabric fsdb-pla rack all command to verify line card connectivity to the fabric planes.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>fabric read</td><td></td></tr> </tbody> </table>	Task ID	Operations	fabric read	
Task ID	Operations				
fabric read					

Examples The following example shows sample output from the **show controllers fabric fsdb-pla rack all** command:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# show controllers fabric fsdb-pla rack all

Rack 0:
=====
          SrcGrp:0
          01234567
Multicast Mask      11111111
Unicast Mask        11111111

Destination       S3-Fabricq     Reachability Mask   Downloaded Mask
Address           Mask           SrcGrp:0         SrcGrp:0
                  01234567        01234567        01234567
-----
4 (0/1/CPU0)    11111111      11111111      11111111
5 (0/1/CPU0)    11111111      11111111      11111111
16 (0/4/CPU0)   11111111      11111111      11111111
17 (0/4/CPU1)   11111111      11111111      11111111
24 (0/6/CPU0)   11111111      11111111      11111111
25 (0/6/CPU0)   11111111      11111111      11111111
30 (0/RP0/CPU0) 11111111      11111111      11111111
```

```
31(0/RP1/CPU0)    11111111          11111111          11111111 :
```

show controllers fabric link port

show controllers fabric link port

To display link information for a specific fabric port, use the **show controllers fabric link port** command in Admin EXEC mode.

```
show controllers fabric link port {fabricqrx | ingressqtx | s1ro | s1rx | s1tx | s2rx | s2tx | s3rx | s3tx}
{port | all} [{brief | detail}]
```

Syntax Description

fabricqrx	Displays information for the fabric queue receive port.
ingressqtx	Displays information for the ingress queue transmit port.
s1ro	Displays information for the S1 Out-of-Band receive port. The out of band ports connect the fabric planes together so that the flow control information collected within a fabric plane is distributed across all fabric planes. This is essential in controlling fabric congestion and the congestion location within fabric.
s1rx	Displays information for the Stage 1 (S1) receive port. The S1 receive port distributes incoming traffic.
s1tx	Displays information for the Stage 1 (S1) transmit port. The S1 transmit port distributes outgoing traffic.
s2rx	Displays information for the Stage 2 (S2) receive port. The S2 receive port forwards incoming cells to Stage 3 (S3) port.
s2tx	Displays information for the Stage 2 (S2) transmit port. The S2 transmit port forwards outgoing cells to Stage 3 (S3) transmit port.
s3rx	Displays information about S3 receive port. The S3 receive port performs switching for incoming traffic.
s3tx	Displays information about S3 transmit port. The S3 receive port performs switching for outgoing traffic.
port	Specifies the port whose fabric link information you want to display. Replace the <i>port</i> argument with a port identifier. The <i>port</i> argument naming notation is in the <i>rack/slot/module/asic/port</i> format. Note A slash between values is required as part of the <i>port</i> naming notation.
all	Displays fabric link information for all specified ports.
brief	(Optional) Displays summarized fabric link information.
detail	(Optional) Specifies that the command output includes detailed fabric link information.

Command Default

Enter the **show controllers fabric link port** command without specifying any of the optional parameters to display summarized fabric link information. This is the same information that is displayed when you include the **brief** option in the **show controllers fabric link port** command string.

Command Modes	Admin EXEC mode	
Command History	Release	Modification
	Release 3.2	This command was introduced.
Usage Guidelines	Use the show controllers fabric link port command to check the health of fabric internal connections.	
Task ID	Task ID	
	fabric read	

Examples

The following example shows partial sample output from the **show controllers fabric link port** command for all S1R0 ports in the system:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# show controllers fabric link port s1ro all

Flags: P - plane admin down, p - plane oper down
C - card admin down, c - card oper down
L - link port admin down, l - linkport oper down
A - asic admin down, a - asic oper down
B - bundle port admin Down, b - bundle port oper down
I - bundle admin down, i - bundle oper down
N - node admin down, n - node down
o - other end of link down d - data down
f - failed component downstream
m - plane multicast down
Sfe Port Admin Oper Down Other Near-end Far-end
R/S/M/A/P State State Flags End Bport Bport
-----
0/SM0/SP/0/0 UP UP 0/SM0/SP/1/15
0/SM0/SP/0/1 UP UP 0/SM1/SP/0/33
0/SM0/SP/0/2 UP UP 0/SM1/SP/1/33
0/SM0/SP/0/3 UP UP 0/SM2/SP/0/33
0/SM0/SP/0/4 UP UP 0/SM2/SP/1/33
0/SM0/SP/0/5 UP UP 0/SM3/SP/0/33
0/SM0/SP/0/6 UP UP 0/SM3/SP/1/33
0/SM0/SP/1/0 UP UP 0/SM0/SP/0/15
0/SM0/SP/1/1 UP DOWN 1 Unused
0/SM0/SP/1/2 UP UP Unused
0/SM0/SP/1/3 UP DOWN 1 Unused
0/SM0/SP/1/4 UP DOWN 1 Unused
0/SM0/SP/1/5 UP DOWN 1 Unused
0/SM0/SP/1/6 UP DOWN 1 Unused
0/SM1/SP/0/0 UP UP 0/SM1/SP/1/15
0/SM1/SP/0/1 UP UP 0/SM0/SP/0/33
0/SM1/SP/0/2 UP UP 0/SM0/SP/1/33
0/SM1/SP/0/3 UP UP 0/SM2/SP/0/51
--More--
```

The following example shows partial sample output from the **show controllers fabric link port** command with the **detail** keyword included in the command string:

show controllers fabric link port

```

RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# show controllers fabric link port fabricqrx all detail

Flags: P - plane admin down, p - plane oper down
C - card admin down, c - card oper down
L - link port admin down, l - linkport oper down
A - asic admin down, a - asic oper down
B - bundle port admin Down, b - bundle port oper down
I - bundle admin down, i - bundle oper down
N - node admin down, n - node down
o - other end of link down d - data down
f - failed component downstream
m - plane multicast down

Sfe Port Admin Oper Down Sfe BP Port BP Other
R/S/M/A/P State State Flags Role Role End
-----
0/1/CPU0/0/0 UP UP A A 0/SM0/SP/0/15
-----
Link Type Pin1 Name Pin2 Name
-----
CHASSIS G5 A4

Sfe Port Admin Oper Down Sfe BP Port BP Other
R/S/M/A/P State State Flags Role Role End
-----
0/1/CPU0/0/1 UP UP A B 0/SM0/SP/0/39
-----
Link Type Pin1 Name Pin2 Name
-----
CHASSIS G19 A34

Sfe Port Admin Oper Down Sfe BP Port BP Other
R/S/M/A/P State State Flags Role Role End
-----
0/1/CPU0/0/2 UP UP A A 0/SM0/SP/0/14
--More--

```

show controllers fabric plane

To display system fabric plane information, use the **show controllers fabric plane** command in Admin EXEC mode.

```
show controllers fabric plane {plane-id | all} [statistics] [{brief | detail}]
```

Syntax Description

plane-id Plane number. Range is from 0 to 7.

all Specifies that all information about system fabric planes is displayed.

statistics (Optional) Specifies statistical information for cell activity within the plane.

brief (Optional) Specifies brief information about the system fabric plane. This is the default.

detail (Optional) Specifies detailed information about the system fabric plane.

Command Default

Brief information is displayed

Command Modes

Admin EXEC mode

Command History

Release Modification

Release 2.0 This command was introduced.

Usage Guidelines

Use the **show controllers fabric plane** command to monitor the fabric plane status, and the cell traffic and error statistics to or from the fabric plane.

Task ID

Task ID Operations

root-system read,
write

Examples

The following is sample output from the **show controllers fabric plane** command that displays system fabric plane information from all fabric planes:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# show controllers fabric plane all

Plane Admin Oper Down Total Down
Id State State Flags Bundles Bundles
-----
0 UP DOWN p 0 0
1 UP UP 0 0
2 UP DOWN p 0 0
3 UP DOWN p 0 0
4 UP DOWN p 0 0
5 UP DOWN p 0 0
6 UP DOWN p 0 0
```

show controllers fabric plane

7	UP	DOWN	p	0	0
---	----	------	---	---	---

The following is sample output from the **show controllers fabric plane** command that displays system fabric plane statistics from fabric plane 1 in brief form:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# show controllers fabric plane 1 statistics brief

          In          Out        CE        UCE        PE
Plane    Cells    Cells    Cells    Cells    Cells
-----
```

Plane	In Cells	Out Cells	CE Cells	UCE Cells	PE Cells
1	0	0	0	0	0

The following is sample output from the **show controllers fabric plane** command that displays system fabric plane statistics from fabric plane 1 in detailed form:

```
RP/0/RP0/CPU0:router(admin)# show controllers fabric plane 1 statistics detail

The fabric plane number is 1
  Total number of providers for the statistics: 0
  Total received data cells: 0
  Total transmitted data cells: 0
  Total received correctable errored cells: 0
  Total received uncorrectable errored cells: 0
  Total received parity error cells: 0
  Total unicast lost cells: 0
  Total multicast lost cells: 0
  Last clearing of "show controller fabric plane" counters never
```

The following is sample output from the **show controllers fabric plane** command that displays system fabric plane statistics from the fabric for all planes in detailed form:

```
RP/0/RP0/CPU0:router(admin)# show controllers fabric plane all statistics detail

The fabric plane number is 0
  Total number of providers for the statistics: 0
  Total received data cells: 0
  Total transmitted data cells: 0
  Total received correctable errored cells: 0
  Total received uncorrectable errored cells: 0
  Total received parity error cells: 0
  Total unicast lost cells: 0
  Total multicast lost cells: 0
  Last clearing of "show controller fabric plane" counters never

The fabric plane number is 1
  Total number of providers for the statistics: 0
  Total received data cells: 0
  Total transmitted data cells: 0
  Total received correctable errored cells: 0
  Total received uncorrectable errored cells: 0
  Total received parity error cells: 0
  Total unicast lost cells: 0
  Total multicast lost cells: 0
  Last clearing of "show controller fabric plane" counters never

The fabric plane number is 2
  Total number of providers for the statistics: 0
  Total received data cells: 0
```

```

Total transmitted data cells: 0
Total received correctable errored cells: 0
Total received uncorrectable errored cells: 0
Total received parity error cells: 0
Total unicast lost cells: 0
Total multicast lost cells: 0
Last clearing of "show controller fabric plane" counters never

The fabric plane number is 3
Total number of providers for the statistics: 0
Total received data cells: 0
Total transmitted data cells: 0
Total received correctable errored cells: 0
Total received uncorrectable errored cells: 0
Total received parity error cells: 0
Total unicast lost cells: 0
Total multicast lost cells: 0
Last clearing of "show controller fabric plane" counters never

The fabric plane number is 4
Total number of providers for the statistics: 0
Total received data cells: 0
Total transmitted data cells: 0
Total received correctable errored cells: 0
Total received uncorrectable errored cells: 0
Total received parity error cells: 0
Total unicast lost cells: 0
Total multicast lost cells: 0
Last clearing of "show controller fabric plane" counters never

The fabric plane number is 5
Total number of providers for the statistics: 0
Total received data cells: 0
Total transmitted data cells: 0
Total received correctable errored cells: 0
Total received uncorrectable errored cells: 0
Total received parity error cells: 0
Total unicast lost cells: 0
Total multicast lost cells: 0
Last clearing of "show controller fabric plane" counters never

```

This table describes the significant fields shown in the display.

Table 35: show controllers fabric plane Field Descriptions

Field	Description
The fabric plane number is 1	Fabric plane ID number.
Total number of providers for the statistics	Number of providers (sources) from which statistics were extracted.
Total received data cells	Total of data cells that have been received.
Total received correctable errored cells	Total number of cells with errors that can be corrected.
Total received uncorrectable errored cells	Total number of cells with errors that cannot be corrected.
Total received parity error cells	Total number of cells that have parity errors.
Total unicast lost cells	Number of lost unicast cells.

show controllers fabric plane

Field	Description
Last clearing of “show controller fabric plane” counters	Indicates when the fabric plane counters were last cleared.

show controllers fabric rack all

To display information about the fabric racks in the current system, use the **show controllers fabric rack all** command in Admin EXEC mode.

show controllers fabric rack all [{brief} | {detail}]

Syntax Description	brief (Optional) Displays summarized fabric rack information. detail (Optional) Specifies that the command output includes detailed fabric rack information.				
Command Default	Use the show controllers fabric rack all command without including any of the optional syntax to display detailed information about all fabric card racks in the current system.				
Command Modes	Admin EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.3.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 3.3.0	This command was introduced.
Release	Modification				
Release 3.3.0	This command was introduced.				
Usage Guidelines	Use the show controllers fabric rack all command to display fabric rack topology information.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>fabric</td> <td>read</td> </tr> </tbody> </table>	Task ID	Operations	fabric	read
Task ID	Operations				
fabric	read				
Examples	The following example shows sample output from the show controllers fabric rack all command:				

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# show controllers fabric rack all

Rack Rack Server
Num Status Status
---- ----- -----
0 NORMAL PRESENTRP/0/RP0/CPU0:router(admin) #
```

show controllers fabric sfe

show controllers fabric sfe

To display information about a specific switch fabric element, use the **show controllers fabric sfe** command in Admin EXEC mode.

show controllers fabric sfe {fabricq|ingressq|s1|s2|s3} {port|all} [{backpressure|brief|detail}]

Syntax Description	fabricq Displays information from the fabric queue for the switching fabric element. ingressq Displays information from the ingress queue for the switching fabric element. s1 Displays information about Stage 1 (S1) switch fabric elements. S1 elements distribute traffic. s2 Displays information about Stage 2 (S2) switch fabric elements. S2 elements forward cells to Stage 3 (S3) elements. s3 Displays information about S3 switch fabric elements. S3 elements perform switching.				
	port Specifies the port that owns the switch fabric element you want to display. Replace the <i>port</i> argument with the port number, in the <i>rack/slot/module/ASIC/port</i> format. Note A slash between values is required as part of the <i>port argument</i> notation.				
	all Displays information about the switch fabric elements on all ports in the system. backpressure (Optional) Displays back-pressure information for the specified switch fabric elements. brief (Optional) Displays summarized information for the specified switch fabric elements. detail (Optional) Includes detailed information about the specified switch fabric elements in the command output.				
Command Default	Use the show controllers fabric sfe command without specifying any of the optional parameters to display detailed information about a specified switch fabric element.				
Command Modes	Admin EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 3.2	This command was introduced.
Release	Modification				
Release 3.2	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>fabric</td> <td>read</td> </tr> </tbody> </table>	Task ID	Operations	fabric	read
Task ID	Operations				
fabric	read				

Examples

The following example shows sample output from the **show controllers fabric sfe** command:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# show controllers fabric sfe fabriccq all
```

Flags: P - plane admin down, p - plane oper down
C - card admin down, c - card oper down
L - link port admin down, l - linkport oper down
A - asic admin down, a - asic oper down
B - bundle port admin Down, b - bundle port oper down
I - bundle admin down, i - bundle oper down
N - node admin down, n - node down
o - other end of link down d - data down
f - failed component downstream
m - plane multicast down

Sfe	Admin	Oper
R/S/M/A	State	State
0/1/CPU0/0	UP	UP
0/1/CPU0/1	UP	UP
0/3/CPU0/0	UP	UP
0/3/CPU0/1	UP	UP
0/6/CPU0/0	UP	UP
0/6/CPU0/1	UP	UP
0/RP0/CPU0/0	UP	UP
0/RP1/CPU0/0	UP	UP

show controllers fabricq barriers

show controllers fabricq barriers

To verify that barriers are flowing through the fabricq ASICs, use the **show controllers fabricq barriers** command in Admin EXEC mode. If no optional parameter is passed, this command displays the aggregated barrier information for all ASIC instances on all locations.

```
show controllers fabricq barriers [{aggrbarr | illegal-state | inputbarr}] [instance asic_instance] [location node-id]
```

Syntax Description	aggrbarr (Optional) Displays gggregated barrier information. Command reads the number of aggregated barrier transitions on this node during a 1 second window for all barrier types, that is , unicast low priority (UCL), unicast high priority (UCH), multicast low priority (MCL) and multicast high priority (MCH). Note A count of 0x00000000 at both times for any barrier type indicates a problem with the barrier flow.				
illegal-state	(Optional) Displays the number of illegal barrier states seen on all the input links since the registers were cleared last.				
inputbarr	(Optional) D isplays the barrier state that is being received on all links at the instant the command is executed.				
asic_instance	(Optional) Displays barrier information for a specific fabric queue ASIC. Replace the <i>asic_instance</i> argument with the instance that identifies the ASIC whose barrier information you want to display.				
location node-id	(Optional) Displays statistical information for the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
Command Default	No default behavior or values				
Command Modes	Admin EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.2</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.2	This command was introduced.
Release	Modification				
Release 3.2	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>root-system</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	root-system	read, write
Task ID	Operations				
root-system	read, write				
Examples	The following is detailed sample output from the show controllers fabricq barriers command for location 0/1/CPU0:				

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router (admin)#show controllers fabricq barriers aggrbarr location 0/1/CPU0

Location : 0/1/CPU0
Asic Instance : 0
Fabric Destination Address : 4
-----
Barrier Config : 0x6
Barrier Timeout Threshold : 0x4830
Barrier Mask : 0
Interrupt Mask : 0xffffe
Error Cause : 0
-----
Time UCH UCL MCH MCL
1210200107 0x00000000 0x00000000 0x00000000 0x00000000.
1210200109 0x00007A9F 0x00007AAA 0x00007AA8 0x00007ABF.
-----
Location : 0/1/CPU0
Asic Instance : 1
Fabric Destination Address : 5
-----
Barrier Config : 0x6
Barrier Timeout Threshold : 0x4830
Barrier Mask : 0
Interrupt Mask : 0xffffe
Error Cause : 0
-----
Time UCH UCL MCH MCL
1210200109 0x00000000 0x00000000 0x00000000 0x00000000.
1210200110 0x00007AA7 0x00007A8C 0x00007A8A 0x00007A85.
-----
```

show controllers fabricq block

show controllers fabricq block

To display information about the current usage of packet buffers of various sizes, use the **show controllers fabricq block** command in Admin EXEC mode.

show controllers fabricq block {errors | registers | summary} [type instance] [location node-id]

Syntax Description

errors	Displays information about block errors.
registers	Displays information about block registers.
summary	Displays block summary information.
<i>type instance</i>	Physical interface or a virtual interface. Note Use the show interfaces command to see a list of all possible interfaces currently configured on the router.
location node-id	(Optional) Displays statistical information for the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

Admin EXEC mode

Command History

Release	Modification
Release 3.2	This command was introduced.
Release 3.7.0	The freequeue-manager keyword was added to this command.

Usage Guidelines

No specific guidelines impact the use of this command.

Task ID

Task ID	Operations
root-system	read, write

Examples

The following is detailed sample output from the **show controllers fabricq block** command:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# sh controllers fabricq block summary freequeue-manager location
0/1/CPUs$  
  

Location: 0/1/CPU0
Asic instance: 0
Vital Bump-up 'Enabled', Non-vital Bump-up 'Enabled'  

+-----+
|Buff|Enabl|Flush|          Buffer References|      |
|Size|     |Total| Current|LowWtMrk|Corruptd|VitalThr|Occupancy|
```

120	Yes	No	527916	527880	527874	0	5279	30e42022		
240	Yes	No	77136	77100	77088	0	771	40e41023		
480	Yes	No	77136	77100	77094	0	771	40e42022		
960	Yes	No	133170	133134	133128	0	1331	30e42022		
1920	Yes	No	107400	107364	107358	0	1073	30e42022		
3840	Yes	No	19374	19338	19332	0	193	30e42022		
7680	Yes	No	19374	19338	19332	0	193	30e40024		
15360	Yes	No	21516	21480	21468	0	215	40e41023		
<hr/>										
Location: 0/1/CPU0										
Asic instance: 1										
Vital Bump-up 'Enabled', Non-vital Bump-up 'Enabled'										
<hr/>										
Buff	Enabl	Flush	Buffer References							
Size			Total	Current	LowWtMrk	Corruptd	VitalThr	Occupancy		
<hr/>										
120	Yes	No	527916	527880	527874	0	5279	30e42022		
240	Yes	No	77136	77100	77094	0	771	30e41023		
480	Yes	No	77136	77100	77094	0	771	40e42022		
960	Yes	No	133170	133134	133128	0	1331	30e40024		
1920	Yes	No	107400	107364	107358	0	1073	30e42022		
3840	Yes	No	19374	19338	19338	0	193	00240024		
7680	Yes	No	19374	19338	19338	0	193	00240024		
15360	Yes	No	21516	21480	21474	0	215	30e40024		

show controllers fabricq eio

show controllers fabricq eio

To display the current state of all the elastic I/O (EIO) information from fabric ASICs to the neighboring ASICs--PSE, Ingress, and FIA, use the **show controllers fabricq eio** command in Admin EXEC mode.

show controllers fabricq eio links {link_id | all} location node-id

Syntax Description	<p>link_id Displays one or more EIO link states.</p> <p>Note The range of the <i>link id</i> argument is 0 to 4294967295.</p>				
Command Default	No default behavior or values				
Command Modes	Admin EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.2</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.2	This command was introduced.
Release	Modification				
Release 3.2	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>root-system</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	root-system	read, write
Task ID	Operations				
root-system	read, write				

Examples

The following is detailed sample output from the **show controllers fabricq eio** command for location 0/1/CPU0:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# show controllers fabricq eio links all location 0/1/CPU0
Node: 0/1/CPU0:
-----
EIO links:
-----
ASIC Id    Peer Id    Type Link-Id Attempts Accept Failed State
-----
FABRICQ_0   FIA_0     RX   30      1       1       0       EIO_LINK_TRAINED
FABRICQ_0   FIA_0     RX   32      1       1       0       EIO_LINK_TRAINED
FABRICQ_0   FIA_0     RX   34      1       1       0       EIO_LINK_TRAINED
FABRICQ_0   FIA_0     RX   36      1       1       0       EIO_LINK_TRAINED
FABRICQ_0   FIA_1     RX   40      1       1       0       EIO_LINK_TRAINED
FABRICQ_0   FIA_1     RX   42      1       1       0       EIO_LINK_TRAINED
FABRICQ_0   FIA_1     RX   44      1       1       0       EIO_LINK_TRAINED
```

FABRICQ_0	FIA_1	RX	46	1	1	0	EIO_LINK_TRAINED
FABRICQ_0	PSE_1	TX	50	0	0	0	EIO_LINK_TRAINED
FABRICQ_1	FIA_0	RX	31	1	1	0	EIO_LINK_TRAINED
FABRICQ_1	FIA_0	RX	33	1	1	0	EIO_LINK_TRAINED
FABRICQ_1	FIA_0	RX	35	1	1	0	EIO_LINK_TRAINED
FABRICQ_1	FIA_0	RX	37	1	1	0	EIO_LINK_TRAINED
FABRICQ_1	FIA_1	RX	41	1	1	0	EIO_LINK_TRAINED
FABRICQ_1	FIA_1	RX	43	1	1	0	EIO_LINK_TRAINED

show controllers fabricq fabric-backpressure

show controllers fabricq fabric-backpressure

To display back-pressure information for the fabric queue ASICs, use the **show controllers fabricq fabric-backpressure** command in EXEC mode and Admin EXEC mode.

show controllers fabricq fabric-backpressure [summary] [instance asic_instance] [location node-id]

Syntax Description	<p>summary (Optional) Displays summarized back-pressure information about all fabric queue ASICs in the system.</p> <p>Note In Release 5.1.1 and later, the summary option projects a list of BP fabric groups the software expects to find in the system based on the number of slots in the chassis and the largest capacity line card model. Each line card can have up to four fabric groups depending on the capacity of the card. Each fabric group is comprised of 32 bits, and the groups are numbered sequentially (0, 1, 2, 3, 4, 5, 6...) across the racks in the system. The summary also reports the groups from which BP information is not received only. All group-1 (0, 4, 8, 12) and group-2 (1, 5, 9, 13) instances are reported automatically. Information for group-2 (2, 6, 10, 15) instances are transmitted and reported when a CRS-X card is installed in slot 15 of a 16-slot CRS router.</p>						
instance asic_instance	<p>(Optional) Displays back-pressure information for a specific fabric queue ASIC. Replace the <i>asic_instance</i> argument with the instance that identifies the ASIC whose back-pressure information you want to display.</p> <p>Note Enter the show controllers fabricq fabric-backpressure command without including any of the optional keywords or arguments to display all fabric queue ASIC instances in the system.</p>						
location node	<p>Displays back-pressure information for the fabric queue ASICs on a particular node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.</p> <p>Note Use the show platform command to see a list of all nodes currently installed in your system.</p>						
Command Default	Enter the show controllers fabricq fabric-backpressure command without including any of the optional keywords or arguments to display detailed back-pressure information about all fabric queue ASICs in the system.						
Command Modes	EXEC mode Admin EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.4.0</td> <td>This command was introduced.</td> </tr> <tr> <td>Release 5.1.1</td> <td>The summary keyword lists the projected BP fabric groups.</td> </tr> </tbody> </table>	Release	Modification	Release 3.4.0	This command was introduced.	Release 5.1.1	The summary keyword lists the projected BP fabric groups.
Release	Modification						
Release 3.4.0	This command was introduced.						
Release 5.1.1	The summary keyword lists the projected BP fabric groups.						

Usage Guidelines

On the fabricq ASICs, a BP Engine configured for each non-empty fabric group present in the system is shown as enabled Yes under the Enabled column on all fabricq ASICs in the system.

Task ID**Task ID Operations**

fabric read

interface read

drivers read

Examples

The following example shows sample output from the **show controllers fabricq fabric-backpressure** command when it is entered with the **summary** keyword:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# show controllers fabricq fabric-backpressure summary

Rack 0: All Groups Received? : Yes
```

The following example shows sample output from the **show controllers fabricq fabric-backpressure** command when it is entered without any of the optional keywords:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# show controllers fabricq fabric-backpressure

Location: 0/1/CPU0
Asic Instance: 0
Fabric Destination Address: 4
BP global Configuration Register: 0xff07

Cluster Number: 0
Primary Link: 0
Secondary Link: 9
Number of Backup links: 14
Backup Links: 8 1 2 10 3 11 27 16 26 17 25 18 24 19
BP enable Mask: 0x4
BP EC: 0
BP IM: 0x1ffe
+-----+
|BP Engine| Enabled |Current Link |Rx group |P Link |S Link |
+-----+
| 0 | No |Secondary | 255 | 0 | 9 |
+-----+
| 1 | No |Secondary | 255 | 0 | 9 |
+-----+
| 2 | Yes |Primary | 0 | 0 | 9 |
+-----+

Location: 0/1/CPU0
Asic Instance: 1
Fabric Destination Address: 5
BP global Configuration Register: 0xff07

Cluster Number: 0
Primary Link: 0
Secondary Link: 9
Number of Backup links: 14
Backup Links: 8 1 2 10 3 11 27 16 26 17 25 18 24 19
```

```
show controllers fabricq fabric-backpressure
```

```
BP enable Mask: 0x4
BP EC: 0
BP IM: 0x1ffe
+-----+
|BP Engine| Enabled |Current Link |Rx group |P Link |S Link |
+-----+
| 0 | No |Secondary | 255 | 0 | 9 |
+-----+
| 1 | No |Secondary | 255 | 0 | 9 |
+-----+
| 2 | Yes |Primary | 0 | 0 | 9 |
+-----+
Location: 0/3/CPU0
Asic Instance: 0
Fabric Destination Address: 12
BP global Configuration Register: 0xff07

Cluster Number: 0
--More--
```

show controllers fabricq health

To display the general condition of a fabricq ASIC, use the **show controllers fabricq health** command in Admin EXEC mode.

show controllers fabricq health [instance *asic_instance*] [location *node-id*]

Syntax Description	<p><i>asic_instance</i> (Optional) Displays health information for a specific fabric queue ASIC. Replace the <i>asic_instance</i> argument with the instance that identifies the ASIC whose health information is to be displayed.</p> <p>location <i>node-id</i> (Optional) Displays statistical information for the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.</p>						
Command Default	No default behavior or values						
Command Modes	Admin EXEC mode						
Command History	<table> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 4.0.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 4.0.0	This command was introduced.		
Release	Modification						
Release 4.0.0	This command was introduced.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read, write</td></tr> <tr> <td>interface</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	drivers	read, write	interface	read, write
Task ID	Operations						
drivers	read, write						
interface	read, write						

Examples

The following is detailed sample output from the **show controllers fabricq health** command:

```
RP/0/RP0/CPU0:router#show controllers fabricq health location 0/6/cpu0

Location: 0/6/CPU0
Asic Instance: 0
Fabric Destination Address: 24
Cpuctrl EC: 00000000
SN8 Frame: 0x0000001      SN8 CRC: 00000000

Fabric Interface Top level EC: 0
Block 0 EC: 00000000      Block 1 EC: 00000000
Block 2 EC: 00000000      Block 3 EC: 00000000
Block 4 EC: 00000000      Block 5 EC: 00000000
Block 6 EC: 00000000      Block 7 EC: 00000000
```

```
show controllers fabricq health
```

```
Ingressq Interface Top level EC: 00000000
BP Cluster 0 EC: 00000000    BP Cluster 1 EC: 00000000
BP Cluster 2 EC: 00000000    BP Cluster 3 EC: 00000000
BP Cluster 4 EC: 00000000    BP Cluster 5 EC: 00000000
BP Cluster 6 EC: 00000000    BP Cluster 7 EC: 00000000
BP Cluster 8 EC: 00000000    BP Cluster 9 EC: 00000000
```

show controllers fabricq link-info

To display the state of the links on a fabricq ASIC, use the **show controllers fabricq link-info** command in Admin EXEC mode.

show controllers fabricq link-info {link_number | all} [instance asic_instance] [location node-id]

Syntax Description	<p><i>link_number</i> Link number. Range is from 0 to 31.</p> <p><i>asic_instance</i> (Optional) Displays health information for a specific fabric queue ASIC. Replace the <i>asic_instance</i> argument with the instance that identifies the ASIC whose health information you want to display.</p> <p>location <i>node-id</i> (Optional) Displays statistical information for the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.</p>
---------------------------	--

Command Default	No default behavior or values
------------------------	-------------------------------

Command Modes	Admin EXEC mode
----------------------	-----------------

Command History	Release	Modification
	Release 3.2	This command was introduced.

Usage Guidelines	The show controllers fabricq link-info command displays the state of the links on a fabricq ASIC. Any link that is connected to a plane that is not administratively down or to an fabric board that has been removed, should show as up under the columns Driver State , FSDB State and Barrier State . If the driver state is down , the column Errors would indicate the reason behind it. The column titled Drv Bar shows the number of times the driver attempted to bring up a link's driver state and barrier state.
-------------------------	---

Task ID	Task ID	Operations
	root-system	read, write

Examples	The following is detailed sample output from the show controllers fabricq link-info command for location 0/1/CPU0:
-----------------	---

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router (admin)# show controllers fabricq link-info all location 0/1/CPU0

Location: 0/1/CPU0
Asic Instance: 0
Fabric Destination Address:      4
Retry period: 0 sec
Link Active bitmap (1=up, 0=down): 0xffffffff
+-----+
|Link #|Driver state | FSDB state |Barrier state|Up (Drv Barr)| Errors |
+-----+
```

```
show controllers fabricq link-info
```

	0		Up		Up		Up		1	1		
	1		Up		Up		Up		1	1		
	2		Up		Up		Up		1	1		
	3		Up		Up		Up		1	1		
	4		Up		Up		Up		1	1		
	5		Up		Up		Up		1	1		
	6		Up		Up		Up		1	1		
	7		Up		Up		Up		1	1		
	8		Up		Up		Up		1	1		
	9		Up		Up		Up		1	1		
	10		Up		Up		Up		1	1		
	11		Up		Up		Up		1	1		
	12		Up		Up		Up		1	1		
	13		Up		Up		Up		1	1		

show controllers fabricq summary

To display the summarized information of the condition of a fabricq ASIC, use the **show controllers fabricq summary** command in Admin EXEC mode.

show controllers fabricq summary [instance asic_instance] [location node-id]

Syntax Description	<p>asic_instance (Optional) Displays health information for a specific fabric queue ASIC. Replace the <i>asic_instance</i> argument with the instance that identifies the ASIC whose health information is to be displayed.</p> <p>location node-id (Optional) Displays statistical information for the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.</p>						
Command Default	No default behavior or values						
Command Modes	Admin EXEC mode						
Command History	<table> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 4.0.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 4.0.0	This command was introduced.		
Release	Modification						
Release 4.0.0	This command was introduced.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>drivers</td><td>read, write</td></tr> <tr> <td>interface</td><td>read, write</td></tr> </tbody> </table>	Task ID	Operations	drivers	read, write	interface	read, write
Task ID	Operations						
drivers	read, write						
interface	read, write						

Examples

The following is detailed sample output from the **show controllers fabricq summary** command:

```
RP/0/RP0/CPU0:router# show controllers fabricq summary

Location: 0/6/CPU0
Asic Instance: 0
Fabric Destination Address: 24
Cpuctrl EC: 00000000
SN8 Frame: 0x0000001      SN8 CRC: 00000000

Fabric Interface Top level EC: 0
Block 0 EC: 00000000      Block 1 EC: 00000000
Block 2 EC: 00000000      Block 3 EC: 00000000
Block 4 EC: 00000000      Block 5 EC: 00000000
Block 6 EC: 00000000      Block 7 EC: 00000000
```

```
show controllers fabricq summary
```

```
Ingressq Interface Top level EC: 00000000
BP Cluster 0 EC: 00000000    BP Cluster 1 EC: 00000000
BP Cluster 2 EC: 00000000    BP Cluster 3 EC: 00000000
BP Cluster 4 EC: 00000000    BP Cluster 5 EC: 00000000
```

show controllers fabricq queue

To display information about the hardware queues of the performance route processor chopper and assembler FPGAs, use the **show controllers fabricq queue** command in Admin EXEC mode.

show controllers fabricq queue [instance *instance-id*] [location *node-id*]

Syntax Description	instance <i>instance-id</i> (Optional) Displays information about a specific ASIC. Replace the <i>instance-id</i> argument with an ASIC instance. Range is from 1 through 4. location <i>node-id</i> (Optional) Displays statistical information for the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
---------------------------	--

Command Default Information for all performance route processors on the router is displayed

Command Modes Admin EXEC mode

Command History	Release	Modification
-----------------	---------	--------------

Release 3.2 This command was introduced.

Usage Guidelines Use the **show controllers fabricq queue** command to display information about packet queues. Specifying a location displays information only if that location is an RP.
This command is intended for use while performing debugging procedures.

Task ID	Task ID	Operations
root-system	read, write	

Examples The following is detailed sample output from the **show controllers fabricq queue** command for the location 0/1/CPU0:

```
RP/0/RP0/CPU0:router# admin
RP/0/RP0/CPU0:router(admin)# show controllers fabricq queue location 0/1/CPU0

Fabric Queue Manager Queue Information:
=====
Location: 0/1/CPU0
Asic Instance: 0
Fabric Destination Address: 4
CpuCtrl Cast range : 0 - 7
Multicast Range : 16 - 71
Unicast Quanta in KBytes : 58, Multicast Quanta : 14
+-----+
|Type/Ifname      | Port|Queue| Q | P-quanta|Q-quanta|HighW |LowW | Q Len | BW |
|                 | num | num | pri| KBytes | KBytes |KBytes|KBytes|KBytes |(kb|
+-----+
|Cpuctrl Cast    | 0|0 - 7| HI| 13| 13| 1021| 919| 0|  |
```

show controllers fabricq queue

Multicast	0	17 BE	13	13 26214 23592	0	
Multicast	0	18 AF	13	13 26214 23592	0	
Multicast	0	20 HI	13	1905 26214 23592	0	
POS0/1/4/0	1	129 BE	13	450 1755 1578	0 239	
POS0/1/4/0	2	257 AF	13	450 1755 1578	0 239	
POS0/1/4/0	4	513 HI	1905	450 1755 1578	0 239	
POS0/1/0/0	1	130 BE	13	30 109 98	0 14	
POS0/1/0/0	2	258 AF	13	30 109 98	0 14	
POS0/1/0/0	4	514 HI	1905	30 109 98	0 14	
GigabitEthernet0/1/5/0	1	131 BE	13	187 732 658	0	
GigabitEthernet0/1/5/0	2	259 AF	13	187 732 658	0	
GigabitEthernet0/1/5/0	4	515 HI	1905	187 732 658	0	
GigabitEthernet0/1/5/1	1	132 BE	13	187 732 658	0	
GigabitEthernet0/1/5/1	2	260 AF	13	187 732 658	0	
GigabitEthernet0/1/5/1	4	516 HI	1905	187 732 658	0	
GigabitEthernet0/1/5/2	1	133 BE	13	187 732 658	0	
GigabitEthernet0/1/5/2	2	261 AF	13	187 732 658	0	
GigabitEthernet0/1/5/2	4	517 HI	1905	187 732 658	0	
GigabitEthernet0/1/5/3	1	134 BE	13	187 732 658	0	
GigabitEthernet0/1/5/3	2	262 AF	13	187 732 658	0	
GigabitEthernet0/1/5/3	4	518 HI	1905	187 732 658	0	
GigabitEthernet0/1/5/4	1	135 BE	13	187 732 658	0	
GigabitEthernet0/1/5/4	2	263 AF	13	187 732 658	0	
GigabitEthernet0/1/5/4	4	519 HI	1905	187 732 658	0	
GigabitEthernet0/1/5/5	1	136 BE	13	187 732 658	0	
GigabitEthernet0/1/5/5	2	264 AF	13	187 732 658	0	
GigabitEthernet0/1/5/5	4	520 HI	1905	187 732 658	0	
GigabitEthernet0/1/5/6	1	137 BE	13	187 732 658	0	
GigabitEthernet0/1/5/6	2	265 AF	13	187 732 658	0	
GigabitEthernet0/1/5/6	4	521 HI	1905	187 732 658	0	
GigabitEthernet0/1/5/7	1	138 BE	13	187 732 658	0	
GigabitEthernet0/1/5/7	2	266 AF	13	187 732 658	0	
GigabitEthernet0/1/5/7	4	522 HI	1905	187 732 658	0	

--More--

show controllers fabricq statistics

To display statistics about packet flow through the fabric queue application-specific integrated circuit (ASIC), use the **show controllers fabricq statistics** command in EXEC mode.

show controllers fabricq statistics [instance *instance*] [location *node-id*]

Syntax Description	instance <i>instance</i> (Optional) Specifies instance and number for a single fabric queue ASIC. The <i>instance</i> argument is a number from 0 to 4.
---------------------------	--

location <i>node-id</i> (Optional) Specifies statistical packet flow information for the designated node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
--

Command Default	Information for all fabric queue ASICs for all locations is displayed
------------------------	---

Command Modes	EXEC mode
----------------------	-----------

Command History	Release Modification
------------------------	------------------------------------

Release 2.0	This command was introduced.
-------------	------------------------------

Release 3.3.0	The show controllers fabricq packet-stats command was replaced by the show controllers fabricq statistics command.
---------------	--

Usage Guidelines	Use the show controllers fabricq statistics command to track the number of unicast and multicast packets that are sent from the fabric to the specified node.
-------------------------	--

Task ID	Task Operations ID
	interface read
	drivers read

Examples	The following is sample output from the show controllers fabricq statistics command that displays statistics about fabric queue packets that have passed through ASIC 0 on node 0/1/CPU0:
-----------------	--

```
RP/0/RP0/CPU0:router# show controllers fabricq statistics instance 0 location 0/1/CPU0
Fabric Queue Manager Packet Statistics
=====
Location: 0/1/CPU0
Asic Instance: 0
Fabric Destination Address:      32

Input Cell counters:
+-----+
Data cells       :      42356 (+      22 )
Control cells   :      29877224 (+ 36372 )
```

```
show controllers fabricq statistics
```

```

Idle      cells      :      219947284936 (+      267358842 )
BP Asserted Count      :                  0 (+      0 )
MC BP Asserted Count  :                  0 (+      0 )

Reassembled packet counters
+-----+
Ucast pkts      :                  0 (+      0 )
Mcast pkts      :                  0 (+      0 )
Cpuctrlcast pkts :      21159 (+      11 )

Dropped packets
+-----+
Ucast pkts      :                  0 (+      0 )
Mcast pkts      :                  0 (+      0 )
Cpuctrlcast pkts :                  0 (+      0 )
Vital denied pkts :                  0 (+      0 )
NonVital denied pkts :      0 (+      0 )
Unicast lost pkts :      0 (+      0 )
Ucast partial pkts :      0 (+      0 )
PSM OOR Drops    :                  0 (+      0 )

```

This table describes the significant fields shown in the display.

Table 36: show controllers fabricq statistics Field Descriptions

Field	Description
Input Cell counters	Number of cells that have reached the fabric queue ASIC. Note The numbers following the colons are the cumulative count since the last time the counts were cleared and those within parentheses are the delta since the last time the driver polled the ASIC.
Control Cells	Carry discard and back-pressure information across the fabric.
Idle Cells	Carry control information in the cell header and keep the links in sync.
Data Cells	All other cells apart from Control cells and Idle cells are counted as data cells, regardless of whether they are CPU bound or E-metro bound.
Reassembled packet counters	Number of packets the fabric queue ASIC has reassembled after transmission over the fabric.
Ucast packet	Number of unicast packets.
Mcast packet	Number of multicast packets.
Cpuctrlcast packet	All the traffic bound for the local CPU of this linecard.
Dropped packets	Number of packets the fabric queue ASIC has had to drop.
Unicast packets	These packets are discarded at the Output Queue Manager block (OQM).
Multicast packets	These packets are discarded at the OQM.
Cpuctrlcast packets	These packets are discarded at the OQM.

Field	Description
Vital denied packets	Represent a condition where buffer references are denied for a vital in the Packet Control Logic (PCL) block of the ASIC.
NonVital denied packets	Represent a condition where buffer references are denied for a non vital in the Packet Control Logic (PCL) block of the ASIC.
Unicast lost packets	Missing packets at the PCL block when packets are retired to the OQM.
Unicast partial packets	Incomplete packets at the PCL block when packets are retired to the OQM.
PSM OOR Drops	Number of packets that had to be dropped because Packet Status Memory (PSM) ran out of entries.

show controllers ingressq capacity

show controllers ingressq capacity

To display ASIC capacity details for the ingress fabric queue, use the **show controllers ingressq capacity** command in EXEC mode.

show controllers ingressq capacity *cap_table* [location *node-id*]

Syntax Description	<p><i>cap_table</i> Specific capacity table.</p> <p>Note The range is from 0 to 4294967295. PMAX=0, Q-MAX=1, and QMIN=3.</p>						
location <i>node-id</i>	Identifies the location of the ingressq queue whose statistics you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.2</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.2	This command was introduced.		
Release	Modification						
Release 3.2	This command was introduced.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>interface</td><td>read</td></tr> <tr> <td>drivers</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	interface	read	drivers	read
Task ID	Operations						
interface	read						
drivers	read						

Examples

The following example shows how to display ASIC capacity information for the ingress fabric queue:

```
RP/0/RP0/CPU0:router#show controllers ingressq capacity 0 location 0/1/CPU0
```

```
ingressq capacity table: Port Max capacity
Table id: 0
 4      8      12      16      20      24      28      32
 36     40     44     48     52     56     60     64
 68     72     76     88    108    136    172    216
 276    348    436    552    700    884   1116   1408
 1780   2248   2836   3584   4528   5724   7228   9136
 11540  14580  18420  23272  29404  37152  46936  59304
 74924  94664  119600 151108 190916 241212 304756 385040
 486472 614628 776548 981120 1239584 1566140 1978724 2500000
```

show controllers ingressq clients

To display all clients connected to the ingress queue manager (IQM), use the **show controllers ingressq clients** command in EXEC mode.

show controllers ingressq clients location node-id

Syntax Description	location node-id Identifies the location of the ingress queue whose statistics you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 3.2	This command was introduced.		
Release	Modification						
Release 3.2	This command was introduced.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>interface</td> <td>read</td> </tr> <tr> <td>drivers</td> <td>read</td> </tr> </tbody> </table>	Task ID	Operations	interface	read	drivers	read
Task ID	Operations						
interface	read						
drivers	read						
Examples	The following example shows how to display ingressq clients connected to IQM:						

```
RP/0/RP0/CPU0:router# show controllers ingressq clients location 0/1/CPU0
-----
ingress queue manager clients:
handle name
-----
1      hfr_pm
2      QOS_EA
3      BM-EA HFR DLL
```

show controllers ingressq eio

show controllers ingressq eio

To display elastic I/O (EIO) information for the ingress queueing ASIC, use the **show controllers ingressq eio** command in EXEC mode.

show controllers ingressq eio links {link_id | all} [location node-id]

Syntax Description	<p>link_id Displays one or more EIO link states.</p> <p>Note The range of the <i>link id</i> argument is 0 to 4294967295.</p>						
all	Indicates that you want to display ingressq eio information for all interfaces in the specified location.						
location node-id	Identifies the location of the ingress queue manager whose EIO link information you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.2</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.2	This command was introduced.		
Release	Modification						
Release 3.2	This command was introduced.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>interface</td><td>read</td></tr> <tr> <td>drivers</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	interface	read	drivers	read
Task ID	Operations						
interface	read						
drivers	read						

Examples The following example shows how to display EIO information for the ingress fabric queue:

```
RP/0/RP0/CPU0:router# show controllers ingressq eio links all

Node: 0/1/CPU0:
-----
EIO links:
-----
ASIC Id      Peer Id      Type Link-Id Attempts Accept Failed State
-----
INGRESSQ_0    PSE_0        RX   10     1       1       0       EIO_LINK_TRAINED
INGRESSQ_0    PSE_0        TX   24     0       0       0       EIO_LINK_TRAINED
INGRESSQ_0    FIA_0        TX   20     0       0       0       EIO_LINK_TRAINED
```

INGRESSQ_0	FIA_0	TX	21	0	0	0	EIO_LINK_TRAINED
INGRESSQ_0	FIA_1	TX	22	0	0	0	EIO_LINK_TRAINED
INGRESSQ_0	FIA_1	TX	23	0	0	0	EIO_LINK_TRAINED
INGRESSQ_0	FABRICQ_0	RX	54	1	1	0	EIO_LINK_TRAINED
INGRESSQ_0	FABRICQ_1	RX	55	1	1	0	EIO_LINK_TRAINED

Node: 0/4/CPU0:

EIO links:

ASIC Id	Peer Id	Type	Link-Id	Attempts	Accept	Failed	State
INGRESSQ_0	FIA_0	TX	20	0	0	0	EIO_LINK_TRAINED
INGRESSQ_0	FABRICQ_0	RX	54	1	1	0	EIO_LINK_TRAINED
INGRESSQ_0	FABRICQ_1	RX	55	1	1	0	EIO_LINK_TRAINED

show controllers ingressq fabric

show controllers ingressq fabric

To display various parameters of ingressq and switching fabric connectivity, use the **show controllers ingressq fabric** command in EXEC mode.

show controllers ingressq fabric {asic | detail | links | pla} [location node-id]

Syntax Description	asic Displays ASIC states. detail Displays fabric state information. links Displays link states information. pla Displays plane availability information for unicast and multicast. location node-id Identifies the location of the ingressq queue whose statistics you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.2</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.2	This command was introduced.		
Release	Modification						
Release 3.2	This command was introduced.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>interface</td><td>read</td></tr> <tr> <td>drivers</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	interface	read	drivers	read
Task ID	Operations						
interface	read						
drivers	read						

Examples The following example shows how to display various parameters of ingressq and switching fabric connectivity for all fabric interfaces:

```
RP/0/RP0/CPU0:router# show controllers ingressq fabric links location 0/1/CPU0
Ingressq link state
plane-id    link-id    ADMIN-STATE OPER-STATE   AVAIL-STATE UP-COUNT
-----
0          0           UP         UP         UP         1
0          8           UP         UP         UP         1
0          16          UP         UP         UP         1
0          24          UP         UP         UP         1
1          1           UP         UP         UP         1
1          9           UP         UP         UP         1
1          17          UP         UP         UP         1
```

1	25	UP	UP	UP	1
2	2	UP	UP	UP	1
2	10	UP	UP	UP	1
2	18	UP	UP	UP	1
2	26	UP	UP	UP	1
3	3	UP	UP	UP	1
3	11	UP	UP	UP	1
3	19	UP	UP	UP	1
3	27	UP	UP	UP	1
4	4	UP	UP	UP	1
4	12	UP	UP	UP	1
4	20	UP	UP	UP	1
4	28	UP	UP	UP	1
5	5	UP	UP	UP	1
5	13	UP	UP	UP	1
5	21	UP	UP	UP	1
5	29	UP	UP	UP	1
6	6	UP	UP	UP	1
6	14	UP	UP	UP	1
6	22	UP	UP	UP	1
6	30	UP	UP	UP	1
7	7	UP	UP	UP	1
7	15	UP	UP	UP	1
7	23	UP	UP	UP	1
7	31	UP	UP	UP	1

show controllers ingressq interfaces

show controllers ingressq interfaces

To display the ingressq shape queue and parameters associated with the physical interfaces on the card, use the **show controllers ingressq interfaces** command in EXEC mode.

show controllers ingressq interfaces {type instance | all} [location node-id]

Syntax Description

<i>type instance</i>	Physical interface or a virtual interface.
Note	Use the show interfaces command to see a list of all possible interfaces currently configured on the router.
all	Indicates that you want to display ingressq queue information for all interfaces in the specified location.
location node-id	Identifies the location of the ingress queue whose statistics you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

EXEC mode

Command History

Release Modification

Release 3.2 This command was introduced.

Usage Guidelines

No specific guidelines impact the use of this command.

Task ID

Task Operations ID

interface read

drivers read

Examples

The following example shows how to display the ingressq shape queue and parameters associated with the physical interfaces on the card:

```
RP/0/RP0/CPU0:router# show controllers ingressq interfaces all location 0/1/CPU0
iqm interfaces:
legend:: #sub: num sub intf, rc: reference count, indx: demux num.
-----
name          intf hd    parent hd   #sub indx def-port ports rc   Owner
-----
Bundle-POS24  0x80050 0x0      0     0    25      1     3   hfr_pm
Bundle-Ether28 0x80070 0x0      3     0    26      1     6   hfr_pm
Bundle-Ether28.1 0x80090 0x80070 0     0    26      1     3   hfr_pm
Bundle-Ether28.2 0x800b0 0x80070 0     0    26      1     3   hfr_pm
```

Bundle-Ether28.3	0x800d0	0x80070	0	0	26	1	3	hfr_pm
POS0_1_0_0	0x1180060	0x0	0	0	9	1	3	hfr_pm
POS0_1_4_0	0x11800c0	0x0	0	0	8	1	3	hfr_pm
TenGigE0_1_1_0	0x11800e0	0x0	0	0	18	1	3	hfr_pm
GigabitEthernet0_1_5_00x1180100	0x0	0	0	10	1	3	hfr_m	
GigabitEthernet0_1_5_10x1180120	0x0	0	0	11	1	3	hfr_m	
GigabitEthernet0_1_5_20x1180140	0x0	0	0	12	1	3	hfr_m	
GigabitEthernet0_1_5_30x1180160	0x0	0	0	13	1	3	hfr_m	
GigabitEthernet0_1_5_40x1180180	0x0	0	0	14	1	3	hfr_m	
GigabitEthernet0_1_5_50x11801a0	0x0	0	0	15	1	3	hfr_m	
GigabitEthernet0_1_5_60x11801c0	0x0	0	0	16	1	3	hfr_m	
GigabitEthernet0_1_5_70x11801e0	0x0	0	0	17	1	3	hfr_m	
POS0_1_4_1	0x1180240	0x0	0	0	19	1	3	hfr_pm
--More--								

show controllers ingressq queues

show controllers ingressq queues

To display information about the ingressq shape queues and parameters that have been created for the ingress interfaces, use the **show controllers ingressq queues** command in EXEC mode.

show controllers ingressq queues {queue_handle | all} [location node-id]

Syntax Description	<p>queue_handle Specific queue marked by a unique number. Range is from 0 to 4294967295.</p> <p>all Indicates that you want to display ingressq queue information for all interfaces.</p> <p>location node-id Identifies the location of the ingressq queue whose statistics you want to display. The <i>node-id</i> is expressed in the <i>rack/slot/module</i> notation.</p>
---------------------------	---

Command Default	No default behavior or values
------------------------	-------------------------------

Command Modes	EXEC mode
----------------------	-----------

Command History	Release	Modification
	Release 3.2	This command was introduced.
	Release 3.8.0	The <i>queue handle</i> argument range of 0 to 4294967295 was added.

Usage Guidelines	No specific guidelines impact the use of this command.
-------------------------	--

Task ID	Task ID	Operations
	interface	read
	drivers	read

Examples	The following example shows how to display the ingressq shape queues and parameters that have been created for the ingress interfaces:
-----------------	--

```
RP/0/RP0/CPU0:router# show controllers ingressq queues all location 0/1/CPU0

iqm queues:
legend: (*) default q, LP low priority, HP high priority, bs burst sizebw (kbps).
name          owner    q-hd   port type max_bw  min_bw max_bs  min_bs  qut
-----
default_queue(*) hfr_pm  32     8    LP  2396160  0      650    0      25
default_queue(*) hfr_pm  33     9    LP  149760   0      533    0      1
default_queue(*) hfr_pm  34    10    LP  1000192  0      638    0      10
default_queue(*) hfr_pm  35    11    LP  1000192  0      638    0      10
default_queue(*) hfr_pm  36    12    LP  1000192  0      638    0      10
default_queue(*) hfr_pm  37    13    LP  1000192  0      638    0      10
default_queue(*) hfr_pm  38    14    LP  1000192  0      638    0      10
default_queue(*) hfr_pm  39    15    LP  1000192  0      638    0      10
default_queue(*) hfr_pm  40    16    LP  1000192  0      638    0      10
```

default_queue(*)	hfr_pm	41	17	LP	1000192	0	638	0	10
default_queue(*)	hfr_pm	42	18	LP	10000128	0	511	0	10
default_queue(*)	hfr_pm	43	19	LP	2396160	0	650	0	25
default_queue(*)	hfr_pm	44	20	LP	149760	0	533	0	1
default_queue(*)	hfr_pm	45	21	LP	2396160	0	650	0	25
default_queue(*)	hfr_pm	46	22	LP	149760	0	533	0	1
default_queue(*)	hfr_pm	47	23	LP	2396160	0	650	0	25
default_queue(*)	hfr_pm	48	24	LP	149760	0	533	0	1
default_queue(*)	BM-EA HFR DLL49	25		LP	4792320	0	588	0	
default_queue(*)	BM-EA HFR DLL50	26		LP	2000000	0	578	0	

show controllers ingressq statistics

show controllers ingressq statistics

To display ingress queue manager statistics, use the **show controllers ingressq statistics** in EXEC mode.

show controllers ingressq statistics [location node-id]

Syntax Description	location node-id Identifies the location of the ingress queue whose statistics you want to display. The <i>node-id</i> argument is expressed in the <i>rack/slot/module</i> notation. Note Use the show platform command to see the location of all nodes installed in the router.						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.2</td> <td>This command was introduced.</td> </tr> <tr> <td>Release 3.6.0</td> <td>The location node-id keyword and argument were changed from required to optional.</td> </tr> </tbody> </table>	Release	Modification	Release 3.2	This command was introduced.	Release 3.6.0	The location node-id keyword and argument were changed from required to optional.
Release	Modification						
Release 3.2	This command was introduced.						
Release 3.6.0	The location node-id keyword and argument were changed from required to optional.						

Usage Guidelines



Note In the **show controllers ingressq statistics** command display, the *rx pkts* counter field may wrap if it is calculating line rate traffic.

Task ID	Task Operations ID
	interface read
	drivers read

Examples

The following example shows how to display ingress queue manager statistics:

```
RP/0/RP0/CPU0:router# show controllers ingressq statistics location 0/2/CPU0
Ingressq Rx Statistics.
-----
rx pkts          :      131827 (      33509182 bytes)
rx pkts from cpu :      102509 (      16422606 bytes)
rx control pkts from cpu :      102509 (      16422606 bytes)
rx data pkts from cpu :          0 (          0 bytes)

Ingressq Tx Statistics.
-----
```

```

tx pkts          :      131826 (      35086366 bytes)
tx pkts to cpu  :       29318 (      17086576 bytes)
tx control pkts to cpu :       29318 (      17086576 bytes)
tx data pkts to cpu :        0 (          0 bytes)
tx pkts shaped   :     102508 (      17999790 bytes)
tx cells to fabric:     223190
Ingressq Drops.
-----
length error drops - PSE      :      0
length error drops - Cpuctrl  :      0
crc error drops - PSE         :      0
crc error drops - Cpuctrl    :      0
OOR error drops - PSE         :      0
OOR error drops - Cpuctrl    :      0
discard drops                :      0
tail drops                   :      0
tail drops - no QE           :      0
cell drops                   :      0

```

This table describes the significant fields shown in the display.

Table 37: show controllers ingressq statistics Field Descriptions

Field	Description
Ingressq Rx Statistics	<p>Displays the following receive statistics:</p> <ul style="list-style-type: none"> rx pkts—Total number of packets received; also shown in bytes. rx pkts from cpu—Number of packets received from the CPU; also shown in bytes. rx control pkts from cpu—Number of control packets received; also shown in bytes. rx data pkts from cpu—Number of data packets received; also shown in bytes.
Ingressq Tx Statistics	<p>Displays the following transmit statistics:</p> <ul style="list-style-type: none"> tx pkts—Total number of packets transmitted; also shown in bytes. tx pkts to cpu—Number of packets transmitted from the CPU; also shown in bytes. tx control pkts to cpu—Number of control packets transmitted; also shown in bytes. tx data pkts to cpu—Number of data packets transmitted; also shown in bytes. tx pkts shaped—Number of shaped data packets transmitted; also shown in bytes. tx cells to fabric—Number of cells that were transmitted to the switch fabric; also shown in bytes.

show controllers ingressq statistics

Field	Description
Ingressq Drops	<p>Displays the following ingress queue drop statistics:</p> <ul style="list-style-type: none"> • length error drops - PSE—Number of packets that were dropped by the PSE due to length errors. • length error drops - Cpuctrl—Number of packets that were dropped by the CPU controller due to length errors. • crc error drops - PSE—Number of packets that were dropped by the PSE due to CRC errors. • crc error drops - Cpuctrl—Number of packets that were dropped by the CPU controller due to CRC errors • OOR error drops - PSE—Number of packets that were dropped by the PSE due to OOR errors. • OOR error drops - Cpuctrl—Number of packets that were dropped by the CPU controller due to OOR errors. • discard drops—Number of packets that were discarded. • tail drops—Number of packets discarded for this class because the queue was full. • tail drops - no QE—Number of packets dropped due to unavailability of the ingress Queue Engine (QE). • cell drops—Number of cells that were dropped by the ingress queue.

show controllers ingressq vports

To display information about the ingressq virtual ports and its parameters that have been created for the ingressq interfaces, use the **show controllers ingressq vports** command in EXEC mode.

show controllers ingressq vports {port_handle | all} [location node-id]

Syntax Description	<p>port_handle Specific virtual port or range of ports. Range is from 0 to 4294967295.</p> <p>all Indicates that you want to display ingressq virtual ports.</p> <p>location node-id Identifies the location of the ingress queue whose statistics you want to display. The <i>node-id</i> is expressed in the <i>rack/slot/module</i> notation.</p>						
Command Default	No default behavior or values						
Command Modes	EXEC mode						
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.2</td><td>This command was introduced .</td></tr> <tr> <td>Release 3.8.0</td><td>The <i>port handle</i> argument range of 0 to 4294967295 was added.</td></tr> </tbody> </table>	Release	Modification	Release 3.2	This command was introduced .	Release 3.8.0	The <i>port handle</i> argument range of 0 to 4294967295 was added.
Release	Modification						
Release 3.2	This command was introduced .						
Release 3.8.0	The <i>port handle</i> argument range of 0 to 4294967295 was added.						
Usage Guidelines	No specific guidelines impact the use of this command.						
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>interface read</td><td></td></tr> <tr> <td>drivers read</td><td></td></tr> </tbody> </table>	Task ID	Operations	interface read		drivers read	
Task ID	Operations						
interface read							
drivers read							

Examples

The following example shows how to display a list of ingressq virtual ports:

```
RP/0/RP0/CPU0:router# show controllers ingressq vports all location 0/1/CPU0

ingressq virtual ports:
bw (kbps), bs (usec), quant(10s of 2*Fab MTU).
name      port-# intf-hd   def-q    # Qs  rc  max-bw   max-bs   quant  o
-----
default_port  8  0x11800c0  32      1   6  2396160  74924   48  hfr
default_port  9  0x1180060  33      1   6  149760   5724    2   hfr
default_port  10 0x1180100  34      1   6  1000192  37152   19  hfr
default_port  11 0x1180120  35      1   6  1000192  37152   19  hfr
default_port  12 0x1180140  36      1   6  1000192  37152   19  hfr
default_port  13 0x1180160  37      1   6  1000192  37152   19  hfr
default_port  14 0x1180180  38      1   6  1000192  37152   19  hfr
default_port  15 0x11801a0  39      1   6  1000192  37152   19  hfr
default_port  16 0x11801c0  40      1   6  1000192  37152   19  hfr
default_port  17 0x11801e0  41      1   6  1000192  37152   19  hfr
```

```
show controllers ingressq vports
```

default_port	18	0x11800e0	42	1	6	10000128	385040	200	hfr
default_port	19	0x1180240	43	1	6	2396160	74924	48	hfr
default_port	20	0x11802a0	44	1	6	149760	5724	2	hfr
default_port	21	0x1180300	45	1	6	2396160	74924	48	hfr
default_port	22	0x1180360	46	1	6	149760	5724	2	hfr
default_port	23	0x11803c0	47	1	6	2396160	74924	48	hfr
default_port	24	0x1180420	48	1	6	149760	5724	2	hfr
default_port	25	0x80050	49	1	6	4792320	151108	95	BM-L
default_port	26	0x80070	50	1	12	2000000	74924	40	BM-L
	-								



Tech-Support Commands

This module describes commands used for displaying the output of **show** commands using Cisco IOS XR software software. The command output varies depending on the router platform and configuration.

The **show tech-support** commands all display common data from commands such as **show version**. Each **show tech-support** command also generates and gathers relevant data for a specific area. This data includes trace output to collect debugging information available in the specific area of interest.

To use commands of this module, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using any command, contact your AAA administrator for assistance.

- [show system verify, on page 265](#)
- [show tech-support, on page 269](#)
- [show tech-support aps, on page 272](#)
- [show tech-support asic , on page 285](#)
- [show tech-support bcdl , on page 287](#)
- [show tech-support bundles, on page 289](#)
- [show tech-support cef, on page 291](#)
- [show tech-support cfgmgr, on page 294](#)
- [show tech-support chdlc, on page 296](#)
- [show tech-support control-ethernet , on page 298](#)
- [show tech-support custom source-file, on page 303](#)
- [show tech-support dsc, on page 305](#)
- [show tech-support ethernet, on page 310](#)
- [show tech-support fabric , on page 314](#)
- [show tech-support gsp , on page 317](#)
- [show tech-support igmp snooping, on page 320](#)
- [show tech-support install, on page 328](#)
- [show tech-support l2tp, on page 331](#)
- [show tech-support l2vpn, on page 336](#)
- [show tech-support lrd, on page 342](#)
- [show tech-support mpls ldp, on page 354](#)
- [show tech-support mpls optical-uni, on page 356](#)
- [show tech-support mpls rsvp, on page 358](#)
- [show tech-support mpls traffic-eng, on page 364](#)
- [show tech-support multicast , on page 369](#)

- [show tech-support netflow](#), on page 373
- [show tech-support nrs](#), on page 375
- [show tech-support password](#), on page 377
- [show tech-support pfi](#), on page 379
- [show tech-support placement](#), on page 381
- [show tech-support platform](#) , on page 384
- [show tech-support pos](#), on page 388
- [show tech-support ppp](#), on page 393
- [show tech-support qos](#), on page 396
- [show tech-support rdfsfs](#), on page 398
- [show tech-support rib](#), on page 400
- [show tech-support routing bfd](#), on page 402
- [show tech-support routing isis](#), on page 405
- [show tech-support routing ospf](#), on page 407
- [show tech-support routing ospfv3](#), on page 410
- [show tech-support routing rpl](#) , on page 412
- [show tech-support serial](#), on page 414
- [show tech-support sanitized](#), on page 417
- [show tech-support services](#), on page 419
- [show tech-support snmp](#), on page 421
- [show tech-support spaipc](#), on page 423
- [show tech-support sysdb](#), on page 428
- [show tech-support terminal](#), on page 430
- [show tech-support tty](#), on page 435
- [show tty details](#), on page 437

show system verify

To verify the system parameters, use the **show system verify** command in EXEC mode.

show system verify [{start | restart [detail]}]

Syntax Description	start report detail	(Optional) Performs an initial analysis of the system and stores the information for subsequent verification. (Optional) Generates a report for the system verification process. (Optional) Generates a detailed report for the system verification process.
Command Default	No default behavior or values	
Command Modes	EXEC mode	
Command History	Release	Modification
	Release 3.2 This command was introduced.	
Usage Guidelines	You must run the show system verify command with the start keyword before generating any reports.	
Task ID	Task ID	Operations
	system read	

Examples

The following example shows how to prepare for system verification:

```
RP/0/RP0/CPU0:router# show system verify start
Storing initial router status ...
done.
```

The following example shows output from running the **show system verify** command:

```
RP/0/RP0/CPU0:router# show system verify
Getting current router status ...
System Verification Report
=====
- Verifying Memory Usage : [OK]
- Verified Memory Usage
```

show system verify

```

- Verifying CPU Usage : [OK]
- Verified CPU Usage

- Verifying Blocked Processes : [OK]
- Verified Blocked Processes

- Verifying Aborted Processes : [OK]
- Verified Aborted Processes

- Verifying Crashed Processes : [OK]
- Verified Crashed Processes

- Verifying LC Status : [OK]
- Verified LC Status

- Verifying QNET Status : [OK]
Unable to get current LC status info
- Verified QNET Status : [FAIL]

- Verifying GSP Fabric Status : [OK]
- Verified GSP Fabric Status

- Verifying GSP Ethernet Status : [OK]
  gsp WARNING messages for router
  Current set of gsp ping nodes does not match initial set of nodes
- Verified GSP Ethernet Status : [WARNING]

- Verifying POS interface Status : [OK]
- Verified POS interface Status

- Verifying TenGigE interface Status : [OK]
- Verified TenGigE interface Status

- Verifying TCP statistics : [OK]
- Verified TCP statistics

- Verifying UDP statistics : [OK]
  tcp_udp_raw WARNING messages for router
  UDP Packets sent has not increased during this period.
- Verified UDP statistics : [WARNING]

- Verifying RAW statistics : [OK]
- Verified RAW statistics

- Verifying RIB Status : [OK]
- Verified RIB Status

- Verifying CEF Status : [OK]
- Verified CEF Status

- Verifying CEF Consistency Status : [OK]
- Verified CEF Consistency Status

- Verifying BGP Status : [OK]
- Verified BGP Status

- Verifying ISIS Status : [OK]
- Verified ISIS Status

- Verifying OSPF Status : [OK]
- Verified OSPF Status

- Verifying Syslog Messages : [OK]
- Verified Syslog Messages

```

System may not be stable. Please look into WARNING messages.

This table describes the significant fields shown in the display.

Table 38: show system verify Field Descriptions

Field	Description
Type	Type of memory

Field	Description
Initial	Initial usage determined when the command is run with the start keyword
Current	Current usage
Application	Memory used for applications
Available	Memory available for applications
Physical	Total physical memory
nodes	Devices in the system such as linecards, route processors, fabric cards, and so forth
blocked processes	Number of blocked processes on the router
aborted processes	Number of terminated processes on the router
crashed processes	Number of crashed processes on the router
LC Status on Router	Linecard status
QNET Status on router	Internal communications protocol status
GSP Fabric Status on router	Internal communications protocol status
GSP Ethernet Status on router	Internal communications protocol status
POS Interface Status on router	Packet-over-SONET status
Protocol	Protocol on the interface
IP address	IP Address of the interface
Encapsulation	Encapsulation method used on the interface
MTU	Maximum Transmission Units for the interface
Keep alive	Keep alives messages on the interface
Packets Input	Total number packets input to the interface
Bytes Input	Total number of bytes input to the interface
Packets Output	Total number of packets output by the interface
Byte Output	Total number of bytes output by the interface
TenGigE interface Status on router	10 Gigabit Ethernet interface status
TCP statistics on router	Transmission Control Protocol statistics
UDP statistics on router	User Datagram Protocol statistics
RAW statistics on router	RAW statistics

show system verify

Field	Description
PCBs	Protocol Control Blocks
RIB Status on router	Routing Information Base status
CEF Status on node.....	Cisco Express Forwarding status
CEF Consistency Status on router	Cisco Express Forwarding consistency status
BGP Status on router	Border Gateway Protocol status
neighbors	Number of BGP neighbors
established	Number of BGP neighbors in ‘established’ state
ISIS Status on router	Intermediate System-to-Intermediate System status
up	Number of ISIS links up
failed	Number of failed ISIS links
init	Initial number of ISIS links
OSPF Status on router	Open Shortest Path First status
interfaces	Number of interfaces configured in OSPF
interfaces_up	Number of interfaces configured in OSPF that are in the ‘up’ state
virtual_int	Number of virtual interfaces
neighbors	Number of OSPF neighbors configured
neighbors_adj	Number of OSPF configured neighbors that are ‘adjacent’
Syslog Messages on router	Number of syslog messages

show tech-support

To automatically run **show** commands that display system information, use the **show tech-support** command in the EXEC mode.

```
show tech-support [password] {file send-to [background] [{compressed | uncompressed}]} [location node-id]
```

Syntax Description	
password	(Optional) Leaves passwords and other security information in the output. If not used, passwords and other security-sensitive information in the output are replaced with the label "<removed>".
file	Specifies that the command output is saved to a specified file.
<i>send-to</i>	Name of the file. The following valid options are listed: <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • compactflash: <i>filename</i> • disk0: <i>filename</i> • disk1: <i>filename</i> • flash: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • nvram: <i>filename</i> • rcp: <i>filename</i> • slot0: <i>filename</i> • slot1: <i>filename</i> • tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
location node-id	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default The command output is not compressed.

Passwords and other security information are not displayed.

Command Modes Admin Configuration mode

EXEC mode

show tech-support

Command History	Release	Modification
	Release 2.0	This command was introduced.
Usage Guidelines	<p>This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with .tgz extension. You can share this file with Cisco Technical Support. To share, use the copy command to copy the .tgz file to a server or local machine. For example, copy harddisk:/showtech/name.tgz tftp://server_path.</p> <p>For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.</p>	



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.



Note This command is not required during normal use of the router.

The following **show** commands run automatically when you run the **show tech-support** command:

- **show running-config**
- **show version**
- **show interfaces**
- **show arm summary**
- **show arm conflicts**
- **show install**
- **show filesystem**
- **dir location all: pwd = disk0:**
- **dir location all: pwd = bootflash:**
- **run top_procs**
- **show processes aborts location all**
- **show processes blocked location all**
- **show placement nodes all**
- **show placement policy program all**
- **show memory summary location all**
- **show lpts ifib brief**
- **show im database all**
- **run gsp_show**
- **show context all location all**
- **show redundancy**
- **show dsc all**
- **show lr all**
- **show ipv4 traffic**
- **show ipv6 traffic**

- **show logging**
- **show inventory**
- **show packet-memory**
- **show packet-memory corrupt**
- **show packet-memory failures**
- **show platform**
- **show led**
- **show buffer reserved-memory**
- **show controllers fabricq eio links all**
- **show controllers pse eio links all**
- **show controllers plim asic pla eio links all**
- **show controllers fia eio links all**
- **show controllers cpuctrl summary**
- **admin show controllers fabric plane all**
- **admin show controllers fabric plane all stat**
- **admin show controllers fabric sfe fabricq all detail**
- **admin show controllers fabric sfe ingressq all detail**
- **admin show controllers fabric sfe s1 all detail**
- **admin show controllers fabric sfe s2 all detail**
- **admin show controllers fabric sfe s3 all detail**
- **show environment all**

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
basic-services or cisco-support	read	

show tech-support aps

show tech-support aps

To automatically run **show** commands that display debugging information related to automatic protection switching (APS), use the **show tech-support aps** command in the EXEC mode. This command collects APS traces and sonet local traces across all locations and also **show controller** and **show aps** commands for all ports and groups.

```
show tech-support aps { file send-to [background | compressed | uncompressed ]} [location node-id][rack rack-id][{show-only}]
```

Syntax Description	
file	Specifies that the command output is saved to a specified file.
send-to	Name of the file. The following valid options are listed: <ul style="list-style-type: none">• <i>filename</i>• bootflash: <i>filename</i>• compactflash: <i>filename</i>• disk0: <i>filename</i>• disk1: <i>filename</i>• flash: <i>filename</i>• ftp: <i>filename</i>• harddisk: <i>filename</i>• harddiska: <i>filename</i>• lcdisk0: <i>filename</i>• nvram: <i>filename</i>• rcp: <i>filename</i>• slot0: <i>filename</i>• slot1: <i>filename</i>• tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
show-only	(Optional) Displays the show commands with no trace for APS debugging.
rack rack-id	(Optional) Specifies the rack.
location	(Optional) Specifies a node.
node-id	(Optional) Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
Command Default	The command output is not compressed.
Command Modes	EXEC mode

Command History	Release	Modification
	Release 3.9.0	This command was introduced.

Usage Guidelines**Tip**

This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support aps** command to run **show** commands that display APS debugging information. This command generates information that can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.

**Note**

This command is not required during normal use of the router.

Task ID**Task ID Operations**

Task ID	Operations
basic-services	read

Examples

The following example shows a truncated output of the **show tech-support aps** command:

```
RP/0/RP0/CPU0:router# show tech-support aps show-only terminal
-----
show tech-support aps
-----
----- show aps -----
no aps group found

----- show aps agents -----
APS shows Agent: sysdb_datalist failed: ('sysdb' detected the 'warning' conditi)
----- show controller sonet * -----
Port SONET0/6/0/0:
Status: Up
```

show tech-support aps

```

Loopback: None

SECTION
    LOF = 0          LOS     = 1                      BIP(B1) = 0
LINE
    AIS = 0          RDI     = 1                      FEBE = 0          BIP(B2) = 0
PATH
    AIS = 0          RDI     = 1                      FEBE = 0          BIP(B3) = 0
    LOP = 0          NEWPTR = 0                      PSE   = 0          NSE   = 0
    PLM = 0          TIM     = 0                      UNEQ = 0

Line delays trigger:      0 ms clear: 10000 ms
Path delays trigger:      0 ms,      0 ms (configured), clear: 10000 ms
Last clearing of "show controllers SONET" counters never

Detected Alarms: None
Asserted Alarms: None
Mask for Detected->Asserted: None
Detected Alerts: None
Reported Alerts: None
Mask for Detected->Reported: None
Alarm reporting enabled for: SLOS SLOF SF_BER PLOP
Alert reporting enabled for: B1-TCA B2-TCA B3-TCA

Framing: SONET
SPE Scrambling: Enabled
C2 State: Stable C2_rx = 0x16 (22) C2_tx = 0x16 (22) / Scrambling Derived
S1S0(tx): 0x0 S1S0(rx): 0x0 / Framing Derived

PATH TRACE BUFFER : STABLE
    Remote hostname : P11_CRS-4
    Remote interface: POS0/2/0/0
    Remote IP addr  : 10.111.4.11

APS
No APS Group Configured
Rx(K1/K2) : 0x00/0x00
Tx(K1/K2) : 0x00/0x00
Remote Rx(K1/K2): 01/0    Remote Tx(K1/K2): 01/0

BER thresholds: SF = 10e-3 SD = 10e-6
TCA thresholds: B1 = 10e-6 B2 = 10e-6 B3 = 10e-6

Optics type: OC3 SR-1/STM1 MM
Clock source: internal (actual) internal (configured)
Rx S1: 0xf Tx S1: 0xf

Optical Power Monitoring (accuracy: +/- 1dB)
    Rx power = 0.0160 mW, -18.0 dBm
    Tx power = 0.0000 mW, -inf dBm
    Tx laser current bias = 0.0 mA

Port SONET0/6/0/1:

Status: Up

Loopback: None

SECTION
    LOF = 0          LOS     = 1                      BIP(B1) = 0
LINE
    AIS = 0          RDI     = 0                      FEBE = 0          BIP(B2) = 0
PATH

```

```

AIS = 0          RDI      = 0          FEBE    = 0          BIP(B3) = 0
LOP = 0          NEWPTR   = 0          PSE     = 0          NSE     = 0
PLM = 0          TIM      = 0          UNEQ    = 0

Line delays trigger:      0 ms clear: 10000 ms
Path delays trigger:      0 ms,      0 ms (configured), clear: 10000 ms
Last clearing of "show controllers SONET" counters never

Detected Alarms: None
Asserted Alarms: None
Mask for Detected->Asserted: None
Detected Alerts: None
Reported Alerts: None
Mask for Detected->Reported: None
Alarm reporting enabled for: SLOS SLOF SF_BER PLOP
Alert reporting enabled for: B1-TCA B2-TCA B3-TCA

Framing: SONET
SPE Scrambling: Enabled
C2 State: Stable C2_rx = 0x16 (22) C2_tx = 0x16 (22) / Scrambling Derived
S1S0(tx): 0x0 S1S0(rx): 0x0 / Framing Derived

PATH TRACE BUFFER : STABLE
  Remote hostname : P2_CRS-8
  Remote interface: POS0/6/0/1
  Remote IP addr : 10.12.8.2

APS
No APS Group Configured
  Protect Channel 0 DISABLED
  Rx(K1/K2) : 0x00/0x00
  Tx(K1/K2) : 0x00/0x00
  Remote Rx(K1/K2): 01/0  Remote Tx(K1/K2): 01/0

BER thresholds: SF = 10e-3 SD = 10e-6
TCA thresholds: B1 = 10e-6 B2 = 10e-6 B3 = 10e-6

Optics type: OC3 SR-1/STM1 MM
Clock source: internal (actual) internal (configured)
Rx S1: 0xf Tx S1: 0xf

Optical Power Monitoring (accuracy: +/- 1dB)
  Rx power = 0.0223 mW, -16.5 dBm
  Tx power = 0.0000 mW, -inf dBm
  Tx laser current bias = 0.0 mA

Port SONET0/6/0/2:

Status: Down

Loopback: None

SECTION
  LOF = 0          LOS      = 1          BIP(B1) = 0
LINE
  AIS = 0          RDI      = 0          FEBE    = 0          BIP(B2) = 0
PATH
  AIS = 0          RDI      = 0          FEBE    = 0          BIP(B3) = 0
  LOP = 0          NEWPTR   = 0          PSE     = 0          NSE     = 0
  PLM = 0          TIM      = 0          UNEQ    = 0

Line delays trigger:      0 ms clear: 10000 ms
Path delays trigger:      0 ms,      0 ms (configured), clear: 10000 ms

```

show tech-support aps

```
Last clearing of "show controllers SONET" counters never

Detected Alarms: SLOS
Asserted Alarms: SLOS
Mask for Detected->Asserted: SLOF LAIS SF_BER SD_BER LRD1 PLOP PAIS PRDI PUNEQ
Detected Alerts: None
Reported Alerts: None
Mask for Detected->Reported: B1-TCA B2-TCA B3-TCA
Alarm reporting enabled for: SLOS SLOF SF_BER PLOP
Alert reporting enabled for: B1-TCA B2-TCA B3-TCA

Framing: SONET
SPE Scrambling: Enabled
C2 State: Stable C2_rx = 0x6D (109) C2_tx = 0x16 (22) / Scrambling Derived
S1S0(tx): 0x0 S1S0(rx): 0x2 / Framing Derived

PATH TRACE BUFFER : UNSTABLE
  Remote hostname :
  Remote interface:
  Remote IP addr :

APS
No APS Group Configured
  Protect Channel 0 DISABLED
  Rx(K1/K2) : 0x00/0x00
  Tx(K1/K2) : 0x00/0x00
  Remote Rx(K1/K2): 1/ Remote Tx(K1/K2): 1/

BER thresholds: SF = 10e-3 SD = 10e-6
TCA thresholds: B1 = 10e-6 B2 = 10e-6 B3 = 10e-6

Optics type: None
Clock source: internal (actual) line (configured)
Rx S1: 0xe Tx S1: 0xf

Optical Power Monitoring (accuracy: +/- 1dB)
  Not Supported

Port SONET0/6/0/3:
  Status: Up

  Loopback: None

SECTION
  LOF = 0      LOS     = 0          BIP(B1) = 0
LINE
  AIS = 0      RDI     = 0          FEBE   = 0          BIP(B2) = 0
PATH
  AIS = 0      RDI     = 0          FEBE   = 0          BIP(B3) = 0
  LOP = 0      NEWPTR = 0          PSE    = 0          NSE    = 0
  PLM = 0      TIM     = 0          UNEQ   = 0

Line delays trigger: 0 ms clear: 10000 ms
Path delays trigger: 0 ms, 0 ms (configured), clear: 10000 ms
Last clearing of "show controllers SONET" counters never

Detected Alarms: None
Asserted Alarms: None
Mask for Detected->Asserted: None
Detected Alerts: None
Reported Alerts: None
Mask for Detected->Reported: None
```

```

Alarm reporting enabled for: SLOS SLOF SF_BER PLOP
Alert reporting enabled for: B1-TCA B2-TCA B3-TCA

Framing: SONET
SPE Scrambling: Enabled
C2 State: Stable C2_rx = 0x16 (22) C2_tx = 0x16 (22) / Scrambling Derived
S1S0(tx): 0x0 S1S0(rx): 0x0 / Framing Derived

PATH TRACE BUFFER : STABLE
  Remote hostname : PE21_C12406
  Remote interface: POS0/2/0/3
  Remote IP addr : 10.121.4.21

APS
No APS Group Configured
  Protect Channel 0 DISABLED
  Rx(K1/K2) : 0x00/0x00
  Tx(K1/K2) : 0x00/0x00
  Remote Rx(K1/K2): 01/0   Remote Tx(K1/K2): 01/0

BER thresholds: SF = 10e-3 SD = 10e-6
TCA thresholds: B1 = 10e-6 B2 = 10e-6 B3 = 10e-6

Optics type: OC3 SR-1/STM1 MM
Clock source: internal (actual) internal (configured)
Rx S1: 0xf Tx S1: 0xf

Optical Power Monitoring (accuracy: +/- 1dB)
  Rx power = 0.0206 mW, -16.9 dBm
  Tx power = 0.0000 mW, -inf dBm
  Tx laser current bias = 0.0 mA

Port SONET0/6/4/0:
Status: Down

Loopback: None

SECTION
  LOF = 0      LOS     = 1          BIP(B1) = 0
LINE
  AIS = 0      RDI     = 0          FEBE = 0          BIP(B2) = 0
PATH
  AIS = 0      RDI     = 0          FEBE = 0          BIP(B3) = 0
  LOP = 0      NEWPTR = 0          PSE   = 0          NSE    = 0
  PLM = 0      TIM     = 0          UNEQ = 0

Line delays trigger: 0 ms clear: 10000 ms
Path delays trigger: 0 ms, 0 ms (configured), clear: 10000 ms
Last clearing of "show controllers SONET" counters never

Detected Alarms: SLOS
Asserted Alarms: SLOS
Mask for Detected->Asserted: SLOF LAIS SF_BER SD_BER LRDI PLOP PAIS PRDI PUNEQ
Detected Alerts: None
Reported Alerts: None
Mask for Detected->Reported: B1-TCA B2-TCA B3-TCA
Alarm reporting enabled for: SLOS SLOF SF_BER PLOP
Alert reporting enabled for: B1-TCA B2-TCA B3-TCA

Framing: SONET
SPE Scrambling: Enabled
C2 State: Stable C2_rx = 0xFF (255) C2_tx = 0x16 (22) / Scrambling Derived

```

show tech-support aps

```

S1S0(tx): 0x0  S1S0(rx): 0x0 / Framing Derived

PATH TRACE BUFFER : UNSTABLE
  Remote hostname :
  Remote interface:
  Remote IP addr :

APS
No APS Group Configured
  Rx(K1/K2) : 0x00/0x00
  Tx(K1/K2) : 0x00/0x00
  Remote Rx(K1/K2): 1/      Remote Tx(K1/K2): 1/

BER thresholds: SF = 10e-3 SD = 10e-6
TCA thresholds: B1 = 10e-6 B2 = 10e-6 B3 = 10e-6

Optics type: None
Clock source: internal (actual) line (configured)
Rx S1: 0x0  Tx S1: 0xf

Optical Power Monitoring (accuracy: +/- 1dB)
Not Supported

Port SONET0/6/4/1:

Status: Down

Loopback: None

SECTION
  LOF = 0        LOS     = 1                      BIP(B1) = 0
LINE
  AIS = 0        RDI     = 0                      FEBE = 0          BIP(B2) = 0
PATH
  AIS = 0        RDI     = 0                      FEBE = 0          BIP(B3) = 0
  LOP = 0        NEWPTR = 0                      PSE   = 0          NSE    = 0
  PLM = 0        TIM     = 0                      UNEQ = 0

Line delays trigger:      0 ms clear: 10000 ms
Path delays trigger:      0 ms,      0 ms (configured), clear: 10000 ms
Last clearing of "show controllers SONET" counters never

Detected Alarms: SLOS
Asserted Alarms: SLOS
Mask for Detected->Asserted: SLOF LAIS SF_BER SD_BER LRDI PLOP PAIS PRDI PUNEQ
Detected Alerts: None
Reported Alerts: None
Mask for Detected->Reported: B1-TCA B2-TCA B3-TCA
Alarm reporting enabled for: SLOS SLOF SF_BER PLOP
Alert reporting enabled for: B1-TCA B2-TCA B3-TCA

Framing: SONET
SPE Scrambling: Enabled
C2 State: Stable C2_rx = 0xFF (255) C2_tx = 0x16 (22) / Scrambling Derived
S1S0(tx): 0x0  S1S0(rx): 0x0 / Framing Derived

PATH TRACE BUFFER : UNSTABLE
  Remote hostname :
  Remote interface:
  Remote IP addr :

APS
No APS Group Configured

```

```

Protect Channel 0 DISABLED
Rx(K1/K2) : 0x00/0x00
Tx(K1/K2) : 0x00/0x00
Remote Rx(K1/K2): 1/ Remote Tx(K1/K2): 1/

BER thresholds: SF = 10e-3 SD = 10e-6
TCA thresholds: B1 = 10e-6 B2 = 10e-6 B3 = 10e-6

Optics type: None
Clock source: internal (actual) line (configured)
Rx S1: 0x0 Tx S1: 0xf

Optical Power Monitoring (accuracy: +/- 1dB)
Not Supported

Port SONET0/6/4/2:

Status: Down

Loopback: None

SECTION
  LOF = 0      LOS    = 1                      BIP(B1) = 0
LINE
  AIS = 0      RDI    = 0          FEBE = 0      BIP(B2) = 0
PATH
  AIS = 0      RDI    = 0          FEBE = 0      BIP(B3) = 0
  LOP = 0      NEWPTR = 0        PSE   = 0      NSE    = 0
  PLM = 0      TIM    = 0          UNEQ = 0

Line delays trigger: 0 ms clear: 10000 ms
Path delays trigger: 0 ms, 0 ms (configured), clear: 10000 ms
Last clearing of "show controllers SONET" counters never

Detected Alarms: SLOS
Asserted Alarms: SLOS
Mask for Detected->Asserted: SLOF LAIS SF_BER SD_BER LRDI PLOP PAIS PRDI PUNEQ
Detected Alerts: None
Reported Alerts: None
Mask for Detected->Reported: B1-TCA B2-TCA B3-TCA
Alarm reporting enabled for: SLOS SLOF SF_BER PLOP
Alert reporting enabled for: B1-TCA B2-TCA B3-TCA

Framing: SONET
SPE Scrambling: Enabled
C2 State: Stable C2_rx = 0xEF (239) C2_tx = 0x16 (22) / Scrambling Derived
S1S0(tx): 0x0 S1S0(rx): 0x0 / Framing Derived

PATH TRACE BUFFER : UNSTABLE
  Remote hostname :
  Remote interface:
  Remote IP addr :

APS
No APS Group Configured
Protect Channel 0 DISABLED
Rx(K1/K2) : 0x00/0x00
Tx(K1/K2) : 0x00/0x00
Remote Rx(K1/K2): 1/ Remote Tx(K1/K2): 1/

BER thresholds: SF = 10e-3 SD = 10e-6
TCA thresholds: B1 = 10e-6 B2 = 10e-6 B3 = 10e-6

```

show tech-support aps

```

Optics type: None
Clock source: internal (actual) line (configured)
Rx S1: 0x0 Tx S1: 0xf

Optical Power Monitoring (accuracy: +/- 1dB)
Not Supported

Port SONET0/6/4/3:

Status: Down

Loopback: None

SECTION
    LOF = 0      LOS     = 1                      BIP(B1) = 0
LINE
    AIS = 0      RDI     = 0                      FEBE   = 0          BIP(B2) = 0
PATH
    AIS = 0      RDI     = 0                      FEBE   = 0          BIP(B3) = 0
    LOP = 0      NEWPTR = 0                      PSE    = 0          NSE    = 0
    PLM = 0      TIM     = 0                      UNEQ   = 0

Line delays trigger:      0 ms clear: 10000 ms
Path delays trigger:      0 ms,      0 ms (configured), clear: 10000 ms
Last clearing of "show controllers SONET" counters never

Detected Alarms: SLOS
Asserted Alarms: SLOS
Mask for Detected->Asserted: SLOF LAIS SF_BER SD_BER LRD1 PLOP PAIS PRDI PUNEQ
Detected Alerts: None
Reported Alerts: None
Mask for Detected->Reported: B1-TCA B2-TCA B3-TCA
Alarm reporting enabled for: SLOS SLOF SF_BER PLOP
Alert reporting enabled for: B1-TCA B2-TCA B3-TCA

Framing: SONET
SPE Scrambling: Enabled
C2 State: Stable C2_rx = 0xFF (255) C2_tx = 0x16 (22) / Scrambling Derived
S1S0(tx): 0x0 S1S0(rx): 0x0 / Framing Derived

PATH TRACE BUFFER : UNSTABLE
    Remote hostname :
    Remote interface:
    Remote IP addr :

APS
No APS Group Configured
Protect Channel 0 DISABLED
Rx(K1/K2) : 0x00/0x00
Tx(K1/K2) : 0x00/0x00
Remote Rx(K1/K2): 1/ Remote Tx(K1/K2): 1/

BER thresholds: SF = 10e-3 SD = 10e-6
TCA thresholds: B1 = 10e-6 B2 = 10e-6 B3 = 10e-6

Optics type: None
Clock source: internal (actual) line (configured)
Rx S1: 0x0 Tx S1: 0xf

Optical Power Monitoring (accuracy: +/- 1dB)
Not Supported

```

```

Port SONET0/6/4/4:

Status: Up

Loopback: None

SECTION
    LOF = 0          LOS     = 0          BIP(B1) = 0
LINE
    AIS = 0          RDI     = 0          FEBE   = 0          BIP(B2) = 0
PATH
    AIS = 0          RDI     = 0          FEBE   = 0          BIP(B3) = 0
    LOP = 0          NEWPTR = 0          PSE    = 0          NSE    = 0
    PLM = 0          TIM     = 0          UNEQ   = 0

Line delays trigger:      0 ms clear: 10000 ms
Path delays trigger:      0 ms,           0 ms (configured), clear: 10000 ms
Last clearing of "show controllers SONET" counters never

Detected Alarms: None
Asserted Alarms: None
Mask for Detected->Asserted: None
Detected Alerts: None
Reported Alerts: None
Mask for Detected->Reported: None
Alarm reporting enabled for: SLOS SLOF SF BER PLOP
Alert reporting enabled for: B1-TCA B2-TCA B3-TCA

Framing: SONET
SPE Scrambling: Enabled
C2 State: Stable C2_rx = 0x16 (22) C2_tx = 0x16 (22) / Scrambling Derived
S1S0(tx): 0x0 S1S0(rx): 0x0 / Framing Derived

PATH TRACE BUFFER : STABLE
    Remote hostname : P4_C12810
    Remote interface: POS0/3
    Remote IP addr : 10.14.4.4

APS
No APS Group Configured
    Protect Channel 0 DISABLED
    Rx(K1/K2) : 0x00/0x00
    Tx(K1/K2) : 0x00/0x00
    Remote Rx(K1/K2): F1/F    Remote Tx(K1/K2): 00/0

BER thresholds: SF = 10e-3 SD = 10e-6
TCA thresholds: B1 = 10e-6 B2 = 10e-6 B3 = 10e-6

Optics type: OC12 SR-1/STM4 MM
Clock source: internal (actual) internal (configured)
Rx S1: 0xf Tx S1: 0xf

Optical Power Monitoring (accuracy: +/- 1dB)
    Rx power = 0.0184 mW, -17.4 dBm
    Tx power = 0.0000 mW, -inf dBm
    Tx laser current bias = 0.0 mA

Port SONET0/6/4/5:

Status: Up

Loopback: None

```

show tech-support aps

```

SECTION
    LOF = 0      LOS     = 1                      BIP(B1) = 0
LINE
    AIS = 0      RDI     = 0                      FEBE = 0          BIP(B2) = 0
PATH
    AIS = 0      RDI     = 0                      FEBE = 0          BIP(B3) = 0
    LOP = 0      NEWPTR = 0                      PSE   = 0          NSE   = 0
    PLM = 0      TIM     = 0                      UNEQ = 0

Line delays trigger:      0 ms clear: 10000 ms
Path delays trigger:      0 ms,      0 ms (configured), clear: 10000 ms
Last clearing of "show controllers SONET" counters never

Detected Alarms: None
Asserted Alarms: None
Mask for Detected->Asserted: None
Detected Alerts: None
Reported Alerts: None
Mask for Detected->Reported: None
Alarm reporting enabled for: SLOS SLOF SF_BER PLOP
Alert reporting enabled for: B1-TCA B2-TCA B3-TCA

Framing: SONET
SPE Scrambling: Enabled
C2 State: Stable C2_rx = 0x16 (22) C2_tx = 0x16 (22) / Scrambling Derived
S1S0(tx): 0x0 S1S0(rx): 0x0 / Framing Derived

PATH TRACE BUFFER : STABLE
    Remote hostname : P2_CRS-8
    Remote interface: POS0/6/4/5
    Remote IP addr : 10.12.4.2

APS
No APS Group Configured
    Protect Channel 0 DISABLED
    Rx(K1/K2) : 0x00/0x00
    Tx(K1/K2) : 0x00/0x00
    Remote Rx(K1/K2): 01/0    Remote Tx(K1/K2): 01/0

BER thresholds: SF = 10e-3 SD = 10e-6
TCA thresholds: B1 = 10e-6 B2 = 10e-6 B3 = 10e-6

Optics type: OC12 SR-1/STM4 MM
Clock source: internal (actual) internal (configured)
Rx S1: 0xf Tx S1: 0xf

Optical Power Monitoring (accuracy: +/- 1dB)
    Rx power = 0.0193 mW, -17.1 dBm
    Tx power = 0.0000 mW, -inf dBm
    Tx laser current bias = 0.0 mA

Port SONET0/6/4/6:
Status: Up
Loopback: None

SECTION
    LOF = 1      LOS     = 0                      BIP(B1) = 0
LINE
    AIS = 0      RDI     = 0                      FEBE = 0          BIP(B2) = 0
PATH
    AIS = 0      RDI     = 0                      FEBE = 0          BIP(B3) = 0

```

```

    LOP = 0          NEWPTR = 0          PSE   = 0          NSE      = 0
    PLM = 0          TIM     = 0          UNEQ  = 0

Line delays trigger:      0 ms clear: 10000 ms
Path delays trigger:      0 ms,      0 ms (configured), clear: 10000 ms
Last clearing of "show controllers SONET" counters never

Detected Alarms: None
Asserted Alarms: None
Mask for Detected->Asserted: None
Detected Alerts: None
Reported Alerts: None
Mask for Detected->Reported: None
Alarm reporting enabled for: SLOS SLOF SF_BER PLOP
Alert reporting enabled for: B1-TCA B2-TCA B3-TCA

Framing: SONET
SPE Scrambling: Enabled
C2 State: Stable C2_rx = 0x16 (22) C2_tx = 0x16 (22) / Scrambling Derived
S1S0(tx): 0x0 S1S0(rx): 0x0 / Framing Derived

PATH TRACE BUFFER : STABLE
  Remote hostname : P3_C12008
  Remote interface: POS5/2
  Remote IP addr  : 10.13.4.3

APS
No APS Group Configured
  Protect Channel 0 DISABLED
  Rx(K1/K2) : 0x00/0x00
  Tx(K1/K2) : 0x00/0x00
  Remote Rx(K1/K2): 00/00  Remote Tx(K1/K2): 00/00

BER thresholds: SF = 10e-3 SD = 10e-6
TCA thresholds: B1 = 10e-6 B2 = 10e-6 B3 = 10e-6

Optics type: OC12 SR-1/STM4 MM
Clock source: internal (actual) internal (configured)
Rx S1: 0xf Tx S1: 0xf

Optical Power Monitoring (accuracy: +/- 1dB)
  Rx power = 0.0142 mW, -18.5 dBm
  Tx power = 0.0000 mW, -inf dBm
  Tx laser current bias = 0.0 mA

Port SONET0/6/4/7:

Status: Down

Loopback: None

SECTION
  LOF = 0          LOS     = 1          BIP(B1) = 0
LINE
  AIS = 0          RDI     = 0          FEBE   = 0          BIP(B2) = 0
PATH
  AIS = 0          RDI     = 0          FEBE   = 0          BIP(B3) = 0
  LOP = 0          NEWPTR = 0          PSE    = 0          NSE      = 0
  PLM = 0          TIM     = 0          UNEQ  = 0

Line delays trigger:      0 ms clear: 10000 ms
Path delays trigger:      0 ms,      0 ms (configured), clear: 10000 ms
Last clearing of "show controllers SONET" counters never

```

show tech-support aps

```

Detected Alarms: SLOS
Asserted Alarms: SLOS
Mask for Detected->Asserted: SLOF LAIS SF_BER SD_BER LRDI PLOP PAIS PRDI PUNEQ
Detected Alerts: None
Reported Alerts: None
Mask for Detected->Reported: B1-TCA B2-TCA B3-TCA
Alarm reporting enabled for: SLOS SLOF SF_BER PLOP
Alert reporting enabled for: B1-TCA B2-TCA B3-TCA

Framing: SONET
SPE Scrambling: Enabled
C2 State: Stable   C2_rx = 0xF7 (247)   C2_tx = 0x16 (22) / Scrambling Derived
S1S0(tx): 0x0   S1S0(rx): 0x0 / Framing Derived

PATH TRACE BUFFER : UNSTABLE
  Remote hostname :
  Remote interface:
  Remote IP addr :

APS
No APS Group Configured
  Protect Channel 0  DISABLED
  Rx(K1/K2) : 0x00/0x00
  Tx(K1/K2) : 0x00/0x00
  Remote Rx(K1/K2):  1/    Remote Tx(K1/K2):  1/

BER thresholds:  SF = 10e-3  SD = 10e-6
TCA thresholds:  B1 = 10e-6  B2 = 10e-6  B3 = 10e-6

Optics type: None
Clock source: internal (actual) internal (configured)
Rx S1: 0x0  Tx S1: 0xf

Optical Power Monitoring (accuracy: +/- 1dB)
  Not Supported
-----  

      show tech-support aps complete  

-----
```

show tech-support asic

To save a snapshot of ASIC information specific to ASIC debugging, use the **show tech-support asic** command in Admin Configuration mode.

```
show tech-support asic {name | all | cpuctrl | fabricq | ingressq | pse} {directory path | instance instance directory path} [location node-id]
```

Syntax Description

name	ASIC name.
all	Specifies all ASICs.
cpuctrl	Specifies CPU controller ASICs.
fabricq	Specifies fabric queue ASICs.
ingressq	Specifies ingress queue ASICs.
pse	Specifies power sourcing equipment ASICs.
directory	Directory to save the ASIC snapshot in.
path	Path of the directory.
instance	Specifies an ASIC instance.
instance	ASIC instance. Range is 0 to 8.
location	(Optional) Specifies a node.
node-id	(Optional) Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Default

No default behavior or values

Command Modes

Admin Configuration mode

Command History

Release	Modification
---------	--------------

Release 3.4.0 This command was introduced.

Usage Guidelines

Use the **show tech-support asic** command to save an ASIC snapshot. This command generates ASIC information that can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.



Note

This command is not required during normal use of the router.

The following **show** commands run automatically when you run the **show tech-support ASIC** command:

show tech-support asic

- **show hfr**
- **show controllers ingressq statistics location**
- **show controllers ingressq block fqm queues location**
- **show asic-errors ingressq 0 all location**
- **show controllers ingressq block brm location**
- **show controllers ingressq block brm aggrbarr location**
- **show controllers ingressq fabric detail location**
- **show controllers ingressq fabric links location**
- **show controllers ingressq fabric pla location**
- **show controllers ingressq eio links all location**
- **show controllers ingressq interfaces all location**
- **show controllers ingressq vports all location**
- **show controllers ingressq queues all location**
- **show controllers ingressq block ssm bpmem 0 location**
- **show controllers asic sprayer in nn location | exclude nn**
- **show controllers fabricq fabric-backpressure location**
- **show controllers fabricq link-info all location**
- **show controllers cputctrl clients cdma ingressq active location**
- **show controllers cputctrl clients cdma ingressq detail location**
- **show asic-errors pse 0 all location**

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task Operations ID
	admin read

Examples

The following example shows some of the **show tech-support asic** command output:

```
RP/0/RP0/CPU0:router(admin)# show tech-support asic all inst 0 dir net/node0_RP0_CPU0/
harddisk:/asic_snapshots/
results in following files being created with contents..
# pwd
/net/node0_RP0_CPU0/harddisk:/asic_snapshots
# ls -lrt
total 980
.
.
.
```

show tech-support bcdl

To automatically run `show` commands that display information specific to bulk content downloader (BCDL) debugging, use the `show tech-support bcdl` command in EXEC mode.

```
show tech-support bcdl [bcdl-group]
{ file send-to [background | compressed | uncompressed ]} [location node-id][rack rack-id]
```

Syntax Description					
<i>bcdl-group</i>	(Optional) Name of the BCDL group.				
file	Specifies that the command output is saved to a specified file.				
<i>send-to</i>	Name of the file. The following valid options are listed: <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • compactflash: <i>filename</i> • disk0: <i>filename</i> • disk1: <i>filename</i> • flash: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • nvram: <i>filename</i> • rep: <i>filename</i> • slot0: <i>filename</i> • slot1: <i>filename</i> • tftp: <i>filename</i> 				
background	(Optional) Specifies that the command runs in the background.				
compressed	(Optional) Displays compressed command output.				
uncompressed	(Optional) Displays the command output with no compression.				
location node-id	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
rack rack-id	(Optional) Specifies a list of racks.				
Command Default	The command output is not compressed.				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				

show tech-support bcdl

Usage Guidelines

This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with *.tgz* extension. You can share this file with Cisco Technical Support. To share, use the **copy** command to copy the *.tgz* file to a server or local machine. For example, **copy harddisk:/showtech/name.tgz tftp://server_path**.

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support bcdl** command to run **show** commands that display information specific to BCDL debugging. The BCDL is used to pass routing information from the Routing Information Base (RIB) to the linecards for Forwarding Information Base (FIB) processing. BCDL also allows Multiprotocol Label Switching (MPLS) to send label information to the FIB and allows Local Packet Transport Services (LPTS) to send information to the linecard processes.



Note This command is not required during normal use of the router.

The following **show** commands run automatically when you run the **show tech-support bcdl** command:

- **show bcdl**
- **show bcdl consumers**
- **show bcdl tables**
- **show process bcdl_agent**
- **show bcdl trace location all**

See the Cisco IOS XR Software command references for information about these commands and descriptions of their command output. The Cisco IOS XR Software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	basic-services or cisco-support	read
	sysmgr	read

show tech-support bundles

To automatically run **show** commands that display information specific to bundle debugging, use the **show tech-support bundles** command in EXEC mode.

```
show tech-support bundles { file send-to [background | compressed | uncompressed] }
```

Syntax Description	<p>file Specifies that the command output is saved to a specified file.</p> <p>send-to Name of the file. The following valid options are listed:</p> <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • compactflash: <i>filename</i> • compactflasha: <i>filename</i> • disk0: <i>filename</i> • disk0a: <i>filename</i> • disk1: <i>filename</i> • disk1a: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • harddiskb: <i>filename</i> • nvrpm: <i>filename</i> • rcp: <i>filename</i> • tftp: <i>filename</i>
	background (Optional) Specifies that the command runs in the background.
	compressed (Optional) Displays compressed command output.
	uncompressed (Optional) Displays the command output with no compression.

Command Modes	EXEC mode
----------------------	-----------

Command History	Release	Modification
	Release 2.0	This command was introduced.

Usage Guidelines	This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with <i>.tgz</i> extension. You can share this file with Cisco Technical Support. To share, use the copy command to copy the <i>.tgz</i> file to a server or local machine. For example, copy harddisk:/showtech/name.tgz tftp://server_path .
-------------------------	--

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.

show tech-support bundles**Tip**

This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support bundles** command for 802.3ad link bundles. This command is used to locate any issues related to bundling.

See the Cisco IOS XR Software command references for information about these commands and descriptions of their command output. The Cisco IOS XR Software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
cisco-support	read	

show tech-support cef

To automatically run `show` commands that display information specific to Cisco Express Forwarding (CEF) debugging, use the `show tech-support cef` command in EXEC mode.

```
show tech-support cef
{ file send-to [background | compressed | uncompressed ]} |
[ {ipv4 | ipv6 | mpls} ] [{A.B.C.D | A.B.C.D/length | detail | file | platform | location | rack}]
| [location node-id]
| [rackrack-id]
| [vrfvrf-name]
```

Syntax Description	
file	Specifies that the command output is saved to a specified file.
sent-to	(Optional) Name of the file. The following valid options are listed: <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • compactflash: <i>filename</i> • disk0: <i>filename</i> • disk1: <i>filename</i> • flash: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • nvram: <i>filename</i> • rep: <i>filename</i> • slot0: <i>filename</i> • slot1: <i>filename</i> • tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
vrf	(Optional) Specifies a VPN routing and forwarding (VRF) instance.
<i>vrf-name</i>	(Optional) Name of a VRF.
ipv4	(Optional) Specifies IPv4 CEF information.
ipv6	(Optional) Specifies IPv6 CEF information.
mpls	(Optional) Specifies Multiprotocol Label Switching CEF information.
A.B.C.D	(Optional) Specifies IPv4 Prefix entries.
A.B.C.D/length	(Optional) Specifies IPv4 Prefix mask.

show tech-support cef

detail	(Optional) Specifies detailed CEF debugging information.
brief	(Optional) Specifies a brief CEF debugging information.
location <i>node-id</i>	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
rack	(Optional) Specifies a list of racks.
platform	(Optional) Specifies platform CEF related logs.

Command Default	IPv4 is the default.
	The command output is not compressed.

Command Modes	EXEC mode
----------------------	-----------

Command History	Release	Modification
	Release 2.0	This command was introduced.

Usage Guidelines	This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with <i>.tgz</i> extension. You can share this file with Cisco Technical Support. To share, use the copy command to copy the <i>.tgz</i> file to a server or local machine. For example, copy harddisk:/showtech/name.tgz tftp://server_path .
	For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support cef** command to run **show** commands that display information specific to CEF debugging. This command is used to locate any issues related to the Forwarding Information Base (FIB) which is more commonly referred to as Cisco Express Forwarding (CEF). This command generates CEF debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.



Note This command is not required during normal use of the router.

The following **show** commands run automatically when you run the **show tech-support cef** command:

- **show version**
- **show running**
- **show route {ipv4 | ipv6} unicast**
- **show proc blocked**

- show cef {ipv4 | ipv6 | mpls} exceptions
- show cef {ipv4 | ipv6 | mpls} drop
- show ipv4 interface brief
- show cef {ipv4 | ipv6} summary
- show cef {ipv4 | ipv6 | mpls} interface
- show cef ipv4 non-recursive
- show cef {ipv4 | ipv6}
- show cef {ipv4 | ipv6 | mpls} adjacency
- show mpls forwarding (if the mpls keyword is specified)

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
basic-services or cisco-support		read
cef		read

show tech-support cfgmgr

show tech-support cfgmgr

To automatically run **show** commands that display information to gather information about the configuration manager, use the **show tech-support cfgmgr** command in EXEC mode.

```
show tech-support cfgmgr [rack] [location node-id] [file send-to [background] [{compressed | uncompressed}]]
```

]

Syntax Description	<p>rack Specifies that the command output for a rack.</p> <p>location Specifies a node. The <i>node-id</i> argument is entered in the rack/slot/module notation.</p> <p><i>node-id</i></p> <p>file Specifies that the command output is saved to a specified file.</p> <p><i>send-to</i> Name of the file. The following valid options are listed:</p> <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • disk0: <i>filename</i> • disk0a: <i>filename</i> • disk1: <i>filename</i> • disk1a: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • harddiskb: <i>filename</i> • nvrpm: <i>filename</i> • rcp: <i>filename</i> • tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.

Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				

Usage Guidelines

This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with *.tgz* extension. You can share this file with Cisco Technical Support. To share, use the **copy** command to copy the *.tgz* file to a server or local machine. For example, **copy harddisk:/showtech/name.tgz tftp://server_path**.

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support cfgmgr** command to gather information about the configuration manager. This command is used to locate any issues in regards to executing configuration commands or problems.

See the Cisco IOS XR Software command references for information about these commands and descriptions of their command output. The Cisco IOS XR Software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
cisco-support		read

```
show tech-support chdlc
```

show tech-support chdlc

To automatically run **show** commands that display debugging information related to Cisco high-level data link control (CHDLC) protocol, use the **show tech-support chdlc** command in the EXEC mode.

```
show tech-support chdlc [file send-to] | [interface type interface-path-id] | [location node-id]
| [rack] | [slow [file | interface | terminal {location | all | page} ]]
```

Syntax Description	file	(Optional) Specifies that the command output is saved to a specified file.
	send-to	Name of the file. The following valid options are listed: <ul style="list-style-type: none">• <i>filename</i>• bootflash: <i>filename</i>• compactflash: <i>filename</i>• disk0: <i>filename</i>• disk1: <i>filename</i>• flash: <i>filename</i>• ftp: <i>filename</i>• harddisk: <i>filename</i>• harddiska: <i>filename</i>• nvram: <i>filename</i>• rcp: <i>filename</i>• slot0: <i>filename</i>• slot1: <i>filename</i>• tftp: <i>filename</i>
	interface	(Optional) Displays information about a specific interface.
	type interface-path-id	Interface type. For more information, use the question mark (?) online help function. <i>interface-path-id</i> refers to physical interface or virtual interface.
	Note	Use the show interfaces command to see a list of all interfaces currently on the router.
		For more information about the syntax for the router, use the question mark (?) online help function.
	slow	(Optional) Displays the debugging output of chdlc.
	location	(Optional) Specifies a node.
	node-id	(Optional) Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
	rack	(Optional) Displays a list of racks.
	terminal	Displays the command output on the terminal.

page	(Optional) Displays the command output on a single page at a time. Use the Return key to display the next line of output or use the space bar to display the next page of information. If not used, the output scrolls (that is, it does not stop for page breaks). Press the Ctrl-C keys to stop the command output.
-------------	---

Command Default	None.
------------------------	-------

Command Modes	EXEC mode
----------------------	-----------

Command History	Release	Modification
------------------------	----------------	---------------------

Release 3.9.0	This command was introduced.
---------------	------------------------------

Usage Guidelines

Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support chdlc** command to run **show** commands that display CHDLC debugging information. This command generates information that can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.



Note This command is not required during normal use of the router.

Task ID	Task ID	Operations
	cisco-support	read

Examples

The following example how to run the **show tech-support chdlc** command on the router:

```
RP/0/RP0/CPU0:router# show tech-support chdlc interface gigabitEthernet 0/6/5/0
```

show tech-support control-ethernet

show tech-support control-ethernet

To automatically run `show` commands that display information specific to control Ethernet debugging, use the `show tech-support control-ethernet` command in EXEC mode.

```
show tech-support control-ethernet [fast] [location node-id] {terminal [page] | file send-to [background] [{compressed | uncompressed}]}
```

Syntax Description	
fast	(Optional) Collects the output simultaneously from multiple line cards in a multi-chassis router.
location	(Optional) Specifies a node.
<i>node-id</i>	(Optional) Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
terminal	Displays the command output on the terminal.
page	(Optional) Displays the command output on a single page at a time. Use the Return key to display the next line of output or use the space bar to display the next page of information. If not used, the output scrolls (that is, it does not stop for page breaks). Press the Ctrl-C keys to stop the command output.
file	Specifies that the command output is saved to a specified file.
<i>sent-to</i>	Name of the file. The following valid options are listed: <ul style="list-style-type: none">• <i>filename</i>• bootflash: <i>filename</i>• compactflash: <i>filename</i>• disk0: <i>filename</i>• disk1: <i>filename</i>• flash: <i>filename</i>• ftp: <i>filename</i>• harddisk: <i>filename</i>• harddiska: <i>filename</i>• nram: <i>filename</i>• rcp: <i>filename</i>• slot0: <i>filename</i>• slot1: <i>filename</i>• tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
Command Default	The command output is not compressed.

Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				

Usage Guidelines**Tip**

This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support control-ethernet** command to run **show** commands that display information specific to control Ethernet debugging. This command is used to display information specific to Ethernet interface issues. This command generates control Ethernet information that can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.

**Note**

This command is not required during normal use of the router.

The following **show** commands run automatically when you run the **show tech-support control-ethernet** command:

- **show version**
- **show controller fabric connectivity all**
- **show controller switch 0 ports node-id**
- **show controller switch 1 ports node-id**
- **show controller switch 0 statistics node-id**
- **show controller switch 1 statistics node-id**
- **show controller switch udld node-id**
- **show controller switch stp node-id**
- **show controller switch inter-rack ports all node-id**
- **show controller switch inter-rack statistics brief all node-id**
- **show controller switch inter-rack statistics detail all node-id**
- **show controller switch inter-rack udld all node-id**
- **show controller switch inter-rack stp all node-id**
- **show controller backplane ethernet detail node-id**
- **show controller backplane ethernet trace node-id**

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

The **show tech-support control-ethernet** command also generates log files which are not listed. See the command output for log file information.

show tech-support control-ethernet

Task ID	Task Operations ID
admin	read

Examples

The following example shows a truncated version of the **show tech-support control-ethernet** command output:

```
RP/0/RP0/CPU0:router(admin)#show tech-support control-ethernet terminal page

Number of nodes 13

Gathering required commands for show tech control-ethernet

Finding available nodes in the system

Node - 0/1/CPU0

Node - 0/1/SP

Node - 0/4/CPU0

Node - 0/4/CPU1

Node - 0/4/SP

Node - 0/6/CPU0

Node - 0/6/SP

Node - 0/

RP0

/CPU0
Node - 0/
RP1

/CPU0

Node - 0/SM0/SP

Node - 0/SM1/SP

Node - 0/SM2/SP

Node - 0/SM3/SP

-----
show tech-support control-ethernet
-----
----- show version -----
Cisco IOS XR Software, Version 3.9.0.20I[DT_IMAGE]
Copyright (c) 2009 by Cisco Systems, Inc.
```

```
ROM: System Bootstrap, Version 1.51(20080807:092259) [CRS-1 ROMMON],  
P2 CRS-8 uptime is 1 day, 18 hours, 10 minutes  
System image file is "bootflash:disk0/hfr-os-mbi-3.8.0.20I/mbihfr-rp.vm"  
  
cisco CRS-8/S (7457) processor with 4194304K bytes of memory.  
7457 processor at 1197Mhz, Revision 1.2  
  
4 Management Ethernet  
16 GigabitEthernet  
20 SONET/SDH  
20 Packet over SONET/SDH  
1019k bytes of non-volatile configuration memory.  
1000592k bytes of disk0: (Sector size 512 bytes).  
1000640k bytes of disk1: (Sector size 512 bytes).  
  
Boot device on node 0/1/SP is bootflash:  
Package active on node 0/1/SP:  
hfr-pagent, V 3.8.0.20I[DT_IMAGE], Cisco Systems, at disk0:hfr-pagent-3.8.0.20I  
Built on Wed Oct 29 17:24:33 DST 2008  
By iox13.cisco.com in /auto/ioxbuild6/production/3.8.0.20I.DT_IMAGE/hfr/wor0  
  
hfr-fpd, V 3.8.0.20I[DT_IMAGE], Cisco Systems, at disk0:hfr-fpd-3.8.0.20I  
Built on Wed Oct 29 17:02:19 DST 2008  
By iox3.cisco.com in /auto/ioxbuild6/production/3.8.0.20I.DT_IMAGE/hfr/work0  
  
hfr-diags, V 3.8.0.20I[DT_IMAGE], Cisco Systems, at disk0:hfr-diags-3.8.0.20I  
Built on Wed Oct 29 17:02:01 DST 2008  
By iox3.cisco.com in /auto/ioxbuild6/production/3.8.0.20I.DT_IMAGE/hfr/work0  
  
hfr-admin, V 3.8.0.20I[DT_IMAGE], Cisco Systems, at disk0:hfr-admin-3.8.0.20I  
Built on Wed Oct 29 16:08:13 DST 2008  
By iox30.cisco.com in /auto/ioxbuild6/production/3.8.0.20I.DT_IMAGE/hfr/wor0  
  
hfr-base, V 3.8.0.20I[DT_IMAGE], Cisco Systems, at disk0:hfr-base-3.8.0.20I  
Built on Wed Oct 29 16:07:35 DST 2008  
By iox30.cisco.com in /auto/ioxbuild6/production/3.8.0.20I.DT_IMAGE/hfr/wor0  
  
hfr-os-mbi, V 3.8.0.20I[DT_IMAGE], Cisco Systems, at disk0:hfr-os-mbi-3.8.0.20I  
Built on Wed Oct 29 15:45:48 DST 2008  
By iox30.cisco.com in /auto/ioxbuild6/production/3.8.0.20I.DT_IMAGE/hfr/wor0  
  
Configuration register on node 0/1/CPU0 is 0x102  
Boot device on node 0/1/CPU0 is mem:  
Package active on node 0/1/CPU0:  
hfr-services, V 3.8.0.20I[DT_IMAGE], Cisco Systems, at disk0:hfr-services-3.8.0.I  
Built on Wed Oct 29 17:03:08 DST 2008  
By iox3.cisco.com in /auto/ioxbuild6/production/3.8.0.20I.DT_IMAGE/hfr/work0  
  
hfr-pagent, V 3.8.0.20I[DT_IMAGE], Cisco Systems, at disk0:hfr-pagent-3.8.0.20I  
Built on Wed Oct 29 17:24:33 DST 2008  
By iox13.cisco.com in /auto/ioxbuild6/production/3.8.0.20I.DT_IMAGE/hfr/wor0  
  
hfr-fpd, V 3.8.0.20I[DT_IMAGE], Cisco Systems, at disk0:hfr-fpd-3.8.0.20I  
Built on Wed Oct 29 17:02:19 DST 2008  
By iox3.cisco.com in /auto/ioxbuild6/production/3.8.0.20I.DT_IMAGE/hfr/work0  
  
hfr-diags, V 3.8.0.20I[DT_IMAGE], Cisco Systems, at disk0:hfr-diags-3.8.0.20I  
Built on Wed Oct 29 17:02:01 DST 2008  
By iox3.cisco.com in /auto/ioxbuild6/production/3.8.0.20I.DT_IMAGE/hfr/work0  
  
hfr-mcast, V 3.8.0.20I[DT_IMAGE], Cisco Systems, at disk0:hfr-mcast-3.8.0.20I  
Built on Wed Oct 29 18:18:37 DST 2008  
By iox22.cisco.com in /auto/ioxbuild6/production/3.8.0.20I.DT_IMAGE/hfr/wor0
```

```
show tech-support control-ethernet
```

```
hfr-mpls, V 3.8.0.20I[DT_IMAGE], Cisco Systems, at disk0:hfr-mpls-3.8.0.20I  
Built on Wed Oct 29 18:18:25 DST 2008  
By iox22.cisco.com in /auto/ioxbuild6/production/3.8.0.20I.DT_IMAGE/hfr/wor0
```

```
hfr-lc, V 3.8.0.20I[DT_IMAGE], Cisco Systems, at disk0:hfr-lc-3.8.0.20I  
Built on Wed Oct 29 16:18:36 DST 2008  
By iox30.cisco.com in /auto/ioxbuild6/production/3.8.0.20I.DT_IMAGE/hfr/wor0
```

```
hfr-fwdg, V 3.8.0.20I[DT_IMAGE], Cisco Systems, at disk0:hfr-fwdg-3.8.0.20I  
Built on Wed Oct 29 16:13:27 DST 2008  
By iox30.cisco.com in /auto/ioxbuild6/production/3.8.0.20I.DT_IMAGE/hfr/wor0
```

```
--More--
```

show tech-support custom source-file

To automatically run a customised list of **show** commands specified in a text file, use the **show tech-support custom source-file** command in the EXEC mode.

showtech-supportcustom[source-file]file-location

Syntax Description	custom Executes the general health check commands specified in the <i>general.tech</i> file and collects debugging information.
	The general health check command list (<i>general.tech</i>) is present in the default directory.

source-file (Optional) Executes customised list of show commands specified in a text file and collects debugging information.
The source file includes all diagnostics commands from EXEC and sys-admin mode.

file-location Name of the file. The following valid options are listed:

- *filename*
- **disk0:** *filename*
- **ftp:** *filename*
- **harddisk:** *filename*
- **harddiska:** *filename*
- **harddiskb:** *filename*
- **rootfs:** *filename*
- **tftp:** *filename*

Command Default	The command output is compressed.
	Passwords and other security information are not displayed.

Command Modes	Admin Configuration mode
	EXEC mode

Command History	Release	Modification
	Release 6.3.3	This command was introduced.

Usage Guidelines	This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with <i>.tgz</i> extension. You can share this file with Cisco Technical Support. To share, use the copy command to copy the <i>.tgz</i> file to a server or local machine. For example, copy harddisk:/showtech/name.tgz tftp://server_path .
-------------------------	--

show tech-support custom source-file

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.



Note This command is not required during normal use of the router.

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	basic-services or cisco-support	read

The following example shows the output of the **show tech-support custom source-file** command:

```
RP/0/RP0/CPU0:#show tech-support custom source-file disk0:cli.dat
Mon Apr 30 12:11:41.831 UTC
++ Show tech start time: 2018-Apr-30.121148.UTC ++
Mon Apr 30 12:11:49 UTC 2018 Waiting for gathering to complete
.....Mon Apr 30 12:12:55 UTC 2018 Waiting for Sysadmin show tech-support
collection
.....Mon Apr 30 12:19:55 UTC 2018 Please collect Admin show tech-support ctrace in
addition to any sysadmin show-tech-support collection

Mon Apr 30 12:19:56 UTC 2018 Compressing show tech output
Show tech output available at 0/RP0/CPU0 :
/harddisk:/showtech/showtech-custom-2018-Apr-30.121148.UTC.tgz
++ Show tech end time: 2018-Apr-30.122001.UTC ++
```

The following example shows the output of the **show tech-support custom** command:

```
RP/0/RP0/CPU0:#show tech-support custom
Mon Apr 30 12:00:17.780 UTC
++ Show tech start time: 2018-Apr-30.120019.UTC ++
Mon Apr 30 12:00:20 UTC 2018 Waiting for gathering to complete
.....
Mon Apr 30 12:05:40 UTC 2018 Compressing show tech output
Show tech output available at 0/RP0/CPU0 :
/harddisk:/showtech/showtech-custom-2018-Apr-30.120019.UTC.tgz
++ Show tech end time: 2018-Apr-30.120541.UTC ++
```

When you execute the **show tech-support custom** command, the general health check commands specified in the *general.tech* file are executed.

show tech-support dsc

To automatically run `show` commands that display information specific to designated shelf controller (DSC) debugging, use the `show tech-support dsc` command in Admin EXEC mode.

```
show tech-support dsc [location node-id] {terminal [page]|file send-to [background] [{compressed}|uncompressed}]}
```

Syntax Description

location	(Optional) Specifies a node.
<i>node-id</i>	(Optional) Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
terminal	Displays the command output on the terminal.
page	(Optional) Displays the command output on a single page at a time. Use the Return key to display the next line of output or use the space bar to display the next page of information. If not used, the output scrolls (that is, it does not stop for page breaks). Press the Ctrl-C keys to stop the command output.
file	Specifies that the command output is saved to a specified file.
<i>sent-to</i>	Name of the file. The following are valid options: <ul style="list-style-type: none">• <i>filename</i>• bootflash: <i>filename</i>• compactflash: <i>filename</i>• disk0: <i>filename</i>• disk1: <i>filename</i>• flash: <i>filename</i>• ftp: <i>filename</i>• harddisk: <i>filename</i>• harddiska: <i>filename</i>• nvram: <i>filename</i>• rcp: <i>filename</i>• slot0: <i>filename</i>• slot1: <i>filename</i>• tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
Command Default	The command output is not compressed.
Command Modes	Admin EXEC mode

show tech-support dsc

Command History

Release	Modification
Release 3.4.0	This command was introduced.

Usage Guidelines


Tip

This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support dsc** command to run **show** commands that display information specific to DSC debugging. This command generates DSC information that can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.


Note

This command is not required during normal use of the router.

The following **show** commands run automatically when you run the **show tech-support dsc** command:

- **show dsc all**

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID

Task Operations ID

admin read

Examples

The following example shows some of the **show tech-support dsc** command output:

```
RP/0/RP0/CPU0:router(admin) #show tech-support dsc terminal page
```

```
-----
```

```
show tech-support dsc for node node0_RP0_CPU0 from node node0_RP0_CPU0
```

```
-----
```

```
-----
```

```
Displaying DSC information
```

```
-----
```

```
----- Displaying DSC attach_process on this node -----  
  
----- run attach_process -p 110638 -i 1 -S -----  
  
Attaching to process pid = 110638 (pkg/bin/dsc)  
No tid specified, following all threads  
  
Iteration 1 of 1  
-----  
  
Current process = "pkg/bin/dsc", PID = 110638 TID = 1  
  
trace_back: #0 0xfc177518 [MsgReceivev]  
trace_back: #1 0xfc161354 [msg_receivev]  
trace_back: #2 0xfc161160 [msg_receive]  
trace_back: #3 0xfc16479c [event_dispatch]  
trace_back: #4 0xfc164958 [event_block]  
trace_back: #5 0x482005e8 [<N/A>]  
trace_back: #6 0x482012cc [<N/A>]  
  
ENDOFSTACKTRACE  
  
Current process = "pkg/bin/dsc", PID = 110638 TID = 2  
  
trace_back: #0 0xfc177518 [MsgReceivev]  
trace_back: #1 0xfc161354 [msg_receivev]  
trace_back: #2 0xfc161160 [msg_receive]  
trace_back: #3 0xfc16479c [event_dispatch]  
trace_back: #4 0xfc164958 [event_block]  
trace_back: #5 0xfc6368d4 [chk_evm_thread]  
  
ENDOFSTACKTRACE  
  
Current process = "pkg/bin/dsc", PID = 110638 TID = 4  
  
trace_back: #0 0xfc177518 [MsgReceivev]  
trace_back: #1 0xfc161354 [msg_receivev]  
trace_back: #2 0xfc161160 [msg_receive]  
trace_back: #3 0xfc16479c [event_dispatch]  
trace_back: #4 0xfc164958 [event_block]  
trace_back: #5 0x48200f34 [<N/A>]  
  
ENDOFSTACKTRACE  
  
Current process = "pkg/bin/dsc", PID = 110638 TID = 5  
  
trace_back: #0 0xfc177518 [MsgReceivev]  
trace_back: #1 0xfc161354 [msg_receivev]  
trace_back: #2 0xfc161160 [msg_receive]  
trace_back: #3 0xfc16479c [event_dispatch]  
trace_back: #4 0xfc164958 [event_block]  
trace_back: #5 0x48200ddc [<N/A>]  
  
ENDOFSTACKTRACE  
  
Current process = "pkg/bin/dsc", PID = 110638 TID = 6  
  
trace_back: #0 0xfc177518 [MsgReceivev]
```

show tech-support dsc

```
trace_back: #1 0xfc161354 [msg_receivev]
trace_back: #2 0xfc161160 [msg_receive]
trace_back: #3 0xfc16479c [event_dispatch]
trace_back: #4 0xfc164958 [event_block]
trace_back: #5 0x48200528 [<N/A>]
```

```
ENDOFSTACKTRACE
```

```
----- Displaying show dsc all -----
```

```
----- run dsc_show_table -a -----
```

NODE	ROLE	PRIORITY	TBEACON	PRESENT	MIGRATION
0/RP0/CPU0	DSC	DEFAULT	300	YES	ENABLED
0/RP1/CPU0	BACKUP	DEFAULT	300	YES	ENABLED
0/4/CPU0	NON-DSC	65	300	YES	ENABLED
0/4/CPU1	NON-DSC	66	300	YES	ENABLED

```
----- Displaying Rack SerialIDs -----
```

```
----- run dsc_show_table -s -----
```

NODE	SERIAL ID
0/RP0/CPU0	TBA09370035
0/RP1/CPU0	TBA09370035
0/4/CPU0	TBA09370035
0/4/CPU1	TBA09370035

```
----- Displaying DSC process on all nodes -----
```

```
----- run sysmgr_show -o -A -p dsc -n 513 -----
```

```
Job Id: 155
PID: 110638
Executable path: /disk0/hfr-admin-3.8.0/bin/dsc
Instance #: 1
Version ID: 00.00.0000
Respawn: ON
Respawn count: 1
Max. spawns per minute: 12
Last started: Fri Mar 16 14:56:35 2007
Process state: Run
Package state: Normal
core: COPY
Max. core: 0
Level: 40
Mandatory: ON
MaintModeProc: ON
```

```
        startup_path: /pkg/startup/dsc.startup
                    Ready: 4.382s
        Process cpu time: 891.318 user, 1328.561 kernel, 2219.879 total
  JID   TID  Stack pri state      TimeInState    HR:MM:SS:MSEC NAME
155    1     52K  10 Receive    0:00:52:0856  0:00:00:0176 dsc
155    2     52K  10 Receive    326:49:44:0414  0:00:00:0001 dsc
155    4     52K  10 Receive    0:00:00:0083  0:00:01:0127 dsc
155    5     52K  10 Receive    0:00:00:0643  0:00:00:0019 dsc
155    6     52K  55 Receive    0:00:00:0060  0:14:49:0966 dsc
.
.
.
```

show tech-support ethernet

show tech-support ethernet

To automatically run **show** commands that display information specific to ethernet debugging, use the **show tech-support ethernet** command in EXEC mode.

```
show tech-support ethernet[ controllers[file send-to [background] [{compressed|uncompressed}]]]
| [interface interface-type interface-instance] | [protocols ]
```

Syntax Description	
controllers	Collects the L1 Ethernet controller related information and saves to disk.
file	(Optional) Specifies that the command output is saved to a specified file.
sent-to	(Optional) Name of the file. The following valid options are listed: <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • compactflash: <i>filename</i> • disk0: <i>filename</i> • disk1: <i>filename</i> • flash: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • nvram: <i>filename</i> • rcp: <i>filename</i> • slot0: <i>filename</i> • slot1: <i>filename</i> • tftp: <i>filename</i>
interface	(Optional) Collects the status and configuration information about a specific interface.
interface-type	Identifies a physical interface or a virtual interface. <p>Note Use the show interfaces command to see a list of all possible interfaces currently configured on the router.</p>
interface-instance	Specifies the interface instance. The argument <i>interface-instance</i> is expressed in the rack/slot/module notation.
protocols	(Optional) Specifies the interest for ethernet protocols.
Command Default	IPv4 is the default.
	The command output is compressed.
Command Modes	EXEC mode

Command History	Release	Modification
	Release 3.8.0	This command was introduced.
Usage Guidelines	<p>This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with .tgz extension. You can share this file with Cisco Technical Support. To share, use the copy command to copy the .tgz file to a server or local machine. For example, copy harddisk:/showtech/name.tgz tftp://server_path.</p> <p>For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.</p>	
	<p>Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the file send-to keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.</p>	
	<p>Use the show tech-support ethernet command to run show commands that display information specific to VLAN and ethernet infrastructure debugging. This command generates ethernet debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.</p>	
	<p>Note This command is not required during normal use of the router.</p>	
<p>The following show commands run automatically when you run the show tech-support ethernet command:</p> <ul style="list-style-type: none"> • show ethernet controller trace • show controllers oper • show controllers phy • show icpe-internal local controller odu-group trace location 0/1/CPU0 • show icpe-internal local controller odu-group db location 0/1/CPU0 • show process odu_group_ma • show process odu_group_ea • show process blocked • show context <p>The following show commands run automatically when you run the show tech-support ethernet command per node:</p> <ul style="list-style-type: none"> • show process blocked • show context • show controllers oper • show controllers bert • show controllers stats • show controllers control • show controllers mac • show controllers internal • show controllers phy 		

show tech-support ethernet

- show controllers xgxs
- show controllers regs
- show ethernet driver trace
- show ethernet infra trace
- show processes ether_caps_partner
- show processes ether_sock
- show processes vlan_ma
- show processes vlan_ea
- show ethernet infra internal ether-ma global
- show ethernet infra internal ether-ma trunks
- show ethernet infra internal vlan-ma global
- show ethernet infra internal vlan-ma trunks
- show ethernet infra internal vlan-ma subs
- show ethernet infra internal ea global
- show ethernet infra internal ea trunks
- show ethernet infra internal ea subs
- show ethernet driver internal all driver-id all
- show ethernet driver api-stats location 0/0/CPU0
- show ethernet driver api-stats detail all location 0/0/CPU0
- show ethernet trace hardware spa
- show ethernet trace hardware plim location 0/0/CPU0
- show ethernet trace hardware plim location 0/1/CPU0
- show ethernet trace hardware plim location 0/2/CPU0
- show ethernet ring g8032 status location 0/0/CPU0
- show ethernet ring g8032 trace
- show process eth_intf_ea
- show process eth_intf_ma
- show ethernet v-ether db location 0/0/CPU0
- show ethernet v-ether trace location 0/0/CPU0
- show ethernet cfm trace detail location all
- show ethernet cfm serviceshow ethernet cfm interfaces status
- show ethernet cfm configuration-errors
- show ethernet cfm nv satellite-fabrics
- show ethernet cfm nv satellite-links
- show ethernet cfm nv host-meps
- show ethernet cfm nv satellites
- show ethernet cfm local maintenance-points
- show ethernet cfm local meps
- show ethernet cfm local meps verbose
- show ethernet cfm peer meps
- show ethernet cfm peer meps detail
- show ethernet cfm traceroute-cache
- show ethernet cfm traceroute-cache detail
- show ethernet cfm ccm-learning-database
- show ethernet cfm interface statistics

- show ethernet cfm interface ais
- show ethernet cfm summary
- show ethernet oam trace verbose location all
- show ethernet oam trace verbose global-mgr location all
- show ethernet oam configuration
- show ethernet oam discovery
- show ethernet oam interfaces
- show ethernet oam statistics
- show error-disable
- show ethernet loopback trace location all
- show ethernet loopback permitted
- show ethernet loopback active
- show ethernet sla configuration-errors
- show ethernet sla operations
- show ethernet sla statistics
- show ethernet sla statistics detail
- show ethernet sla support
- show spp offload lib trace location all

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
cisco-support	read	

show tech-support fabric

show tech-support fabric

To automatically run **show** commands that display information specific to fabric debugging, use the **show tech-support fabric** command in Admin EXEC mode.

```
show tech-support fabric {fabric-snapshot | multicast [{brief | detail}] | summary | traffic [{brief | detail}]} [location node-id [include-fabric-cards] [include-rp]] [{email | page | file send-to}]
```

Syntax Description	
fabric-snapshot	Runs the fabric snapshot script which generates comprehensive data on the instantaneous state of the fabric.
multicast	Specifies fabric multicast information.
brief	(Optional) Displays brief information.
detail	(Optional) Displays detailed information.
summary	Specifies fabric summary information.
traffic	Specifies fabric traffic information.
location <i>node-id</i>	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
include-fabric-cards	(Optional) Specifies fabric card information in addition to the fabric information. This option is available when the fabric-snapshot keyword is used.
include-rp	(Optional) Specifies route processor information in addition to the fabric information. This option is available when the fabric-snapshot keyword is used.
email	(Optional) Specifies that the command output is sent through email. The output is copied to /disk0:/fabric_multicast.log. Note To use the email keyword, you must have the SMTP server and domain name and the ability to connect a TCP socket to the specified SMTP server. The domain ipv4 host host-name v4address1 command must be configured to use the server lookup.
page	(Optional) Displays the command output on a single page at a time. Use the Return key to display the next line of output or use the space bar to display the next page of information. If not used, the output scrolls (that is, it does not stop for page breaks). Press the Ctrl-C keys to stop the command output.
file	(Optional) Specifies that the command output is saved to a specified file.

sent-to (Optional) Name of the file. The following valid options are listed:

- *filename*
 - **bootflash:** *filename*
 - **compactflash:** *filename*
 - **disk0:** *filename*
 - **disk1:** *filename*
 - **flash:** *filename*
 - **ftp:** *filename*
 - **harddisk:** *filename*
 - **harddiska:** *filename*
 - **nvram:** *filename*
 - **rcp:** *filename*
 - **slot0:** *filename*
 - **slot1:** *filename*
 - **tftp:** *filename*
-

Command Default The command output is not compressed.

Command Modes Admin EXEC mode

Command History **Release** **Modification**

Release 3.3.0 This command was introduced.

Usage Guidelines This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with *.tgz* extension. You can share this file with Cisco Technical Support. To share, use the **copy** command to copy the *.tgz* file to a server or local machine. For example, **copy harddisk:/showtech/name.tgz tftp://server_path**.

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support fabric** command to run **show** commands that display information specific to fabric debugging. This command generates fabric information that can be useful for Cisco Technical Support representatives when troubleshooting a router.



Note This command is not required during normal use of the router.

The following **show** commands run automatically when you run the **show tech-support fabric multicast** command:

show tech-support fabric

- **show controllers fabric fgid stat all detail**
- **show controllers fabric fgid info**
- **show process fgid_allocator**
- **show process fgid_aggregator**
- **show process fgid_server**
- **show process fgid_allocator**

The following **show** commands run automatically when you run the **show tech-support fabric traffic** command:

- **show controllers fabric plane all detail**
- **show controllers fabric plane all stat brief**
- **show controllers fabric plane all stat detail**
- **show controllers fabric link port**
- **show controller fabricq stat**
- **show controllers fabricq queues**
- **show controllers fabricq eio links all**
- **show controller ingressq stat**
- **show controller ingressq queue all**
- **show controller ingressq fabric pla**
- **show control ingressq block ssm bpmem 0**
- **show controllers ingressq block fqm queue**
- **show controllers ingressq vports all**
- **show controllers ingressq interfaces all**
- **show controllers ingressq eio links all**
- **show controller fia rxslice all uq all channel all**
- **show controllers cputctl devices ingressq pdma queue all act**
- **show controllers cputctl devices egressq pdma queue all act**
- **show controllers cputctl devices fabricq pdma queue all act**

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task Operations ID
	admin read

show tech-support gsp

To automatically run `show` commands that display information specific to Gigabit Switch Platform (GSP) debugging, use the `show tech-support gsp` command in EXEC mode.

```
show tech-support gsp [{client | file send-to [background] [{compressed | uncompressed}] | group {group-id | group-name} | rack | location node-id}]
```

Syntax Description	
client	(Optional) Displays the client tech-support information.
group	(Optional) Displays the group tech-support information by <i>group-id</i> or <i>group-name</i> .
rack	(Optional) Displays the number of racks
location	(Optional) Specifies a node.
<i>node-id</i>	(Optional) Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
terminal	Displays the command output on the terminal.
page	(Optional) Displays the command output on a single page at a time. Use the Return key to display the next line of output or use the space bar to display the next page of information. If not used, the output scrolls (that is, it does not stop for page breaks). Press the Ctrl-C keys to stop the command output.
file	Specifies that the command output is saved to a specified file.
<i>send-to</i>	Name of the file. The following valid options are listed: <ul style="list-style-type: none">• <i>filename</i>• bootflash:<i>filename</i>• compactflash:<i>filename</i>• disk0:<i>filename</i>• disk1:<i>filename</i>• flash:<i>filename</i>• ftp:<i>filename</i>• harddisk:<i>filename</i>• harddiska:<i>filename</i>• nvram:<i>filename</i>• rcp:<i>filename</i>• slot0:<i>filename</i>• slot1:<i>filename</i>• tftp:<i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.

show tech-support gsp

Command Default	The command output is not compressed.				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				

Usage Guidelines This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with *.tgz* extension. You can share this file with Cisco Technical Support. To share, use the **copy** command to copy the *.tgz* file to a server or local machine. For example, **copy harddisk:/showtech/name.tgz tftp://server_path**.

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support gsp** command to run **show** commands that display information specific to GSP debugging. GSP is a common IPC utilized in Cisco IOS XR software to communicate between nodes. This command would be used to determine if there are any issues with GSP communication between nodes. This command generates GSP debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.



Note This command is not required during normal use of the router.

The following **show** commands run automatically when you run the **show tech-support gsp** command:

- **show gsp group addresses**
- **show gsp group admin addresses**
- **show gsp group lr-control addresses**
- **show gsp group gid 0**
- **show gsp group gid 1000**
- **show gsp group gid 2000**
- **show gsp memory**
- **show gsp stats client**
- **show gsp stats server jid 0**
- **show gsp trace server bootstrap location all**
- **show gsp trace server timeout slow location all**
- **show gsp trace server timeout fast location all**
- **show gsp trace server limp fast location all**
- **show gsp trace server limp slow location all**
- **show gsp trace server error api location all**

- **show gsp trace server error minor location all**
- **show gsp trace server ens location all**

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	basic-services or cisco-support	read
	sysmgr	read

show tech-support igmp snooping

show tech-support igmp snooping

To automatically run `show` commands that display debugging information specific to igmp snooping, use the `show tech-support igmp snooping` command in the EXEC mode.

show tech-support igmp snooping [file send-to] [terminal]

Syntax Description	<p>file (Optional) Specifies that the command output is saved to a specified file.</p> <p>send-to (Optional) Name of the file. The following valid options are listed:</p> <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • compactflash: <i>filename</i> • disk0: <i>filename</i> • disk1: <i>filename</i> • flash: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • nvrpm: <i>filename</i> • rcp: <i>filename</i> • slot0: <i>filename</i> • slot1: <i>filename</i> • tftp: <i>filename</i> 				
node-id	(Optional) Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
terminal	Specifies that the command output is displayed on the terminal.				
page	(Optional) Specifies that the command output is displayed one page at a time. Use the return key to display the next line of output or use the space bar to display the next page of information. If not used, the output scrolls (that is, it does not stop for page breaks). Press the Ctrl+C keys to stop the command output.				
Command Default	Output is logged to the terminal screen.				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.9.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.9.0	This command was introduced.
Release	Modification				
Release 3.9.0	This command was introduced.				

Usage Guidelines



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

This command generates igmp snooping debug information that can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.



Note This command is not required during normal use of the router.

The following **show** commands run automatically when you run the **show tech-support igmp snooping** command:

- **show version**
- **show running-config sanitize**
- **show redundancy**
- **show logging**
- **show platform**
- **show install active detail**
- **show install committed detail**
- **show install inactive detail**
- **show pkgfs trace location all**
- **show install trace loadpath location node-id**
- **show install trace io location node-id**
- **show install trace instdir-lr location node-id**
- **show install trace insthelper location node-id**
- **show install trace notify location node-id**
- **show install trace replicator location node-id**
- **show install trace pkg location node-id**
- **show install trace inv location node-id**
- **show install trace platform location node-id**
- **show install trace ior location node-id**
- **show install trace state-file-replication location node-id**
- **show install trace sds location node-id**
- **show memory summary location node-id**
- **show context location node-id**
- **show processes memory location node-id**
- **show processes aborts location node-id**
- **show processes blocked location node-id**
- **show pkgfs trace location node-id**
- **show filesystem location node-id**
- **run diskinfo** (various)

show tech-support igmp snooping

See the Cisco IOS XR Software command references for information about these commands and descriptions of their command output. The Cisco IOS XR Software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	cisco-support	read

Examples

The following example shows a truncated version of the **show tech-support igmp snooping** command output:

```
RP/0/RP0/CPU0:router# show tech-support igmp snooping terminal
-----
show tech-support igmp snooping
-----
----- show version -----
Cisco IOS XR Software, Version 3.9.0[00]
Copyright (c) 2009 by Cisco Systems, Inc.

ROM: System Bootstrap, Version 1.1(20090521:183759) [ASR9K ROMMON],
MCAST-6 uptime is 6 days, 20 hours, 50 minutes
System image file is "bootflash:disk0/asr9k-os-mbi-3.9.0/mbiasr9k-rp.vm"

cisco ASR9K Series (MPC8641D) processor with 4194304K bytes of memory.
MPC8641D processor at 1333MHz, Revision 2.2

2 Management Ethernet
45 GigabitEthernet
219k bytes of non-volatile configuration memory.
975M bytes of compact flash card.
33994M bytes of hard disk.
1605616k bytes of disk0: (Sector size 512 bytes).
1605616k bytes of disk1: (Sector size 512 bytes).

Configuration register on node 0/RSP0/CPU0 is 0x1922
Boot device on node 0/RSP0/CPU0 is disk0:
Package active on node 0/RSP0/CPU0:
asr9k-scfclient, V 3.9.0[00], Cisco Systems, at disk0:asr9k-scfclient-3.9.0
    Built on Mon Dec 14 12:38:43 UTC 2009
    By sjc-lds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-diags, V 3.9.0[00], Cisco Systems, at disk0:asr9k-diags-3.9.0
    Built on Mon Dec 14 12:38:44 UTC 2009
    By sjc-lds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-mcast, V 3.9.0[00], Cisco Systems, at disk0:asr9k-mcast-3.9.0
    Built on Mon Dec 14 13:33:02 UTC 2009
    By sjc-lds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-mpls, V 3.9.0[00], Cisco Systems, at disk0:asr9k-mpls-3.9.0
    Built on Mon Dec 14 13:31:50 UTC 2009
    By sjc-lds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0
```

```
asr9k-rout, V 3.9.0[00], Cisco Systems, at disk0:asr9k-rout-3.9.0
  Built on Mon Dec 14 12:38:56 UTC 2009
  By sjc-lsds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-lc, V 3.9.0[00], Cisco Systems, at disk0:asr9k-lc-3.9.0
  Built on Mon Dec 14 13:28:31 UTC 2009
  By sjc-lsds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-fwdg, V 3.9.0[00], Cisco Systems, at disk0:asr9k-fwdg-3.9.0
  Built on Mon Dec 14 12:34:50 UTC 2009
  By sjc-lsds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-admin, V 3.9.0[00], Cisco Systems, at disk0:asr9k-admin-3.9.0
  Built on Mon Dec 14 12:29:39 UTC 2009
  By sjc-lsds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-base, V 3.9.0[00], Cisco Systems, at disk0:asr9k-base-3.9.0
  Built on Mon Dec 14 12:32:17 UTC 2009
  By sjc-lsds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-os-mbi, V 3.9.0[00], Cisco Systems, at disk0:asr9k-os-mbi-3.9.0
  Built on Mon Dec 14 12:12:19 UTC 2009
  By sjc-lsds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

Boot device on node 0/1/CPU0 is mem:
Package active on node 0/1/CPU0:
asr9k-scfclient, V 3.9.0[00], Cisco Systems, at disk0:asr9k-scfclient-3.9.0
  Built on Mon Dec 14 12:38:43 UTC 2009
  By sjc-lsds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-diags, V 3.9.0[00], Cisco Systems, at disk0:asr9k-diags-3.9.0
  Built on Mon Dec 14 12:38:44 UTC 2009
  By sjc-lsds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-mcast, V 3.9.0[00], Cisco Systems, at disk0:asr9k-mcast-3.9.0
  Built on Mon Dec 14 13:33:02 UTC 2009
  By sjc-lsds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-mpls, V 3.9.0[00], Cisco Systems, at disk0:asr9k-mpls-3.9.0
  Built on Mon Dec 14 13:31:50 UTC 2009
  By sjc-lsds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-lc, V 3.9.0[00], Cisco Systems, at disk0:asr9k-lc-3.9.0
  Built on Mon Dec 14 13:28:31 UTC 2009
  By sjc-lsds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-fwdg, V 3.9.0[00], Cisco Systems, at disk0:asr9k-fwdg-3.9.0
  Built on Mon Dec 14 12:34:50 UTC 2009
  By sjc-lsds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-admin, V 3.9.0[00], Cisco Systems, at disk0:asr9k-admin-3.9.0
  Built on Mon Dec 14 12:29:39 UTC 2009
  By sjc-lsds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-base, V 3.9.0[00], Cisco Systems, at disk0:asr9k-base-3.9.0
  Built on Mon Dec 14 12:32:17 UTC 2009
  By sjc-lsds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-os-mbi, V 3.9.0[00], Cisco Systems, at disk0:asr9k-os-mbi-3.9.0
  Built on Mon Dec 14 12:12:19 UTC 2009
  By sjc-lsds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

Boot device on node 0/2/CPU0 is mem:
```

show tech-support igmp snooping

```

Package active on node 0/2/CPU0:
asr9k-scfclient, V 3.9.0[00], Cisco Systems, at disk0:asr9k-scfclient-3.9.0
    Built on Mon Dec 14 12:38:43 UTC 2009
    By sjc-lds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-diags, V 3.9.0[00], Cisco Systems, at disk0:asr9k-diags-3.9.0
    Built on Mon Dec 14 12:38:44 UTC 2009
    By sjc-lds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-mcast, V 3.9.0[00], Cisco Systems, at disk0:asr9k-mcast-3.9.0
    Built on Mon Dec 14 13:33:02 UTC 2009
    By sjc-lds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-mpls, V 3.9.0[00], Cisco Systems, at disk0:asr9k-mpls-3.9.0
    Built on Mon Dec 14 13:31:50 UTC 2009
    By sjc-lds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-lc, V 3.9.0[00], Cisco Systems, at disk0:asr9k-lc-3.9.0
    Built on Mon Dec 14 13:28:31 UTC 2009
    By sjc-lds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-fwdg, V 3.9.0[00], Cisco Systems, at disk0:asr9k-fwdg-3.9.0
    Built on Mon Dec 14 12:34:50 UTC 2009
    By sjc-lds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-admin, V 3.9.0[00], Cisco Systems, at disk0:asr9k-admin-3.9.0
    Built on Mon Dec 14 12:29:39 UTC 2009
    By sjc-lds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-base, V 3.9.0[00], Cisco Systems, at disk0:asr9k-base-3.9.0
    Built on Mon Dec 14 12:32:17 UTC 2009
    By sjc-lds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

asr9k-os-mbi, V 3.9.0[00], Cisco Systems, at disk0:asr9k-os-mbi-3.9.0
    Built on Mon Dec 14 12:12:19 UTC 2009
    By sjc-lds-524 in /auto/srcarchive3/production/3.9.0/asr9k/workspace for c4.2.1-p0

----- show running-config igmp snooping -----
igmp snooping profile prof1
  ttl-check disable
  router-alert-check disable
!

----- show igmp snooping summary statistics debug -----
Bridge Domains: 1
IGMP Snooping Bridge Domains: 1
Ports: 2
IGMP Snooping Ports: 1
Mrouters: 0
STP Forwarding Ports: 0
IGMP Groups: 0
  Member Ports: 0
IGMP Source Groups: 0
  Static/Include/Exclude: 0/0/0
  Member Ports (Include/Exclude): 0/0
Traffic Statistics (elapsed time since last cleared 6d20h):
      Received  Reinjected  Generated
Messages:          0          0          0
  IGMP General Queries: 0          0          0
  IGMP Group Specific Queries: 0          0          0
  IGMP G&S Specific Queries: 0          0          0

```

```

IGMP V2 Reports: 0 0 0
IGMP V3 Reports: 0 0 0
IGMP V2 Leaves: 0 0 0
IGMP Global Leaves: 0 - 0
PIM Hellos: 0 0 -
Rx Packet Treatment:
  Packets Flooded: 0
  Packets Forwarded To Members: 0
  Packets Forwarded To Mrouters: 0
  Packets Consumed: 0
Rx Errors:
  None
Rx Other:
  None
Tx Errors:
  None
L2FIB Statistics (elapsed time since last cleared 6d20h):
  BD Created Notifications: 2
  BD Deleted Notifications: 1
  EFP Added Notifications: 9
  EFP Removed Notifications: 2
  EFP STP Change Notifications: 4
  BD Topology Change Notifications: 0
  BD Added: 2
  BD Deleted: 1
  BD Profile Change: 0
  BD Profile Added: 0
  BD Profile Removed: 0
  BD Batch Start: 4
  BD Batch End: 4
  BD Mark: 0
  BD Sweep: 1
  EFP Added: 4
  EFP Deleted: 2
  EFP Profile Changed: 0
  EFP Profile Unchanged: 5
  EFP Profile Added: 0
  EFP Profile Removed: 0
  EFP Oper State To Up: 3
  EFP Oper State To Down: 1
  EFP STP State To Forwarding: 2
  EFP STP State To Blocked: 0
  EFP STP State To Not Participating: 0
  EFP Batch Start: 10
  EFP Batch End: 10
  EFP Mark: 0
  EFP Sweep: 1
  L2FIB Replay: 3
  Mroute Msgs Sent: 4
  Cfg Msgs Sent: 8
  BDXC Send: 8
Errors:
  None
Network Statistics (elapsed time since last cleared 6d20h):
  Socket Event: 0
  Network Connection Open Event: 2
  Network Connection Close Event: 0
  Packet Event: 2
  Packet Event Disconnect: 0
  Packet Event Empty: 0
  Packet Event Empty Watermark: 2
  Rx IGMP Packet Attempt: 0
  Rx IGMP Packet Success: 0
  Rx PIM Packet Attempt: 0

```

show tech-support igmp snooping

```

Rx PIM Packet Success: 0
Tx IGMP Packet Attempt: 0
Tx IGMP Packet Success: 0
Errors:
    None
Internal Data:
    Ltrace: Enabled
    Error Debug: Disabled
    Other Debug: Disabled
    System Mac: 00:00:00:00:00:00
Internal Statistics (elapsed time since last cleared 6d20h):
    None

----- show igmp snooping bridge-domain detail statistics debug -----
Bridge Domain      Profile          Act  Ver #Ports #Mrtrs #Grps #SGs
-----            -----          ---  --  -----  -----  -----  -----
bg:bd             prof1           Y   --       2       0       0       0

Profile Configured Attributes:
    System IP Address: 0.0.0.0
    Minimum Version: 2
    Report Suppression: Enabled
    Unsolicited Report Interval: 1000 (milliseconds)
    TCN Query Solicit: Disabled
    TCN Flood: Enabled
    TCN Flood Query Count: 2
    Router Alert Check: Disabled
    TTL Check: Disabled
    Internal Querier Support: Disabled
    Querier Query Interval: 60 (seconds)
    Querier LMQ Interval: 1000 (milliseconds)
    Querier LMQ Count: 2
    Querier Robustness: 2
    Querier: Not Present
    Mrouter Ports: 0
    STP Forwarding Ports: 0
    Groups:
        Member Ports: 0
    V3 Source Groups:
        Static/Include/Exclude: 0/0/0
        Member Ports (Include/Exclude): 0/0
    XID: BD:0x0
    Creation Time: 1d00h
    Snooping Creation Time: 1d00h
    Flood Mode: Disabled
    Star Star Mroute PD Data:
        Size: 4
        Data: 0x00 0x00 0x80 0x81
    Client L2Info:
        None
    MTU: 1400
Traffic Statistics (elapsed time since last cleared 5d20h):
                    Received  Reinjected  Generated
Messages:                0          0          0
    IGMP General Queries: 0          0          0
    IGMP Group Specific Queries: 0          0          0
    IGMP G&S Specific Queries: 0          0          0
    IGMP V2 Reports: 0          0          0
    IGMP V3 Reports: 0          0          0
    IGMP V2 Leaves: 0          0          0
    IGMP Global Leaves: 0          -          0
    PIM Hellos: 0          0          -

```

```
Rx Packet Treatment:  
  Packets Flooded: 0  
  Packets Forwarded To Members: 0  
  Packets Forwarded To Mrouters: 0  
  Packets Consumed: 0  
Rx Errors:  
  None  
Rx Other:  
  None  
Tx Errors:  
  None
```

show tech-support install

show tech-support install

To automatically run `show` commands that display information specific to installation information, use the `show tech-support install` command in the EXEC mode.

show tech-support install [file *send-to*[background] [{compressed | uncompressed}]] [location *node-id*] [rack]

Syntax Description	<p>file (Optional) Specifies that the command output is saved to a specified file.</p> <p>send-to (Optional) Name of the file. The following valid options are listed:</p> <ul style="list-style-type: none"> • <i>filename</i> • bootflash:<i>filename</i> • compactflash:<i>filename</i> • disk0:<i>filename</i> • disk1:<i>filename</i> • flash:<i>filename</i> • ftp:<i>filename</i> • harddisk:<i>filename</i> • harddiska:<i>filename</i> • nvram:<i>filename</i> • rcp:<i>filename</i> • slot0:<i>filename</i> • slot1:<i>filename</i> • tftp:<i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
location <i>node-id</i>	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
rack	(Optional) Displays the list of racks.
Command Default	Output is logged to the terminal screen.
Command Modes	EXEC mode

Command History	Release	Modification
	Release 2.0	This command was introduced

Usage Guidelines This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with *.tgz* extension. You can share this file with Cisco Technical Support. To share, use the **copy** command to copy the *.tgz* file to a server or local machine. For example, **copy harddisk:/showtech/name.tgz tftp://server_path**.

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support install** command to run **show** commands that display information specific to installation information. This command is useful for any problems encountered while executing install operations on the system during an install activate, install add, remove, or commit operation. This command generates installation information that can be useful for Cisco Technical Support representatives when troubleshooting a router.



Note This command is not required during normal use of the router.

The following **show** commands run automatically when you run the **show tech-support install** command:

- **show install request**
- **show version**
- **show install active summary**
- **show install committed summary**
- **show install package all detail**
- **show install log verbose**
- **show running-config sanitize**
- **show redundancy**
- **show logging**
- **show platform**
- **show install active detail**
- **show install committed detail**
- **show install inactive detail**
- **show pkgfs trace location all**
- **show install trace loadpath location node-id**
- **show install trace io location node-id**
- **show install trace instdir-lr location node-id**
- **show install trace insthelper location node-id**

show tech-support install

- **show install trace notify location *node-id***
- **show install trace replicator location *node-id***
- **show install trace pkg location *node-id***
- **show install trace inv location *node-id***
- **show install trace platform location *node-id***
- **show install trace ior location *node-id***
- **show install trace state-file-replication location *node-id***
- **show install trace sds location *node-id***
- **show memory summary location *node-id***
- **show context location *node-id***
- **show processes memory location *node-id***
- **show processes aborts location *node-id***
- **show processes blocked location *node-id***
- **show pkgfs trace location *node-id***
- **show filesystem location *node-id***
- **run diskinfo** (various)

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	basic-services or cisco-support	read
	pkg-mgmt	read

show tech-support l2tp

To automatically run `show` commands that display information specific to Layer 2 Tunnel Protocol (L2TP) technical support, use the `show tech-support l2tp` command in EXEC mode.

```
show tech-support l2tp {file send-to [background] [{compressed | uncompressed}] | terminal [page]}
```

Syntax Description					
file	Specifies that the command output is saved to a specified file.				
send-to	Name of the file. The following valid options are listed: <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • disk0: <i>filename</i> • disk0a: <i>filename</i> • disk1: <i>filename</i> • disk1a: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • harddiskb: <i>filename</i> • nvram: <i>filename</i> • rcp: <i>filename</i> • tftp: <i>filename</i> 				
background	(Optional) Specifies that the command runs in the background.				
compressed	(Optional) Displays compressed command output.				
uncompressed	(Optional) Displays the command output with no compression.				
terminal	Specifies that the command output is displayed on the terminal.				
page	(Optional) Specifies that the command output is displayed one page at a time. Use the return key to display the next line of output or use the space bar to display the next page of information. If not used, the output scrolls (that is, it does not stop for page breaks). <p>Press the Ctrl+C keys to stop the command output.</p>				
Command Modes	EXEC mode				
Command History	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left; width: 30%;">Release</th> <th style="text-align: left;">Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				

show tech-support l2tp

Usage Guidelines



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

This command collects relevant data for Layer 2 tunneling protocol-related issues that can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.



Note This command is not required during normal use of the router.

See the Cisco IOS XR Software command references for information about these commands and descriptions of their command output. The Cisco IOS XR Software command references are located at the following URL:
http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	cisco-support	read

Examples

The following example shows some of the **show tech-support l2tp** command output that is displayed on the terminal:

```
RP/0/RP0/CPU0:router# show tech-support l2tp terminal page
-----
show tech-support l2tp (Detailed output with event traces)
-----
----- show l2tp session detail -----
-----
----- show l2tp tunnel detail -----
-----
----- show l2tp internal -----
L2TP Internal information:
L2X information:
    Rx high water mark      : 0
    Ave msg process usecs   : 0
    Num rx messages         : 0
    Num tx messages         : 0
    Num reordered msgs     : 0
    Max reorder deviation  : 0
    Num ooo msgs            : 0
    Num rx path drops       : 0
    Num rx q overflow drops : 0
    Num buffered msgs       : 0
L2TUN information:
```


show tech-support l2tp

	Sock	CC	ICRQ	Rx	ICCN	Tx	Tx	Tx	Rx	ICRP				
				ICCN		ICRQ	ICRP	ICCN	ICRP					
<hr/>														
Init	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Idle	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Wt-Sock	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Wt-CC	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Proc-ICRQ	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Wt-Rx-ICCN	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Proc-ICCN	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Wt-Tx-ICRQ	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Wt-Tx-ICRP	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Wt-Tx-ICCN	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Wt-Rx-ICRP	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Proc-ICRP	-	-	-	-	-	-	-	-	-	-	-	-	-	-
establishe	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Dead	-	-	-	-	-	-	-	-	-	-	-	-	-	-
<hr/>														
----- show l2tp counters control session fsm event -----														
Event	State event occurred in													
	Idle	Wt	Wt	Proc	Wt	Proc	Wt	Wt	Wt	Wt	Proc	esta	Dead	
	Sock	CC	ICRQ	Rx	ICCN	Tx	Tx	Tx	Rx	ICRP				
				ICCN		ICRQ	ICRP	ICCN	ICRP					
<hr/>														
Invalid	-	-	-	-	-	-	-	-	-	-	-	-	-	-
CC-Up	-	-	-	-	-	-	-	-	-	-	-	-	-	-
CC-Down	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Sock-Ready	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Sock-Down	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Sock-Error	-	-	-	-	-	-	-	-	-	-	-	-	-	-
App-Conn	-	-	-	-	-	-	-	-	-	-	-	-	-	-
App-Disc	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Local-Cont	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Local-Up	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Local-Down	-	-	-	-	-	-	-	-	-	-	-	-	-	-
DP-Setup	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Rx-ICRQ	-	-	-	-	-	-	-	-	-	-	-	-	-	-
ICRQ-OK	-	-	-	-	-	-	-	-	-	-	-	-	-	-
ICRQ-ERR	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Rx-ICRP	-	-	-	-	-	-	-	-	-	-	-	-	-	-
ICRP-OK	-	-	-	-	-	-	-	-	-	-	-	-	-	-
ICRP-ERR	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Rx-ICCN	-	-	-	-	-	-	-	-	-	-	-	-	-	-
ICCN-OK	-	-	-	-	-	-	-	-	-	-	-	-	-	-
ICCN-ERR	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Rx-CDN	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Establishe	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Shut	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Destroy	-	-	-	-	-	-	-	-	-	-	-	-	-	-
<hr/>														
----- show processes l2tp_mgr -----														
Job Id:	263													
PID:	405734													
Executable path:	/disk0/hfr-fwdg-3.6.0.16I/bin/l2tp_mgr													
Instance #:	1													
Version ID:	00.00.0000													
Respawn:	ON													
Respawn count:	1													
Max. spawns per minute:	12													
Last started:	Thu Oct 11 19:25:05 2007													
Process state:	Run													
Package state:	Normal													

```
core: TEXT SHAREDMEM MAINMEM
Max. core: 0
Level: 999
Placement: ON
startup_path: /pkg/startup/l2tp.startup
```

```
show tech-support l2vpn
```

show tech-support l2vpn

To automatically run `show` commands that display information specific to Layer 2 Virtual Private Network (L2VPN) debugging, use the `show tech-support l2vpn` command in EXEC mode.

```
show tech-support l2vpn {file send-to [background] [{compressed | uncompressed}] | terminal [page] [rack]}
```

Syntax Description	<p>file Specifies that the command output is saved to a specified file.</p> <p>send-to Name of the file. The following valid options are listed:</p> <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • disk0: <i>filename</i> • disk0a: <i>filename</i> • disk1: <i>filename</i> • disk1a: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • harddiskb: <i>filename</i> • nvram: <i>filename</i> • rcp: <i>filename</i> • tftp: <i>filename</i> 				
background	(Optional) Specifies that the command runs in the background.				
compressed	(Optional) Displays compressed command output.				
uncompressed	(Optional) Displays the command output with no compression.				
terminal	Specifies that the command output is displayed on the terminal.				
page	(Optional) Specifies that the command output is displayed one page at a time. Use the return key to display the next line of output or use the space bar to display the next page of information. If not used, the output scrolls (that is, it does not stop for page breaks). Press the Ctrl+C keys to stop the command output.				
rack	(Optional) Displays the list of racks.				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				

Usage Guidelines

Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

This command collects information for Layer 2 VPN related issues that can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.



Note This command is not required during normal use of the router.

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:
http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	cisco-support	read

Examples

The following example shows some of the **show tech-support l2vpn** command output that is displayed on the terminal:

```
RP/0/RP0/CPU0:router# show tech-support l2vpn terminal page
-----
show tech-support l2vpn (Detail with Event traces)
-----
----- show version -----
Cisco IOS XR Software, Version 3.6.0.16I[SIT1_IMAGE1]
Copyright (c) 2007 by Cisco Systems, Inc.

ROM: System Bootstrap, Version 1.48(20070928:224557) [CRS-1 ROMMON],
P1_CRS-8 uptime is 4 days, 20 hours, 49 minutes
System image file is "disk0:hfr-os-mbi-3.6.0.16I/mbihfr-rp.vm"

cisco CRS-8/S (7457) processor with 4194304K bytes of memory.
7457 processor at 1197Mhz, Revision 1.2

4 T3 Port controller(s)
20 Packet over SONET/SDH network interface(s)
20 SONET/SDH Port controller(s)
4 Serial network interface(s)
4 Ethernet/IEEE 802.3 interface(s)
16 GigabitEthernet/IEEE 802.3 interface(s)
1019k bytes of non-volatile configuration memory.
```

show tech-support l2vpn

```

38079M bytes of hard disk.
1000592k bytes of ATA PCMCIA card at disk 0 (Sector size 512 bytes).
1000640k bytes of ATA PCMCIA card at disk 1 (Sector size 512 bytes).

Configuration register on node 0/1/CPU0 is 0x102
Boot device on node 0/1/CPU0 is mem:
Package active on node 0/1/CPU0:
hfr-sbc, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-sbc-3.6.0.16I
    Built on Tue Oct  2 15:07:32 DST 2007
    By sjce-gf-071.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-pagent, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-pagent-3.6.0.I
    Built on Tue Oct  2 15:58:47 DST 2007
    By iox42.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

hfr-fpd, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-fpd-3.6.0.16I
    Built on Tue Oct  2 14:48:41 DST 2007
    By sjce-gf-071.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-diags, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-diags-3.6.0.16I
    Built on Tue Oct  2 14:48:32 DST 2007
    By sjce-gf-071.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-mcast, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-mcast-3.6.0.16I
    Built on Tue Oct  2 14:26:29 DST 2007
    By sjce-gf-061.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-mpls, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-mpls-3.6.0.16I
    Built on Tue Oct  2 14:22:48 DST 2007
    By sjce-gf-061.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-lc, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-lc-3.6.0.16I
    Built on Tue Oct  2 14:02:24 DST 2007
    By iox26.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

hfr-fwdg, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-fwdg-3.6.0.16I
    Built on Tue Oct  2 13:57:12 DST 2007
    By iox26.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

hfr-admin, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-admin-3.6.0.16I
    Built on Tue Oct  2 13:53:07 DST 2007
    By iox26.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

hfr-base, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-base-3.6.0.16I
    Built on Tue Oct  2 13:51:10 DST 2007
    By iox26.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

hfr-os-mbi, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-os-mbi-3.6.0.I
    Built on Tue Oct  2 13:28:38 DST 2007
    By iox26.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

Configuration register on node 0/4/CPU0 is 0x102
Boot device on node 0/4/CPU0 is disk0:
Package active on node 0/4/CPU0:
hfr-sbc, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-sbc-3.6.0.16I
    Built on Tue Oct  2 15:07:32 DST 2007
    By sjce-gf-071.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-pagent, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-pagent-3.6.0.I
    Built on Tue Oct  2 15:58:47 DST 2007
    By iox42.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

hfr-fpd, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-fpd-3.6.0.16I
    Built on Tue Oct  2 14:48:41 DST 2007

```

```

By sjce-gf-071.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-doc, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-doc-3.6.0.16I
  Built on Tue Oct  2 14:48:52 DST 2007
  By sjce-gf-071.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-diags, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-diags-3.6.0.16I
  Built on Tue Oct  2 14:48:32 DST 2007
  By sjce-gf-071.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-mgbl, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-mgbl-3.6.0.16I
  Built on Tue Oct  2 14:20:33 DST 2007
  By sjce-gf-061.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-mcast, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-mcast-3.6.0.16I
  Built on Tue Oct  2 14:26:29 DST 2007
  By sjce-gf-061.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-mpls, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-mpls-3.6.0.16I
  Built on Tue Oct  2 14:22:48 DST 2007
  By sjce-gf-061.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-rout, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-rout-3.6.0.16I
  Built on Tue Oct  2 14:06:14 DST 2007
  By iox26.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

hfr-k9sec, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-k9sec-3.6.0.16I
  Built on Tue Oct  2 14:43:56 DST 2007
  By sjce-gf-074.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-lc, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-lc-3.6.0.16I
  Built on Tue Oct  2 14:02:24 DST 2007
  By iox26.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

hfr-fwdg, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-fwdg-3.6.0.16I
  Built on Tue Oct  2 13:57:12 DST 2007
  By iox26.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

hfr-admin, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-admin-3.6.0.16I
  Built on Tue Oct  2 13:53:07 DST 2007
  By iox26.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

hfr-base, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-base-3.6.0.16I
  Built on Tue Oct  2 13:51:10 DST 2007
  By iox26.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

hfr-os-mbi, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-os-mbi-3.6.0.I
  Built on Tue Oct  2 13:28:38 DST 2007
  By iox26.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

Configuration register on node 0/4/CPU1 is 0x102
Boot device on node 0/4/CPU1 is disk0:
Package active on node 0/4/CPU1:
hfr-sbc, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-sbc-3.6.0.16I
  Built on Tue Oct  2 15:07:32 DST 2007
  By sjce-gf-071.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-pagent, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-pagent-3.6.0.I
  Built on Tue Oct  2 15:58:47 DST 2007
  By iox42.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

hfr-fpd, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-fpd-3.6.0.16I
  Built on Tue Oct  2 14:48:41 DST 2007
  By sjce-gf-071.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

```

show tech-support l2vpn

```

hfr-doc, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-doc-3.6.0.16I
    Built on Tue Oct  2 14:48:52 DST 2007
    By sjce-gf-071.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-diags, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-diags-3.6.0.16I
    Built on Tue Oct  2 14:48:32 DST 2007
    By sjce-gf-071.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-mgbl, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-mgbl-3.6.0.16I
    Built on Tue Oct  2 14:20:33 DST 2007
    By sjce-gf-061.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-mcast, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-mcast-3.6.0.16I
    Built on Tue Oct  2 14:26:29 DST 2007
    By sjce-gf-061.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-mpls, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-mpls-3.6.0.16I
    Built on Tue Oct  2 14:22:48 DST 2007
    By sjce-gf-061.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-rout, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-rout-3.6.0.16I
    Built on Tue Oct  2 14:06:14 DST 2007
    By iox26.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

hfr-k9sec, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-k9sec-3.6.0.16I
    Built on Tue Oct  2 14:43:56 DST 2007
    By sjce-gf-074.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-lc, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-lc-3.6.0.16I
    Built on Tue Oct  2 14:02:24 DST 2007
    By iox26.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

hfr-fwdg, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-fwdg-3.6.0.16I
    Built on Tue Oct  2 13:57:12 DST 2007
    By iox26.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

hfr-admin, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-admin-3.6.0.16I
    Built on Tue Oct  2 13:53:07 DST 2007
    By iox26.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

hfr-base, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-base-3.6.0.16I
    Built on Tue Oct  2 13:51:10 DST 2007
    By iox26.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

hfr-os-mbi, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-os-mbi-3.6.0.I
    Built on Tue Oct  2 13:28:38 DST 2007
    By iox26.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

Configuration register on node 0/6/CPU0 is 0x102
Boot device on node 0/6/CPU0 is mem:
Package active on node 0/6/CPU0:
hfr-sbc, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-sbc-3.6.0.16I
    Built on Tue Oct  2 15:07:32 DST 2007
    By sjce-gf-071.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

hfr-pagent, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-pagent-3.6.0.I
    Built on Tue Oct  2 15:58:47 DST 2007
    By iox42.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE1/hfr/8

hfr-fpd, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-fpd-3.6.0.16I
    Built on Tue Oct  2 14:48:41 DST 2007
    By sjce-gf-071.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8

```

```
hfr-diags, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-diags-3.6.0.16I
Built on Tue Oct  2 14:48:32 DST 2007
By sjce-gf-071.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8
```

```
hfr-mcast, V 3.6.0.16I[SIT1_IMAGE1], Cisco Systems, at disk0:hfr-mcast-3.6.0.16I
Built on Tue Oct  2 14:26:29 DST 2007
By sjce-gf-061.cisco.com in /auto/ioxbuild2/production/3.6.0.16I.SIT1_IMAGE8
```

```
show tech-support lrd
```

show tech-support lrd

To automatically run `show` commands that display information specific to logical router daemon (LRD) debugging, use the `show tech-support lrd` command in EXEC mode.

```
show tech-support lrd {file send-to [background] [{compressed|uncompressed}] | location {node-id | all} [rack]}
```

Syntax Description	<p>file Specifies that the command output is saved to a specified file.</p> <p>send-to Name of the file. The following valid options are listed:</p> <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • disk0: <i>filename</i> • disk0a: <i>filename</i> • disk1: <i>filename</i> • disk1a: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • harddiskb: <i>filename</i> • nvram: <i>filename</i> • rcp: <i>filename</i> • tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
location	(Optional) Specifies a node.
<i>node-id</i>	(Optional) Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
all	(Optional) Specifies all locations.
rack	(Optional) Displays the list of racks.

Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				

Usage Guidelines

Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support lrd** command for the LRD debugging, which controls the Secure Domain Router (SDR) architecture. The system always has at least one SDR at any time. It collects relevant information when issues arise with the SDR management within the system. This command can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.



Note This command is not required during normal use of the router.

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	cisco-support	read

Examples

The following example shows some of the **show tech-support lrd** command output that is displayed on the terminal:

```
RP/0/RP0/CPU0:router# show tech-support lrd terminal page
-----
                                         show tech-support lrd
-----
lrdbg 'i' getting CONFIG INFO
Starting lrdbg commands for local node.
node_name = node0_RP0_CPU0 chan_name is /net/node0_RP0_CPU0/dev/lrd_local
Local nodeid=513 Local lrname=Owner Local lrid = 0
lrdbg: Successfully connected to channel /net/node0_RP0_CPU0/dev/lrd_local

Starting lrdbg commands for node = node0_RP0_CPU0 lrid = 0

DLRSC Info for Node = node0_RP0_CPU0 Nodeid = 0x201 lrid = 0
We are the dLRSC, Backup dLRSC is 0x211

--More--
liblrd_dl_node_state_0.dll          0.0
liblrd_dl_sw_state_0.dll            0.0
liblrd_dl_fwd_ldr_0.dll             0.0
```

show tech-support lrd

```

liblrd_alpha_fwd.dll          1.0
liblrd_envmon_fwd.dll        1.0
liblrd_invmgr_fwd.dll        1.0
Inventory Info for Node = node0_RP0_CPU0 lrnid = 0
Success: node_count=6, ready=1
node=0x11, type=2, memsize=256, cpus=1, speed=100, sw_state=6, red_state=0 lr_n0
node=0x41, type=1, memsize=256, cpus=1, speed=100, sw_state=6, red_state=1 lr_nf
node=0x42, type=1, memsize=256, cpus=1, speed=100, sw_state=6, red_state=1 lr_nf
node=0x61, type=2, memsize=256, cpus=1, speed=100, sw_state=6, red_state=0 lr_n0
node=0x201, type=0, memsize=256, cpus=1, speed=100, sw_state=6, red_state=1 lr_1
node=0x211, type=0, memsize=256, cpus=1, speed=100, sw_state=6, red_state=2 lr_1

LR name Info for Node = node0_RP0_CPU0

dSC node:      0/RP0/CPU0
standby dSC node: 0/RP1/CPU0

LRs (Configured, pre-existing) basic info:
  Name           LRid   dLRSC      backup_dLRSC
-----
  Owner           0      0/RP0/CPU0  0/RP1/CPU0

LRs (Configured, pre-existing) basic info:
  Lr-Names       LRid   dLRSC   StbydLRSC  Primary   Primary1   McastAddr
-----
  Owner           0      0/RP0/CPU0  0/RP1/CPU0  0/RP0/CPU0  0/RP1/CPU0  0

Client Vector for Node = node0_RP0_CPU0
Received 23 currently connected lrd clients
  PID    op    eFLAGS    cFLAGS
  -----
  168027  0x1    0x4      0x3
  77863   0x11   0x204    0x1
  81963   0x10   0x200    0x0
  168024  0x2    0x0      0x0
  168026  0x2    0x0      0x0
  200800  0x1    0x4      0x1f
  204909  0x1    0x4      0xb
  209006  0x23   0x84     0xb
  385148  0x1    0x4      0x7
  385149  0x1    0x4      0x7
  381047  0x41   0x25     0x3
  381043  0x1    0x4      0x3
  381041  0x1    0x4      0x7
  397456  0x1    0x4      0x3
  397485  0x1    0x14     0x4
  397484  0x1    0x14     0x4
  397498  0x1    0x4      0x4
  405725  0x1    0x4      0x7
  405735  0x1    0x4      0x4
  405744  0x40   0x1      0x0
  434434  0x1    0x4      0x7
  434435  0x1    0x4      0x7
  434433  0x1    0x4      0x7

DLL loaded for Node = node0_RP0_CPU0
  dll name          version
  -----
  Node State Info for Node = node0_RP0_CPU0
  -----
  Type      Node      Nodeid   Prev State   Cur State   LRid   (PD c)
  -----
  LC(2)    0/1/CPU0   0x11     RUNNING_MBI(5)  RUNNING_ENA(6)  0     (5242)
  DRP(1)   0/4/CPU0   0x41     RUNNING_MBI(5)  RUNNING_ENA(6)  0     (119)

```

```

DRP(1) 0/4/CPU1 0x42 RUNNING_MBI(5) RUNNING_ENA(6) 0 (119)
LC(2) 0/6/CPU0 0x61 RUNNING_MBI(5) RUNNING_ENA(6) 0 (5242)
RP(0) 0/RP0/CPU0 0x201 RUNNING_MBI(5) RUNNING_ENA(6) 0 (19) )
RP(0) 0/RP1/CPU0 0x211 PRESENT(1) RUNNING_ENA(6) 0 (19) )

```

Sw State Info for Node = node0_RP0_CPU0

Type	Node	Nodeid	PrevState (BAND)	CurState (BAND)	Red-Role/ Red-State	Partner node	Par nae
LC(2)	0/1/CPU0	0x11	INFRA	FINAL	Active/Down	0xffffffff	
DRP(1)	0/4/CPU0	0x41	INFRA	FINAL	Active/Down	0xffffffff	
DRP(1)	0/4/CPU1	0x42	INFRA	FINAL	Active/Down	0xffffffff	
LC(2)	0/6/CPU0	0x61	INFRA	FINAL	Active/Down	0xffffffff	
RP(0)	0/RP0/CPU0	0x201	INFRA	FINAL	Active/Down	0x211	
RP(0)	0/RP1/CPU0	0x211	INFRA	FINAL	Standby/Down	0x201	

Config Info for Node = node0_RP0_CPU0
LRd basic configuration data:

node	:	0x201
lr_id	:	0
lr_name	:	Owner
dsc node	:	0x201
dsc partner node	:	0x211
dlrsc node	:	0x201
dlrsc partner node	:	0x211
am I DSC	:	Yes
am I STBY dSC	:	NO
am I dLRSC	:	Yes
am I STBY dLRSC	:	NO
primary node	:	0x201
primary node1	:	0x211
mcast addr	:	0x0
mac addr	:	0x01563c0b00

ADMIN CONFIG is APPLIED

lrd log file path is /net/node0_RP0_CPU0/tmp/lrd.log

-----LRD LOG START FOR NODE node0_RP0_CPU0-----

10/11 10:19:16.309 1 main: ---LRD starting---

10/11 10:19:16.325 1 main: *****LRD on Node=0x201*****

10/11 10:19:16.327 1 main: mutex init for inv_mutex DONE.

10/11 10:19:17.772 1 lrd_get_dsc: dSC = 201

10/11 10:19:17.774 1 main: We are dSC.

10/11 10:19:17.776 1 main: Registering with SSM as service provider. Once

show tech-support lrd

++++ lrdbg -I -1: lrd server inventory [17:21:35.603 UTC Fri Dec 18 2009] +++++

show tech-support lrd

```

Success: node_count=8, ready=1
node=0x1(0/RSP0/CPU0), type=0, memsize=256, cpus=1, speed=100, sw_state=6, red_state=1
lr_name=Owner pd_card_type=0x100302, partner=0x11
node=0x11(0/RSP1/CPU0), type=0, memsize=256, cpus=1, speed=100, sw_state=6, red_state=2
lr_name=Owner pd_card_type=0x100302, partner=0x1
node=0x4a0(0/FT0/SP), type=5, memsize=256, cpus=1, speed=100, sw_state=1, red_state=0
lr_name=Owner pd_card_type=0x0
node=0x4b0(0/FT1/SP), type=5, memsize=256, cpus=1, speed=100, sw_state=1, red_state=0
lr_name=Owner pd_card_type=0x0
node=0x821(0/0/CPU0), type=2, memsize=256, cpus=1, speed=100, sw_state=6, red_state=0
lr_name=Owner pd_card_type=0x30207
node=0x841(0/2/CPU0), type=2, memsize=256, cpus=1, speed=100, sw_state=6, red_state=0
lr_name=Owner pd_card_type=0x30207
node=0x851(0/3/CPU0), type=2, memsize=256, cpus=1, speed=100, sw_state=0, red_state=0
lr_name=Owner pd_card_type=0x3020a
node=0xe10(0/PM1/SP), type=5, memsize=256, cpus=1, speed=100, sw_state=1, red_state=0
lr_name=Owner pd_card_type=0xf00188

----- lrdbg -I -1: lrd server inventory [17:21:36.023 UTC Fri Dec 18 2009] -----

+++ lrdbg -L local_node_lrd: local LR config info [17:21:36.215 UTC Fri Dec 18 2009] +++

lrdbg 'i' getting CONFIG INFO
Starting lrdbg commands for node = 0/RSP0/CPU0
lrdbg: temp_node_name copied is 0/RSP0/CPU0
node_name = node0_RSP0_CPU0 chan_name = /net/node0_RSP0_CPU0/dev/lrd_local
user_nodeid=1 user_lrname = Owner
Local nodeid=1 Local lrname=Owner
User nodeid=1 User lrname = Owner User lrid=0
lrdbg: Successfully connected to channel /net/node0_RSP0_CPU0/dev/lrd_local

Starting lrdbg commands for node = node0_RSP0_CPU0 lrid = 0

DLRSC Info for Node = node0_RSP0_CPU0 Nodeid = 0x1 lrid = 0
We are the dLRSC, Backup dLRSC is 0x11

Inventory Info for Node = node0_RSP0_CPU0 lrid = 0
Success: node_count=5, ready=1
node=0x1(0/RSP0/CPU0), type=0, memsize=256, cpus=1, speed=100, sw_state=6, red_state=1
lr_name=Owner pd_card_type=0x100302, partner=0x11
node=0x11(0/RSP1/CPU0), type=0, memsize=256, cpus=1, speed=100, sw_state=6, red_state=2
lr_name=Owner pd_card_type=0x100302, partner=0x1
node=0x821(0/0/CPU0), type=2, memsize=256, cpus=1, speed=100, sw_state=6, red_state=0
lr_name=Owner pd_card_type=0x30207
node=0x841(0/2/CPU0), type=2, memsize=256, cpus=1, speed=100, sw_state=6, red_state=0
lr_name=Owner pd_card_type=0x30207
node=0x851(0/3/CPU0), type=2, memsize=256, cpus=1, speed=100, sw_state=0, red_state=0
lr_name=Owner pd_card_type=0x3020a

LR name Info for Node = node0_RSP0_CPU0

dSC node:          0/RSP0/CPU0

```

```

standby dSC node: 0/RSP1/CPU0

LRs (Configured, pre-existing) basic info:
  Name          LRid  dLRSC      backup_dLRSC
  -----
  Owner           0    0/RSP0/CPU0  0/RSP1/CPU0

LRs (Configured, pre-existing) basic info:
  Lr-Names       LRid dLRSC      StbydLRSC Primary Primary1 McastAddr MacAddr
  -----
  Owner           0    0/RSP0/CPU0  0/RSP1/CPU0 0/RSP0/CPU0 0/RSP1/CPU0 0
  0211bfcfe7e

Client Vector for Node = node0_RSP0_CPU0
Received 25 currently connected lrd clients
  PID   op   eFLAGS   cFLAGS
  -----
  213071 0x40 0x1   0x0
  213090 0x1   0x4   0x3
  163876 0x11 0x204 0x1
  176173 0x10 0x200 0x0
  184381 0x1   0x4   0x1
  213089 0x2   0x0   0x0
  208966 0x23 0x84  0x1
  229494 0x1   0x4   0x1
  221289 0x1   0x4   0x1f
  241796 0x41 0x15  0x3
  245905 0x40 0x1   0x0
  245902 0x1   0x14  0x7
  245901 0x1   0x14  0x7
  237682 0x1   0x4   0x7
  237695 0x1   0x4   0x3
  245908 0x40 0x1   0x0
  245907 0x40 0x1   0x0
  213092 0x1   0x14  0x3
  254123 0x1   0x14  0x3
  254124 0x1   0x4   0x4
  262347 0x1   0x4   0x4
  262351 0x1   0x14  0x4
  270550 0x1   0x4   0x7
  254139 0x40 0x1   0x4
  270596 0x40 0x1   0x0

DLL loaded for Node = node0_RSP0_CPU0
  liblrd_dl_node_state_0.dll      0.0
  liblrd_dl_sw_state_0.dll       0.0
  liblrd_dl_fwd_ldr_0.dll       0.0
  liblrd_alpha_fwd.dll          1.0
  liblrd_envmon_fwd.dll         1.0
  liblrd_invmgr_fwd.dll        1.0
  dll name                      version
  -----
  Node State Info for Node = node0_RSP0_CPU0
  -----
  Type     Node      Nodeid   Prev State   Cur State   LRid   (PD ctype)
  (old-lr-id)
  -----
  RP(0)   0/RSP0/CPU0 0x1     RUNNING_MBI(5)  RUNNING_ENA(6)  0    (0x100302) (-1)
  RP(0)   0/RSP1/CPU0 0x11    RUNNING_MBI(5)  RUNNING_ENA(6)  0    (0x100302) (-1)
  LC(2)   0/0/CPU0   0x821   RUNNING_MBI(5)  RUNNING_ENA(6)  0    (0x30207) (-1)
  LC(2)   0/2/CPU0   0x841   RUNNING_MBI(5)  RUNNING_ENA(6)  0    (0x30207) (-1)
  LC(2)   0/3/CPU0   0x851   BRINGDOWN(7)  NOT_PRESENT(0) 0    (0x3020a) (-1)

Sw State Info for Node = node0_RSP0_CPU0

```

show tech-support lrd

Type	Node	Nodeid	PrevState (BAND)	CurState (BAND)	Red-Role/ Red-State	Partner node	Pair name
RP(0)	0/RSP0/CPU0	0x1	INFRA	FINAL	Active/Down	0x11	
RP(0)	0/RSP1/CPU0	0x11	INFRA	FINAL	Standby/Down	0x1	
LC(2)	0/0/CPU0	0x821	INFRA	FINAL	Active/Down	0xffffffff	
LC(2)	0/2/CPU0	0x841	INFRA	FINAL	Active/Down	0xffffffff	
LC(2)	0/3/CPU0	0x851	INFRA	--	Unknown/Down	0xffffffff	

Config Info for Node = node0_RSP0_CPU0
LRd basic configuration data:

node	:	0x1
lr_id	:	0
lr_name	:	Owner
dsc node	:	0x1
dsc partner node	:	0x11
dlrsc node	:	0x1
dlrsc partner node	:	0x11
am I dSC	:	Yes
am I STBY dSC	:	NO
am I dLRSC	:	Yes
am I STBY dLRSC	:	NO
primary node	:	0x1
primary node1	:	0x11
mcast addr	:	0x0
mac addr	:	0x0211bfef7e

ADMIN CONFIG is APPLIED

--- lrdbg -L local_node_lrd: local LR config info [17:21:36.695 UTC Fri Dec 18 2009] ---

++++ lrd_show -I for this SDR-s DSDRSC [17:21:36.846 UTC Fri Dec 18 2009] +++++

Success: node_count=5, ready=1
node=0x1, type=0, memsize=256, cpus=1, speed=100, sw_state=6, red_state=1, lr_name=Owner,
pd_card_type=0x100302, partner=0x11
node=0x11, type=0, memsize=256, cpus=1, speed=100, sw_state=6, red_state=2, lr_name=Owner,
pd_card_type=0x100302, partner=0x1
node=0x821, type=2, memsize=256, cpus=1, speed=100, sw_state=6, red_state=0, lr_name=Owner,
pd_card_type=0x30207
node=0x841, type=2, memsize=256, cpus=1, speed=100, sw_state=6, red_state=0, lr_name=Owner,
pd_card_type=0x30207
node=0x851, type=2, memsize=256, cpus=1, speed=100, sw_state=0, red_state=0, lr_name=Owner,
pd_card_type=0x3020a

---- lrd_show -I for this SDR-s DSDRSC [17:21:37.240 UTC Fri Dec 18 2009] ----

+++ lrdbg -n -1: lrd server node states [17:21:37.386 UTC Fri Dec 18 2009] +---

Type (old-lr-id)	Node	Nodeid	Prev State	Cur State	LRid	(PD ctype)
RP(0)	0/RSP0/CPU0	0x1	RUNNING_MBI(5)	RUNNING_ENA(6)	0	(0x100302) (-1)
RP(0)	0/RSP1/CPU0	0x11	RUNNING_MBI(5)	RUNNING_ENA(6)	0	(0x100302) (-1)
LC(2)	0/0/CPU0	0x821	RUNNING_MBI(5)	RUNNING_ENA(6)	0	(0x30207) (-1)
LC(2)	0/2/CPU0	0x841	RUNNING_MBI(5)	RUNNING_ENA(6)	0	(0x30207) (-1)
LC(2)	0/3/CPU0	0x851	BRINGDOWN(7)	NOT_PRESENT(0)	0	(0x3020a) (-1)

--- lrdbg -n -1: lrd server node states [17:21:37.766 UTC Fri Dec 18 2009] ---

+++ lrdbg -s -1: lrd server software states [17:21:37.914 UTC Fri Dec 18 2009] ++++

Type	Node	Nodeid	PrevState (BAND)	CurState (BAND)	Red-Role/ Red-State	Partner node	Pair name
RP(0)	0/RSP0/CPU0	0x1	INFRA	FINAL	Active/Down	0x11	
RP(0)	0/RSP1/CPU0	0x11	INFRA	FINAL	Standby/Down	0x1	
LC(2)	0/0/CPU0	0x821	INFRA	FINAL	Active/Down	0xffffffff	
LC(2)	0/2/CPU0	0x841	INFRA	FINAL	Active/Down	0xffffffff	
LC(2)	0/3/CPU0	0x851	INFRA	--	Unknown/Down	0xffffffff	

--- lrdbg -s -1: lrd server software states [17:21:38.294 UTC Fri Dec 18 2009] ---

+++++ show ltrd-trace server [17:21:38.439 UTC Fri Dec 18 2009] +++++

lrd_show_ltrace -F lrd/sntf -TP1

41 wrapping entries (1024 possible, 0 filtered, 41 total)

Shelfmgr Notfs Rcvd:

	R/S/I	node_state	cardstate	adminpower
adminshut				
Dec 14 11:19:58.255	lrd/sntf 0/RSP0/CPU0 t13 : 0/0/1	RUNNING_ENA		6
1 0				
Dec 14 11:19:58.259	lrd/sntf 0/RSP0/CPU0 t13 : 0/132/1	PRESENT		1
1 0				
Dec 14 11:19:58.264	lrd/sntf 0/RSP0/CPU0 t13 : 0/130/1	BOOTING		3
1 0				
Dec 14 11:19:58.267	lrd/sntf 0/RSP0/CPU0 t13 : 0/75/0	PRESENT		1
1 0				
Dec 14 11:19:58.268	lrd/sntf 0/RSP0/CPU0 t13 : 0/74/0	PRESENT		1
1 0				
Dec 14 11:19:59.320	lrd/sntf 0/RSP0/CPU0 t13 : 0/1/1	RUNNING_MBI		5
1 0				
Dec 14 11:19:59.335	lrd/sntf 0/RSP0/CPU0 t13 : 0/225/0	PRESENT		1
1 0				
Dec 14 11:19:59.342	lrd/sntf 0/RSP0/CPU0 t13 : 0/132/1	BOOTING		3

show tech-support lrd

```

1      0
Dec 14 11:19:59.354 lrd/sntf 0/RSP0/CPU0 t13 : 0/132/1      BOOTING      3
1      0
Dec 14 11:20:23.304 lrd/sntf 0/RSP0/CPU0 t13 : 0/130/1      MBI_BOOTING   4
1      0
Dec 14 11:20:23.314 lrd/sntf 0/RSP0/CPU0 t13 : 0/132/1      MBI_BOOTING   4
1      0
Dec 14 11:21:45.710 lrd/sntf 0/RSP0/CPU0 t13 : 0/130/1      RUNNING_MBI    5
1      0
Dec 14 11:21:46.237 lrd/sntf 0/RSP0/CPU0 t13 : 0/132/1      RUNNING_MBI    5
1      0
Dec 14 11:22:01.426 lrd/sntf 0/RSP0/CPU0 t13 : 0/1/1       RUNNING_ENA     6
1      0
Dec 14 11:23:21.504 lrd/sntf 0/RSP0/CPU0 t13 : 0/130/1      RUNNING_ENA     6
1      0
Dec 14 11:23:21.511 lrd/sntf 0/RSP0/CPU0 t13 : 0/132/1      RUNNING_ENA     6
1      0
Dec 14 15:42:37.504 lrd/sntf 0/RSP0/CPU0 t13 : 0/133/1      PRESENT      1
1      0
Dec 14 15:42:37.608 lrd/sntf 0/RSP0/CPU0 t13 : 0/133/1      BOOTING      3
1      0
Dec 14 15:42:37.614 lrd/sntf 0/RSP0/CPU0 t13 : 0/133/1      BOOTING      3
1      0
Dec 14 15:43:02.999 lrd/sntf 0/RSP0/CPU0 t13 : 0/133/1      MBI_BOOTING   4
1      0
Dec 14 15:43:48.408 lrd/sntf 0/RSP0/CPU0 t13 : 0/133/1      RUNNING_MBI    5
1      0
Dec 14 15:45:05.176 lrd/sntf 0/RSP0/CPU0 t13 : 0/133/1      RUNNING_ENA     6
1      0
Dec 15 14:53:15.444 lrd/sntf 0/RSP0/CPU0 t13 : 0/133/1      BRINGDOWN     7
1      0
Dec 15 14:53:15.461 lrd/sntf 0/RSP0/CPU0 t13 : 0/133/1      NOT_PRESENT   0
1      0

```

----- show ltrd-trace server [17:21:38.840 UTC Fri Dec 18 2009] -----

```

+++++ show ltrd-trace server [17:21:38.985 UTC Fri Dec 18 2009] ++++++
lrd_show_ltrace -F lrd/sntf -TP2
41 wrapping entries (1024 possible, 0 filtered, 41 total)                                         Shelfmgr
Notfs processed:
nodeid o-LRid  LRid  o-state
n-state pd-ctype pi-ctype
-----
Dec 14 11:19:58.261 lrd/sntf 0/RSP0/CPU0 t13 : 0/2/CPU0 (0x841)  0  0  NOT_PRESENT
  PRESENT 0x0  UNKN
Dec 14 11:19:58.265 lrd/sntf 0/RSP0/CPU0 t13 : 0/0/CPU0 (0x821)  0  0  NOT_PRESENT
  BOOTING 0x0  UNKN
Dec 14 11:19:58.268 lrd/sntf 0/RSP0/CPU0 t13 : 0/FT1/SP (0x4b0) -1 -1  NOT_PRESENT
  PRESENT 0x0  UNKN
Dec 14 11:19:58.269 lrd/sntf 0/RSP0/CPU0 t13 : 0/FT0/SP (0x4a0) -1 -1  NOT_PRESENT
  PRESENT 0x0  UNKN
Dec 14 11:19:59.327 lrd/sntf 0/RSP0/CPU0 t13 : 0/RSP1/CPU0(0x11 )  0  0  NOT_PRESENT
  RUNNING_MBI 0x100000 RP
Dec 14 11:19:59.341 lrd/sntf 0/RSP0/CPU0 t13 : 0/PM1/SP (0xe10) -1 -1  NOT_PRESENT
  PRESENT 0xf00188 UNKN
Dec 14 11:19:59.345 lrd/sntf 0/RSP0/CPU0 t13 : 0/2/CPU0 (0x841)  0  0  PRESENT
  BOOTING 0x0  UNKN

```

```

Dec 14 11:20:23.306 lrd/sntf 0/RSP0/CPU0 t13 : 0/0/CPU0 (0x821) 0 0 BOOTING
    MBI_BOOTING 0x30207 LC
Dec 14 11:20:23.316 lrd/sntf 0/RSP0/CPU0 t13 : 0/2/CPU0 (0x841) 0 0 BOOTING
    MBI_BOOTING 0x30207 LC
Dec 14 11:21:45.711 lrd/sntf 0/RSP0/CPU0 t13 : 0/0/CPU0 (0x821) 0 0 MBI_BOOTING
    RUNNING_MBI 0x30207 LC
Dec 14 11:21:46.239 lrd/sntf 0/RSP0/CPU0 t13 : 0/2/CPU0 (0x841) 0 0 MBI_BOOTING
    RUNNING_MBI 0x30207 LC
Dec 14 15:42:37.508 lrd/sntf 0/RSP0/CPU0 t13 : 0/3/CPU0 (0x851) 0 0 NOT_PRESENT
    PRESENT 0x0 UNKN
Dec 14 15:42:37.609 lrd/sntf 0/RSP0/CPU0 t13 : 0/3/CPU0 (0x851) 0 0 PRESENT
    BOOTING 0x0 UNKN
Dec 14 15:43:03.000 lrd/sntf 0/RSP0/CPU0 t13 : 0/3/CPU0 (0x851) 0 0 BOOTING
    MBI_BOOTING 0x3020a LC
Dec 14 15:43:48.409 lrd/sntf 0/RSP0/CPU0 t13 : 0/3/CPU0 (0x851) 0 0 MBI_BOOTING
    RUNNING_MBI 0x3020a LC
Dec 15 14:53:15.447 lrd/sntf 0/RSP0/CPU0 t13 : 0/3/CPU0 (0x851) 0 0 RUNNING_ENA
    BRINGDOWN 0x3020a LC
Dec 15 14:53:15.462 lrd/sntf 0/RSP0/CPU0 t13 : 0/3/CPU0 (0x851) 0 0 BRINGDOWN
    NOT_PRESENT 0x3020a LC

```

----- show ltrd-trace server [17:21:39.392 UTC Fri Dec 18 2009] -----

+++++ show ltrd-trace server [17:21:39.548 UTC Fri Dec 18 2009] +++++

lrd_show_ltrace -F lrd/sreg -TP1

29 wrapping entries (64 possible, 0 filtered, 29 total)

Client New Registrations:			
	jid	pid	Msg-op
Event-flags	Card-flags		
Dec 14 11:19:47.723 lrd/sreg 0/RSP0/CPU0 t15 : 389	213071	DLRSC	
dlrsc-state Unknwn			
Dec 14 11:19:47.725 lrd/sreg 0/RSP0/CPU0 t15 : 406	213090	Node State	
card-state RP DRP			
Dec 14 11:19:47.727 lrd/sreg 0/RSP0/CPU0 t15 : 95	163876	Pri LR	Unknwn
Unknwn			
Dec 14 11:19:47.731 lrd/sreg 0/RSP0/CPU0 t15 : 168	176173	Pri LR	Unknwn
Unknwn			
Dec 14 11:19:47.739 lrd/sreg 0/RSP0/CPU0 t15 : 404	184381	Node State	
card-state RP			
Dec 14 11:19:47.746 lrd/sreg 0/RSP0/CPU0 t15 : 283	213089	LR Crt/Del	Unknwn
Unknwn			
Dec 14 11:19:47.755 lrd/sreg 0/RSP0/CPU0 t15 : 225	208966	Node State	
card-state RP			
Dec 14 11:19:55.671 lrd/sreg 0/RSP0/CPU0 t15 : 226	229494	Node State	
card-state RP			
Dec 14 11:19:56.522 lrd/sreg 0/RSP0/CPU0 t15 : 335	221289	Node State	
card-state RP DRP LC Other			
Dec 14 11:20:00.929 lrd/sreg 0/RSP0/CPU0 t15 : 348	241796	DLRSC	
dlrsc-state Unknwn			
Dec 14 11:20:02.842 lrd/sreg 0/RSP0/CPU0 t15 : 245	245905	DLRSC	
dlrsc-state Unknwn			
Dec 14 11:20:04.054 lrd/sreg 0/RSP0/CPU0 t15 : 256	245902	Node State	
card-state sw-state RP DRP LC			
Dec 14 11:20:04.054 lrd/sreg 0/RSP0/CPU0 t15 : 241	245901	Node State	
card-state sw-state RP DRP LC			
Dec 14 11:20:04.699 lrd/sreg 0/RSP0/CPU0 t15 : 219	237682	Node State	
card-state RP DRP LC			

show tech-support lrd

```

Dec 14 11:20:09.686 lrd/sreg 0/RSP0/CPU0 t15 : 289      237695 Node State
card-state   RP DRP
Dec 14 11:20:09.904 lrd/sreg 0/RSP0/CPU0 t15 : 246      245908 DLRSC
dlrsc-state  Unknwn
Dec 14 11:20:11.607 lrd/sreg 0/RSP0/CPU0 t15 : 266      245907 DLRSC
dlrsc-state  Unknwn
Dec 14 11:20:15.748 lrd/sreg 0/RSP0/CPU0 t15 : 155      213092 Node State
card-state   SW STATE RP DRP
Dec 14 11:20:20.401 lrd/sreg 0/RSP0/CPU0 t15 : 341      254123 Node State
card-state   SW STATE RP DRP
Dec 14 11:20:24.754 lrd/sreg 0/RSP0/CPU0 t15 : 278      254124 Node State
card-state   LC
Dec 14 11:20:29.079 lrd/sreg 0/RSP0/CPU0 t15 : 144      262347 Node State
card-state   LC
Dec 14 11:20:33.883 lrd/sreg 0/RSP0/CPU0 t15 : 342      262351 Node State
card-state   LC
Dec 14 11:20:34.194 lrd/sreg 0/RSP0/CPU0 t15 : 181      270550 Node State
card-state   RP DRP LC
Dec 14 11:20:36.280 lrd/sreg 0/RSP0/CPU0 t15 : 312      254139 DLRSC
dlrsc-state  LC
Dec 14 11:20:53.951 lrd/sreg 0/RSP0/CPU0 t15 : 398      270596 DLRSC
dlrsc-state  Unknwn

```

----- show ltrd-trace server [17:21:40.125 UTC Fri Dec 18 2009] -----

++++++ show ltrd-trace server [17:21:40.326 UTC Fri Dec 18 2009] ++++++

lrd_show_ltrace -F lrd/sreg -TP2

29 wrapping entries (64 possible, 0 filtered, 29 total)

Event-flags	Card-flags	Client re-Registrations:		
		jid	pid	Curr-msg-op
Dec 14 11:19:47.757 lrd/sreg 0/RSP0/CPU0 t15 : 95		163876	Pri LR	Node
State Unknwn	Unknwn			
Dec 14 11:20:00.940 lrd/sreg 0/RSP0/CPU0 t15 : 348		241796	DLRSC	Node
State dlrsc-state	Unknwn			
Dec 14 11:20:46.317 lrd/sreg 0/RSP0/CPU0 t15 : 225		208966	Node State	LR
Crt/Del card-state	RP			
Dec 14 11:20:46.317 lrd/sreg 0/RSP0/CPU0 t15 : 225		208966	unknwn	DLSRC
Down card-state	RP			

----- show ltrd-trace server [17:21:40.774 UTC Fri Dec 18 2009] -----

++++++ show ltrd-trace server [17:21:40.994 UTC Fri Dec 18 2009] ++++++

No messages to display
lrd_show_ltrace -F lrd/sdwn -TP1

----- show ltrd-trace server [17:21:41.511 UTC Fri Dec 18 2009] -----

++++++ show ltrd-trace server [17:21:41.653 UTC Fri Dec 18 2009] ++++++

```
No messages to display
lrd_show_ltrace -F lrd/sdwn -TP2
```

```
----- show ltrd-trace server [17:21:42.014 UTC Fri Dec 18 2009] -----
```

```
+++++ show ltrd-trace server [17:21:42.150 UTC Fri Dec 18 2009] +++++
```

```
lrd_show_ltrace -F lrd/supd -TP1
```

```
20 wrapping entries (1024 possible, 0 filtered, 20 total)
```

red-role	partner	pi-ctype	LRid	nodeid	SW updates sent: o-state	n-state
Dec 14 11:19:47.645	lrd/supd	0/RSP0/CPU0	t3	: 0/RSP0/CPU0(0x1)	NO STATE	ARB BAND
Active	0x11	RP	0			
Dec 14 11:19:56.368	lrd/supd	0/RSP0/CPU0	t4	: 0/RSP0/CPU0(0x1)	ARB BAND	ADMIN BAND
Active	0x11	RP	0			
Dec 14 11:20:18.381	lrd/supd	0/RSP0/CPU0	t1	: 0/RSP0/CPU0(0x1)	ADMIN BAND	INFRA BAND
Active	0x11	RP	0			
Dec 14 11:20:54.823	lrd/supd	0/RSP0/CPU0	t4	: 0/RSP0/CPU0(0x1)	INFRA BAND	FINAL BAND
Active	0x11	RP	0			

show tech-support mpls ldp

show tech-support mpls ldp

To automatically run `show` commands that display information specific to Multiprotocol Label Switching (MPLS) Label Distribution Protocol (LDP) debugging, use the `show tech-support mpls ldp` command in EXEC mode.

```
show tech-support mpls ldp {file send-to [background] [{compressed | uncompressed}] | verbosity value | vrf name | rack | location node-id}
```

Syntax Description	file	Specifies that the command output is saved to a specified file.
	<i>send-to</i>	Name of the file. The following valid options are listed: <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • disk0: <i>filename</i> • disk0a: <i>filename</i> • disk1: <i>filename</i> • disk1a: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • harddiskb: <i>filename</i> • nvrpm: <i>filename</i> • rcp: <i>filename</i> • tftp: <i>filename</i>
	background	(Optional) Specifies that the command runs in the background.
	compressed	(Optional) Displays compressed command output.
	uncompressed	(Optional) Displays the command output with no compression.
	location	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
	node-id	
	rack <i>rack-id</i>	(Optional) Specifies a list of racks or a specific rack with <i>rack-id</i> argument.

verbosity*value*

Specifies the verbosity. The *value* argument is expressed in number and has valid range from 1 through 4.

- 1: brief
- 2: detail
- 3: detail+trace (dflt)
- 4: extended

vrf*name*

(Optional) Specifies a VPN routing and forwarding (VRF) instance.

Command Modes EXEC mode

Command History	Release	Modification
-----------------	---------	--------------

Release 2.0 This command was introduced.

Usage Guidelines This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with .tgz extension. You can share this file with Cisco Technical Support. To share, use the **copy** command to copy the .tgz file to a server or local machine. For example, **copy harddisk:/showtech/name.tgz tftp://server_path**.

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

This command generates LDP debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.



Note This command is not required during normal use of the router.

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:
http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Operations
cisco-support	read
mpls-ldp	read

```
show tech-support mpls optical-uni
```

show tech-support mpls optical-uni

To automatically run **show** commands that display information specific to Multiprotocol Label Switching (MPLS) Optical User Network Interface (O-UNI) debugging, use the **show tech-support mpls optical-uni** command in EXEC mode.

```
show tech-support mpls optical-uni {file send-to [background] [{compressed | uncompressed}] | terminal [page]}
```

Syntax Description	
file	Specifies that the command output is saved to a specified file.
send-to	Name of the file. The following valid options are listed: <ul style="list-style-type: none">• <i>filename</i>• bootflash: <i>filename</i>• disk0: <i>filename</i>• disk0a: <i>filename</i>• disk1: <i>filename</i>• disk1a: <i>filename</i>• ftp: <i>filename</i>• harddisk: <i>filename</i>• harddiska: <i>filename</i>• harddiskb: <i>filename</i>• nvram: <i>filename</i>• rcp: <i>filename</i>• tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
terminal	Specifies that the command output is displayed on the terminal.
page	(Optional) Specifies that the command output is displayed one page at a time. Use the return key to display the next line of output or use the space bar to display the next page of information. If not used, the output scrolls (that is, it does not stop for page breaks). Press the Ctrl+C keys to stop the command output.

Command Modes	EXEC mode				
Command History	<table border="1" style="width: 100%;"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				
Usage Guidelines	This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a				

file with *.tgz* extension. You can share this file with Cisco Technical Support. To share, use the **copy** command to copy the *.tgz* file to a server or local machine. For example, **copy harddisk:/showtech/name.tgz tftp://server_path**.

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.

**Tip**

This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

This command generates O-UNI debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.

**Note**

This command is not required during normal use of the router.

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Operations
cisco-support	read
ouni	read

```
show tech-support mpls rsvp
```

show tech-support mpls rsvp

To automatically run `show` commands that display information specific to Multiprotocol Label Switching (MPLS) Resource Reservation Protocol (RSVP) debugging, use the `show tech-support mpls rsvp` command in EXEC mode.

```
show tech-support mpls rsvp {terminal [page] | file send-to [background] [{compressed | uncompressed}] | standby }
```

Syntax Description	
terminal	Displays the command output on the terminal.
page	(Optional) Displays the command output on a single page at a time. Use the Return key to display the next line of output or use the space bar to display the next page of information. If not used, the output scrolls (that is, it does not stop for page breaks). Press the Ctrl-C keys to stop the command output.
file	Specifies that the command output is saved to a specified file.
sent-to	Name of the file. The following valid options are listed: <ul style="list-style-type: none">• <i>filename</i>• bootflash: <i>filename</i>• compactflash: <i>filename</i>• disk0: <i>filename</i>• disk1: <i>filename</i>• flash: <i>filename</i>• ftp: <i>filename</i>• harddisk: <i>filename</i>• harddiska: <i>filename</i>• nvram: <i>filename</i>• rcp: <i>filename</i>• slot0: <i>filename</i>• slot1: <i>filename</i>• tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
standby	Displays standby node specific information.
Command Default	The command output is not compressed.
Command Modes	EXEC mode

Command History	Release	Modification
	Release 3.2	This command was introduced.

Usage Guidelines**Tip**

This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support mpls** command to run **show** commands that display information specific to MPLS RSVP debugging. This command generates RSVP debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.

**Note**

This command is not required during normal use of the router.

The following **show** commands run automatically when you run the **show tech-support mpls rsvp** command:

- **show rsvp interface detail**
- **show rsvp counters pak**
- **show rsvp counters handles**
- **show rsvp counters database private**
- **show rsvp counters messages private**
- **show rsvp counters memory**
- **show rsvp counters events**
- **show rsvp counters notifications-client**
- **show rsvp counters request**
- **show rsvp counters destroy-reasons**
- **show rsvp counters policy**
- **show rsvp graceful-restart**
- **show rsvp fast-reroute summary**
- **show rsvp graceful-restart neighbors detail**
- **show rsvp hello instance detail**
- **show rsvp sender detail**
- **show rsvp reservation detail**
- **show rsvp request detail**
- **show rsvp session detail**
- **show rsvp authentication**
- **show rsvp sender private**
- **show rsvp reservation private**
- **show rsvp request private**
- **show rsvp interface private**
- **show rsvp installed private**
- **show rsvp trace events**

show tech-support mpls rsvp

- **show rsvp trace default**
- **show rsvp trace buffer**
- **show rsvp trace interface**
- **show rsvp trace errors**
- **show rsvp trace client**
- **show rsvp debug-error**

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	cisco-support	read
	mpls-te or ouni	read

Examples

The following example shows some of the **show tech-support mpls rsvp** command output:

```
RP/0/RP0/CPU0:router# show tech-support mpls rsvp terminal page
-----
show tech-support mpls rsvp (Detail with Event traces)
-----
----- show rsvp interface detail -----
INTERFACE: GigE0/1/0/0 (ifh=0x1180060).
VRF ID: 0x0 (Default).
BW (bits/sec): Max=1230M. MaxFlow=1230M.
Allocated=0 (0%). MaxSub=0.
Signalling: No DSCP marking. No rate limiting.
States in: 0. Max missed msgs: 4.
Expiry timer: Not running. Refresh interval: 45s.
Normal Refresh timer: Not running. Summary refresh timer: Not running.
Refresh reduction local: Enabled. Summary Refresh: Enabled (4096 bytes max).

Reliable summary refresh: Disabled. Bundling: Enabled. (4096 bytes max).
Ack hold: 400 ms, Ack max size: 4096 bytes. Retransmit: 900ms.

----- show rsvp counters pak -----
Number of pak TX=0
Number of pak events received from raw=1
Number of spurious events received from raw=1
Number of packets received from raw=0
Number of errored drops=0
Authentication queue:
    Number of enqueue=0
    Number of drops due to max q size=0
    High water mark=0
    Current queue size=0
High priority queue:
    Number of enqueue=0
```

```

Number of drops due to max q size=0
High water mark=0
Current queue size=0
Low priority queue:
Number of enqueues=0
Number of drops due to max q size=0
High water mark=0
Current queue size=0

```

----- show rsvp counters handles -----

```

All allocated handles:      5
Unallocated cached handles: 1019
-----
    LXSB handles:      1
    ISB handles:       2
    KI handles:        1
-----
Total handles ever allocated: 5
Total handles ever freed:    0

```

----- show rsvp counters database private -----

```

Sessions: 0
Locally created and incoming Paths: 0
    Outgoing Paths: 0
Locally created and incoming Reservations: 0
    Outgoing Reservations: 0
        Interfaces: 2
        Installed: 0
        New LSP count: 0
        Refreshed LSP count: 0
        LSP count recovered from checkpoint: 0
        Proxy Senders: 0
        Proxy Reservations: 0
        Proxy Listeners: 1
        TMB allocation: 0
        Local Routes: 22

```

----- show rsvp counters messages private -----

Routed	Recv	Xmit	Recv	Xmit
Path	0	Resv		0
PathError	0	ResvError		0
PathTear	0	ResvTear		0
ResvConfirm	0	Hello		0
Ack	0	SRefresh		0
Challenge	0	ChallengeRsp		0
Retransmit	0	Rate Limited		0
OutOfOrder				
Bundle	0	AckSubmsg		0
PathSubmsg	0	ResvSubmsg		0
PathTearSubmsg	0	ResvTearSubmsg		0
PathErrorSubmsg	0	ResvErrorSubmsg		0
PathQuery	0			
POS0/1/0/0	Recv	Xmit	Recv	Xmit
Path	0	0	Resv	0
PathError	0	0	ResvError	0
PathTear	0	0	ResvTear	0
ResvConfirm	0	0	Hello	0
Ack	0	0	SRefresh	0

show tech-support mpls rsvp

Challenge	0	0	ChallengeRsp	0	0
Retransmit		0	Rate Limited		0
OutOfOrder	0				
Bundle	0	0	AckSubmsg	0	0
PathSubmsg	0	0	ResvSubmsg	0	0
PathTearSubmsg	0	0	ResvTearSubmsg	0	0
PathErrorSubmsg	0	0	ResvErrorSubmsg	0	0
PathQuery	0	0			
All RSVP Interfaces	Recv	Xmit		Recv	Xmit
Path	0	0	Resv	0	0
PathError	0	0	ResvError	0	0
PathTear	0	0	ResvTear	0	0
ResvConfirm	0	0	Hello	0	0
Ack	0	0	SRefresh	0	0
Challenge	0	0	ChallengeRsp	0	0
Retransmit		0	Rate Limited		0
OutOfOrder	0				
Bundle	0	0	AckSubmsg	0	0
PathSubmsg	0	0	ResvSubmsg	0	0
PathTearSubmsg	0	0	ResvTearSubmsg	0	0
PathErrorSubmsg	0	0	ResvErrorSubmsg	0	0
PathQuery	0	0			
<hr/>					
----- show rsvp counters memory -----					
Pool size	Count				
-----	-----				
32	0				
48	0				
96	0				
128	0				
192	0				
256	0				
Dynamic	0				
<hr/>					
----- show rsvp counters events -----					
POS0/1/0/0		All RSVP Interfaces			
Expired Path states	0	Expired Path states	0		
Expired Resv states	0	Expired Resv states	0		
NACKs received	0	NACKs received	0		
<hr/>					
----- show rsvp counters notifications-client -----					
Total notifications		Total filtered notifications			
Path delete	0	Path delete	0		
Path error	0	Path error	0		
Path change	0	Path change	0		
Matching Resv create	0	Matching Resv create	0		
Matching Resv change	0	Matching Resv change	0		
Matching Resv delete	0	Matching Resv delete	0		
Async Path create	0	Async Path create	0		
Resv delete	0	Resv delete	0		
Resv error	0	Resv error	0		
Resv confirm	0	Resv confirm	0		
Async Resv create	0	Async Resv create	0		
Listener Path create	0	Listener Path create	0		
Listener Path change	0	Listener Path change	0		
Listener Path delete	0	Listener Path delete	0		
Listener Path FRR	0	Listener Path FRR	0		
Listener Assign Backup err	0	Listener Assign Backup err	0		
Listener Resv create	0	Listener Resv create	0		
Listener Resv change	0	Listener Resv change	0		
Listener Resv delete	0	Listener Resv delete	0		
Restart Time	0	Restart Time	0		

Recovery Done

0 Recovery Done

0

show tech-support mpls traffic-eng

show tech-support mpls traffic-eng

To automatically run **show** commands that display information specific to Multiprotocol Label Switching (MPLS) Traffic Engineering (TE) debugging, use the **show tech-support mpls traffic-eng** command in EXEC mode.

```
show tech-support mpls traffic-eng {terminal [page] | file send-to [background] [{compressed | uncompressed}]}|[forwarding { tunnel-name tunnel name | tunnel-number number}]|tp |standby}
```

Syntax Description	file Specifies that the command output is saved to a specified file. send-to Name of the file. The following valid options are listed: <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • disk0: <i>filename</i> • disk0a: <i>filename</i> • disk1: <i>filename</i> • disk1a: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • harddiskb: <i>filename</i> • nvram: <i>filename</i> • rcp: <i>filename</i> • tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
tp	Displays Transport Profile Information.
forwarding	(Optional) Displays forwarding information for a tunnel.
tunnel-name	Specifies the tunnel name that is used by the RSVP process.
<i>tunnel name</i>	Name for the tunnel.
tunnel-number	(Optional) Specifies the tunnel number that is used by the RSVP process.
<i>number</i>	(Optional) Number for the tunnel. The range is from 0 to 65535.
terminal	Specifies that the command output is displayed on the terminal.

page	(Optional) Specifies that the command output is displayed one page at a time. Use the return key to display the next line of output or use the space bar to display the next page of information. If not used, the output scrolls (that is, it does not stop for page breaks). Press the Ctrl+C keys to stop the command output.
-------------	---

Command Modes	EXEC mode
----------------------	-----------

Command History	Release	Modification
------------------------	----------------	---------------------

Release 2.0 This command was introduced.

Usage Guidelines



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

This command generates MPLS-TE information that can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.



Note This command is not required during normal use of the router.

See the Cisco IOS XR Software command references for information about these commands and descriptions of their command output. The Cisco IOS XR Software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
cisco-support	read	
mpls-te	read	

Examples

The following example shows some of the **show tech-support mpls traffic-eng** command output that is displayed on the terminal:

```
RP/0/RP0/CPU0:router# show tech-support mpls traffic-eng terminal page
```

```
-----  
show tech-support mpls traffic-eng
```

```
----- show mpls traffic-eng tunnels summary -----  
Signalling Summary:
```

show tech-support mpls traffic-eng

```

LSP Tunnels Process: running
    RSVP Process: running
        Forwarding: enabled
Head: 0 interfaces, 0 active signalling attempts, 0 established
    0 explicit, 0 dynamic
    0 activations, 0 deactivations
    0 recovering, 0 recovered
Mids: 2
Tails: 0
    Periodic reoptimization: every 3600 seconds, next in 2703 seconds
    Periodic FRR Promotion: every 300 seconds, next in 106 seconds
    Periodic auto-bw collection: disabled

Fast ReRoute Summary:
Head:      0 FRR tunnels, 0 protected, 0 rerouted
Mid:       0 FRR tunnels, 0 protected, 0 rerouted
Summary:   0 protected, 0 link protected, 0 node protected, 0 bw protected
Backup:    0 tunnels, 0 assigned
Interface: 0 protected, 0 rerouted

----- show mpls traffic-eng counters tunnels summary -----
Head:                               Mid:                               Tail:
Total:                            0 Total:                            8 Total:                            0
Sender Create:                   0 Path Create:                   2 Path Create:                   0
Sender Modify:                   0 Path Change:                   0 Path Change:                   0
Sender Delete:                   0 Path Delete:                   0 Path Delete:                   0
RESV Create:                     0 Receiver Create:                 2 Receiver Create:                 0
RESV Change:                     0 Receiver Modify:                  0 Receiver Modify:                  0
RESV Delete:                     0 Receiver Delete:                  0 Receiver Delete:                  0
Path Delete:                      0 RESV Create:                      2 RESV Create:                      0
Path Error:                       0 RESV Delete:                      0 RESV Delete:                      0
Path Change:                      0 RESV Change:                      0 RESV Change:                      0
Path Create:                      0 Sender Create:                   2 RESV Error:                      0
RESV Confirm:                     0 Sender Modify:                   0
                                    Sender Delete:                   0
Other:                            0 Other:                            0 Other:                            0

----- show mpls traffic-eng counters batch -----
Messages  Batches  MinSize  MaxSize  AverageSize  Description
-----  -----  -----  -----  -----  -----
0        0         0         0         0           IF CREATE
0        0         0         0         0           CAPS ADD
0        0         0         0         0           MTU UPDATE
0        0         0         0         0           STATE UPDATE
0        0         0         0         0           IF REPLICATE
0        0         0         0         0           IF DEL CONFIRM
0        0         0         0         0           IF DELETE
25       23        1         2         1           NOTFN from IM
4        2         2         2         2           MESSAGE to RSVP
9        6         1         2         1           MESSAGES from RSVP
0        0         0         0         0           MESSAGES to IGP
0        0         0         0         0           SYSDB VRFNs
0        0         0         0         0           SYSDB APPLYS
2        1         2         2         2           MESSAGE to LSD
2        2         2         2         1           MESSAGES from LSD
12       6         1         6         2           MESSAGES to IPARM

----- show mpls traffic-eng link-management statistics summary -----
LSP Admission Statistics:::

Setup      Setup      Setup      Setup      Tear       Tear       Tear
Requests   Admits   Rejects   Errors   Requests  Preempts  Errors
-----  -----  -----  -----  -----  -----  -----

```

```

Path      2      2      0      0      0      0      0
Resv     2      2      0      0      0      0      0

----- show mpls traffic-eng link-management summary -----
System Information::
  Links Count      : 6 (Maximum Links Supported 100)
  Flooding System  : enabled
  IGP Areas Count  : 1

  IGP Areas
  -----
  IGP Area[1]:: OSPF 100 area 0
    Flooding Protocol   : OSPF
    Flooding Status     : flooded
  --More-- Zero Nodes Found.
    Periodic Flooding   : enabled (every 180 seconds)
    Flooded Links       : 6
    IGP System ID       : 10.1.1.1
    MPLS TE Router ID  : 10.1.1.1
    IGP Neighbors       : 6

----- show mpls traffic-eng fast-reroute database summary -----
Status   Count
-----
Active   0
Ready    0
Partial  0

----- show mpls forwarding summary -----
Forwarding entries:
  Label switching: 60
  MPLS TE tunnel head: 0
  MPLS TE fast-reroute: 0 via 0 protected next-hops
  MPLS TE internal: 0
Forwarding updates:
  392 updates, 37 messages
Labels in use:
  Reserved: 3
  Lowest: 0
  Highest: 16059
  Deleted stale label entries: 0

Pkt drops=0, fragm=0, fail_look=0

Pkts dropped: 0
Pkts fragmented: 0
Failed lookups: 0

----- show cef drop location 0/0/cpu0 -----
CEF Drop Statistics

----- show cef drop location 0/1/cpu0 -----
CEF Drop Statistics
Node: 0/1/CPU0
  Unresolved drops  packets : 0
  Unsupported drops packets : 0
  Null0 drops      packets : 0
  No route drops   packets : 0
  No Adjacency drops packets : 0

```

```
show tech-support mpls traffic-eng
```

Checksum error drops packets :	0
--------------------------------	---

show tech-support multicast

To automatically run `show` commands that display information specific to multicast-related information, use the `show tech-support multicast` command in EXEC mode.

```
show tech-support multicast [{address-family | classic | group group-address | hardware | source source address | location node-id | vrf vrf-name | rack rack-id | {file send-to[ {background | compressed | uncompressed}]} }]
```

Syntax Description	
address-family	Collects address family specific information. It can be either ipv4 or ipv6.
classic	(Optional) Retrieves multicast related information using the non-fast method.
group	(Optional) Specifies the multicast group address.
<i>group-address</i>	(Optional) Address or name of the multicast group. An address is a multicast IP address in four-part dotted-decimal notation. A name is as defined in the Domain Name System (DNS) hosts table.
file	(Optional) Specifies that the command output is saved to a specified file.
<i>sent-to</i>	Name of the file. The following valid options are listed: <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • disk0: <i>filename</i> • disk0a: <i>filename</i> • disk1: <i>filename</i> • disk1a: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • harddiskb: <i>filename</i> • nvrpm: <i>filename</i> • rcp: <i>filename</i> • tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
source	(Optional) Displays the multicast source address.
<i>source address</i>	(Optional) Source address for multicast.
location <i>node-id</i>	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
hardware	(Optional) Displays the hardware platform information.

show tech-support multicast

rack	(Optional) Displays the list of racks.
vrf	(Optional) Specifies a VPN routing and forwarding (VRF) instance.
<i>vrf-name</i>	Name of VRF.

Command Default Output is logged to the terminal screen.

Command Modes EXEC mode

Command History **Release** **Modification**

Release 2.0 This command was introduced.

Release 6.4.1 From this release onwards **address-family** is a mandatory keyword.

Usage Guidelines This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with *.tgz* extension. You can share this file with Cisco Technical Support. To share, use the **copy** command to copy the *.tgz* file to a server or local machine. For example, **copy harddisk:/showtech/name.tgz tftp://server_path**.

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support multicast** command to run **show** commands that display information specific to multicast-related information for PIM, IGMP, and mcast. This command generates multicast information that can be useful for Cisco Technical Support representatives when troubleshooting a router.



Note This command is not required during normal use of the router.

The following **show** commands run automatically when you run the **show tech-support multicast** command:

- **show version**
- **show running-config**
- **show ip interface brief**
- **show install**
- **show processes aborts location all**
- **show processes blocked location all**
- **show context location all**
- **show memory summary location all**
- **show ip access-lists show ip mhost default-interface**

- **show msdp summary**
- **show msdp globals**
- **show msdp sa-cache summary**
- **show msdp statistics peer**
- **show pim group-map**
- **show pim topology route-count**
- **show pim topology *ip-address***
- **show pim rpf count**
- **show pim rpf**
- **show pim traffic**
- **show pim join-prune statistic**
- **show pim interface state-on**
- **show pim tunnel info all**
- **show pim neighbor**
- **show pim nsf**
- **show pim summary**
- **show igmp groups summary**
- **show igmp groups *group-address***
- **show igmp interface**
- **show igmp traffic**
- **show igmp nsf**
- **show igmp summary**
- **show mrib client filter**
- **show mrib route summary**
- **show mrib route *source-address***
- **show mrib nsf**
- **show cef ipv4 *prefix* location *node-id***
- **show mfib route summary location *node-id***
- **show mfib route *source-address* location *node-id***
- **show mfib counter location *node-id***
- **show mfib nsf location *node-id***
- **show mfib hardware route mofrr location *node-id***
- **show mfib hardware route olist detail *source-address* location *node-id***
- **show mfib hardware interface detail location *node-id***
- **show mfib hardware route statistics *source-address* location *node-id***
- **show mfib hardware resource-counter location *node-id***
- **show mfib hardware adjacency detail location *node-id***
- **show mfib hardware route accept-bitmap detail *source-address* location *node-id***

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
basic-services or cisco-support	read	

```
show tech-support multicast
```

Task ID	Operations
multicast	read

show tech-support netflow

To automatically run `show` commands that display information specific to netflow debugging, use the `show tech-support netflow` command in EXEC mode.

```
show tech-support netflow [file send-to [background] [{compressed | uncompressed}]] [location node-id] [rack]
```

Syntax Description

file	Specifies that the command output is saved to a specified file.
send-to	Name of the file. The following valid options are listed: <ul style="list-style-type: none">• <i>filename</i>• bootflash: <i>filename</i>• disk0: <i>filename</i>• disk0a: <i>filename</i>• disk1: <i>filename</i>• disk1a: <i>filename</i>• ftp: <i>filename</i>• harddisk: <i>filename</i>• harddiska: <i>filename</i>• harddiskb: <i>filename</i>• nvram: <i>filename</i>• rcp: <i>filename</i>• tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
location node-id	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
rack	(Optional) Displays the list of racks.

Command Modes

EXEC mode

Command History

Release	Modification
---------	--------------

Release 3.9.0 This command was introduced.

Usage Guidelines

This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with *.tgz* extension. You can share this file with Cisco Technical Support. To share, use the **copy** command to copy the *.tgz* file to a server or local machine. For example, **copy harddisk:/showtech/name.tgz tftp://server_path**.

show tech-support netflow

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



- Tip** This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

This command generates netflow debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.



- Note** This command is not required during normal use of the router.

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	cisco-support	read

show tech-support nrs

To automatically run `show` commands that display information specific to the name registration service (NRS) information, use the `show tech-support nrs` command in EXEC mode.

```
show tech-support nrs [{file send-to [{background | compressed | uncompressed}]} | location node-id | rack]
```

Syntax Description

file	Specifies that the command output is saved to a specified file.
<i>send-to</i>	Name of the file. The following valid options are listed: <ul style="list-style-type: none">• <i>filename</i>• bootflash: <i>filename</i>• disk0: <i>filename</i>• disk0a: <i>filename</i>• disk1: <i>filename</i>• disk1a: <i>filename</i>• ftp: <i>filename</i>• harddisk: <i>filename</i>• harddiska: <i>filename</i>• harddiskb: <i>filename</i>• nvram: <i>filename</i>• rcp: <i>filename</i>• tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
rack	(Optional) Displays the list of racks.
location node-id	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.

Command Modes

EXEC mode

Command History

Release Modification

Release 2.0 This command was introduced.

Usage Guidelines

This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with *.tgz* extension. You can share this file with Cisco Technical Support. To share, use the **copy** command to copy the *.tgz* file to a server or local machine. For example, **copy harddisk:/showtech/name.tgz tftp://server_path**.

show tech-support nrs

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support nrs** command to collect data for the NRS. The NRS is a central registration authority and is used by the Replication Data Services (RDS) and the Event Notification Services (ENS). This command generates NRS debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.



Note This command is not required during normal use of the router.

See the Cisco IOS XR Software command references for information about these commands and descriptions of their command output. The Cisco IOS XR Software command references are located at the following URL:
http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	cisco-support	read

show tech-support password

To automatically run `show` commands that display information to include the password in the output for debugging, use the `show tech-support password` command in EXEC mode.

```
show tech-support password {[file send-to [background] [{compressed|uncompressed}]] | location node-id | rack}
```

Syntax Description	<p>file Specifies that the command output is saved to a specified file.</p> <p>send-to Name of the file. The following valid options are listed:</p> <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • disk0: <i>filename</i> • disk0a: <i>filename</i> • disk1: <i>filename</i> • disk1a: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • harddiskb: <i>filename</i> • nvram: <i>filename</i> • rcp: <i>filename</i> • tftp: <i>filename</i> 				
background	(Optional) Specifies that the command runs in the background.				
compressed	(Optional) Displays compressed command output.				
uncompressed	(Optional) Displays the command output with no compression.				
locationnode-id	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
rack	(Optional) Displays the list of racks.				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				
Usage Guidelines	This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with <i>.tgz</i> extension. You can share this file with Cisco Technical Support. To share, use the copy command to copy the <i>.tgz</i> file to a server or local machine. For example, copy harddisk:/showtech/name.tgz tftp://server_path .				

show tech-support password

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

This command generates output to include the password for debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.



Note This command is not required during normal use of the router.

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	basic-services	read

show tech-support pfi

To automatically run **show** commands that display information specific to Packet Forwarding Infrastructure (PFI) debugging for all components, use the **show tech-support pfi** command in EXEC mode.

show tech-support pfi {file send-to [{background | compressed | uncompressed}]} {filename}

Syntax Description	<p>file Specifies that the command output is saved to a specified file.</p> <p>send-to Name of the file. The following valid options are listed:</p> <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • disk0: <i>filename</i> • disk0a: <i>filename</i> • disk1: <i>filename</i> • disk1a: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • harddiskb: <i>filename</i> • nvrpm: <i>filename</i> • rcp: <i>filename</i> • tftp: <i>filename</i>
	background (Optional) Specifies that the command runs in the background.
	compressed (Optional) Displays compressed command output.
	uncompressed (Optional) Displays the command output with no compression.

Command Modes	EXEC mode
----------------------	-----------

Command History	Release	Modification
------------------------	----------------	---------------------

Release 2.0 This command was introduced.

Usage Guidelines	This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with .tgz extension. You can share this file with Cisco Technical Support. To share, use the copy command to copy the .tgz file to a server or local machine. For example, copy harddisk:/showtech/name.tgz tftp://server_path .
-------------------------	--

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.

show tech-support pfi



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support pfi** command to collect information for the PFI, which consists of interface-related data with regards to netio and interface manager. This command generates output PFI debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.



Note This command is not required during normal use of the router.

See the Cisco IOS XR Software command references for information about these commands and descriptions of their command output. The Cisco IOS XR Software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	basic-services	read
	cisco-support	read

show tech-support placement

To automatically run `show` commands that display information specific to process placement, use the `show tech-support placement` command in EXEC mode.

```
show tech-support placement {terminal [page] | file send-to [{background | compressed | uncompressed}]}{}
```

Syntax Description					
terminal	Displays the command output on the terminal.				
page	(Optional) Displays the command output on a single page at a time. Use the Return key to display the next line of output or use the space bar to display the next page of information. If not used, the output scrolls (that is, it does not stop for page breaks). Press the Ctrl-C keys to stop the command output.				
file	Specifies that the command output is saved to a specified file.				
sent-to	Name of the file. The following valid options are listed: <ul style="list-style-type: none">• <i>filename</i>• bootflash: <i>filename</i>• disk0: <i>filename</i>• disk0a: <i>filename</i>• disk1: <i>filename</i>• disk1a: <i>filename</i>• ftp: <i>filename</i>• harddisk: <i>filename</i>• harddiska: <i>filename</i>• harddiskb: <i>filename</i>• nvram: <i>filename</i>• rcp: <i>filename</i>• tftp: <i>filename</i>				
background	(Optional) Specifies that the command runs in the background.				
compressed	(Optional) Displays compressed command output.				
uncompressed	(Optional) Displays the command output with no compression.				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				

show tech-support placement

Usage Guidelines



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

This command generates process placement debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.



Note This command is not required during normal use of the router.

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
cisco-support	read	
sysmgr	read	

Examples

The following example shows some of the **show tech-support placement** command output that is displayed on the terminal:

```
RP/0/RP0/CPU0:router# show tech-support placement terminal page
-----
                                         show tech-support placement
-----
----- run lrd_show -I -----
Success: node_count=6, ready=1
node=0x11, type=2, memsize=256, cpus=1, speed=100, sw_state=6, red_state=0, lr_0
node=0x41, type=1, memsize=256, cpus=1, speed=100, sw_state=6, red_state=1, lr_f
node=0x42, type=1, memsize=256, cpus=1, speed=100, sw_state=6, red_state=1, lr_f
node=0x61, type=2, memsize=256, cpus=1, speed=100, sw_state=6, red_state=0, lr_0
node=0x201, type=0, memsize=256, cpus=1, speed=100, sw_state=6, red_state=1, lr1
node=0x211, type=0, memsize=256, cpus=1, speed=100, sw_state=6, red_state=2, lr1

----- show placement trace all -----
Oct 11 19:23:59.949 main      bag_register_all_placed_mgmnt_defs_bags rc = No error
Oct 11 19:23:59.980 main      bag_register_all_placed_mgmnt_bags rc = No error
Oct 11 19:24:06.420 main      Checkpoint initialization succeeded
Oct 11 19:24:06.665 main      Starting for the first time in this LR
Oct 11 19:24:06.725 nodes    registered nodes bags, rc = 0 (No error)
Oct 11 19:24:06.728 nodes    We are running on node 0/RP0/CPU0
Oct 11 19:24:06.734 nodes    lrd_register_card_state ok
Oct 11 19:24:06.734 nodes    Setting timer for 70 seconds, thread 1
Oct 11 19:24:06.748 nodes    Successfully got inventory (attempt 1 of 30)
```

```

Oct 11 19:24:06.748 nodes      Stopping timer
Oct 11 19:24:06.748 nodes      LR inventory has 4 RP/DRP nodes
Oct 11 19:24:06.850 nodes      update_node: nodeid 0/4/CPU0, pnodeid [NODEID_INV0
Oct 11 19:24:06.850 nodes      Creating new node
Oct 11 19:24:06.877 nodes      update_node: nodeid 0/4/CPU1, pnodeid [NODEID_INV0
Oct 11 19:24:06.877 nodes      Creating new node
Oct 11 19:24:06.877 nodes      update_node: nodeid 0/RP0/CPU0, pnodeid 0/RP1/CPU1
Oct 11 19:24:06.877 nodes      Creating new node
Oct 11 19:24:06.877 nodes      node::_get_active_nodeid(Placed_node (482c1088) (0
Oct 11 19:24:06.917 nodes      update_node: nodeid 0/RP1/CPU0, pnodeid 0/RP0/CPU2
Oct 11 19:24:06.917 nodes      Nodeid 0/RP1/CPU0 is already in node object Place)
Oct 11 19:24:06.917 nodes      Information differs
Oct 11 19:24:06.917 nodes      node 0/RP0/CPU0 is active
Oct 11 19:24:06.917 nodes      node::_get_active_nodeid(Placed_node (482c1088) (0
Oct 11 19:24:06.917 nodes      rescan_lrd_inventory rc = 0 (No error)
Oct 11 19:24:06.917 nodes      apply_startup_type: no action required (0)
Oct 11 19:24:06.978 properties registered properties bags, rc = 0 (No error)
Oct 11 19:24:06.978 properties Inserting Nodetypeaffinity (48283504) (value 100)
Oct 11 19:24:06.985 edm      placed_edm_init succeeded
Oct 11 19:24:07.086 properties Inserting Classaffinity (482827b8) (value 250.00g
Oct 11 19:24:07.086 properties Inserting Classaffinity (48282830) (value 250.00i
Oct 11 19:24:07.086 properties Inserting Classaffinity (4828286c) (value 250.00g
Oct 11 19:24:07.086 properties Inserting Classaffinity (482828a8) (value 250.00i
Oct 11 19:24:07.086 properties Inserting Selfaffinity (483297ac) (value -160.00)
Oct 11 19:24:07.086 properties Inserting Nodetypeaffinity (483297e0) (value -50)
Oct 11 19:24:07.086 properties Inserting Nodetypeaffinity (48329814) (value 50.)
Oct 11 19:24:07.086 properties Inserting Nodetypeaffinity (48329848) (value 600)
Oct 11 19:24:07.131 properties Inserting Classaffinity (482828e4) (value 70.00)i
Oct 11 19:24:07.131 properties Inserting Classaffinity (48282920) (value 70.00)i
Oct 11 19:24:07.131 properties Inserting Classaffinity (4828295c) (value 70.00)i
Oct 11 19:24:07.132 properties Inserting Classaffinity (4832b048) (value 70.00)i
Oct 11 19:24:07.132 properties Inserting Nodetypeaffinity (483298b0) (value -15)
Oct 11 19:24:07.132 properties Inserting Nodetypeaffinity (483298e4) (value 200)
Oct 11 19:24:07.132 properties Inserting Nodetypeaffinity (48329918) (value 600)
Oct 11 19:24:07.193 properties Inserting Nodetypeaffinity (4832994c) (value -20)
Oct 11 19:24:07.194 properties Inserting Nodetypeaffinity (4832b818) (value 250)
Oct 11 19:24:07.226 properties Inserting Nodetypeaffinity (4832b880) (value -402
Oct 11 19:24:07.275 properties Inserting Nodetypeaffinity (4832b8b4) (value -20)
Oct 11 19:24:07.275 properties Inserting Nodetypeaffinity (4832b8e8) (value 250)
Oct 11 19:24:07.350 properties Inserting Nodetypeaffinity (4832b950) (value -402
Oct 11 19:24:07.402 properties Inserting Nodetypeaffinity (4832b9b8) (value -40)
Oct 11 19:24:07.562 properties Inserting Nodetypeaffinity (4832baf0) (value 100)

```

show tech-support platform

show tech-support platform

To automatically run `show` commands that display information specific to platforms, use the `show tech-support platform` command in EXEC mode.

show tech-support platform {file send-to | location node-id | rack}

Syntax Description	<p>file Specifies that the command output is saved to a specified file.</p> <p>sent-to Name of the file. The following valid options are listed:</p> <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • compactflash: <i>filename</i> • disk0: <i>filename</i> • disk1: <i>filename</i> • flash: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • nvram: <i>filename</i> • rcp: <i>filename</i> • slot0: <i>filename</i> • slot1: <i>filename</i> • tftp: <i>filename</i> 				
location	(Optional) Specifies a node.				
node-id	(Optional). Node ID. The node-id argument is entered in the rack/slot/module notation.				
rack	(Optional) Displays the list of racks.				
Command Default	No default behavior or values				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				
Usage Guidelines	 <p>Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the <code>file send-to</code> keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.</p>				

Use the **show tech-support platform** command to run **show** commands that display information specific to platforms. This command generates platform debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.



Note This command is not required during normal use of the router.

The following **show** commands run automatically when you run the **show tech-support platform** command:

- **show controller squid summary**
- **show controller plimasic statistics summary location node-id**

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	basic-services	read

Examples

The following example shows some of the **show tech-support platform** command output:

```
RP/0/RP0/CPU0:router# show tech-support platform

----- show controller squid summary -----
Cpuctrl discovered 14 device on node 0/1/CPU0:

Cpuctrl HW version string for this node is:
Squid FPGA v2.07 Fri Jan 23 16:21:01 2004 userb

-----
device_name:      Fabricq    device instance:  0
Cpuctrl net port: 3          pci_base:        0x8c000000

-----
device_name:      Fabricq    device instance:  1
Cpuctrl net port: 4          pci_base:        0x90000000

-----
device_name:      Ingressq   device instance:  0
Cpuctrl net port: 8          pci_base:        0xa0000000

-----
device_name:      Egressq    device instance:  0
Cpuctrl net port: 7          pci_base:        0x9c000000

-----
device_name:      FIA        device instance:  0
Cpuctrl net port: 1          pci_base:        0x84000000

-----
device_name:      FIA        device instance:  1
Cpuctrl net port: 2          pci_base:        0x88000000
```

show tech-support platform

```

-----
device_name: Cpuctrl device instance: 0
Cpuctrl net port: 0 pci_base: 0x80000000

-----
device_name: PSE device instance: 1
Cpuctrl net port: 6 pci_base: 0x98000000

-----
device_name: PSE device instance: 0
Cpuctrl net port: 5 pci_base: 0x94000000

-----
device_name: PlimAsic for SPA device instance: 0
Cpuctrl net port: 9 pci_base: 0xa4000000
.

.

-----
----- show controller plim asic statistics summary location 0/1/CPU0 -----
Node: 0/1/CPU0
-----
Instance# 0 Statistics
-----
To PSE : 1034176 BP count : 2615809697
RMC Runt : 0 RMC Giant : 0
RMC Tail Drop: 1 L2P Drop : 0
From Egressq : 924513 SIF Drop : 0
TLK Drop : 0

Port 0
To SPA : 0 From SPA : 0
RSI FIFO Drop: 0 QPM Drop : 0
QPM OVFL : 0 RPB Drop : 0

Port 1
To SPA : 0 From SPA : 0
RSI FIFO Drop: 0 QPM Drop : 0
QPM OVFL : 0 RPB Drop : 0

Port 2
To SPA : 924513 From SPA : 1034177
RSI FIFO Drop: 0 QPM Drop : 0
QPM OVFL : 0 RPB Drop : 0

Instance# 1 Statistics
-----
To PSE : 9217833 BP count : 2323530765
RMC Runt : 0 RMC Giant : 0
RMC Tail Drop: 2590 L2P Drop : 0
From Egressq : 9317309 SIF Drop : 0
TLK Drop : 0

Port 0
To SPA : 0 From SPA : 0
RSI FIFO Drop: 0 QPM Drop : 0
QPM OVFL : 0 RPB Drop : 0

Port 1
To SPA : 537745 From SPA : 546867
RSI FIFO Drop: 0 QPM Drop : 0
QPM OVFL : 0 RPB Drop : 0

Port 2
To SPA : 8779564 From SPA : 8673556

```

```
RSI FIFO Drop: 0          QPM  Drop : 0  
QPM OVFL      : 0          RPB  Drop : 0
```

show tech-support pos

show tech-support pos

To automatically run **show** commands that display information specific to Packet over SONET /SDH (POS) debugging, use the **show tech-support pos** command in EXEC mode.

```
show tech-support pos {terminal [page] | file send-to [background] [{compressed | uncompressed}]}
interface type instance [show-only] [trace-only] [{location node-id | all}] [rack]
```

Syntax Description	
file	Specifies that the command output is saved to a specified file.
sent-to	Name of the file. The following valid options are listed: <ul style="list-style-type: none">• <i>filename</i>• bootflash: <i>filename</i>• disk0: <i>filename</i>• disk0a: <i>filename</i>• disk1: <i>filename</i>• disk1a: <i>filename</i>• ftp: <i>filename</i>• harddisk: <i>filename</i>• harddiska: <i>filename</i>• harddiskb: <i>filename</i>• nvram: <i>filename</i>• rcp: <i>filename</i>• tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
interface	Collects information about a specific interface.
type	Interface type. For more information, use the question mark (?) online help function.

<i>instance</i>	Either a physical interface instance or a virtual interface instance as follows: <ul style="list-style-type: none">• Physical interface instance. Naming notation is <i>rack/slot/module/port</i> and a slash between values is required as part of the notation.<ul style="list-style-type: none">• <i>rack</i>: Chassis number of the rack.• <i>slot</i>: Physical slot number of the modular services card or line card.• <i>module</i>: Module number. A physical layer interface module (PLIM) is always 0.• <i>port</i>: Physical port number of the interface.				
Note	In references to a Management Ethernet interface located on a route processor card, the physical slot number is alphanumeric (RP0 or RP1) and the module is CPU0. Example: interface MgmtEth0/RP1/CPU0/0.				
	<ul style="list-style-type: none">• Virtual interface instance. Number range varies depending on interface type.				
	For more information about the syntax for the router, use the question mark (?) online help function.				
show-only	(Optional) Collects only show command information.				
terminal	Specifies that the command output is displayed on the terminal.				
trace-only	(Optional) Collects only trace information.				
location	(Optional) Specifies a node.				
<i>node-id</i>	(Optional). Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
all	(Optional) Specifies all locations.				
rack	(Optional) Displays the list of racks.				
page	(Optional) Specifies that the command output is displayed one page at a time. Use the return key to display the next line of output or use the space bar to display the next page of information. If not used, the output scrolls (that is, it does not stop for page breaks). Press the Ctrl+C keys to stop the command output.				
Command Modes	EXEC				
Command History	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left; padding-bottom: 2px;">Release</th><th style="text-align: left; padding-bottom: 2px;">Modification</th></tr> </thead> <tbody> <tr> <td style="padding-top: 2px;">Release 2.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				

show tech-support pos

Usage Guidelines



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

This command generates POS debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.



Note This command is not required during normal use of the router.

See the Cisco IOS XR Software command references for information about these commands and descriptions of their command output. The Cisco IOS XR Software command references are located at the following URL:
http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	cisco-support	read

Examples

The following example shows some of the **show tech-support pos** command output that is displayed on the terminal:

```
RP/0/RP0/CPU0:router# show tech-support pos
-----
                                         show tech-support pos
-----
----- show running-config -----
Building configuration...
!! Last configuration change at Wed Oct 10 20:05:13 2007
!
hostname P1 CRS-8
line console
  exec-timeout 600 0
  session-timeout 600
!
line default
  exec-timeout 600 0
  session-timeout 600
!
clock timezone PST 8
clock summer-time DST recurring 2 sunday march 02:00 first sunday november 02:00
logging console informational
telnet vrf default ipv4 server max-servers no-limit
domain ipv4 host p1 172.29.52.72
domain ipv4 host p2 172.29.52.77
domain ipv4 host ce6 172.29.52.73
```

```
domain ipv4 host ce7 172.29.52.78
domain ipv4 host p11 172.29.52.83
domain ipv4 host pe6 172.29.52.128
domain ipv4 host pe7 172.29.52.182
domain ipv4 host ce25 172.29.52.85
domain ipv4 host ce28 172.29.52.1
domain ipv4 host ce29 172.29.52.178
domain ipv4 host pe21 172.29.52.163
domain ipv4 host pe22 172.29.52.219
domain ipv4 host ce28_nme 172.29.52.177
domain ipv4 host ce29_nme 172.29.52.179
domain lookup disable
username P2 CRS-8
password 7 13061E010803
!
aps group 1
 revert 1
 channel 0 local SONET0/1/4/3
 channel 1 local SONET0/1/4/2
!
vty-pool default 0 25
alias cr copy run disk0:/usr/P1_base_config
alias sa show alias
alias sc show config commit list
alias sd show diag
alias si show ip int brief
alias sl show led
alias sm show mpls forwarding
alias sp show platform
alias sr show run
alias su show users
alias sv show version
alias sir show ip route
control-plane
management-plane
inband
 interface all
 allow all
!
!
!
!
ipv4 virtual address 172.29.52.72 255.255.255.0
hw-module service sbc location 0/4/CPU0
hw-module service sbc location 0/4/CPU1
interface Bundle-Ether28
 description Connected to P2 CRS-8 Bundle-Ether 28
 ipv4 address 10.12.28.1 255.255.255.0
 bundle minimum-active links 1
 bundle minimum-active bandwidth 1000000
!
interface Bundle-Ether28.1
 description Connected to P2 CRS-8 Bundle-Ether 28.1
 ipv4 address 10.12.29.1 255.255.255.0
 dot1q vlan 29
!
interface Bundle-Ether28.2
 description Connected to P2 CRS-8 Bundle-Ether 28.2
 ipv4 address 10.12.30.1 255.255.255.0
 dot1q vlan 30
!
interface Bundle-Ether28.3
 description Connected to P2 CRS-8 Bundle-Ether 28.3
 ipv4 address 10.12.31.1 255.255.255.0
```

show tech-support pos

```
dot1q vlan 31
!
interface Bundle-POS24
  description Connected to P2 CRS-8 Bundle-POS 24
  ipv4 address 10.12.24.1 255.255.255.0
  bundle minimum-active links 1
  bundle minimum-active bandwidth 2488320
!
interface Loopback0
  ipv4 address 10.1.1.1 255.255.255.255
!
interface MgmtEth0/4/CPU0/0
  description Connected to Lab LAN
  ipv4 address 172.29.52.46 255.255.255.0
!
interface MgmtEth0/4/CPU1/0
  description Connected to Lab LAN
  ipv4 address 172.29.52.47 255.255.255.0
!
interface MgmtEth0/RP0/CPU0/0
  description Connected to Lab LAN
  ipv4 address 172.29.52.70 255.255.255.0
!
```

show tech-support ppp

To automatically run `show` commands that display information specific to Point to Point Protocol (PPP) debugging, use the `show tech-support ppp` command in EXEC modeEXEC mode.

`show tech-support ppp [{file send-to | [interface type instance] | location node-id | rack | slow}]`

Syntax Description	
file	Specifies that the command output is saved to a specified file.
send-to	Name of the file. The following valid options are listed: <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • disk0: <i>filename</i> • disk0a: <i>filename</i> • disk1: <i>filename</i> • disk1a: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • harddiskb: <i>filename</i> • nvram: <i>filename</i> • rcp: <i>filename</i> • tftp: <i>filename</i>
interface	Collects information about a specific interface.
type	Interface type. For more information, use the question mark (?) online help function.
instance	Either a physical interface instance or a virtual interface instance as follows: <ul style="list-style-type: none"> • Physical interface instance. Naming notation is <i>rack/slot/module/port</i> and a slash between values is required as part of the notation. <ul style="list-style-type: none"> • <i>rack</i>: Chassis number of the rack. • <i>slot</i>: Physical slot number of the modular services card or line card. • <i>module</i>: Module number. A physical layer interface module (PLIM) is always 0. • <i>port</i>: Physical port number of the interface. • Virtual interface instance. Number range varies depending on interface type. For more information about the syntax for the router, use the question mark (?) online help function.
location	(Optional) Specifies a node.

show tech-support ppp

node-id (Optional). Node ID. The *node-id* argument is entered in the *rack/slot/module* notation.

all (Optional) Specifies all locations.

rack (Optional) Displays the list of racks.

slow (Optional) Displays the list show commands of interest for ppp debugging

Command Modes EXEC mode

Command History **Release** **Modification**

Release 3.9.0 This command was introduced.

Usage Guidelines



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

This command generates PPP debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router. See Obtaining Documentation and Submitting a Service Request section on page iii in the Preface for Cisco Technical Support contact information.



Note This command is not required during normal use of the router.

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID **Task ID** **Operations**

cisco-support read

Examples

The following example shows some of the **show tech-support routing ppp** command output that is displayed on the terminal:

```
RP/0/RP0/CPU0:router# show tech-support ppp
```

```
-----  
show tech-support ppp  
-----
```

```
----- show running-config -----
Building configuration...
! Last configuration change at Wed Oct 10 20:05:13 2007
!
hostname P1 CRS-8
line console
  exec-timeout 600 0
  session-timeout 600
!
line default
  exec-timeout 600 0
  session-timeout 600
```

show tech-support qos

show tech-support qos

To automatically run **show** commands that display platform independent Quality of Service (QoS) debugging information, use the **show tech-support qos** command in EXEC mode.

```
show tech-support qos {platform | pi} [file send-to [background] [{compressed | uncompressed}]]
[location node-id] [rack]
```

Syntax Description					
platform	Collects platform dependent QOS related information and saves to disk.				
pi	Collects platform independent QOS related information and saves to disk.				
file	Specifies that the command output is saved to a specified file.				
send-to	Name of the file. The following valid options are listed: <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • disk0: <i>filename</i> • disk0a: <i>filename</i> • disk1: <i>filename</i> • disk1a: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • harddiskb: <i>filename</i> • nvram: <i>filename</i> • rcp: <i>filename</i> • tftp: <i>filename</i> 				
background	(Optional) Specifies that the command runs in the background.				
compressed	(Optional) Displays compressed command output.				
uncompressed	(Optional) Displays the command output with no compression.				
location	(Optional) Specifies a node.				
node-id	Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
rack	(Optional) Displays the list of racks.				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.9.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 3.9.0	This command was introduced.
Release	Modification				
Release 3.9.0	This command was introduced.				

Usage Guidelines

This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with *.tgz* extension. You can share this file with Cisco Technical Support. To share, use the **copy** command to copy the *.tgz* file to a server or local machine. For example, **copy harddisk:/showtech/name.tgz tftp://server_path**.

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

This command generates QoS debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.



Note This command is not required during normal use of the router.

Task ID

Task ID	Operations
basic-services	read
cisco-support	read

```
show tech-support rdsfs
```

show tech-support rdsfs

To automatically run `show` commands that display information specific to Replication Data Services File System (RDSFS) debugging, use the `show tech-support rdsfs` command in EXEC mode.

```
show tech-support rdsfs [{file send-to [background] [{compressed | uncompressed}] | location node-id | rack}]
```

Syntax Description	<p>file Specifies that the command output is saved to a specified file.</p> <p>send-to Name of the file. The following valid options are listed:</p> <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • disk0: <i>filename</i> • disk0a: <i>filename</i> • disk1: <i>filename</i> • disk1a: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • harddiskb: <i>filename</i> • nvram: <i>filename</i> • rep: <i>filename</i> • tftp: <i>filename</i> 				
background	(Optional) Specifies that the command runs in the background.				
compressed	(Optional) Displays compressed command output.				
uncompressed	(Optional) Displays the command output with no compression.				
location/node-id	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
rack	(Optional) Displays the list of racks.				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				
Usage Guidelines	This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with <i>.tgz</i> extension. You can share this file with Cisco Technical Support. To share, use the <code>copy</code> command to copy the <i>.tgz</i> file to a server or local machine. For example, <code>copy harddisk:/showtech/name.tgz tftp://server_path</code> .				

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support rdfsfs** command to run **show** commands that display information specific to RDSFS debugging and is relevant to bring to a ready state. This command generates RDSFS debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.



Note This command is not required during normal use of the router.

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
cisco-support	read	

Examples

The following example shows how to run **show tech-support rdfsfs** command:

```
RP/0/RP0/CPU0:router# show tech-support rdfsfs
```

show tech-support rib

show tech-support rib

To automatically run `show` commands that display information specific to Routing Information Base (RIB) debugging, use the `show tech-support rib` command in EXEC mode.

show tech-support rib level *number*

Syntax Description	<p>file Specifies that the command output is saved to a specified file.</p> <p>send-to Name of the file. The following valid options are listed:</p> <ul style="list-style-type: none"> • <i>filename</i> • bootflash:<i>filename</i> • disk0:<i>filename</i> • disk0a:<i>filename</i> • disk1:<i>filename</i> • disk1a:<i>filename</i> • ftp:<i>filename</i> • harddisk:<i>filename</i> • harddiska:<i>filename</i> • harddiskb:<i>filename</i> • nvram:<i>filename</i> • rcp:<i>filename</i> • tftp:<i>filename</i> 				
background	(Optional) Specifies that the command runs in the background.				
compressed	(Optional) Displays compressed command output.				
uncompressed	(Optional) Displays the command output with no compression.				
level <i>number</i>	<p>Displays verbosity details. <i>number</i> argument is either 1 or 2.</p> <p>Verbosity: 1-brief is default.</p> <p>Verbosity: 2-details with all VRF routes.</p>				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				
Usage Guidelines	This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with <i>.tgz</i> extension. You can share this file with Cisco Technical Support. To share, use the <code>copy</code> command to copy the <i>.tgz</i> file to a server or local machine. For example, <code>copy harddisk:/showtech/name.tgz tftp://server_path</code> .				

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

The RIB data stores the best path information for the routing protocol that is sent to FIB to help build the data structures. This command generates RIB debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.



Note This command is not required during normal use of the router.

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	cisco-support	read

show tech-support routing bfd

show tech-support routing bfd

To automatically run **show** commands that display information specific to Bidirectional Forwarding Detection (BFD) debugging, use the **show tech-support routing bfd** command in EXEC mode.

show tech-support routing bfd[*file send-to [background] [{compressed|uncompressed}]] [location node-id][rack]*

Syntax Description	<p>file (Optional) Specifies that the command output is saved to a specified file.</p> <p>sent-to Name of the file. The following valid options are listed:</p> <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • compactflash: <i>filename</i> • disk0: <i>filename</i> • disk1: <i>filename</i> • flash: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • nvram: <i>filename</i> • rcp: <i>filename</i> • slot0: <i>filename</i> • slot1: <i>filename</i> • tftp: <i>filename</i> 				
background	(Optional) Specifies that the command runs in the background.				
compressed	(Optional) Displays compressed command output.				
uncompressed	(Optional) Displays the command output with no compression.				
location<i>node-id</i>	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
rack	(Optional) Displays the list of racks.				
Command Default	The command output is not compressed.				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.2</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.2	This command was introduced.
Release	Modification				
Release 3.2	This command was introduced.				
Usage Guidelines	This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a				

file with *.tgz* extension. You can share this file with Cisco Technical Support. To share, use the **copy** command to copy the *.tgz* file to a server or local machine. For example, **copy harddisk:/showtech/name.tgz tftp://server_path**.

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support routing bfd** command to run **show** commands that display information specific to BFD debugging. This command generates BFD debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.



Note This command is not required during normal use of the router.

The following **show** commands run automatically when you run the **show tech-support routing bfd** command:

- **show bfd session**
- **show bfd**
- **show memory heap fail all**
- **show memory summary location all**
- **show process blocked location all**
- **show adjacency**
- **show bfd location**
- **show bfd session detail location node-id**
- **show bfd session agent detail location**
- **show bfd timer-groups location node-id**
- **show bfd index-mgrs location node-id**
- **show bfd session-array location node-id**
- **show bfd interfaces location node-id**
- **show bfd bundles detail location node-id**
- **show bfd counters packet invalid location node-id**
- **show bfd counters packet private location node-id**
- **show bfd client private**
- **show bfd trace all-cards**
- **show controllers cputctl summary**
- **show controllers cputctl client pdma bfd active location all**
- **show controllers cputctl ports ingressq pdma all active location node-id**
- **show controllers cputctl ports egressq pdma all active location node-id**
- **show controllers pse statistics location node-id**

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

```
show tech-support routing bfd
```

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
basic-services	read	

show tech-support routing isis

To automatically run `show` commands that display information specific to Intermediate System-to-Intermediate System (IS-IS) debugging, use the `show tech-support routing isis` command in EXEC mode.

`show tech-support routing isis [file send-to [background] [{compressed|uncompressed}]] [location node-id][rack]`

Syntax Description					
file	Specifies that the command output is saved to a specified file.				
<i>sent-to</i>	Name of the file. The following valid options are listed: <ul style="list-style-type: none">• <i>filename</i>• bootflash: <i>filename</i>• compactflash: <i>filename</i>• disk0: <i>filename</i>• disk1: <i>filename</i>• flash: <i>filename</i>• ftp: <i>filename</i>• harddisk: <i>filename</i>• harddiska: <i>filename</i>• nvram: <i>filename</i>• rcp: <i>filename</i>• slot0: <i>filename</i>• slot1: <i>filename</i>• tftp: <i>filename</i>				
background	(Optional) Specifies that the command runs in the background.				
compressed	(Optional) Displays compressed command output.				
uncompressed	(Optional) Displays the command output with no compression.				
location<i>node-id</i>	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
rack	(Optional) Displays the list of racks.				
Command Default	The command output is not compressed.				
Command Modes	EXEC mode				
Command History	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left; width: 25%;">Release</th> <th style="text-align: left;">Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 3.2	This command was introduced.
Release	Modification				
Release 3.2	This command was introduced.				

show tech-support routing isis

Usage Guidelines



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support isis** command to run **show** commands that display information specific to IS-IS debugging. This command generates IS-IS debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.



Note This command is not required during normal use of the router.

The following **show** commands run automatically when you run the **show tech-support routing isis** command:

- **show isis trace all location all**
- **show isis all**
- **show clns statistics**
- **show imds interface all**
- **show ipv4 int brief**
- **show ipv6 int brief**
- **show route ipv4**
- **show route ipv6**
- **show inst which comp clns-isis**

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	basic-services	read

show tech-support routing ospf

To automatically run `show` commands that display information specific to Open Shortest Path First (OSPF) debugging, use the `show tech-support routing ospf` command in EXEC mode.

```
show tech-support routing ospf [ processprocess-id] [no-trace] [{active | standby}] {file send-to [background] [{compressed | uncompressed}]}[location node-id][rack]
```

Syntax Description

process <i>process-id</i>	(Optional) Collects show tech-support information for particular OSPF process. <i>process-id</i> argument is the name of the OSPF process.
no-trace	(Optional) Excludes trace information from the command output.
active	(Optional) Displays information from active route processor only.
standby	(Optional) Displays information from standby route processor only.
file	Specifies that the command output is saved to a specified file.
<i>sent-to</i>	Name of the file. The following valid options are listed: <ul style="list-style-type: none"> • <i>filename</i> • bootflash:<i>filename</i> • compactflash:<i>filename</i> • disk0:<i>filename</i> • disk1:<i>filename</i> • flash:<i>filename</i> • ftp:<i>filename</i> • harddisk:<i>filename</i> • harddiska:<i>filename</i> • nvram:<i>filename</i> • rcp:<i>filename</i> • slot0:<i>filename</i> • slot1:<i>filename</i> • tftp:<i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
location <i>node-id</i>	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
rack	(Optional) Displays the list of racks.

Command Default

The command output is not compressed.

show tech-support routing ospf

Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.2</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.2	This command was introduced.
Release	Modification				
Release 3.2	This command was introduced.				
Usage Guidelines	<p>This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with <i>.tgz</i> extension. You can share this file with Cisco Technical Support. To share, use the copy command to copy the <i>.tgz</i> file to a server or local machine. For example, copy harddisk:/showtech/name.tgz tftp://server_path.</p> <p>For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.</p>				
 Tip	This command can generate a very large amount of output. You may want to redirect the output to a file using the file send-to keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.				
 Note	<p>Use the show tech-support routing ospf command to run show commands that display information specific to OSPF debugging. This command generates OSPF debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.</p> <p>This command is not required during normal use of the router.</p>				

The following **show** commands run automatically when you run the **show tech-support routing ospf** command:

- **show ospf**
- **show ospf vrf all**
- **show ospf summary**
- **show ospf vrf all summary**
- **show ospf interface**
- **show ospf vrf all interface**
- **show ospf virtual-links**
- **show ospf vrf all virtual-links**
- **show ospf neighbor detail**
- **show ospf vrf all neighbor detail**
- **show ospf database database-summary**
- **show ospf vrf all database database-summary**
- **show ospf database router self-originate**
- **show ospf vrf all database router self-originate**
- **show ospf statistics prot**
- **show ospf statistics raw-io**
- **show ospf statistics te**
- **show ospf statistics spf**

- show ospf statistics rib-thread
- show ospf statistics rib-batch
- show ospf message-queue
- show ospf border-routers
- show ospf vrf all border-routers
- show ospf retransmission-list
- show ospf vrf all retransmission-list
- show ospf request-list
- show ospf vrf all request-list
- show ospf flood-list
- show ospf vrf all flood-list
- show ospf maxage-list
- show ospf vrf all maxage-list
- show ospf bad-checksum
- show ospf vrf all bad-checksum
- show ospf standby
- show ospf vrf all standby
- show ip interface brief
- show route ipv4 summary
- show route vrf all ipv4 summary
- show ospf trace all
- show logging process ospf

**Note**

- If you do not specify any options, all information is collected by default.
- Active and standby options are exclusive and only one of them can be used. When neither active or standby is used, the information is collected from both RPs.
- The **no-trace** option can be used with or without specifying the **active** or **standby** options.
- When **standby** option is specified, only ospf- related information from the standby RP is included in the output. The common non-ospf information such as version, placement info, logging and so on are not included.

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	basic-services	read

```
show tech-support routing ospfv3
```

show tech-support routing ospfv3

To automatically run `show` commands that display information specific to Open Shortest Path First Version 3 (OSPFv3) debugging, use the `show tech-support routing ospfv3` command in EXEC mode.

```
show tech-support routing ospfv3 [instance] [detail] {file send-to [background] [{compressed | uncompressed}]}[location node-id][rack]
```

Syntax Description

instance	(Optional) Name of the OSPFv3 instance.
detail	(Optional) Displays all available OSPFv3 information.
file	Specifies that the command output is saved to a specified file.
sent-to	Name of the file. The following valid options are listed: <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • compactflash: <i>filename</i> • disk0: <i>filename</i> • disk1: <i>filename</i> • flash: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • nvram: <i>filename</i> • rep: <i>filename</i> • slot0: <i>filename</i> • slot1: <i>filename</i> • tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
location <i>node-id</i>	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
rack	(Optional) Displays the list of racks.

Command Default

The command output is not compressed.

Command Modes

EXEC mode

Command History

Release	Modification
---------	--------------

Release 3.3.0 This command was introduced.

Usage Guidelines

This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with *.tgz* extension. You can share this file with Cisco Technical Support. To share, use the **copy** command to copy the *.tgz* file to a server or local machine. For example, **copy harddisk:/showtech/name.tgz tftp://server_path**.

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support routing ospfv3** command to run **show** commands that display information specific to OSPFv3 debugging. This command generates OSPFv3 debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.



Note This command is not required during normal use of the router.

The following **show** commands run automatically when you run the **show tech-support routing ospfv3** command:

- **show version**
- **show run router ospfv3**
- **show route ipv6 ospf**
- **show ospfv3**
- **show ospfv3 interface**
- **show ospfv3 virtual-links**
- **show ospfv3 neighbor**
- **show ospfv3 message-queue**
- **show ospfv3 request-list**
- **show ospfv3 retransmission-list**
- **show ospfv3 flood-list**
- **show ospfv3 border-routers**
- **show ospfv3 database database-summary**
- **show ospfv3 database**
- **show ospfv3 route**

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	basic-services	read

show tech-support routing rpl

show tech-support routing rpl

To automatically run `show` commands that display information specific to Routing Policy Language (RPL) debugging, use the `show tech-support routing rpl` command in EXEC mode.

```
show tech-support routing rpl [file send-to [background] [{compressed | uncompressed}]] | [location node-id] | [rack]
```

Syntax Description	<p>file Specifies that the command output is saved to a specified file.</p> <p>sent-to Name of the file. The following valid options are listed:</p> <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • compactflash: <i>filename</i> • disk0: <i>filename</i> • disk1: <i>filename</i> • flash: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • nvram: <i>filename</i> • rcp: <i>filename</i> • slot0: <i>filename</i> • slot1: <i>filename</i> • tftp: <i>filename</i> 				
background	(Optional) Specifies that the command runs in the background.				
compressed	(Optional) Displays compressed command output.				
uncompressed	(Optional) Displays the command output with no compression.				
location <i>node-id</i>	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
rack	(Optional) Displays the list of racks.				
Command Default	The command output is not compressed.				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 3.5.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 3.5.0	This command was introduced.
Release	Modification				
Release 3.5.0	This command was introduced.				
Usage Guidelines	This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a				

file with *.tgz* extension. You can share this file with Cisco Technical Support. To share, use the **copy** command to copy the *.tgz* file to a server or local machine. For example, **copy harddisk:/showtech/name.tgz tftp://server_path**.

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.

**Tip**

This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support routing rpl** command to run **show** commands that display information specific to RPL debugging. This command generates RPL debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.

**Note**

This command is not required during normal use of the router.

The following **show** commands run automatically when you run the **show tech-support routing rpl** command:

- **show running-config rpl**
- **show process policy_repository**
- **show rpl route-policy *policy-name* pwl**
- **show sysdb reg notif path /ipc/gl/policy_lang/policies/routing/ *policy-name* /pxl s**

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	basic-services	read

show tech-support serial

show tech-support serial

To automatically run **show** commands that display information specific to serial debugging, use the **show tech-support serial** command in EXEC mode.

```
show tech-support serial [{file send-to [background] [{compressed | uncompressed}]}] [interface type instance] [show-only] [trace-only] [{location node-id}][rack]
```

Syntax Description

file	Specifies that the command output is saved to a specified file.
<i>sent-to</i>	Name of the file. The following valid options are listed: <ul style="list-style-type: none">• <i>filename</i>• bootflash: <i>filename</i>• disk0: <i>filename</i>• disk0a: <i>filename</i>• disk1: <i>filename</i>• disk1a: <i>filename</i>• ftp: <i>filename</i>• harddisk: <i>filename</i>• harddiska: <i>filename</i>• harddiskb: <i>filename</i>• nvram: <i>filename</i>• rcp: <i>filename</i>• tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
interface	(Optional) Collects information about a specific interface.
<i>type</i>	Interface type. For more information, use the question mark (?) online help function.

<i>instance</i>	<p>Either a physical interface instance or a virtual interface instance as follows:</p> <ul style="list-style-type: none"> Physical interface instance. Naming notation is <i>rack/slot/module/port</i> and a slash between values is required as part of the notation. <ul style="list-style-type: none"> <i>rack</i>: Chassis number of the rack. <i>slot</i>: Physical slot number of the modular services card or line card. <i>module</i>: Module number. A physical layer interface module (PLIM) is always 0. <i>port</i>: Physical port number of the interface. <p>Note In references to a Management Ethernet interface located on a route processor card, the physical slot number is alphanumeric (RP0 or RP1) and the module is CPU0. Example: interface MgmtEth0/RP1/CPU0/0.</p> <ul style="list-style-type: none"> Virtual interface instance. Number range varies depending on interface type. <p>For more information about the syntax for the router, use the question mark (?) online help function.</p>				
show-only	(Optional) Collects only show command information.				
rack	(Optional) Displays the list of racks.				
trace-only	(Optional) Collects only trace information.				
location <i>node-id</i>	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
all	(Optional) Specifies all locations.				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				
Usage Guidelines	<p>This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with <i>.tgz</i> extension. You can share this file with Cisco Technical Support. To share, use the copy command to copy the <i>.tgz</i> file to a server or local machine. For example, copy harddisk:/showtech/name.tgz ftp://server_path.</p> <p>For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.</p>				
 Tip	<p>This command can generate a very large amount of output. You may want to redirect the output to a file using the file send-to keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.</p>				

show tech-support serial

Use the **show tech-support serial** command for serial-related data, such as T1/E1. This command generates serial debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.



Note This command is not required during normal use of the router.

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	cisco-support	read

show tech-support sanitized

To automatically run `show` commands that display information specific to sanitized configuration output, use the `show tech-support sanitized` command in EXEC mode.

```
show tech-support sanitized [{file send-to [background] [{compressed|uncompressed}]}] [{location node-id | all}] [rack]
```

Syntax Description

file	Specifies that the command output is saved to a specified file.
<i>send-to</i>	Name of the file. The following valid options are listed: <ul style="list-style-type: none">• <i>filename</i>• bootflash: <i>filename</i>• compactflash: <i>filename</i>• disk0: <i>filename</i>• disk1: <i>filename</i>• flash: <i>filename</i>• ftp: <i>filename</i>• harddisk: <i>filename</i>• harddiska: <i>filename</i>• nvramp: <i>filename</i>• rcp: <i>filename</i>• slot0: <i>filename</i>• slot1: <i>filename</i>• tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
location	(Optional) Specifies a node.
<i>node-id</i>	(Optional). Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
all	(Optional) Specifies all locations.
rack	(Optional) Displays the list of racks.

Command Modes

EXEC mode

Command History

Release Modification

Release 2.0 This command was introduced.

show tech-support sanitized

Usage Guidelines



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

This command generates sanitized configuration output for debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.



Note This command is not required during normal use of the router.

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	basic-services	read

show tech-support services

To automatically run `show` commands that display information specific to tech-support information that relates to services, use the `show tech-support services` command in EXEC mode.

```
show tech-support services { cgn | svi | sesh } [file send-to [background] [{compressed | uncompressed}]] [location node-id] [rack]
```

Syntax Description	
cgn	Collects PD (platform dependent) information about Service Virtual Interfaces and CGN service
svi	Collets information about Service Virtual Interfaces.
sesh	Collects PD information about SVI and Service Hosting Framework(SESH)
file	Specifies that the command output is saved to a specified file.
<i>sent-to</i>	Name of the file. The following valid options are listed: <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • compactflash: <i>filename</i> • disk0: <i>filename</i> • disk1: <i>filename</i> • flash: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • nvram: <i>filename</i> • rcp: <i>filename</i> • slot0: <i>filename</i> • slot1: <i>filename</i> • tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
rack	(Optional) Displays the list of racks.
location <i>node-id</i>	Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
all	(Optional) Specifies all locations.

Command Modes

EXEC mode

show tech-support services

Command History	Release	Modification
	Release 2.0	This command was introduced.
Usage Guidelines	<p>This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with <i>.tgz</i> extension. You can share this file with Cisco Technical Support. To share, use the copy command to copy the <i>.tgz</i> file to a server or local machine. For example, copy harddisk:/showtech/name.tgz tftp://server_path.</p> <p>For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.</p>	
	 Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the file send-to keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.	
<p>Use the show tech-support services command to run show commands that display information specific to the services diversion infrastructure, which is used with the service blade offerings for the Cisco IOS XR platforms. This command generates tech-support information that relates to services debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.</p>		
	 Note This command is not required during normal use of the router.	
<p>See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL: http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html</p>		
Task ID	Task ID	Operations
	cisco-support	read

show tech-support snmp

To automatically run `show` commands that display information specific to tech-support information related to Simple Network Management Protocol (SNMP) agent, use the `show tech-support snmp` command in EXEC mode.

```
show tech-support snmp [{entitymib | ifmib | rack | location [ node-id / all ] | [file send-to [background] [{compressed | uncompressed}]]}]
```

Syntax Description					
entitymib	(Optional) Displays the entitymib debugging information.				
ifmib	(Optional) Displays the ifmib debugging information.				
file	Specifies that the command output is saved to a specified file.				
<i>send-to</i>	Name of the file. The following valid options are listed: <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • compactflash: <i>filename</i> • disk0: <i>filename</i> • disk0a: <i>filename</i> • disk1: <i>filename</i> • disk1a: <i>filename</i> • flash: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • harddiskb: <i>filename</i> • nvramp: <i>filename</i> • rcp: <i>filename</i> • slot0: <i>filename</i> • slot1: <i>filename</i> • tftp: <i>filename</i> 				
location <i>node-id</i>	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
all	(Optional) Specifies all locations.				
rack	(Optional) Displays the list of racks.				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				

show tech-support snmp

Usage Guidelines

This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with *.tgz* extension. You can share this file with Cisco Technical Support. To share, use the **copy** command to copy the *.tgz* file to a server or local machine. For example, **copy harddisk:/showtech/name.tgz tftp://server_path**.

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.



Note This command is not required during normal use of the router.

See the Cisco IOS XR Software command references for information about these commands and descriptions of their command output. The Cisco IOS XR Software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	basic-services	read
	cisco-support	read

show tech-support spaipc

To automatically run **show** commands that display information specific to SPA Inter Process Communication (SPAIPC) debugging, use the **show tech-support spaipc** command in EXEC mode.

```
show tech-support spaipc {terminal [page] | file send-to [background] [{compressed | uncompressed}]} [interface type interface-path-id] [show-only] [trace-only] [{location node-id | all}]
```

Syntax Description	
file	Specifies that the command output is saved to a specified file.
<i>sent-to</i>	Name of the file. The following valid options are listed: <ul style="list-style-type: none">• <i>filename</i>• bootflash: <i>filename</i>• disk0: <i>filename</i>• disk0a: <i>filename</i>• disk1: <i>filename</i>• disk1a: <i>filename</i>• ftp: <i>filename</i>• harddisk: <i>filename</i>• harddiska: <i>filename</i>• harddiskb: <i>filename</i>• nvram: <i>filename</i>• rcp: <i>filename</i>• tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
interface	(Optional) Collects information about a specific interface.
<i>type</i>	Interface type. For more information, use the question mark (?) online help function.
<i>interface-path-id</i>	Physical interface or virtual interface. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
show-only	(Optional) Collects only show command information.
terminal	Displays the command output on the terminal.
trace-only	(Optional) Collects only trace information.

show tech-support spaipc

location	(Optional) Specifies a node.
<i>node-id</i>	(Optional). Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
all	(Optional) Specifies all locations.
page	(Optional) Displays the command output on a single page at a time. Use the Return key to display the next line of output or use the space bar to display the next page of information. If not used, the output scrolls (that is, it does not stop for page breaks). Press the Ctrl-C keys to stop the command output.

Command Modes EXEC mode

Command History **Release** **Modification**

Release 2.0 This command was introduced.

Usage Guidelines



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

This command generates SPAIPC debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.



Note This command is not required during normal use of the router.

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID **Task ID** **Operations**

cisco-support read

Examples

The following example shows how to run the **show tech-support spaipc** command:

```
RP/0/RP0/CPU0:router# show tech-support spaipc terminal page
```

```
-----  
show tech-support spaipc  
-----
```


show tech-support spaipc

```

hw-module service sbc location 0/4/CPU1
interface Bundle-Ether28
  description Connected to P2 CRS-8 Bundle-Ether 28
  ipv4 address 10.12.28.1 255.255.255.0
  bundle minimum-active links 1
  bundle minimum-active bandwidth 1000000
!
interface Bundle-Ether28.1
  description Connected to P2 CRS-8 Bundle-Ether 28.1
  ipv4 address 10.12.29.1 255.255.255.0
  encapsulation dot1q 29
!
interface Bundle-Ether28.2
  description Connected to P2 CRS-8 Bundle-Ether 28.2
  ipv4 address 10.12.30.1 255.255.255.0
  encapsulation dot1q 30
!
interface Bundle-Ether28.3
  description Connected to P2 CRS-8 Bundle-Ether 28.3
  ipv4 address 10.12.31.1 255.255.255.0
  encapsulation dot1q 31
!
interface Bundle-POS24
  description Connected to P2 CRS-8 Bundle-POS 24
  ipv4 address 10.12.24.1 255.255.255.0
  bundle minimum-active links 1
  bundle minimum-active bandwidth 2488320
!
interface Loopback0
  ipv4 address 10.1.1.1 255.255.255.255
!
interface MgmtEth0/4/CPU0/0
  description Connected to Lab LAN
  ipv4 address 172.29.52.46 255.255.255.0
!
interface MgmtEth0/4/CPU1/0
  description Connected to Lab LAN
  ipv4 address 172.29.52.47 255.255.255.0
!
interface MgmtEth0/RP0/CPU0/0
  description Connected to Lab LAN
  ipv4 address 172.29.52.70 255.255.255.0
!
interface MgmtEth0/RP1/CPU0/0
  description Connected to Lab LAN
  ipv4 address 172.29.52.71 255.255.255.0
!
interface GigabitEthernet0/1/5/0
  description Connected to P2 CRS-8 GE 0/1/5/0
  ipv4 address 10.12.16.1 255.255.255.0
!
interface GigabitEthernet0/1/5/1
  description Connected to P4 C12810 GE 5/2
  ipv4 address 10.14.8.1 255.255.255.0
!
interface GigabitEthernet0/1/5/2
  description Connected to PE6 C12406 GE 0/4/0/1
  ipv4 address 10.16.4.1 255.255.255.0
!
interface GigabitEthernet0/1/5/3
  shutdown
!
interface GigabitEthernet0/1/5/4
  shutdown
!
```

```
!
interface GigabitEthernet0/1/5/5
```

```
show tech-support sysdb
```

show tech-support sysdb

To automatically run `show` commands that display information specific to the System Database (SysDB), use the `show tech-support sysdb` command in EXEC mode.

```
show tech-support sysdb [file send-to [background] [{compressed | uncompressed}]] [rack]
[location node-id]
```

Syntax Description	<p>file Specifies that the command output is saved to a specified file.</p> <p><i>sent-to</i> Name of the file. The following valid options are listed:</p> <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • disk0: <i>filename</i> • disk0a: <i>filename</i> • disk1: <i>filename</i> • disk1a: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • harddiskb: <i>filename</i> • nvrpm: <i>filename</i> • rcp: <i>filename</i> • tftp: <i>filename</i> 				
background	(Optional) Specifies that the command runs in the background.				
compressed	(Optional) Displays compressed command output.				
uncompressed	(Optional) Displays the command output with no compression.				
rack	(Optional) Displays the list of racks.				
location	(Optional) Specifies a node.				
<i>node-id</i>	(Optional). Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 2.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				

Usage Guidelines	This command generates tech-support information that is useful for Cisco Technical Support representatives when troubleshooting a router. By default, the output of this command is saved on the router's hard disk in a file with .tgz extension. You can share this file with Cisco Technical Support. To share, use the <code>copy</code> command to copy the .tgz file to a server or local machine. For example, <code>copy harddisk:/showtech/name.tgz tftp://server_path</code> .
-------------------------	--

For Cisco Technical Support contact information, see the 'Obtaining Documentation and Submitting a Service Request' section in the Preface.



Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

The SysDB is the memory database that is used to store configuration and statistical data with some IPC data. This command generates SysDB information that relates to debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router.



Note This command is not required during normal use of the router.

See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL:

http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html

Task ID	Task ID	Operations
	cisco-support	read

show tech-support terminal

show tech-support terminal

To automatically run `show` commands that display information specific to the terminal, use the `show tech-support terminal` command in EXEC mode.

`show tech-support terminal [{location {node-id | all} | page}]`

Syntax Description	<p>location (Optional) Specifies a node.</p> <p>node-id (Optional). Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.</p> <p>all (Optional) Specifies all locations.</p> <p>page (Optional) Displays the command output on a single page at a time. Use the Return key to display the next line of output or use the space bar to display the next page of information. If not used, the output scrolls (that is, it does not stop for page breaks).</p> <p>Press the Ctrl-C keys to stop the command output.</p>				
Command Modes	EXEC mode				
Command History	<table> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 2.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 2.0	This command was introduced.
Release	Modification				
Release 2.0	This command was introduced.				
Usage Guidelines	<p> Tip This command can generate a very large amount of output. You may want to redirect the output to a file using the <code>file send-to</code> keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.</p> <p>This command generates terminal information that relates to debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.</p> <p> Note This command is not required during normal use of the router.</p> <p>See the Cisco IOS XR software command references for information about these commands and descriptions of their command output. The Cisco IOS XR software command references are located at the following URL: http://www.cisco.com/en/US/products/ps5845/prod_command_reference_list.html</p>				
Task ID	<table> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>basic-services</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	basic-services	read
Task ID	Operations				
basic-services	read				

Examples

The following example shows some of the **show tech-support terminal** command output:

```
RP/0/RP0/CPU0:router# show tech-support terminal page
-----
show tech-support
-----
----- show running-config (no password) -----
Building configuration...
!! Last configuration change at Wed Oct 10 20:05:13 2007
!
hostname P1 CRS-8
line console
  exec-timeout 600 0
  session-timeout 600
!
line default
  exec-timeout 600 0
  session-timeout 600
!
clock timezone PST 8
clock summer-time DST recurring 2 sunday march 02:00 first sunday november 02:00
logging console informational
telnet vrf default ipv4 server max-servers no-limit
domain ipv4 host p1 172.29.52.72
domain ipv4 host p2 172.29.52.77
domain ipv4 host ce6 172.29.52.73
domain ipv4 host ce7 172.29.52.78
domain ipv4 host p11 172.29.52.83
domain ipv4 host pe6 172.29.52.128
domain ipv4 host pe7 172.29.52.182
domain ipv4 host ce25 172.29.52.85
domain ipv4 host ce28 172.29.52.1
domain ipv4 host ce29 172.29.52.178
domain ipv4 host pe21 172.29.52.163
domain ipv4 host pe22 172.29.52.219
domain ipv4 host ce28_nme 172.29.52.177
domain ipv4 host ce29_nme 172.29.52.179
domain lookup disable
username P2 CRS-8
  password 7 <removed>
!
aps group 1
  revert 1
  channel 0 local SONET0/1/4/3
  channel 1 local SONET0/1/4/2
!
vty-pool default 0 25
alias cr copy run disk0:/usr/P1_base_config
alias sa show alias
alias sc show config commit list
alias sd show diag
alias si show ip int brief
alias sl show led
alias sm show mpls forwarding
alias sp show platform
alias sr show run
alias su show users
```

show tech-support terminal

```

alias sv show version
alias sir show ip route
control-plane
management-plane
inband
  interface all
    allow all
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
!
```

```
interface GigabitEthernet0/1/5/1
description Connected to P4_C12810 GE 5/2
ipv4 address 10.14.8.1 255.255.255.0
!
interface GigabitEthernet0/1/5/2
description Connected to PE6_C12406 GE 0/4/0/1
ipv4 address 10.16.4.1 255.255.255.0
!
interface GigabitEthernet0/1/5/3
shutdown
!
interface GigabitEthernet0/1/5/4
shutdown
!
interface GigabitEthernet0/1/5/5
shutdown
!
interface GigabitEthernet0/1/5/6
description Connected to P2 CRS-8 GE 0/1/5/6
bundle id 28 mode active
!
interface GigabitEthernet0/1/5/7
description Connected to P2 CRS-8 GE 0/1/5/7
bundle id 28 mode active
!
interface GigabitEthernet0/6/5/0
shutdown
!
interface GigabitEthernet0/6/5/1
description Connected to P2 CRS-8 GE 0/6/5/1
ipv4 address 10.12.20.1 255.255.255.0
!
interface GigabitEthernet0/6/5/2
description Connected to PE6_C12406 GE 0/4/0/2
ipv4 address 10.16.8.1 255.255.255.0
!
interface GigabitEthernet0/6/5/3
shutdown
!
interface GigabitEthernet0/6/5/4
shutdown
!
interface GigabitEthernet0/6/5/5
shutdown
!
interface GigabitEthernet0/6/5/6
shutdown
!
interface GigabitEthernet0/6/5/7
description Connected to P2 CRS-8 GE 0/6/5/7
ipv4 address 10.12.40.1 255.255.255.0
!
interface POS0/1/0/0
shutdown
!
interface POS0/1/0/1
description Connected to P2 CRS-8 POS 0/1/0/1
ipv4 address 10.12.8.1 255.255.255.0
!
interface POS0/1/0/2
shutdown
!
interface POS0/1/0/3
shutdown
```

show tech-support terminal

```
!
interface POS0/1/4/0
  description Connected to P2 CRS-8 POS 0/1/4/0
  bundle id 24 mode active
!
interface POS0/1/4/1
  description Connected to P2 CRS-8 POS 0/1/4/1
  bundle id 24 mode active
!
interface POS0/1/4/2
  description Connected to P2 CRS-8 POS 0/1/4/2
  ipv4 address 10.12.32.1 255.255.255.0
  encapsulation ppp
  ppp pap sent-username P1 CRS-8 password encrypted <removed>
  ppp authentication chap pap
  ppp chap password encrypted <removed>
!
interface POS0/1/4/3
```

show tech-support tty

To automatically run **show** commands that display information specific to tech-support information related to TTY, use the **show tech-support tty** command in EXEC mode.

```
show tech-support tty [{file sent-to [{background | compressed | uncompressed}]} | location node-id | rack rack-id]
```

Syntax Description

file	(Optional) Specifies that the command output is saved to a specified file.
<i>sent-to</i>	Name of the file. The following valid options are listed: <ul style="list-style-type: none"> • <i>filename</i> • bootflash: <i>filename</i> • disk0: <i>filename</i> • disk0a: <i>filename</i> • disk1: <i>filename</i> • disk1a: <i>filename</i> • disk2: <i>filename</i> • ftp: <i>filename</i> • harddisk: <i>filename</i> • harddiska: <i>filename</i> • harddiskb: <i>filename</i> • lcdisk0: <i>filename</i> • lcdisk0a: <i>filename</i> • nvram: <i>filename</i> • rcp: <i>filename</i> • tftp: <i>filename</i>
background	(Optional) Specifies that the command runs in the background.
compressed	(Optional) Displays compressed command output.
uncompressed	(Optional) Displays the command output with no compression.
location <i>node-id</i>	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
rack <i>rack-id</i>	(Optional) Specifies a list of racks. The <i>rack-id</i> denotes a rack number.

Command Default

The command output is not compressed.

Command Modes

EXEC mode

show tech-support tty

Command History

Release	Modification
4.3.0	This command was introduced.

Usage Guidelines


Tip

This command can generate a very large amount of output. You may want to redirect the output to a file using the **file send-to** keyword and argument. Redirecting the output to a file also makes sending the output to your Cisco Technical Support representative easier.

Use the **show tech-support tty** command to run **show** commands that display information specific to tty debugging. This command generates tty debugging information that can be useful for Cisco Technical Support representatives when troubleshooting a router. See 'Obtaining Documentation and Submitting a Service Request' section on page iii in the Preface for Cisco Technical Support contact information.


Note

This command is not required during normal use of the router.

Task ID

Task ID	Operation
cisco-support	read

Example

The following example shows the output of the **show tech-support tty** command:

```
RP/0/RP0/CPU0:router# show tech-support tty
Tue Sep  4 09:41:21.414 UTC
++ Show tech start time: 2012-Sep-04.094121.UTC ++
Tue Sep  4 09:41:22 UTC 2012 Waiting for gathering to complete
.....
Tue Sep  4 09:44:31 UTC 2012 Compressing show tech output
Show tech output available at 0/RP0/CPU0 :
harddisk:/showtech/showtech-tty-2012-Sep-04.094121.UTC.tgz
++ Show tech end time: 2012-Sep-04.094432.UTC ++
```

show tty details

To display TTY session information, use the **show tty details** command in the EXEC mode.

show tty details [{location node-id}]

Syntax Description	location node-id (Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.					
Command Default	None					
Command Modes	EXEC mode					
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>4.3.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>		Release	Modification	4.3.0	This command was introduced.
Release	Modification					
4.3.0	This command was introduced.					
Usage Guidelines	No specific guidelines impact the use of this command.					
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operation</th> </tr> </thead> <tbody> <tr> <td>tty-access</td> <td>read</td> </tr> </tbody> </table>		Task ID	Operation	tty-access	read
Task ID	Operation					
tty-access	read					

Example

The following example shows output of the **show tty details** command:

```
RP/0/RP0/CPU0:router# show tty details
Mon Sep  3 08:18:19.057 UTC


      Session Id      Exec Pid      Master Pid      PTY Count      Net Count      IBuf Count
Con          0        39280825          -----      -----      -----
Aux          0         8201          -----      -----      -----
      Session Id      Exec Pid      Master Pid      PTY Count      Net Count      IBuf Count
VTY          0        1077467        1077452       642        40582        655
```

The following example shows output of the **show tty details location 0/RP0/CPU0** command:

```
RP/0/RP0/CPU0:router# show tty details location 0/RP0/CPU0
Mon Sep  3 08:20:29.469 UTC

      Session Id      Exec Pid      Master Pid      PTY Count      Net Count      IBuf Count
Con          0        39280825          -----      -----      -----
Aux          0         8201          -----      -----      -----
      Session Id      Exec Pid      Master Pid      PTY Count      Net Count      IBuf Count
VTY          0        1077467        1077452       642        40582        655
```

show tty details

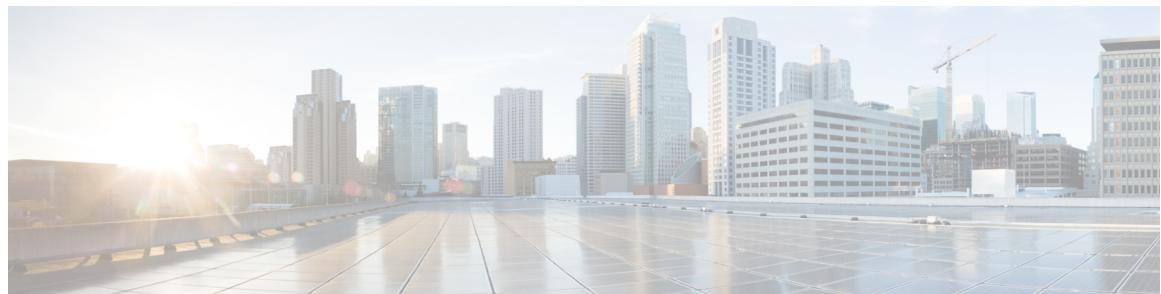

Watchdog Commands

This module describes commands used to monitor the memory states and thresholds of routers running Cisco IOS XR software.

To use commands of this module, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using any command, contact your AAA administrator for assistance.

- [show critmon context, on page 440](#)
- [show critmon deadline, on page 444](#)
- [show critmon statistics, on page 446](#)
- [show critmon trace all, on page 454](#)
- [show critmon trace error, on page 456](#)
- [show critmon trace info, on page 458](#)
- [show critmon trace lib-error, on page 460](#)
- [show critmon trace lib-info, on page 462](#)
- [show reboot first, on page 464](#)
- [show reboot graceful, on page 467](#)
- [show reboot history, on page 468](#)
- [show reboot last, on page 470](#)
- [show reboot pcds, on page 473](#)
- [show watchdog, on page 476](#)

show critmon context

show critmon context

To display information about the context for the wd-critical-mon process, use the **show critmon context** command in EXEC mode.

show critmon context {all | deadline [client *client-name*] | ticker | watcher} location {node-id | all}

Syntax Description

all	Displays all context information for the wd-critical-mon process.
deadline	Displays the context information for the deadline monitoring client application.
client	(Optional) Displays information only for the specified client.
<i>client-name</i>	Name of the client.
ticker	Displays information for the ticker context for the wd-critical-mon process.
watcher	Displays information for the watcher context for the wd-critical-mon process.
location	Specifies a node to filter.
<i>node-id</i>	Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
all	Specifies all locations.

Command Default

No default behavior or values

Command Modes

EXEC mode

Command History

Release	Modification
---------	--------------

Release 3.6.0 This command was introduced.

Usage Guidelines

Use the **show critmon context** command to display information about the context for the wd-critical-mon process.

Task ID

Task ID	Operations
cisco-support	read

Examples

The following sample output is from the **show critmon context** command:

```
RP/0/RP0/CPU0:router# show critmon context all location all
-----
Ticker context info (Node: 0/5/CPU0)
-----
CPU# : 0
Ticker counter : 2245
Ticker last ran timestamp : 02/10/2008 01:11:10
```

```
-----  
Watcher context info (Node: 0/5/CPU0)
```

```
-----  
Watcher counter : 751  
Watcher last ran : 02/10/2008 01:11:10
```

```
-----  
Deadline monitoring context info (Node: 0/5/CPU0)
```

```
-----  
Client : wdsysmon  
PunchTimestamp : 02/10/2008 01:11:09  
PunchCounter : 226
```

```
-----  
Ticker context info (Node: 0/4/CPU0)
```

```
-----  
CPU# : 0  
Ticker counter : 74  
Ticker last ran timestamp : 02/10/2008 01:11:10
```

```
-----  
Watcher context info (Node: 0/4/CPU0)
```

```
-----  
Watcher counter : 24  
Watcher last ran : 02/10/2008 01:11:09
```

```
-----  
Deadline monitoring context info (Node: 0/4/CPU0)
```

```
-----  
Client : wdsysmon  
PunchTimestamp : 02/10/2008 01:11:10  
PunchCounter : 8
```

```
-----  
Ticker context info (Node: 0/2/CPU0)
```

```
-----  
CPU# : 0  
Ticker counter : 61  
Ticker last ran timestamp : 02/10/2008 01:11:10
```

```
-----  
Watcher context info (Node: 0/2/CPU0)
```

```
-----  
Watcher counter : 21  
Watcher last ran : 02/10/2008 01:11:10
```

```
-----  
Deadline monitoring context info (Node: 0/2/CPU0)
```

```
-----  
Client : wdsysmon
```

show critmon context

```

PunchTimestamp : 02/10/2008 01:11:09
PunchCounter   : 6

-----
Ticker context info (Node: 0/1/CPU0)
-----
CPU#           : 0
Ticker counter : 2093
Ticker last ran timestamp : 02/10/2008 01:11:10

-----
Watcher context info (Node: 0/1/CPU0)
-----
Watcher counter : 703
Watcher last ran : 02/10/2008 01:11:10

-----
Deadline monitoring context info (Node: 0/1/CPU0)
-----
Client       : wdsysmon
PunchTimestamp : 02/10/2008 01:11:09
PunchCounter   : 211

```

This table describes the significant fields shown in the display.

Table 39: show critmon context Field Descriptions

Field	Description
Ticker context info	wd-critical-mon process ticker context information for the node.
CPU	CPU number.
Ticker counter	Current counter for the wd-critical-mon ticker thread. The ticker counter field specifies the number of times the ticker thread was run.
Ticker last ran timestamp	Timestamp for the last time the wd-critical-mon ticker thread was run.
Watcher context info	wd-critical-mon watcher thread context information that is used for the node.
Watcher counter	Current counter for the wd-critical-mon watcher thread. The watcher counter field specifies the number of times the watcher thread was run
Watcher last ran	Timestamp that is used for the last run of the wd-critical-mon watcher thread.
Deadline monitoring context info	wd-critical-mon deadline monitoring information that is used for the node.
Client	Client name for deadline monitoring.
PunchTimestamp	Timestamp that is used for the last run of the client application.

Field	Description
PunchCounter	Current counter for the deadline monitoring client. This field specifies the number of times that the client application can punch the counter.

Related Commands

Command	Description
show critmon deadline, on page 444	Displays information about deadline monitoring.
show critmon statistics, on page 446	Displays information about the critical monitor statistics.
show critmon trace all, on page 454	Displays information about all traces for a critical monitor.
show critmon trace error, on page 456	Displays information about error traces for a critical monitor.
show critmon trace info, on page 458	Displays trace data for an information type for the critical monitor.
show critmon trace lib-error, on page 460	Displays information about the trace data for the library error for the critical monitor.
show critmon trace lib-info, on page 462	Displays trace data for the library information for the critical monitor.

show critmon deadline

show critmon deadline

To display information about deadline monitoring, use the **show critmon deadline** command in EXEC mode.

show critmon deadline registration [client client-name] location {node-id | all}

Syntax Description

registration Displays the deadline monitoring registration information.

client (Optional) Displays information only for the specified client.

client-name Name of the client.

location Specifies a node to filter.

node-id Node ID. The *node-id* argument is entered in the *rack/slot/module* notation.

all Specifies all locations.

Command Default

No default behavior or values

Command Modes

EXEC mode

Command History

Release	Modification
Release 3.6.0	This command was introduced.

Usage Guidelines

Use the **show critmon deadline** command to display information about the deadline monitoring.

Task ID

Task ID	Operations
cisco-support	read

Examples

The following sample output is from the **show critmon deadline** command:

```
RP/0/RP0/CPU0:router# show critmon deadline registration location all
```

```
-----  
Deadline monitoring registration info (Node: 0/5/CPU0)
```

ID	ClientName	Activated	tick address	timeout vale(sec)
0	wdsysmon	Yes	0x6023d000	60

```
-----  
Deadline monitoring registration info (Node: 0/4/CPU0)
```

ID	ClientName	Activated	tick address	timeout vale(sec)
0	wdsysmon	Yes	0x38146000	60

```
-----
Deadline monitoring registration info (Node: 0/2/CPU0)
-----
ID ClientName          Activated   tick address    timeout vale(sec)
--  -----
0  wdsysmon           Yes        0x38146000    60

-----
Deadline monitoring registration info (Node: 0/1/CPU0)
-----
ID ClientName          Activated   tick address    timeout vale(sec)
--  -----
0  wdsysmon           Yes        0x38101000    60
```

This table describes the significant fields shown in the display.

Table 40: show critmon deadline Field Descriptions

Field	Description
Deadline monitoring registration info	Deadline monitoring registration information that is used for the node.
ID	Client ID that is internally managed by the wd-critical-mon process.
ClientName	Name of the client.
Activated	Field specifies that deadline monitoring is activated or not.
tick address	Tick memory address for the client application.
timeout vale(sec)	Deadline timeout value.

Related Commands

Command	Description
show critmon context, on page 440	Displays information about the context for the wd-critical-mon process.
show critmon statistics, on page 446	Displays information about the critical monitor statistics.
show critmon trace all, on page 454	Displays information about all traces for a critical monitor.
show critmon trace error, on page 456	Displays information about error traces for a critical monitor.
show critmon trace info, on page 458	Displays trace data for an information type for the critical monitor.
show critmon trace lib-error, on page 460	Displays information about the trace data for the library error for the critical monitor.
show critmon trace lib-info, on page 462	Displays trace data for the library information for the critical monitor.

show critmon statistics

show critmon statistics

To display information about the critical monitor statistics, use the **show critmon statistics** command in EXEC mode.

```
show critmon statistics {all | congestion | deadline client client-name | ticker | watcher} last hours
location {node-id | all}
```

Syntax Description	<p>all Displays all the information for the critical monitor.</p> <p>congestion Displays all the CPU congestion information for the critical monitor.</p> <p>deadline Displays all the statistics information for the deadline monitor.</p> <p>client Displays information only for the specified client.</p> <p><i>client-name</i> Name of the client.</p> <p>ticker Displays the ticker statistics for the wd-critical-mon process.</p> <p>watcher Displays the watcher statistics for the wd-critical-mon process.</p> <p>last Displays only the last number of hours.</p> <p>hours Number of last hours. The range is from 1 to 24.</p> <p>location Specifies a node to filter.</p> <p><i>node-id</i> Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.</p> <p>all Specifies all locations.</p>				
Command Default	No default behavior or values				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.6.0</td><td>This command was introduced</td></tr> </tbody> </table>	Release	Modification	Release 3.6.0	This command was introduced
Release	Modification				
Release 3.6.0	This command was introduced				
Usage Guidelines	Use the show critmon statistics command to display information about the critical monitor statistics.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>cisco-support</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	cisco-support	read
Task ID	Operations				
cisco-support	read				

Examples The following sample output is from the **show critmon statistics** command:

RP/0/RP0/CPU0:router# **show critmon statistics all last 5 location all**

Ticker statistics info (Node: 0/5/CPU0)

Period (min)	CPU#	SnapShotTimestamp MM/DD/YYYY hh:mm:ss	tick count	Frequency (count/min)
15	cpu:0	10/22/2007 14:33:39	4478	298
15	cpu:0	10/22/2007 14:48:39	4477	298
15	cpu:0	10/22/2007 15:03:39	4478	298
15	cpu:0	10/22/2007 15:18:39	4477	298
15	cpu:0	10/22/2007 15:33:39	4478	298
15	cpu:0	10/22/2007 15:48:39	4478	298
15	cpu:0	10/22/2007 16:03:39	4477	298
15	cpu:0	10/22/2007 16:18:39	4478	298
15	cpu:0	10/22/2007 16:33:39	4477	298
15	cpu:0	10/22/2007 16:48:39	4478	298
15	cpu:0	10/22/2007 17:03:39	4477	298
15	cpu:0	10/22/2007 17:18:39	4478	298
15	cpu:0	10/22/2007 17:33:39	4477	298
15	cpu:0	10/22/2007 17:48:39	4478	298
15	cpu:0	10/22/2007 18:03:39	4477	298
15	cpu:0	10/22/2007 18:18:39	4478	298
15	cpu:0	10/22/2007 18:33:39	4478	298
15	cpu:0	10/22/2007 18:48:39	4477	298
15	cpu:0	10/22/2007 19:03:39	4477	298
15	cpu:0	10/22/2007 19:18:39	4478	298

Watcher statistics info (Node: 0/5/CPU0)

Period (min)	SnapShotTimestamp MM/DD/YYYY hh:mm:ss	watch count	Frequency (count/min)
15	10/22/2007 14:33:39	1498	99
15	10/22/2007 14:48:39	1497	99
15	10/22/2007 15:03:39	1498	99
15	10/22/2007 15:18:39	1497	99
15	10/22/2007 15:33:39	1498	99
15	10/22/2007 15:48:39	1497	99
15	10/22/2007 16:03:39	1498	99
15	10/22/2007 16:18:39	1497	99
15	10/22/2007 16:33:39	1498	99
15	10/22/2007 16:48:39	1497	99
15	10/22/2007 17:03:39	1498	99
15	10/22/2007 17:18:39	1497	99
15	10/22/2007 17:33:39	1498	99
15	10/22/2007 17:48:39	1497	99
15	10/22/2007 18:03:39	1498	99
15	10/22/2007 18:18:39	1497	99
15	10/22/2007 18:33:39	1498	99
15	10/22/2007 18:48:39	1497	99
15	10/22/2007 19:03:39	1498	99
15	10/22/2007 19:18:39	1497	99

CPU congestion history (Node: 0/5/CPU0)

No congestion history

show critmon statistics

Deadline monitoring statistics info (Node: 0/5/CPU0)

client (name)	SnapShotTimestamp MM/DD/YYYY hh:mm:ss	tick count	Frequency (count/min)
wdssysmon	10/22/2007 14:33:39	450	30
wdssysmon	10/22/2007 14:48:39	450	30
wdssysmon	10/22/2007 15:03:39	450	30
wdssysmon	10/22/2007 15:18:39	449	29
wdssysmon	10/22/2007 15:33:39	450	30
wdssysmon	10/22/2007 15:48:39	450	30
wdssysmon	10/22/2007 16:03:39	450	30
wdssysmon	10/22/2007 16:18:39	449	29
wdssysmon	10/22/2007 16:33:39	450	30
wdssysmon	10/22/2007 16:48:39	450	30
wdssysmon	10/22/2007 17:03:39	450	30
wdssysmon	10/22/2007 17:18:39	450	30
wdssysmon	10/22/2007 17:33:39	449	29
wdssysmon	10/22/2007 17:48:39	450	30
wdssysmon	10/22/2007 18:03:39	450	30
wdssysmon	10/22/2007 18:18:39	450	30
wdssysmon	10/22/2007 18:33:39	449	29
wdssysmon	10/22/2007 18:48:39	450	30
wdssysmon	10/22/2007 19:03:39	450	30
wdssysmon	10/22/2007 19:18:39	450	30

Ticker statistics info (Node: 0/4/CPU0)

Period (min)	CPU#	SnapShotTimestamp MM/DD/YYYY hh:mm:ss	tick count	Frequency (count/min)
15	cpu:0	10/22/2007 14:25:38	4454	296
15	cpu:0	10/22/2007 14:40:38	4455	297
15	cpu:0	10/22/2007 14:55:38	4454	296
15	cpu:0	10/22/2007 15:10:37	4455	297
15	cpu:0	10/22/2007 15:25:37	4454	296
15	cpu:0	10/22/2007 15:40:37	4455	297
15	cpu:0	10/22/2007 15:55:37	4454	296
15	cpu:0	10/22/2007 16:10:37	4455	297
15	cpu:0	10/22/2007 16:25:37	4455	297
15	cpu:0	10/22/2007 16:40:37	4454	296
15	cpu:0	10/22/2007 16:55:37	4455	297
15	cpu:0	10/22/2007 17:10:37	4455	297
15	cpu:0	10/22/2007 17:25:37	4455	297
15	cpu:0	10/22/2007 17:40:37	4454	296
15	cpu:0	10/22/2007 17:55:37	4455	297
15	cpu:0	10/22/2007 18:10:37	4454	296
15	cpu:0	10/22/2007 18:25:37	4454	296
15	cpu:0	10/22/2007 18:40:37	4455	297
15	cpu:0	10/22/2007 18:55:36	4455	297
15	cpu:0	10/22/2007 19:10:36	4455	297

Watcher statistics info (Node: 0/4/CPU0)

Period (min)	SnapShotTimestamp MM/DD/YYYY hh:mm:ss	watch count	Frequency (count/min)

```

15 10/22/2007 14:25:38 1496 99
15 10/22/2007 14:40:38 1495 99
15 10/22/2007 14:55:38 1495 99
15 10/22/2007 15:10:37 1495 99
15 10/22/2007 15:25:37 1495 99
15 10/22/2007 15:40:37 1495 99
15 10/22/2007 15:55:37 1495 99
15 10/22/2007 16:10:37 1495 99
15 10/22/2007 16:25:37 1495 99
15 10/22/2007 16:40:37 1495 99
15 10/22/2007 16:55:37 1495 99
15 10/22/2007 17:10:37 1495 99
15 10/22/2007 17:25:37 1495 99
15 10/22/2007 17:40:37 1495 99
15 10/22/2007 17:55:37 1495 99
15 10/22/2007 18:10:37 1495 99
15 10/22/2007 18:25:37 1495 99
15 10/22/2007 18:40:37 1495 99
15 10/22/2007 18:55:36 1495 99
15 10/22/2007 19:10:36 1495 99

```

CPU congestion history (Node: 0/4/CPU0)

No congestion history

Deadline monitoring statistics info (Node: 0/4/CPU0)

client (name)	SnapShotTimestamp MM/DD/YYYY hh:mm:ss	Frequency tick count	Frequency (count/min)
wdsysmon	10/22/2007 14:25:38	449	29
wdsysmon	10/22/2007 14:40:38	450	30
wdsysmon	10/22/2007 14:55:38	449	29
wdsysmon	10/22/2007 15:10:37	450	30
wdsysmon	10/22/2007 15:25:37	449	29
wdsysmon	10/22/2007 15:40:37	450	30
wdsysmon	10/22/2007 15:55:37	449	29
wdsysmon	10/22/2007 16:10:37	450	30
wdsysmon	10/22/2007 16:25:37	449	29
wdsysmon	10/22/2007 16:40:37	450	30
wdsysmon	10/22/2007 16:55:37	449	29
wdsysmon	10/22/2007 17:10:37	450	30
wdsysmon	10/22/2007 17:25:37	449	29
wdsysmon	10/22/2007 17:40:37	450	30
wdsysmon	10/22/2007 17:55:37	449	29
wdsysmon	10/22/2007 18:10:37	450	30
wdsysmon	10/22/2007 18:25:37	449	29
wdsysmon	10/22/2007 18:40:37	450	30
wdsysmon	10/22/2007 18:55:36	449	29
wdsysmon	10/22/2007 19:10:36	450	30

Ticker statistics info (Node: 0/2/CPU0)

Period (min)	CPU#	SnapShotTimestamp MM/DD/YYYY hh:mm:ss	Frequency tick count	Frequency (count/min)
15	cpu:0	10/22/2007 14:25:41	4454	296

show critmon statistics

```

15    cpu:0  10/22/2007 14:40:41  4455    297
15    cpu:0  10/22/2007 14:55:41  4454    296
15    cpu:0  10/22/2007 15:10:41  4455    297
15    cpu:0  10/22/2007 15:25:41  4455    297
15    cpu:0  10/22/2007 15:40:41  4454    296
15    cpu:0  10/22/2007 15:55:41  4455    297
15    cpu:0  10/22/2007 16:10:41  4454    296
15    cpu:0  10/22/2007 16:25:41  4455    297
15    cpu:0  10/22/2007 16:40:41  4454    296
15    cpu:0  10/22/2007 16:55:40  4455    297
15    cpu:0  10/22/2007 17:10:40  4455    297
15    cpu:0  10/22/2007 17:25:40  4455    297
15    cpu:0  10/22/2007 17:40:40  4454    296
15    cpu:0  10/22/2007 17:55:40  4455    297
15    cpu:0  10/22/2007 18:10:40  4454    296
15    cpu:0  10/22/2007 18:25:40  4455    297
15    cpu:0  10/22/2007 18:40:40  4454    296
15    cpu:0  10/22/2007 18:55:40  4455    297
15    cpu:0  10/22/2007 19:10:40  4455    297

```

Watcher statistics info (Node: 0/2/CPU0)

Period (min)	SnapShotTimestamp MM/DD/YYYY hh:mm:ss	watch count	Frequency (count/min)
15	10/22/2007 14:25:41	1495	99
15	10/22/2007 14:40:41	1495	99
15	10/22/2007 14:55:41	1495	99
15	10/22/2007 15:10:41	1495	99
15	10/22/2007 15:25:41	1495	99
15	10/22/2007 15:40:41	1495	99
15	10/22/2007 15:55:41	1495	99
15	10/22/2007 16:10:41	1495	99
15	10/22/2007 16:25:41	1495	99
15	10/22/2007 16:40:41	1496	99
15	10/22/2007 16:55:40	1495	99
15	10/22/2007 17:10:40	1495	99
15	10/22/2007 17:25:40	1495	99
15	10/22/2007 17:40:40	1495	99
15	10/22/2007 17:55:40	1495	99
15	10/22/2007 18:10:40	1495	99
15	10/22/2007 18:25:40	1495	99
15	10/22/2007 18:40:40	1495	99
15	10/22/2007 18:55:40	1495	99
15	10/22/2007 19:10:40	1495	99

CPU congestion history (Node: 0/2/CPU0)

No congestion history

Deadline monitoring statistics info (Node: 0/2/CPU0)

client (name)	SnapShotTimestamp MM/DD/YYYY hh:mm:ss	tick count	Frequency (count/min)
wdsysmon	10/22/2007 14:25:41	449	29
wdsysmon	10/22/2007 14:40:41	450	30

wdsysmon	10/22/2007 14:55:41	449	29
wdsysmon	10/22/2007 15:10:41	450	30
wdsysmon	10/22/2007 15:25:41	449	29
wdsysmon	10/22/2007 15:40:41	450	30
wdsysmon	10/22/2007 15:55:41	449	29
wdsysmon	10/22/2007 16:10:41	450	30
wdsysmon	10/22/2007 16:25:41	449	29
wdsysmon	10/22/2007 16:40:41	450	30
wdsysmon	10/22/2007 16:55:40	449	29
wdsysmon	10/22/2007 17:10:40	450	30
wdsysmon	10/22/2007 17:25:40	449	29
wdsysmon	10/22/2007 17:40:40	450	30
wdsysmon	10/22/2007 17:55:40	449	29
wdsysmon	10/22/2007 18:10:40	450	30
wdsysmon	10/22/2007 18:25:40	449	29
wdsysmon	10/22/2007 18:40:40	450	30
wdsysmon	10/22/2007 18:55:40	449	29
wdsysmon	10/22/2007 19:10:40	450	30

 Ticker statistics info (Node: 0/1/CPU0)

Period (min)	CPU#	SnapShotTimestamp MM/DD/YYYY hh:mm:ss	Frequency tick count	Frequency (count/min)
15	cpu:0	10/22/2007 14:33:53	4456	297
15	cpu:0	10/22/2007 14:48:53	4455	297
15	cpu:0	10/22/2007 15:03:53	4456	297
15	cpu:0	10/22/2007 15:18:53	4455	297
15	cpu:0	10/22/2007 15:33:53	4455	297
15	cpu:0	10/22/2007 15:48:53	4456	297
15	cpu:0	10/22/2007 16:03:53	4455	297
15	cpu:0	10/22/2007 16:18:52	4456	297
15	cpu:0	10/22/2007 16:33:52	4455	297
15	cpu:0	10/22/2007 16:48:52	4456	297
15	cpu:0	10/22/2007 17:03:52	4455	297
15	cpu:0	10/22/2007 17:18:52	4456	297
15	cpu:0	10/22/2007 17:33:52	4455	297
15	cpu:0	10/22/2007 17:48:52	4455	297
15	cpu:0	10/22/2007 18:03:52	4456	297
15	cpu:0	10/22/2007 18:18:52	4455	297
15	cpu:0	10/22/2007 18:33:52	4456	297
15	cpu:0	10/22/2007 18:48:52	4455	297
15	cpu:0	10/22/2007 19:03:52	4456	297
15	cpu:0	10/22/2007 19:18:52	4455	297

 Watcher statistics info (Node: 0/1/CPU0)

Period (min)	SnapShotTimestamp MM/DD/YYYY hh:mm:ss	Frequency watch count	Frequency (count/min)
15	10/22/2007 14:33:53	1495	99
15	10/22/2007 14:48:53	1495	99
15	10/22/2007 15:03:53	1495	99
15	10/22/2007 15:18:53	1495	99
15	10/22/2007 15:33:53	1495	99
15	10/22/2007 15:48:53	1495	99
15	10/22/2007 16:03:53	1495	99
15	10/22/2007 16:18:52	1495	99
15	10/22/2007 16:33:52	1496	99
15	10/22/2007 16:48:52	1495	99

show critmon statistics

```

15    10/22/2007 17:03:52 1495      99
15    10/22/2007 17:18:52 1495      99
15    10/22/2007 17:33:52 1495      99
15    10/22/2007 17:48:52 1495      99
15    10/22/2007 18:03:52 1495      99
15    10/22/2007 18:18:52 1495      99
15    10/22/2007 18:33:52 1495      99
15    10/22/2007 18:48:52 1495      99
15    10/22/2007 19:03:52 1495      99
15    10/22/2007 19:18:52 1495      99

```

CPU congestion history (Node: 0/1/CPU0)

No congestion history

Deadline monitoring statistics info (Node: 0/1/CPU0)

client (name)	SnapShotTimestamp MM/DD/YYYY hh:mm:ss	tick count	Frequency (count/min)
wdssysmon	10/22/2007 14:33:53	449	29
wdssysmon	10/22/2007 14:48:53	450	30
wdssysmon	10/22/2007 15:03:53	449	29
wdssysmon	10/22/2007 15:18:53	450	30
wdssysmon	10/22/2007 15:33:53	449	29
wdssysmon	10/22/2007 15:48:53	450	30
wdssysmon	10/22/2007 16:03:53	450	30
wdssysmon	10/22/2007 16:18:52	449	29
wdssysmon	10/22/2007 16:33:52	450	30
wdssysmon	10/22/2007 16:48:52	449	29
wdssysmon	10/22/2007 17:03:52	450	30
wdssysmon	10/22/2007 17:18:52	449	29
wdssysmon	10/22/2007 17:33:52	450	30
wdssysmon	10/22/2007 17:48:52	449	29
wdssysmon	10/22/2007 18:03:52	450	30
wdssysmon	10/22/2007 18:18:52	450	30
wdssysmon	10/22/2007 18:33:52	449	29
wdssysmon	10/22/2007 18:48:52	450	30
wdssysmon	10/22/2007 19:03:52	449	29
wdssysmon	10/22/2007 19:18:52	450	30

This table describes the significant fields shown in the display.

Table 41: show critmon statistics Field Descriptions

Field	Description
Ticker statistics info	Ticker thread statistics information that is used for the node.
Period	Statistics sampling period.
CPU	CPU number.
SnapShotTimestamp	Timestamp that the statistics is saved.
tick count	Ticker counter for the sampling period

Field	Description
Frequency	Frequency for ticker or watcher punch count.
Watcher statistics info	Watcher thread statistics information that is used for the node.
watch count	Watcher count that is used for the sampling period.
CPU congestion history	History of CPU congestion.
Deadline monitoring statistics info	Deadline monitoring statistics information that is used for the node.
client	Name of deadline monitoring client.

Related Commands

Command	Description
show critmon context, on page 440	Displays information about the context for the wd-critical-mon process.
show critmon deadline, on page 444	Displays information about deadline monitoring.
show critmon trace all, on page 454	Displays information about all traces for a critical monitor.
show critmon trace error, on page 456	Displays information about error traces for a critical monitor.
show critmon trace info, on page 458	Displays trace data for an information type for the critical monitor.
show critmon trace lib-error, on page 460	Displays information about the trace data for the library error for the critical monitor.
show critmon trace lib-info, on page 462	Displays trace data for the library information for the critical monitor.

show critmon trace all

show critmon trace all

To display information about all traces for a critical monitor, use the **show critmon trace all** command in EXEC mode.

```
show critmon trace all [file filename original] [hexdump] [last entries] [reverse] [stats] [tailf]
[unique] [verbose] [wrapping] [location {node-id | all}]
```

Syntax Description	
file	(Optional) Displays a specific file.
<i>filename</i>	Name of a specific file.
original	Specifies the original location of the file.
hexdump	(Optional) Displays traces in hexadecimal format.
last	(Optional) Displays trace information for a specific number of entries
<i>entries</i>	Number of entries. Replace entries with the number of entries you want to display. For example, if you enter 5, the display shows the last 5 entries in the trace data. The range is from 1 to 4294967295.
reverse	(Optional) Displays the latest traces first.
stats	(Optional) Displays the statistics in the command output.
tailf	(Optional) Displays the new traces as they are added in the command output.
unique	(Optional) Displays the unique entries with counts in the command output.
verbose	(Optional) Displays the information for internal debugging in the command output.
wrapping	(Optional) Displays the wrapping entries in the command output.
location	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
<i>node-id</i>	
all	Specifies all locations.
Command Default	No default behavior or values
Command Modes	EXEC mode

Command History	Release	Modification
	Release 3.6.0	This command was introduced.
Usage Guidelines	No specific guidelines impact the use of this command.	
Task ID	Task ID	Operations
	cisco-support	read

Examples The following sample output is from the **show critmon trace all** command:

```
RP/0/RP0/CPU0:router# show critmon trace all hexdump

1 wrapping entries (768 possible, 0 filtered, 1 total)
Oct 11 03:18:11.584 wd-critical-mon/lib/info 0/5/CPU0 t10 tp0x00000302000000a0

Oct 11 03:18:11.584 wd-critical-mon/lib/info 0/5/CPU0 t10 critmon_deadline_regin
```

Related Commands	Command	Description
	show critmon context, on page 440	Displays information about the context for the wd-critical-mon process.
	show critmon deadline, on page 444	Displays information about deadline monitoring.
	show critmon statistics, on page 446	Displays information about the critical monitor statistics.
	show critmon trace error, on page 456	Displays information about error traces for a critical monitor.
	show critmon trace info, on page 458	Displays trace data for an information type for the critical monitor.
	show critmon trace lib-error, on page 460	Displays information about the trace data for the library error for the critical monitor.
	show critmon trace lib-info, on page 462	Displays trace data for the library information for the critical monitor.

show critmon trace error

show critmon trace error

To display information about error traces for a critical monitor, use the **show critmon trace error** command in EXEC mode.

```
show critmon trace error [file filename original] [hexdump] [last entries] [reverse] [stats] [tailf]
[unique] [verbose] [wrapping] [location {node-id | all}]
```

Syntax Description	<p>file (Optional) Displays a specific file.</p> <p><i>filename</i> Name of a specific file.</p> <p>original Specifies the original location of the file.</p> <p>hexdump (Optional) Displays traces in hexadecimal format.</p> <p>last (Optional) Displays the last numbered entries.</p> <p><i>entries</i> Number of entries. The range is from 1 to 4294967295.</p> <p>reverse (Optional) Displays the latest traces first.</p> <p>stats (Optional) Displays the statistics.</p> <p>tailf (Optional) Displays the new traces as they are added.</p> <p>unique (Optional) Displays the unique entries with counts.</p> <p>verbose (Optional) Displays the information for internal debugging.</p> <p>wrapping (Optional) Displays the wrapping entries in the command output.</p> <p>location (Optional) Specifies a node.</p> <p><i>node-id</i> Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.</p> <p>all Specifies all locations.</p>				
Command Default	No default behavior or values				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.6.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.6.0	This command was introduced.
Release	Modification				
Release 3.6.0	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>cisco-support</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	cisco-support	read
Task ID	Operations				
cisco-support	read				

Examples

The following example shows how to use the **show critmon trace error** command:

```
RP/0/RP0/CPU0:router# show critmon trace error
```

Related Commands	Command	Description
	show critmon context, on page 440	Displays information about the context for the wd-critical-mon process.
	show critmon deadline, on page 444	Displays information about deadline monitoring.
	show critmon statistics, on page 446	Displays information about the critical monitor statistics.
	show critmon trace all, on page 454	Displays information about all traces for a critical monitor.
	show critmon trace info, on page 458	Displays trace data for an information type for the critical monitor.
	show critmon trace lib-error, on page 460	Displays information about the trace data for the library error for the critical monitor.
	show critmon trace lib-info, on page 462	Displays trace data for the library information for the critical monitor.

show critmon trace info

show critmon trace info

To display trace data for an information type for the critical monitor, use the **show critmon trace info** command in EXEC mode.

```
show critmon trace info [file filename original] [hexdump] [last entries] [reverse] [stats] [tailf]
[unique] [verbose] [wrapping] [location {node-id | all}]
```

Syntax Description	<p>file (Optional) Displays a specific file.</p> <p>filename Name of a specific file.</p> <p>original Specifies the original location of the file.</p> <p>hexdump (Optional) Displays traces in hexadecimal format.</p> <p>last (Optional) Displays the last numbered entries.</p> <p>entries Number of entries. The range is from 1 to 4294967295.</p> <p>reverse (Optional) Displays the latest traces first.</p> <p>stats (Optional) Displays the statistics.</p> <p>tailf (Optional) Displays the new traces as they are added.</p> <p>unique (Optional) Displays the unique entries with counts.</p> <p>verbose (Optional) Displays the information for internal debugging.</p> <p>wrapping (Optional) Displays the wrapping entries in the command output.</p> <p>location <i>node-id</i> (Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.</p> <p>location all Specifies all locations.</p>				
Command Default	No default behavior or values				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.6.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.6.0	This command was introduced.
Release	Modification				
Release 3.6.0	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>cisco-support</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	cisco-support	read
Task ID	Operations				
cisco-support	read				

Examples

The following shows how to use the **show critmon trace info** command:

```
RP/0/RP0/CPU0:router# show critmon trace info
```

Related Commands	Command	Description
	show critmon context, on page 440	Displays information about the context for the wd-critical-mon process.
	show critmon deadline, on page 444	Displays information about deadline monitoring.
	show critmon statistics, on page 446	Displays information about the critical monitor statistics.
	show critmon trace all, on page 454	Displays information about all traces for a critical monitor.
	show critmon trace error, on page 456	Displays information about error traces for a critical monitor.
	show critmon trace lib-error, on page 460	Displays information about the trace data for the library error for the critical monitor.
	show critmon trace lib-info, on page 462	Displays trace data for the library information for the critical monitor.

show critmon trace lib-error

show critmon trace lib-error

To display information about the trace data for the library error for the critical monitor, use the **show critmon trace lib-error** command in EXEC mode.

```
show critmon trace lib-error [file filename original] [hexdump] [last entries] [reverse] [stats]
[tailf] [unique] [verbose] [wrapping] [location {node-id | all}]
```

Syntax Description	
file	(Optional) Displays a specific file.
<i>filename</i>	Name of a specific file.
original	Specifies the original location of the file.
hexdump	(Optional) Displays traces in hexadecimal format.
last	(Optional) Displays the last numbered entries.
<i>entries</i>	Number of entries. The range is from 1 to 4294967295.
reverse	(Optional) Displays the latest traces first.
stats	(Optional) Displays the statistics.
tailf	(Optional) Displays the new traces as they are added.
unique	(Optional) Displays the unique entries with counts.
verbose	(Optional) Displays the information for internal debugging.
wrapping	(Optional) Displays the wrapping entries in the command output.
location <i>node-id</i>	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
location all	Specifies all locations.
Command Default	
No default behavior or values	
Command Modes	
EXEC mode	
Command History	
Release Modification	
Release 3.6.0 This command was introduced.	
Usage Guidelines	
No specific guidelines impact the use of this command.	
Task ID	
Task ID Operations	
cisco-support read	

Examples

The following shows how to use the **show critmon trace lib-error** command:

```
RP/0/RP0/CPU0:router# show critmon trace lib-error
```

Related Commands	Command	Description
	show critmon context, on page 440	Displays information about the context for the wd-critical-mon process.
	show critmon deadline, on page 444	Displays information about deadline monitoring.
	show critmon statistics, on page 446	Displays information about the critical monitor statistics.
	show critmon trace all, on page 454	Displays information about all traces for a critical monitor.
	show critmon trace error, on page 456	Displays information about error traces for a critical monitor.
	show critmon trace info, on page 458	Displays trace data for an information type for the critical monitor.
	show critmon trace lib-info, on page 462	Displays trace data for the library information for the critical monitor.

show critmon trace lib-info

show critmon trace lib-info

To display trace data for the library information for the critical monitor, use the **show critmon trace lib-info** command in EXEC mode.

```
show critmon trace lib-info [file filename original] [hexdump] [last entries] [reverse] [stats]
[tailf] [unique] [verbose] [wrapping] [location {node-id | all}]
```

Syntax Description	
file	(Optional) Displays a specific file.
<i>filename</i>	Name of a specific file.
original	Specifies the original location of the file.
hexdump	(Optional) Displays traces in hexadecimal format.
last	(Optional) Displays the last numbered entries.
<i>entries</i>	Number of entries. The range is from 1 to 4294967295.
reverse	(Optional) Displays the latest traces first.
stats	(Optional) Displays the statistics.
tailf	(Optional) Displays the new traces as they are added.
unique	(Optional) Displays the unique entries with counts.
verbose	(Optional) Displays the information for internal debugging.
wrapping	(Optional) Displays the wrapping entries in the command output.
location <i>node-id</i>	(Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
location all	(Optional) Specifies all locations.

Command Default No default behavior or values

Command Modes EXEC mode

Command History	Release	Modification
	Release 3.6.0	This command was introduced.
Usage Guidelines	No specific guidelines impact the use of this command.	
Task ID	Task ID	Operations
	cisco-support	read
Examples	The following example shows how to use the show critmon trace lib-info command:	
	<pre>RP/0/RP0/CPU0:router# show critmon trace lib-info</pre>	
Related Commands	Command	Description
	show critmon context, on page 440	Displays information about the context for the wd-critical-mon process.
	show critmon deadline, on page 444	Displays information about deadline monitoring.
	show critmon statistics, on page 446	Displays information about the critical monitor statistics.
	show critmon trace all, on page 454	Displays information about all traces for a critical monitor.
	show critmon trace error, on page 456	Displays information about error traces for a critical monitor.
	show critmon trace info, on page 458	Displays trace data for an information type for the critical monitor.
	show critmon trace lib-error, on page 460	Displays information about the trace data for the library error for the critical monitor.

show reboot first

show reboot first

To display reboot information for a node first, use the **show reboot first** command in EXEC mode.

show reboot first {crashinfo | syslog | trace} location node-id

Syntax Description	crashinfo Displays crash information. syslog Displays information for the system logs. trace Displays the log for the reboot trace. location Specifies a node. node-id Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.6.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.6.0	This command was introduced.
Release	Modification				
Release 3.6.0	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>system</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	system	read
Task ID	Operations				
system	read				
Examples	<p>The following example shows a sample output from the show reboot first command:</p> <pre>RP/0/RP0/CPU0:router# show reboot first syslog location 0/4/cpu0 Syslog Timestamp: Mon Jul 28 14:27:26 2008 DRP/0/4/CPU0:Jan 1 00:00:00.000 : wd-critical-mon[79]: HW Watchdog: disabled o. DRP/0/4/CPU0:Jan 1 00:00:00.000 : wd-critical-mon[79]: HW Watchdog: registratir DRP/0/4/CPU0:Jun 10 11:24:12.258 : init[65540]: %OS-INIT-7-MBI_STARTED : total DRP/0/4/CPU0:Jun 10 11:24:28.088 : insthelper[59]: %INSTALL-INSTHELPER-7-START_ DRP/0/4/CPU0:Jun 10 11:24:38.547 : insthelper[59]: %INSTALL-INSTHELPER-7-PKG_DO DRP/0/4/CPU0:Jun 10 11:25:40.345 : sysmgr[78]: %OS-SYSMGR-5-NOTICE : Card is CO DRP/0/4/CPU0:Jun 10 11:25:41.449 : init[65540]: %OS-INIT-7-INSTALL_READY : tota DRP/0/4/CPU0:Jun 10 11:25:42.360 : dsc[151]: Memory Sanity Check Enabled DRP/0/4/CPU0:Jun 10 11:25:44.790 : reddrv[297]: %PLATFORM=REDDRIV-5-GO_BID : Car DRP/0/4/CPU0:Jun 10 11:25:44.628 : syslog_dev[76]: reddrv[297]: DRP/0/4/CPU0:Jun 10 11:25:44.631 : syslog_dev[76]: reddrv[297]: reddrv: BID - D. DRP/0/4/CPU0:Jun 10 11:25:49.100 : reddrv[297]: %PLATFORM=REDDRIV-5-GO_ACTIVE : DRP/0/4/CPU0:Jun 10 11:25:49.099 : syslog_dev[76]: reddrv[297]:</pre>				

```

DRP/0/4/CPU0:Jun 10 11:25:49.099 : syslog_dev[76]: reddrv[297]: reddrv: ACTIVE e
DRP/0/4/CPU0:Jun 10 11:25:49.554 : syslog_dev[76]: reddrv[297]: reddrv: transitn
DRP/0/4/CPU0:Jun 10 11:25:49.555 : syslog_dev[76]: reddrv[297]: Reddrv: msg_sen0
DRP/0/4/CPU0:Jun 10 11:26:03.403 : gsp[178]: cci_pdma_queue_cltn_find: returnin
DRP/0/4/CPU0:Jun 10 11:26:03.413 : gsp[178]: cci_pdma_queue_cltn_find: returnin
DRP/0/4/CPU0:Jun 10 11:26:03.414 : gsp[178]: cci_pdma_queue_cltn_find: returnin
DRP/0/4/CPU0:Jun 10 11:26:03.414 : gsp[178]: cci_pdma_queue_cltn_find: returnin
DRP/0/4/CPU0:Jun 10 11:26:03.416 : gsp[178]: cci_pdma_queue_cltn_find: returnin
DRP/0/4/CPU0:Jun 10 11:26:03.416 : gsp[178]: cci_pdma_queue_cltn_find: returnin
DRP/0/4/CPU0:Jun 10 11:26:11.438 : tty_session_startup[339]: %MGBL-TTY-7-SESSIO
DRP/0/4/CPU0:Jun 10 11:26:19.464 : ingressq_spiller[228]: cci_interrupt_source_
DRP/0/4/CPU0:Jun 10 11:27:34.271 : fab_svr[180]: cci_pdma_queue_cltn_find: retu
DRP/0/4/CPU0:Jun 10 11:27:34.273 : fab_svr[180]: cci_pdma_queue_cltn_find: retu
DRP/0/4/CPU0:Jun 10 11:27:34.273 : fab_svr[180]: cci_pdma_queue_cltn_find: retu
DRP/0/4/CPU0:Jun 10 11:27:42.764 : ntpd[207]: %ROUTING-NTPD-5-PEER_CLEAR : NTP
DRP/0/4/CPU0:Jun 10 11:28:09.784 : upgrade_daemon[344]: %PLATFORM-UPGRADE_FPD-4
DRP/0/4/CPU0:Jun 10 20:29:41.288 : cfgmgr_rp[131]: %MGBL-CONFIG-6-OIR_RESTORE :
DRP/0/4/CPU0:Jun 10 20:29:41.315 : ifmgr[186]: %PKT_INFRA-LINK-3-UPDOWN : Inter
DRP/0/4/CPU0:Jun 10 20:29:41.318 : ifmgr[186]: %PKT_INFRA-LINEPROTO-5-UPDOWN :
DRP/0/4/CPU0:Jun 10 20:29:41.322 : ifmgr[186]: %PKT_INFRA-LINK-3-UPDOWN : Inter
DRP/0/4/CPU0:Jun 10 20:29:41.346 : ifmgr[186]: %PKT_INFRA-LINEPROTO-5-UPDOWN :
DRP/0/4/CPU0:Jun 10 20:31:14.945 : ntpd[207]: %ROUTING-NTPD-5-PEER_CLEAR : NTP
DRP/0/4/CPU0:Jun 10 20:31:14.945 : ntpd[207]: %ROUTING-NTPD-5-SYNC_LOSS : Synch
DRP/0/4/CPU0:Jun 10 20:31:14.945 : ntpd[207]: %ROUTING-NTPD-5-SYNC_LOSS : Synch
DRP/0/4/CPU0:Jun 10 21:07:53.108 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_NOTIFICATIO
DRP/0/4/CPU0:Jun 10 21:07:53.831 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_FINISHED :
DRP/0/4/CPU0:Jun 10 21:08:57.338 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_NOTIFICATIO
DRP/0/4/CPU0:Jun 10 21:08:59.532 : ipsec_pp[370]: %SECURITY-IPP-3-ERR_GENERAL :
DRP/0/4/CPU0:Jun 10 21:09:02.595 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_FINISHED :
DRP/0/4/CPU0:Jun 10 21:10:05.382 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_NOTIFICATIO
DRP/0/4/CPU0:Jun 10 21:10:05.617 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_FINISHED :
DRP/0/4/CPU0:Jun 10 21:11:13.092 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_NOTIFICATIO
DRP/0/4/CPU0:Jun 10 21:11:13.264 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_FINISHED :
DRP/0/4/CPU0:Jun 10 21:12:13.803 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_NOTIFICATIO
DRP/0/4/CPU0:Jun 10 21:12:14.087 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_FINISHED :
DRP/0/4/CPU0:Jun 10 21:12:59.508 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_NOTIFICATIO
DRP/0/4/CPU0:Jun 10 21:13:01.213 : sbc[376]: %SERVICES-SBC_PROC-6-INFO : SBC_IN
DRP/0/4/CPU0:Jun 10 21:13:01.380 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_FINISHED :
DRP/0/4/CPU0:Jun 10 21:14:06.104 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_NOTIFICATIO
DRP/0/4/CPU0:Jun 10 21:14:06.278 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_FINISHED :
DRP/0/4/CPU0:Jun 10 21:15:10.415 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_NOTIFICATIO
DRP/0/4/CPU0:Jun 10 21:15:11.174 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_FINISHED :
DRP/0/4/CPU0:Jun 10 21:16:30.297 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_NOTIFICATIO
DRP/0/4/CPU0:Jun 10 21:16:35.848 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_FINISHED :
DRP/0/4/CPU0:Jun 10 21:34:13.005 : sbc[376]: %SERVICES-SBCSVI_BILLING-5-PATHSTA
DRP/0/4/CPU0:Jun 10 21:34:13.091 : sbc[376]: %SERVICES-SBCSVI_BILLING-5-PATHSTA
DRP/0/4/CPU0:Jun 10 21:34:13.351 : squid_sbcmpf[379]: %SERVICES-SBC_MPF-6-INFO
DRP/0/4/CPU0:Jun 10 21:34:13.966 : sbcsvi_ea[377]: %SERVICES-SBCSVI_EA-3-LINK_F
DRP/0/4/CPU0:Jun 10 21:58:04.777 : syslog_dev[76]: debug_d[143]: sysdb_find fai'

DRP/0/4/CPU0:Jun 10 21:58:04.892 : sysmgr[78]: debug_d(1) (jid 143) (pid 86082)d
DRP/0/4/CPU0:Jun 10 21:58:05.537 : syslog_dev[76]: debug_d[143]: sysdb_find fai'
DRP/0/4/CPU0:Jun 10 21:58:05.646 : sysmgr[78]: debug_d(1) (jid 143) (pid 147522d
DRP/0/4/CPU0:Jun 13 16:40:50.173 : exec[65690]: %SECURITY-login-6-AUTHEN_SUCCES
DRP/0/4/CPU0:Jun 13 16:41:45.619 : syslog_dev[76]: debug_d[143]: sysdb_find fai'

DRP/0/4/CPU0:Jun 13 16:41:45.745 : sysmgr[78]: debug_d(1) (jid 143) (pid 151618d

```

show reboot first

```

DRP/0/4/CPU0:Jun 13 16:41:46.114 : syslog_dev[76]: debug_d[143]: sysdb_find fai'
DRP/0/4/CPU0:Jun 13 16:41:46.254 : sysmgr[78]: debug_d(1) (jid 143) (pid 458818d
DRP/0/4/CPU0:Jun 13 16:41:51.266 : devc-conaux[54]: %MGBL-RS232-6-DCD_LOST : Lo
DRP/0/4/CPU0:Jun 13 16:42:01.265 : devc-conaux[54]: %MGBL-RS232-6-DCD_DISCOVERE
DRP/0/4/CPU0:Jun 17 13:01:10.557 : pfilter_ma[200]: Entering : timer_msg_hndl
DRP/0/4/CPU0:Jun 17 13:01:10.559 : pfilter_ma[200]: Entering : acl_es_get_log_i
DRP/0/4/CPU0:Jun 17 13:01:10.559 : pfilter_ma[200]: In acl_es_get_log_info coun0
DRP/0/4/CPU0:Jun 17 13:02:10.555 : pfilter_ma[200]: Entering : timer_msg_hndl
DRP/0/4/CPU0:Jun 17 13:02:10.555 : pfilter_ma[200]: Entering : acl_es_get_log_i
DRP/0/4/CPU0:Jun 17 13:02:10.555 : pfilter_ma[200]: In acl_es_get_log_info coun0
DRP/0/4/CPU0:Jun 17 13:03:10.555 : pfilter_ma[200]: Entering : timer_msg_hndl
DRP/0/4/CPU0:Jun 17 13:03:10.555 : pfilter_ma[200]: Entering : acl_es_get_log_i
DRP/0/4/CPU0:Jun 17 13:03:10.555 : pfilter_ma[200]: In acl_es_get_log_info coun0
DRP/0/4/CPU0:Jun 17 13:04:10.555 : pfilter_ma[200]: Entering : timer_msg_hndl
DRP/0/4/CPU0:Jun 17 13:04:10.555 : pfilter_ma[200]: Entering : acl_es_get_log_i
DRP/0/4/CPU0:Jun 17 13:04:10.555 : pfilter_ma[200]: In acl_es_get_log_info coun0
DRP/0/4/CPU0:Jul 12 16:12:05.932 : ifmgr[186]: %PKT_INFRA-LINK-3-UPDOWN : Inter
DRP/0/4/CPU0:Jul 12 16:12:05.932 : ifmgr[186]: %PKT_INFRA-LINEPROTO-5-UPDOWN :
DRP/0/4/CPU0:Jul 12 16:12:07.703 : ifmgr[186]: %PKT_INFRA-LINK-3-UPDOWN : Inter
DRP/0/4/CPU0:Jul 12 16:12:07.708 : ifmgr[186]: %PKT_INFRA-LINEPROTO-5-UPDOWN :
DRP/0/4/CPU0:Jul 28 10:21:49.239 : sbc[376]: %SERVICES-SBC_PROC-6-INFO : SBC_IN
DRP/0/4/CPU0:Jul 28 10:21:56.836 : squid_sbcmpf[379]: zmpf_heartbeat_work: Peer
DRP/0/4/CPU0:Jul 28 14:22:26.643 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_NOTIFICATIO
DRP/0/4/CPU0:Jul 28 14:22:31.778 : sysmgr[78]: %OS-SYSMGR-7-INSTALL_FINISHED :

```

Related Commands

Command	Description
show reboot graceful, on page 467	Displays reboot information for the last graceful reboot for a node.
show reboot history, on page 468	Displays reboot information for the last graceful reboot.
show reboot last, on page 470	Displays the latest crash information.
show reboot pcds, on page 473	Displays Persistent Critical Data Store critical information for the last ungraceful reboot.

show reboot graceful

To display reboot information for the last graceful reboot for a node, use the **show reboot graceful** command in EXEC mode.

show reboot graceful location *node-id*

Syntax Description

location Specifies a node.

node-id Node ID. The *node-id* argument is entered in the *rack/slot/module* notation.

Command Modes

EXEC mode

Command History

Release	Modification
---------	--------------

Release 3.6.0 This command was introduced.

Usage Guidelines

No specific guidelines impact the use of this command.

Task ID

Task ID	Operations
---------	------------

system read

Examples

The following sample output is from the **show reboot graceful** command:

```
RP/0/RP0/CPU0:router# show reboot graceful location 0/1/CPU0
Reboot Time : Thu Oct 11 19:15:55 2007
Reboot Cause : 0x4f
Reboot Reason: Cause: HBAgent reloading node on receiving reload notification 0
Trace log    :
[0x46ad85b7b5] Map ingressq PCI base address.ingressq_phy_base = 0xa0000000, in0
[0x46ad8af9ba] Perform Node isolation from Fabric. ingressq_phy_base = 0xa000008
[0x46ad8afe88] Complete Kernel dumper platform task without dumping. rc: 0
```

Related Commands

Command	Description
show reboot first, on page 464	Displays reboot information for a node first.
show reboot history, on page 468	Displays reboot information for the last graceful reboot.
show reboot last, on page 470	Displays the latest crash information.
show reboot pcds, on page 473	Displays Persistent Critical Data Store critical information for the last ungraceful reboot.

show reboot history

show reboot history

To display reboot information for the last graceful reboot, use the show reboot history command in EXEC mode.

show reboot history [reverse] location node-id

Syntax Description	reverse (Optional) Displays the reverse in chronological order. location Specifies a node. node-id Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.6.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.6.0	This command was introduced.
Release	Modification				
Release 3.6.0	This command was introduced.				
Usage Guidelines	The reboot history shows all reboot causes that is stored for the previous node resets.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>system read</td><td></td></tr> </tbody> </table>	Task ID	Operations	system read	
Task ID	Operations				
system read					

Examples	The following sample output is from the show reboot history command:
	<pre>RP/0/RP0/CPU0:router# show reboot history location 0/1/CPU0 No Time Cause Code Reason ----- 01 Mon Jul 30 19:27:05 2007 0x2000004f Cause: MBI-HELLO reloading node on rec eiving reload notification Process: mbi-hello Traceback: fc15b1a0 fc15b290 482 0020c fc1d5fb0 0 0 02 Thu Aug 16 16:32:35 2007 0x21000106 Cause: All fabric links down on Fabric q Process: fabricq_mgr Traceback: fc15b1a0 fc15b290 fc9 9ded4 fc99ae00 fc99afffc fc99affc 03 Thu Aug 16 17:05:20 2007 0x2000004f Cause: MBI-HELLO reloading node on rec eiving reload notification Process: mbi-hello Traceback: fc15b1a0 fc15b290 482 0020c fc1d5fb0 0 0 04 Mon Sep 10 21:01:34 2007 0x21000106 Cause: All fabric links down on Fabric q</pre>

```

Process: fabriccq_mgr

Traceback: fc15b1a0 fc15b290 fc9
a3f00 fc9a0e10 fc9a100c fc9a100c
Cause: MBI-HELLO reloading node on rec
eiving reload notification
    Process: mbi-hello

Traceback: fc1601a0 fc160290 482
0020c fc1dcfb0 0 0
Cause: All fabric links down on Fabric
q
    Process: fabriccq_mgr

Traceback: fc1601a0 fc160290 fc9
d9f48 fc9d6e58 fc9d7054 fc9d7054
Cause: MBI-HELLO reloading node on rec
eiving reload notification
    Process: mbi-hello

Traceback: fc160c38 fc160d34 482
0020c fc1ddfb0 0 0
Cause: HBAgent reloading node on recei
ving reload notification
    Process: hbagent

Traceback: fc160c38 fc160d34 482
00228 fc1ddfb0 0 0
Cause: HBAgent reloading node on recei
ving reload notification
    Process: hbagent

Traceback: fc160c38 fc160d34 482
00228 fc1ddfb0 0 0
Cause: HBAgent reloading node on recei
ving reload notification
    Process: hbagent

Traceback: fc160c38 fc160d34 482
00228 fc1ddfb0 0 0

```

Related Commands

Command	Description
show reboot first, on page 464	Displays reboot information for a node first.
show reboot graceful, on page 467	Displays reboot information for the last graceful reboot for a node.
show reboot last, on page 470	Displays the latest crash information.
show reboot pcds, on page 473	Displays Persistent Critical Data Store critical information for the last ungraceful reboot.

show reboot last

show reboot last

To display the latest crash information, use the **show reboot last** command in EXEC mode.

show reboot last {crashinfo | syslog | trace} location node-id

Syntax Description	crashinfo Displays crash information. syslog Displays information for the system logs. trace Displays the log for the reboot trace. location Specifies a node. node-id Node ID. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Release 3.6.0</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Release 3.6.0	This command was introduced.
Release	Modification				
Release 3.6.0	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th><th>Operations</th></tr> </thead> <tbody> <tr> <td>system</td><td>read</td></tr> </tbody> </table>	Task ID	Operations	system	read
Task ID	Operations				
system	read				

Examples	The following sample output is from the show reboot last command:
	<pre>RP/0/RP0/CPU0:router# show reboot last crashinfo location 0/1/CPU0 Crashinfo Timestamp: Wed Oct 10 19:04:02 2007 20071010 10:04:03 Crash Reason: Cause code 0x2000004f Cause: MBI-HELLO reloading node on receivin0 Exception at 0xfc160f60 signal 5 c=1 f=3 Active process(s): pkg/bin/mbi-hello Thread ID 2 on cpu 0 REGISTER INFO r0 r1 r2 r3 R0 2000004f 4815da60 4820ea44 00000138 r4 r5 r6 r7 R4 4815da38 00000002 4815da48 00000001 r8 r9 r10 r11</pre>

R8	80000000	60277440	4815da28	00000600
	r12	r13	r14	r15
R12	24000094	4820ea00	00000000	00000000
	r16	r17	r18	r19
R16	00000000	00000000	00000000	00000000
	r20	r21	r22	r23
R20	00000000	00000000	00000000	00000000
	r24	r25	r26	r27
R24	00000000	00000000	00000000	482053cc
	r28	r29	r30	r31
R28	4815df7c	4815db68	0000004f	00000009
	cnt	lr	msr	pc
R32	fc1e800c	fc160f38	0002d932	fc160f60
	cnd	xer		
R36	48000094	2000000f		

SUPERVISOR REGISTERS

Memory Management Registers

Instruction BAT Registers

Index #	Value
IBAT0U #	0x1ffe
IBAT0L #	0x12
IBAT1U #	0
IBAT1L #	0
IBAT2U #	0x30000ffe
IBAT2L #	0xf0000032
IBAT3U #	0
IBAT3L #	0

Data BAT Registers

Index #	Value
DBAT0U #	0x1ffe
DBAT0L #	0x12
DBAT1U #	0
DBAT1L #	0x10000012
DBAT2U #	0x30000ffe
DBAT2L #	0xf000006a
DBAT3U #	0
DBAT3L #	0xf0000022

Segment Registers

Index #	SR-Value
0 #	0
1 #	0
2 #	0
3 #	0
4 #	0
5 #	0
6 #	0
7 #	0
8 #	0
9 #	0
10 #	0
11 #	0
12 #	0
13 #	0
14 #	0
15 #	0

show reboot last

```

        Exception Handling Registers
Data Addr Reg #          DSISR
 0x60277440 #           0x42000000
SPRG0 #      SPRG1 #      SPRG2 #      SPRG3
0x4815db68 #      0x4f #      0x9 #      0
SaveNRestore SRR0 #      SaveNRestore SRR1
 0xfc160f5c #           0x2d932

        Miscellaneous Registers
Processor Id Reg #          0
  HID0 #           0x8410c0bc
  HID1 #           0x90018c80

MSSCR0 #           0x88000
MSSSR0 #           0

STACK TRACE
#0 0xfc160f38
 0

STACK TRACE
#0 0xfc160290
#1 0xfc99ded4
#2 0xfc99ae00
#3 0xfc99affc
#4 0xfc99affc
#5 0xfc99bccc
#6 0xfc646548
#7 0xfc63f074
#8 0xfc16a404
#9 0xfc1688d8
#10 0xfc63f3bc
#11 0xfc1d5fb0

```

Related Commands	Command	Description
	show reboot first, on page 464	Displays reboot information for a node first.
	show reboot graceful, on page 467	Displays reboot information for the last graceful reboot for a node.
	show reboot history, on page 468	Displays reboot information for the last graceful reboot.
	show reboot pcds, on page 473	Displays Persistent Critical Data Store critical information for the last ungraceful reboot.

show reboot pcds

To display Persistent Critical Data Store (PCDS) critical information for the last ungraceful reboot, use the **show reboot pcds** command in EXEC mode.

show reboot pcds location node-id

Syntax Description

location Specifies a node.

node-id Node ID. The *node-id* argument is entered in the *rack/slot/module* notation.

Command Modes

EXEC mode

Command History

Release	Modification
---------	--------------

Release 3.6.0 This command was introduced.

Usage Guidelines

No specific guidelines impact the use of this command.

Task ID

Task ID	Operations
---------	------------

system read

Examples

The following example shows some sample output from the **show reboot pcds** command:

```
RP/0/RP0/CPU0:router# show reboot pcds location 0/1/CPU0

PCDS Timestamp: Wed Oct 10 19:04:02 2007
PCDS size: 131072 (bytes)
PCDS Data:

000000 03014352 49544d4f 4e000000 00000000 ..CRITMON.....
000010 02000000 00000008 00000000 30d00000 .....0...
000020 00001a90 00000000 00000000 00000000 .....
000030 0b0f0b0f 13911300 b8000013 b8000017 .....
000040 470ca354 11000300 00001c41 00000000 G..T.....A....
000050 00000974 00000000 30464fe4 ffffff00 ...t....0FO....
000060 b8000003 b8000007 b8000003 b8000007 .....
000070 0b0f0b0f 13911300 b8000013 b8000017 .....
000080 470ca354 01000300 00001c44 00000000 G..T.....D....
000090 00000975 00000000 30464fe4 ffffff00 ...u....0FO....
0000a0 b8000003 b8000007 b8000003 b8000007 .....
0000b0 0b0f0b0f 13911300 b8000013 b8000017 .....
0000c0 470ca355 11000300 00001c47 00000000 G..U.....G....
0000d0 00000976 00000000 30464fe4 ffffff00 ...v....0FO....
0000e0 b8000003 b8000007 b8000003 b8000007 .....
0000f0 0b0f0b0f 13911300 b8000013 b8000017 .....
000100 470ca355 01000300 00001c4a 00000000 G..U.....J....
000110 00000977 00000000 30464fe4 ffffff00 ...w....0FO....
000120 b8000003 b8000007 b8000003 b8000007 .....
```

show reboot pcds

```

000130 0b0f0b0f 13911300 b8000013 b8000017 ..... .
000140 470ca356 11000300 00001c4d 00000000 G..V.....M...
000150 00000978 00000000 30464fe4 ffffff00 ...x....OFO...
000160 b8000003 b8000007 b8000003 b80000ff ..... .
000170 0bff0bff 13911300 b8000013 b8000017 ..... .
000180 470ca357 01000300 00001c50 00000000 G..W.....P...
000190 00000979 00000000 30464fe4 ffffff00 ...y....OFO...
0001a0 b8000003 b8000007 b80000ff b8000007 ..... .
0001b0 ff0fff0f ff911300 b8000013 b8000017 ..... .
0001c0 470ca357 11000300 00001c53 00000000 G..W.....S...
0001d0 0000097a 00000000 30464fe4 ffffff00 ...z....OFO...
0001e0 b8000003 b8000007 b80000ff b8000007 ..... .
0001f0 ff0fff0f ff911300 b8000013 b80000ff ..... .
000200 470ca358 01000300 00001c56 00000000 G..X.....V...
000210 0000097b 00000000 30464fe4 ffffff00 ...{....OFO...
000220 b8000003 b8000007 b80000ff b8000007 ..... .
000230 ff0fff0f ff911300 b8000013 b80000ff ..... .
000240 470ca358 11000300 00001c59 00000000 G..X.....Y...
000250 0000097c 00000000 30464fe4 ffffff00 ...|....OFO...
000260 b8000003 b8000007 b80000ff b8000007 ..... .
000270 ff0fff0f ff911300 b8000013 b80000ff ..... .
000280 470ca359 01000300 00001c5c 00000000 G..Y.....\...
000290 0000097d 00000000 30464fe4 ffffff00 ...}....OFO...
0002a0 b8000003 b8000007 b8000003 b8000007 ..... .
0002b0 0b0f0b0f 13911300 b8000013 b8000017 ..... .
0002c0 470ca35a 11000300 00001c5f 00000000 G..Z....._
0002d0 0000097e 00000000 30464fe4 ffffff00 ...~....OFO...
0002e0 b8000003 b8000007 b8000003 b8000007 ..... .
0002f0 0b0f0b0f 13911300 b8000013 b8000017 ..... .
000300 470ca35a 01000300 00001c62 00000000 G..Z.....b...
000310 0000097f 00000000 30464fe4 ffffff00 .....OFO...
000320 b8000003 b8000007 b8000003 b8000007 ..... .
000330 0b0f0b0f 13911300 b8000013 b8000017 ..... .
000340 470ca35b 11000300 00001c65 00000000 G..[.....e...
000350 00000980 00000000 30464fe4 ffffff00 .....OFO...
000360 b8000003 b8000007 b8000003 b8000007 ..... .
000370 0b0fff0f 13911300 b8000013 b8000017 ..... .
000380 470ca35b 01000300 00001c68 00000000 G..[.....h...
000390 00000981 00000000 30464fe4 ffffff00 .....OFO...
0003a0 b80000ff b80000ff b8000003 b80000ff ..... .
0003b0 0bfff0bff 13911300 b80000ff b8000017 ..... .
0003c0 470ca35c 11000300 00001c6b 00000000 G..\\.....k...
0003d0 00000982 00000000 30464fe4 ffffff00 .....OFO...
0003e0 b8000003 b8000007 b8000003 b8000007 ..... .
0003f0 0b0f0b0f 13911300 b8000013 b8000017 ..... .
000400 470ca35d 01000300 00001c6e 00000000 G..].....n...
000410 00000983 00000000 30464fe4 ffffff00 .....OFO...
000420 b8000003 b8000007 b8000003 b8000007 ..... .
000430 0b0f0b0f 13911300 b8000013 b8000017 ..... .
000440 470ca35d 11000300 00001c71 00000000 G..].....q...
000450 00000984 00000000 30464fe4 ffffff00 .....OFO...
000460 b8000003 b8000007 b8000003 b8000007 ..... .
000470 0b0f0b0f 13911300 b8000013 b8000017 ..... .
000480 470ca35e 01000300 00001c74 00000000 G..^.....t...
000490 00000985 00000000 30464fe4 ffffff00 .....OFO...
0004a0 b8000003 b8000007 b8000003 b8000007 ..... .
0004b0 0b0f0b0f 13911300 b8000013 b8000017 ..... .
0004c0 470ca35e 11000300 00001c77 00000000 G..^.....w...
0004d0 00000986 00000000 30464fe4 ffffff00 .....OFO...
0004e0 b8000003 b8000007 b8000003 b8000007 ..... .
0004f0 0b0f0b0f 13911300 b8000013 b8000017 ..... .
000500 470ca35f 01000300 00001c7a 00000000 G.._.....z...
000510 00000987 00000000 30464fe4 ffffff00 .....OFO...
000520 b8000003 b8000007 b8000003 b8000007 ..... .

```

```

000530 0b0f0b0f 13911300 b8000013 b8000017 .....
000540 470ca360 11000300 00001c7d 00000000 G..`.....}....
000550 00000988 00000000 30464fe4 ffffff00 .....OFO.....
000560 b8000003 b8000007 b8000003 b8000007 .....
000570 0b0f0b0f 13911300 b8000013 b8000017 .....
000580 470ca360 01000300 00001c80 00000000 G..`.....}....
000590 00000989 00000000 30464fe4 ffffff00 .....OFO.....
0005a0 b8000003 b8000007 b8000003 b8000007 .....
0005b0 0b0f0b0f 13911300 b8000013 b8000017 .....
0005c0 470ca361 11000300 00001c83 00000000 G..a.....
0005d0 0000098a 00000000 30464fe4 ffffff00 .....OFO.....
0005e0 b8000003 b8000007 b8000003 b8000007 .....
0005f0 0b0f0b0f 13911300 b8000013 b8000017 .....
000600 470ca361 01000300 00001c86 00000000 G..a.....
000610 0000098b 00000000 30464fe4 ffffff00 .....OFO.....
000620 b8000003 b8000007 b8000003 b8000007 .....
000630 0b0f0b0f 13911300 b8000013 b8000017 .....
000640 470ca362 11000300 00001c89 00000000 G..b.....
000650 0000098c 00000000 30464fe4 ffffff00 .....OFO.....
000660 b8000003 b8000007 b8000003 b8000007 .....
000670 0b0f0b0f 13911300 b8000013 b8000017 .....
000680 470ca363 01000300 00001c8c 00000000 G..c.....
000690 0000098d 00000000 30464fe4 ffffff00 .....OFO.....
0006a0 b8000003 b8000007 b8000003 b8000007 .....
0006b0 0b0f0b0f 13911300 b8000013 b8000017 .....
0006c0 470ca363 11000300 00001c8f 00000000 G..c.....
0006d0 0000098e 00000000 30464fe4 ffffff00 .....OFO.....

```

Related Commands	Command	Description
	show reboot first, on page 464	Displays reboot information for a node first.
	show reboot graceful, on page 467	Displays reboot information for the last graceful reboot for a node.
	show reboot history, on page 468	Displays reboot information for the last graceful reboot.
	show reboot last, on page 470	Displays the latest crash information.

show watchdog

show watchdog

To display information about the memory state or threshold memory, use the **show watchdog** command in EXEC mode.

show watchdog [{memory-state | threshold memory configured}] [location node-id]

Syntax Description	memory-state threshold memory configured location node-id	(Optional) Displays the memory state. (Optional) Displays the memory thresholds. Displays the configured memory thresholds. (Optional) Specifies a node. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation. The location node-id keyword and argument must be specified if the threshold memory keywords are selected.
Command Default	The command output is not compressed.	
Command Modes	EXEC mode	
Command History	Release	Modification
	Release 2.0 This command was introduced.	
Usage Guidelines	Use the show watchdog command to display information about the memory states or thresholds for a specified location. You can display the default or configured memory thresholds.	
Task ID	Task ID	Operations
	basic-services read	

Examples The following sample output is from the **show watchdog** command:

```
RP/0/RP0/CPU0:router# show watchdog memory-state
Wed Nov 4 00:18:59.575 UTC
Memory information:
  Physical Memory: 4096      MB
  Free Memory:     2623.671 MB
```

Memory State: Normal

Related Commands

Command	Description
watchdog threshold memory	Configures the value of memory available for each alarm threshold.

show watchdog