

NAT オーバーロードと Cisco Secure VPN Client を使用する IPSec Router-to-Router の設定

内容

[概要](#)

[前提条件](#)

[要件](#)

[使用するコンポーネント](#)

[表記法](#)

[設定](#)

[ネットワーク図](#)

[設定](#)

[確認](#)

[トラブルシューティング](#)

[トラブルシューティングのためのコマンド](#)

[関連情報](#)

概要

この設定例では、Light の後方のネットワークから House の後方のネットワーク (192.168.100.x ネットワークから 192.168.200.x ネットワーク) へのトラフィックが暗号化されます。ネットワークアドレス変換 (NAT) オーバーロードも行われます。ワイルドカード、事前共有キー、モード設定を使用した Light への暗号化 VPN Client 接続が許可されています。インターネットへのトラフィックは変換されますが、暗号化されません。

前提条件

要件

このドキュメントに特有の要件はありません。

使用するコンポーネント

このドキュメントの情報は、次のソフトウェアとハードウェアのバージョンに基づいています。

- Cisco IOS® ソフトウェア リリース 12.2.7 および 12.2.8T
- Cisco Secure VPN Client 1.1 (IRE クライアントの [Help] > [About] メニューでは 2.1.12 と表示されます)
- Cisco 3600 ルータ注 : この種のVPNシナリオでCisco 2600シリーズルータを使用する場合は、ルータにクリプトIPsec VPN IOSイメージをインストールする必要があります。

このドキュメントの情報は、特定のラボ環境にあるデバイスに基づいて作成されました。このドキュメントで使用するすべてのデバイスは、初期（デフォルト）設定の状態から起動しています。対象のネットワークが稼働中である場合には、どのようなコマンドについても、その潜在的な影響について確実に理解しておく必要があります。

表記法

ドキュメント表記の詳細は、『[シスコテクニカルティップスの表記法](#)』を参照してください。


設定

このセクションでは、このドキュメントで説明する機能を設定するために必要な情報を提供しています。

注：このドキュメントで使用されているコマンドの詳細を調べるには、[Command Lookup Tool](#)（[登録ユーザ専用](#)）を使用してください。

ネットワーク図

このドキュメントでは、次のネットワーク セットアップを使用します。

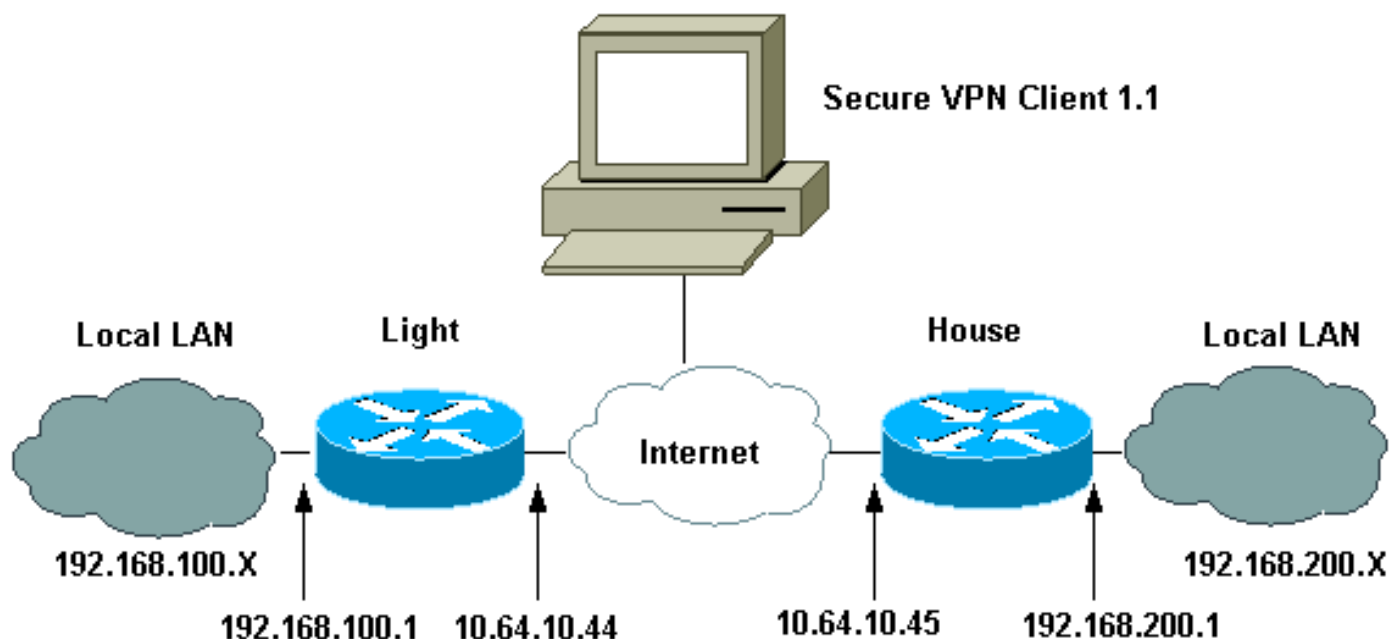

設定

このドキュメントでは次の設定を使用します。

- [Light の設定](#)
- [House の設定](#)
- [VPN Client の設定](#)

Light の設定

Current configuration : 2047 bytes

```
!  
version 12.2  
service timestamps debug uptime  
service timestamps log uptime  
no service password-encryption  
!  
hostname Light  
!  
boot system flash:c3660-ik9o3s-mz.122-8T  
!  
ip subnet-zero  
!  
ip audit notify log  
ip audit po max-events 100  
ip ssh time-out 120  
ip ssh authentication-retries 3  
!  
!--- IPsec Internet Security Association and !--- Key  
Management Protocol (ISAKMP) policy. crypto isakmp  
policy 5  
  hash md5  
  authentication pre-share  
!--- ISAKMP key for static LAN-to-LAN tunnel !---  
without extended authenticaton (xauth). crypto isakmp  
key cisco123 address 10.64.10.45 no-xauth  
!--- ISAKMP key for the dynamic VPN Client. crypto  
isakmp key 123cisco address 0.0.0.0 0.0.0.0  
!--- Assign the IP address to the VPN Client. crypto  
isakmp client configuration address-pool local test-pool  
!  
!  
!  
crypto ipsec transform-set testset esp-des esp-md5-hmac  
!  
crypto dynamic-map test-dynamic 10  
  set transform-set testset  
!  
!  
!--- VPN Client mode configuration negotiation, !---  
such as IP address assignment and xauth. crypto map test  
client configuration address initiate  
  crypto map test client configuration address respond  
!--- Static crypto map for the LAN-to-LAN tunnel. crypto  
map test 5 ipsec-isakmp  
  set peer 10.64.10.45  
  set transform-set testset  
!--- Include the private network-to-private network  
traffic !--- in the encryption process. match address  
115  
!--- Dynamic crypto map for the VPN Client. crypto map  
test 10 ipsec-isakmp dynamic test-dynamic  
!  
  
call rsvp-sync  
!  
!  
!  
!  
!  
!  
fax interface-type modem  
mta receive maximum-recipients 0  
!  
controller E1 2/0
```

```
!  
!  
!  
interface FastEthernet0/0  
 ip address 10.64.10.44 255.255.255.224  
 ip nat outside  
 duplex auto  
 speed auto  
 crypto map test  
!  
interface FastEthernet0/1  
 ip address 192.168.100.1 255.255.255.0  
 ip nat inside  
 duplex auto  
 speed auto  
!  
interface BRI4/0  
 no ip address  
 shutdown  
!  
interface BRI4/1  
 no ip address  
 shutdown  
!  
interface BRI4/2  
 no ip address  
 shutdown  
!  
interface BRI4/3  
 no ip address  
 shutdown  
!  
 !--- Define the IP address pool for the VPN Client. ip  
local pool test-pool 192.168.1.1 192.168.1.254  
 !--- Exclude the private network and VPN Client !---  
traffic from the NAT process. ip nat inside source  
route-map nonat interface FastEthernet0/0 overload  
 ip classless  
 ip route 0.0.0.0 0.0.0.0 10.64.10.33  
 ip http server  
 ip pim bidir-enable  
!  
 !--- Exclude the private network and VPN Client !---  
traffic from the NAT process. access-list 110 deny ip  
192.168.100.0 0.0.0.255 192.168.200.0 0.0.0.255  
 access-list 110 deny ip 192.168.100.0 0.0.0.255  
192.168.1.0 0.0.0.255  
 access-list 110 permit ip 192.168.100.0 0.0.0.255 any  
 !--- Include the private network-to-private network  
traffic !--- in the encryption process. access-list 115  
permit ip 192.168.100.0 0.0.0.255 192.168.200.0  
0.0.0.255  
!  
 !--- Exclude the private network and VPN Client !---  
traffic from the NAT process. route-map nonat permit 10  
 match ip address 110  
!  
!  
dial-peer cor custom  
!  
!  
!  
!  
!  
!
```

```
line con 0
line 97 108
line aux 0
line vty 0 4
!
end
```

House の設定

```
Current configuration : 1689 bytes
!
version 12.2
service timestamps debug uptime
service timestamps log uptime
no service password-encryption
!
hostname house
!
boot system flash:c3660-jk8o3s-mz.122-7.bin
!
ip subnet-zero
!
!
no ip domain-lookup
!
ip audit notify log
ip audit po max-events 100
ip ssh time-out 120
ip ssh authentication-retries 3
!
!--- IPsec ISAKMP policy. crypto isakmp policy 5
  hash md5
  authentication pre-share
!--- ISAKMP key for static LAN-to-LAN tunnel without
xauth authenticaton. crypto isakmp key cisco123 address
10.64.10.44 no-xauth
!
!
crypto ipsec transform-set testset esp-des esp-md5-hmac
!
!--- Static crypto map for the LAN-to-LAN tunnel. crypto
map test 5 ipsec-isakmp
  set peer 10.64.10.44
  set transform-set testset
!--- Include the private network-to-private network
traffic !--- in the encryption process. match address
115
!
call rsvp-sync
cns event-service server
!
!
!
!
!
fax interface-type modem
mta receive maximum-recipients 0
!
!
!
interface FastEthernet0/0
  ip address 10.64.10.45 255.255.255.224
  ip nat outside
```

```
duplex auto
speed auto
crypto map test
!
interface FastEthernet0/1
ip address 192.168.200.1 255.255.255.0
ip nat inside
duplex auto
speed auto
!
interface BRI2/0
no ip address
shutdown
!
interface BRI2/1
no ip address
shutdown
!
interface BRI2/2
no ip address
shutdown
!
interface BRI2/3
no ip address
shutdown
!
interface FastEthernet4/0
no ip address
shutdown
duplex auto
speed auto
!
!--- Exclude the private network traffic !--- from the
dynamic (dynamic association to a pool) NAT process. ip
nat inside source route-map nonat interface
FastEthernet0/0 overload
ip classless
ip route 0.0.0.0 0.0.0.0 10.64.10.33
no ip http server
ip pim bidir-enable
!
!--- Exclude the private network traffic from the NAT
process. access-list 110 deny ip 192.168.200.0
0.0.0.255 192.168.100.0 0.0.0.255
access-list 110 permit ip 192.168.200.0 0.0.0.255 any
!--- Include the private network-to-private network
traffic !--- in the encryption process. access-list 115
permit ip 192.168.200.0 0.0.0.255 192.168.100.0
0.0.0.255
!--- Exclude the private network traffic from the NAT
process. route-map nonat permit 10
match ip address 110
!
!
!
dial-peer cor custom
!
!
!
!
!
line con 0
line aux 0
line vty 0 4
```

```
login
!  
end
```

VPN Client の設定

```
Network Security policy:  
  1- TOLIGHT  
  My Identity  
  Connection security: Secure  
  Remote Party Identity and addressing  
  ID Type: IP subnet  
  192.168.100.0  
  255.255.255.0  
  Port all Protocol all  
  
Connect using secure tunnel  
  ID Type: IP address  
  10.64.10.44  
  
Pre-shared Key=123cisco  
  
Authentication (Phase 1)  
  Proposal 1  
  Authentication method: pre-shared key  
  Encryp Alg: DES  
  Hash Alg: MD5  
  SA life: Unspecified  
  Key Group: DH 1  
  
Key exchange (Phase 2)  
  Proposal 1  
  Encapsulation ESP  
  Encrypt Alg: DES  
  Hash Alg: MD5  
  Encap: tunnel  
  SA life: Unspecified  
  no AH  
  
2- Other Connections  
  Connection security: Non-secure  
  Local Network Interface  
  Name: Any  
  IP Addr: Any  
  Port: All
```

確認

ここでは、設定が正常に機能しているかどうかを確認します。

[アウトプット インタープリタ ツール \(登録ユーザ専用 \) \(OIT \) は、特定の show コマンドをサポートします。](#) OIT を使用して、show コマンドの出力の分析を表示します。

- `show crypto ipsec sa` : フェーズ 2 セキュリティ アソシエーションを表示します。
- `show crypto isakmp sa` : フェーズ 1 SA を表示します。

トラブルシューティング

このセクションは、設定のトラブルシューティングを行う際に参照してください。

トラブルシューティングのためのコマンド

アウトプット インタープリタ ツール (登録ユーザ専用) (OIT) は、特定の show コマンドをサポートします。OIT を使用して、show コマンドの出力の分析を表示します。

注 : [debug](#) コマンドを使用する前に、『[debug コマンドの重要な情報](#)』を参照してください。

- `debug crypto ipsec` : フェーズ 2 の IPSec ネゴシエーションを表示します。
- `debug crypto isakmp` : フェーズ 1 の ISAKMP ネゴシエーションを表示します。
- `debug crypto engine` : 暗号化されたトラフィックを表示します。
- `clear crypto isakmp` : フェーズ 1 に関連する SA をクリアします。
- `clear crypto ipsec` : フェーズ 2 に関連する SA をクリアします。

関連情報

- [IPSec ネットワーク セキュリティの設定](#)
- [Internet Key Exchange セキュリティ プロトコルの設定](#)
- [IPSec ネゴシエーション/IKE プロトコルに関するサポート ページ](#)
- [Cisco Secure VPN Client に関するサポート ページ](#)
- [テクニカルサポート - Cisco Systems](#)