

IPv6 Source Guard and Prefix Guard

IPv6 Source Guard and IPv6 Prefix Guard are Layer 2 snooping features that validate the source of IPv6 traffic. IPv6 Source Guard blocks any data traffic from an unknown source. For example, one that is not already populated in the binding table or previously learned through Neighbor Discovery (ND) or Dynamic Host Configuration Protocol (DHCP) gleaning. IPv6 Prefix Guard prevents home-node sourcing traffic outside of the authorized and delegated traffic.

- Finding Feature Information, page 1
- Information About IPv6 Source Guard and Prefix Guard, page 1
- How to Configure IPv6 Source Guard and Prefix Guard, page 4
- Configuration Examples for IPv6 Source Guard and Prefix Guard, page 7
- Additional References for IPv6 Source Guard and Prefix Guard, page 8
- Feature Information for IPv6 Source Guard and Prefix Guard, page 8

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see Bug Search Tool and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Information About IPv6 Source Guard and Prefix Guard

IPv6 Source Guard Overview

IPv6 source guard is an interface feature between the populated binding table and data traffic filtering. This feature enables the device to deny traffic when it is originated from an address that is not stored in the binding table. IPv6 source guard does not inspect ND or DHCP packets; rather, it works in conjunction with IPv6

neighbor discovery (ND) inspection or IPv6 address glean, both of which detect existing addresses on the link and store them into the binding table. IPv6 source guard is an interface between the populated binding table and data traffic filtering, and the binding table must be populated with IPv6 prefixes for IPv6 source guard to work.

IPv6 source guard can deny traffic from unknown sources or unallocated addresses, such as traffic from sources not assigned by a DHCP server. When traffic is denied, the IPv6 address glean feature is notified so that it can try to recover the traffic by querying the DHCP server or by using IPv6 ND. The data-glean function prevents the device and end user from getting deadlocked, whereupon a valid address fails to be stored into the binding table, there is no recovery path, and the end user is unable to connect.

The following illustration provides an overview of how IPv6 source guard works with IPv6 address glean.

DHCPserver Address glean Allow traffic sourced with known IP/SMAC Deny traffic sources with unknown IP/SMAC and triggers address glean process $P_{1;;}$ data, src= A_{1} , P_{21} data, src= A_{21} , P₃;; data, src= A₃, SMAC=MAC_{A3} DAD NS [IP:source=UNSPEC, target=A DHCP LEASEQUERY recovery NA [IP source=A,,LLA=MACH3] DHCP LEASEQUERY_REPLY Store A₃ Binding Table

IPv6

MAC MAC

MACAZI

MAC_{A22}

100

100

100

P2

P2

Figure 1: IPv6 Source Guard and Address Glean Overview

IPv6 Prefix Guard Overview

The IPv6 Prefix Guard feature works within the IPv6 Source Guard feature, enabling the device to deny traffic originated from nontopologically correct addresses. IPv6 prefix guard is often used when IPv6 prefixes are delegated to devices (for example, home gateways) using DHCP prefix delegation. The feature discovers ranges of addresses assigned to the link and blocks any traffic sourced with an address outside this range.


To determine which prefixes should be allowed and which prefixes should be blocked, IPv6 prefix guard uses the following:

- Prefix glean in Router Advertisements (RAs)
- Prefix glean in DHCP prefix delegation
- Static configuration

Whenever a prefix is to be allowed, IPv6 prefix guard downloads it to the hardware table. Whenever a packet is switched, the hardware matches the source of the packet against this table and drops the packet if no match is found.

The following figure shows a service provider (SP) scenario in which prefixes are gleaned in DHCP-PD messages.

Figure 2: Prefixes Gleaned in DHCP-PD Messages Scenario

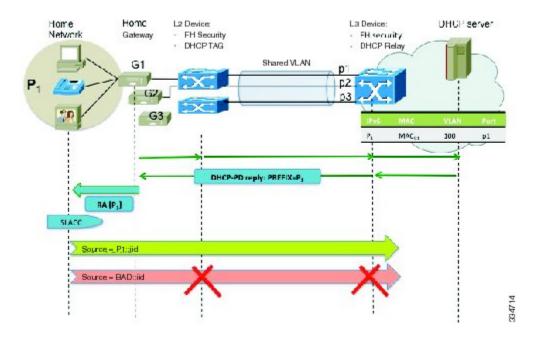

How to Configure IPv6 Source Guard and Prefix Guard

Configuring IPv6 Source Guard

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- 3. ipv6 source-guard policy source-guard-policy
- 4. permit link-local
- 5. deny global-autoconf
- 6. trusted
- 7. exit
- **8. show ipv6 source-guard policy** [snooping-policy]

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	ipv6 source-guard policy source-guard-policy	Defines an IPv6 source-guard policy name and enters switch integrated security features source-guard policy
	<pre>Example: Device(config) # ipv6 source-guard policy my_sourceguard_policy</pre>	configuration mode.
Step 4	permit link-local	Allows hardware bridging for all data traffic sourced by a link-local address.
	<pre>Example: Device(config-sisf-sourceguard) # permit link-local</pre>	
Step 5	deny global-autoconf	Denies data traffic from auto-configured global addresses.
	<pre>Example: Device(config-sisf-sourceguard) # deny global-autoconf</pre>	

	Command or Action	Purpose
Step 6	trusted	Allows hardware bridging for all data traffic on the target where the policy is applied.
	<pre>Example: Device(config-sisf-sourceguard)# trusted</pre>	
Step 7	exit	Exits source-guard policy configuration mode and returns to privileged EXEC mode.
	<pre>Example: Device(config-sisf-sourceguard)# exit</pre>	
Step 8	show ipv6 source-guard policy [snooping-policy]	Displays the IPv6 source-guard policy configuration.
	Example: Device# show ipv6 source-guard policy policy1	

Configuring IPv6 Source Guard on an Interface

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- **3**. **interface** *type number*
- 4. ipv6 source-guard attach-policy source-guard-policy
- 5 exit
- **6. show ipv6 source-guard policy** *source-guard-policy*

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	

	Command or Action	Purpose
Step 3	interface type number	Specifies an interface type and number, and enters interface configuration mode.
	Example:	
	Device(config)# interface fastethernet 3/13	
Step 4	ipv6 source-guard attach-policy source-guard-policy	Applies IPv6 source guard on an interface.
	<pre>Example: Device(config-if)# ipv6 source-guard attach-policy my_source_guard_policy</pre>	
Step 5	exit	Exits interface configuration mode and places the device in privileged EXEC mode.
	<pre>Example: Device(config-if)# exit</pre>	
Step 6	show ipv6 source-guard policy source-guard-policy	Displays all the interfaces on which IPv6 source guard is applied.
	Example: Device# show ipv6 source-guard policy policy1	

Configuring IPv6 Prefix Guard

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- 3. ipv6 source-guard policy source-guard-policy
- 4. validate address
- 5. validate prefix
- 6. exit
- 7. **show ipv6 source-guard policy** [source-guard-policy]

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	

	Command or Action	Purpose
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	ipv6 source-guard policy source-guard-policy	Defines an IPv6 source-guard policy name and enters switch integrated security features source-guard policy
	<pre>Example: Device(config)# ipv6 source-guard policy my_snooping_policy</pre>	configuration mode.
Step 4	validate address	Disables the validate address feature and enables the IPv6 prefix guard feature to be configured.
	<pre>Example: Device(config-sisf-sourceguard)# no validate address</pre>	
Step 5	validate prefix	Enables IPv6 source guard to perform the IPv6 prefix-guard operation.
	<pre>Example: Device(config-sisf-sourceguard)# validate prefix</pre>	
Step 6	exit	Exits switch integrated security features source-guard policy configuration mode and returns to privileged EXEC mode.
	<pre>Example: Device(config-sisf-sourceguard)# exit</pre>	
Step 7	show ipv6 source-guard policy [source-guard-policy]	Displays the IPv6 source-guard policy configuration.
	Example: Device# show ipv6 source-guard policy policy1	

Configuration Examples for IPv6 Source Guard and Prefix Guard

Example: Configuring IPv6 Source Guard and Prefix Guard

Device# ipv6 source-guard policy policy1

Policy guard configuration: validate prefix validate address

Additional References for IPv6 Source Guard and Prefix Guard

Related Documents

Related Topic	Document Title
IPv6 addressing and connectivity	IPv6 Configuration Guide
IPv4 addressing	IP Addressing: IPv4 Addressing Configuration Guide
Cisco IOS commands	Cisco IOS Master Command List, All Releases
IPv6 commands	Cisco IOS IPv6 Command Reference
Cisco IOS IPv6 features	Cisco IOS IPv6 Feature Mapping

Standards and RFCs

Standard/RFC	Title
RFCs for IPv6	IPv6 RFCs

Technical Assistance

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	

Feature Information for IPv6 Source Guard and Prefix Guard

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 1: Feature Information for IPv6 Source Guard and Prefix Guard

Feature Name	Releases	Feature Information
IPv6 Prefix Guard	15.3(1)S Cisco IOS XE Release 3.9S	The IPv6 Prefix Guard feature enables a device to deny traffic originated from nontopologically correct addresses.
		In Cisco IOS XE Release 3.9S, support was added for the Cisco CSR 1000V
		In Cisco IOS XE Release 3.9S, support was added for the Cisco ASR 1000 Series Routers.
		The following commands were introduced or modified: ipv6 source-guard policy, permit link-local, show ipv6 source-guard policy, validate address, validate prefix.
IPv6 Source Guard	15.0(2)SE	The IPv6 source guard feature blocks any data traffic sourced
	15.3(1)S Cisco IOS XE Release 3.9S	from an unknown source. For
	IOS XE 3.6.0E, IOS 15.2(2)E	example, one that is not already populated in the binding table or previously learned through ND or DHCP gleaning.
		In Cisco IOS XE Release 3.9S, support was added for the Cisco CSR 1000V
		In Cisco IOS XE Release 3.9S, support was added for the Cisco ASR 1000 Series Routers.
		The following commands were introduced or modified: deny global-autoconfig, ipv6 source-guard attach-policy, ipv6 source-guard policy, permit link-local, show ipv6 source-guard policy, trusted.

Feature Information for IPv6 Source Guard and Prefix Guard