

Rehospedar licenças entre placas de linha MC3GX60V em um roteador uBR10012

Contents

[Introduction](#)

[Componentes Utilizados](#)

[Requirements](#)

[Procedimento](#)

[Passo 1: Obtenha a credencial do dispositivo](#)

[Passo 2: Solicitar transferência de licença no portal de licença](#)

[Etapa 2.1 Especificar a origem para transferência de licença](#)

[Etapa 2.2 Especificar destino para transferência de licença](#)

[Etapa 2.3 Gerar o tíquete de permissão para transferência de licença](#)

[Passo 3: Revogar a licença no LC de origem](#)

[Passo 4: Obter nova licença para o LC de destino no portal de licenças](#)

[Passo 4.1: Inserir informações de novo host](#)

[Passo 4.2: Gerar arquivo de licença para o LC de destino](#)

[Passo 5: Instalar nova licença no LC de destino.](#)

[Passo 5.1: copiar arquivo de licença para CMTS](#)

[Passo 5.2: Verifique o status da licença atual antes de instalar a nova licença no LC de destino](#)

[Passo 5.3: Instalar nova licença no LC de destino](#)

[Passo 5.4: Verificar o status da licença após a instalação](#)

Introduction

Este documento descreve o procedimento para a nova hospedagem ou, em outras palavras, o processo de transferência das licenças entre duas Placas de Linha (LC) de um uBR1002. Neste exemplo, 2 licenças DS x 2 US do slot de placa de linha 8/1 (que originalmente tem 72x60) são transferidas para o slot de placa de linha 8/0 (que originalmente tem 60x16) na placa de linha Cisco uBR-MC3GX60V.

Contribuído por: Shawn Dashuai Zhang & Andy Lau

Editado por: Kumar Sridhar

Componentes Utilizados

Cisco uBR10012 Universal Broadband Router

Placas de linha MC3GC60V

Requirements

Uma conta de login com [Cisco.com](https://www.cisco.com)

Acesso ao portal de licença da Cisco <https://slexui.cloudapps.cisco.com/SWIFT/LicensingUI/Quickstart#>

Procedimento

A seguir estão as etapas envolvidas na rehostagem das licenças da placa de origem, no slot 8/1 para a placa de destino, no slot 8/0:

Passo 1: Obtenha a credencial de licença do LC de origem.

Passo 2: Solicite transferência de licença no portal de licença.

Passo 3: Revogar a licença no LC de origem.

Passo 4: Obtenha uma nova licença para o LC de destino no portal de licenças.

Passo 5: Instalar nova licença no LC de destino.

Passo 1: Obtenha a credencial do dispositivo

Usando os comandos mostrados abaixo, salve a credencial do dispositivo de LC 8/1 para disk0 como "81_cred.txt". Você pode exibir o conteúdo do arquivo usando o comando **more** seguido do nome do arquivo:

```
ubr10012-1#show license udi
```

SlotID	PID	SN	UDI
7/0	UBR-MC20X20V	CAT1441E0L2	UBR-MC20X20V:CAT1441E0L2
7/1	UBR-MC20X20V	CAT1441E0KH	UBR-MC20X20V:CAT1441E0KH
8/0	UBR-MC3GX60V	CAT1616E015	UBR-MC3GX60V:CAT1616E015

```
8/1 UBR-MC3GX60V CAT1435E0TZ UBR-MC3GX60V:CAT1435E0TZ ubr10012-1#license save credential
disk0:81_cred.txt subslot 8/1 Device credential saved .... to disk0:81_cred.txt ubr10012-1#more
disk0:81_cred.txt <?xml version="1.0" encoding="UTF-8"?><CISCO_WT_ARTIFACTS
version="1.0"><CISCO_WT_REHOST_ARTIFACT version="1.0"><HEADER><ARTIFACT_TYPE>Device
Credentials</ARTIFACT_TYPE><ARTIFACT_VERSION>1.0</ARTIFACT_VERSION><TRANSACTION_ID>T and I trans
id</TRANSACTION_ID><UDI><PID>UBR-
MC3GX60V</PID><SN>CAT1435E0TZ</SN></UDI><SOURCE>Device</SOURCE><CREATE_DATE>2013-07-
04T13:25:25.307Z</CREATE_DATE><ARTIFACT_INFO>T and art
info</ARTIFACT_INFO></HEADER><CONTENT><DECIPHER_INFO
encoding="BASE64">AAEAAGAOAA4AhQEBgABlBM8UMnw+NzXyFVwqIFuiug7aqRoKmf06/hOkQuoe706ykteiCMZrEE592
0+SxD6TTEHBqlf9YHxgv6yguQ9hm+JXLASZRPh5ijSyTfHc0eATvmwtxEv17kMmIjpxMlZ7/tKd4AAAAAAAAAAAAAAAA
AAAAAAAAAAAAAAAAA=</DECIPHER_INFO><CORE_DATA><CIPHER_DATA
encoding="BASE64">AAEAAGAPAA8DhAAPABAN/lbTrMxBGdHYqWuzbUD5rFvGVudf1BuINdnRKipAksB00Vs96Zw5U5tYt
xK0nixv11z1UTtvJhzyK2r+lHG1UcZhn4ZPLIYWcJTMSpQpANPEI6rE324hkaT+NveeQxVdVAp+uGu3/CKesJbfA3x0qyqM
cevT2mUfC2aZY21Lbga9mv8dhNlSUTKN0uDGPChaHNw+VKXfLh0Y/rGurVb63UsRkoIglef5Iw5bDHmZ6y2RiJy+VR7LvBZ
MZialAouRog7XiRwFjqGOMsahKrKTF+aMFBNBdHiOgZAYP7QnaiKNwsFHnU0Wky1EzqbCByce6CBrMMWDWLE30z68j/5roX1
m2cUHYEJAmGUBmCHreBeEa44SHyQkTKQ1pv2213nhKv4PZ5cL5JIQs6xZMY6mcNj1f0uuUXIKswWrRj7TOGnQJCSB+cP9POu
JIz8cQrXopc1P+McA/TdNv9K0usJOnUJZVCc2ZvS2B6XaLdAGssGbL0W3dlqyKpcushbLZ6s1F7h0vuQ4N56pScxO+PiE4VF
rz4G1U9JfWgt/G1hf359yNtaBBikxml37A5uwoDT5cmfLpJLJ48kWSi/9qunQ2mvmxxgRI+tmY3SxQtcx2GgmiPGNVTX8W1
hheo1DMRiLNYxmfRMP9vK27rcpsS4fEN2bK0hkaPDfmQDzx+/MsNS/38vSrHWkWRoe9xM0cAybyJgX7jr4hYed0F0g6QD+9U
vm8Ski0UMbMCAAZJHZJcgaC8BGvhZvbnDVPBoHq1+8P1t129YSFCg8GfJ1XHAmTqRB+kxZihVcRmD5eG6o70s2h/kt9oZteq
jMVraDEURxFY4SSr7Wym1Oa0e7WAP0rrCBUNMV18bkNW22Ju5OeytNGHvKz9mjDFeFqMzegHrQJSQeMQD0h+UrRlS9qzpls8
5FL1sb6J7S1HvGMFdkTq3ITuqcmxMdgukZLP3prfWYc5ZamtZ256B/ZdGiNowePzbvaFwWUAYwQsLYDBrPmT80Bfm4SVekA6
ZSyexnkJevGipqW0QOm9ATZqp1m60Lfwl0NpNTBVvv3Izin8M7h4SnAsRq59Kw5E4RgsraIgyhtbDbEn6109MegKb/hwErF
10541z4DSfPdWUeiBrGziv9/D9fik6NZ2/v1vOePYZTRhZlUkOJPLEZWi817qRKZtBcHLXonc95q01w==</CIPHER_DATA>
</CORE_DATA><SIGNATURE_INFO
encoding="BASE64">AAEAAGALAAAsAVAECAQnWYA7F1UKowp1FYRGINxVEf2ThwAAAAAAAAAAAAAAAAABImmNxd3wI3ESvX6T
CYfl8ffm9kRCY+zaQAc3leY0icVh5/4qa2t4Ns1is+icrxrw==</SIGNATURE_INFO></CONTENT></CISCO_WT_REHOST_A
RTIFACT></CISCO_WT_ARTIFACTS> ubr10012-1#
```

Passo 2: Solicitar transferência de licença no portal de

licença

Vá para <https://slexui.cloudapps.cisco.com/SWIFT/LicensingUI/Quickstart#> website, selecione o dispositivo em "Devices", clique na cor azul ">" para selecionar "Rehost license..." e cole a credencial do dispositivo (da saída do comando **more** como na Etapa 1) para registrar e solicitar uma transferência de licença:

The screenshot shows the 'Product License Registration' page. At the top, there are links for 'Help' and 'Settings'. Below that, a dropdown menu shows 'Show: All Licenses for Yuen Tak Lau'. There are tabs for 'PAKs or Tokens', 'Licenses', 'Devices', and 'Transactions History'. A toolbar contains actions like 'Get Licenses', 'Move Licenses', 'Add Devices', 'Download Licenses', 'Email Selected Licenses', 'Export to CSV', and 'Show Filters'. The main table lists licenses with columns for Device, Family, Features, and Quantity. A context menu is open over the second row, with 'Rehost license...' highlighted in red. The table data is as follows:

Device	Family	Features	Quantity
UDI Product ID:UBR-MC3GX60V UDI Serial Number:	UBR MC20x20/3G60/PRE5/3GSPA	DS_License	123
		US_License	35
UDI Product ID:UBR-MC20X20V UDI Serial Number:		US_License	20
		DS_License	20
		DS_License	+1 120
UDI Product ID:C891FW-E-K9 UDI Serial Number:	800 Fixed	MEM-8XX-512U1GB	1
		advipservices	1

Se você não vir o dispositivo em seu perfil CCO, clique em "Adicionar dispositivos" e adicione o dispositivo ao seu perfil CCO.

The screenshot shows the 'Initiate a Rehost' dialog box. It has a title bar and a close button. Below the title, there is a description: 'On this page, you can transfer specific licenses from one device to another that were previously registered with your Cisco.com profile or by others in your organization. How do I...'. There are three steps: '1. Specify License Source', '2. Specify Target & Options', and '3. Review'. The 'Source Device Selection' section is visible. A 'Next' button is present. A 'Transactions' dropdown is also visible. The main content area shows a 'Select the product type' dropdown set to 'Device Credential'. Below that is a text area containing a Base64-encoded credential:

```
/hwErFI054Iz4DSfPdWUeIbRgziv9/D9fIK6NZ2  
/1vOePYZTRehZIUkOJPlEzWl8I7qRKZiBcHLXonc95qO1w==</CIPHER_DATA>  
</CORE_DATA><SIGNATURE_INFO  
encoding="BASE64">AAEAAGALAAAsAVAECAQnwYWA7F1UKowplFYRGINxVEf2ThwAA  
AAAAAAAAAAAAABImmNxd3wI3ESvX6TCYfI8ffm9kRCY+zaQAc3leY0iCVh5/4qa2t4Ns1I  
S+icrww==</SIGNATURE_INFO></CONTENT></CISCO_WT_REHOST_ARTIFACT>  
</CISCO_WT_ARTIFACTS>
```


 At the bottom of the dialog are 'OK' and 'Cancel' buttons.

Depois de adicionar o dispositivo, você verá a licença associada na página da Web.

Etapa 2.1 Especificar a origem para transferência de licença

Selecione a licença que deseja transferir:

Preencha a caixa de texto com a credencial do dispositivo obtida na Etapa 2.

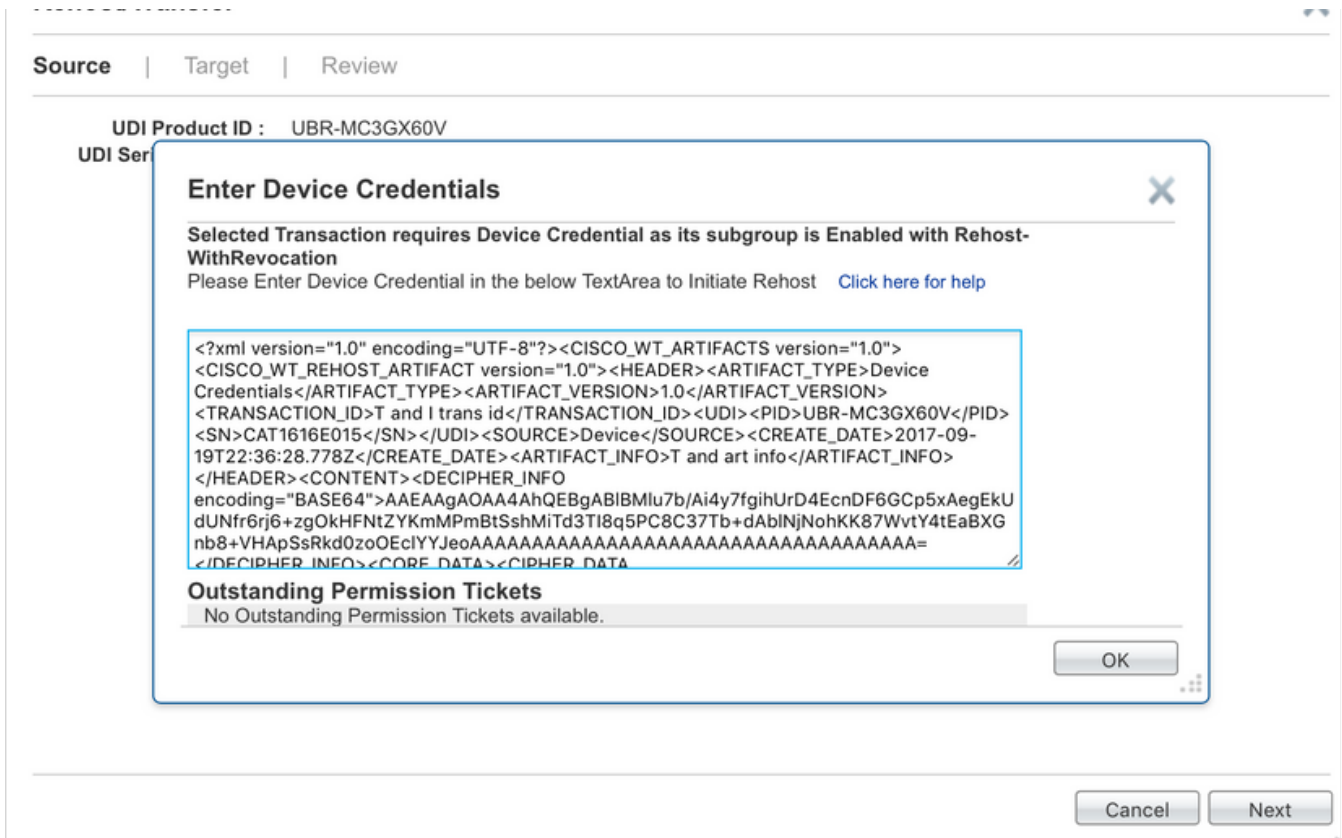


Clique em "Avançar"

Etapa 2.2 Especificar destino para transferência de licença

Na "Quantidade a atribuir", preencha as contagens de licença que deseja transferir da placa de linha de origem.

Neste exemplo, há licenças 72DSX60US para o subslot 8/1. Transferiremos licenças 2DSx2US para o subote 8/0. Após a transferência, as licenças 70DSx58US permanecerão no subslot 8/1.

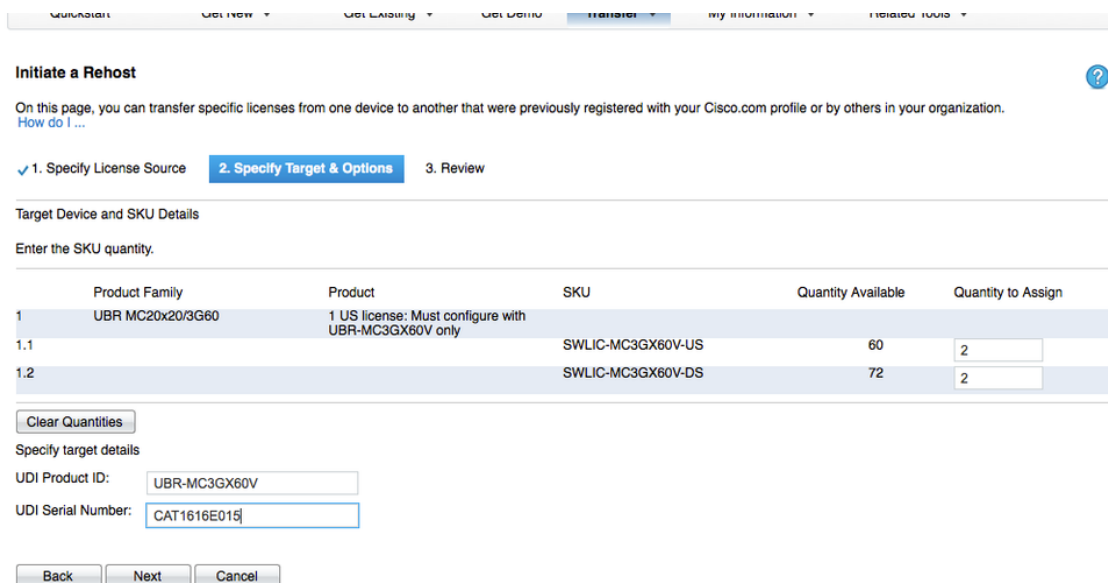

Clique em "Avançar"

Etapa 2.3 Gerar o tíquete de permissão para transferência de licença

Initiate a Rehost

On this page, you can transfer specific licenses from one device to another that were previously registered with your Cisco.com profile or by others in your organization.
[How do I ...](#)

✓ 1. Specify License Source ✓ 2. Specify Target & Options **3. Review**

	Serial Number	Product ID
1 Source	CAT1435E0TZ	UBR-MC3GX60V
Target	CAT1616E015	UBR-MC3GX60V

	Sku Name	Quantity
1.1	SWLIC-MC3GX60V-DS	2
1.2	SWLIC-MC3GX60V-US	2

Your License Key will be emailed within the hour to these email addresses and connected with the specified end user.

* Send To:

* End User:

* License Agreement: I agree with the Terms of the License [View License Agreement...](#)

Uma permissão marcada é emitida após você clicar no botão "Enviar". Ele é enviado por e-mail para seu endereço de e-mail.

Copie o arquivo de licença de tíquete de permissão do seu e-mail para o CMTS usando TFTP ou qualquer outro meio disponível:

```
ubr10012-1#copy tftp://10.66.94.155/CAT1435E0TZ_20130704171351238.lic disk0:
```

```
Destination filename [CAT1435E0TZ_20130704171351238.lic]?
```

```
Accessing tftp://10.66.94.155/CAT1435E0TZ_20130704171351238.lic...
```

```
Loading CAT1435E0TZ_20130704171351238.lic from 10.66.94.155 (via GigabitEthernet1/1/0): !
```

```
[OK - 8872 bytes]
```

Passo 3: Revogar a licença no LC de origem

Use este tíquete de permissão para iniciar o processo de rehost usando os comandos do Cisco IOS.

Aplique o tíquete de permissões ao dispositivo de origem usando o comando de revogação de licença.

O dispositivo de origem fornece um tíquete de rehost indicando a prova de revogação. Uma licença de período de cortesia de sessenta dias também é instalada no dispositivo para permitir tempo suficiente para transferir as licenças para o dispositivo de destino.

O tíquete de Rehost será usado para gerar o novo arquivo de licença para o destino.

Caso você perca o tíquete de rehost ("disk0:rt" neste caso), você pode repetir o procedimento de "revogação de licença" acima para obter o tíquete de rehost.

```
ubr10012-1#license revoke disk0:CAT1435E0TZ_20130704171351238.lic disk0:rt Following Permanent license(s) will be revoked from this device Feature Name: DS_License : Count = 72 Feature Name: US_License : Count = 60 Following Permanent license(s) will be installed on this device Feature Name: US_License : Count = 58 Feature Name: DS_License : Count = 70 Following Extension license(s) will be installed on this device Feature Name: US_License : Count = 60 Feature Name: DS_License : Count = 72 PLEASE READ THE FOLLOWING TERMS CAREFULLY. INSTALLING THE LICENSE OR LICENSE KEY PROVIDED FOR ANY CISCO PRODUCT FEATURE OR USING SUCH PRODUCT FEATURE CONSTITUTES
```

YOUR FULL ACCEPTANCE OF THE FOLLOWING TERMS. YOU MUST NOT PROCEED FURTHER IF YOU ARE NOT WILLING TO BE BOUND BY ALL THE TERMS SET FORTH HEREIN. You hereby acknowledge and agree that the product feature license is terminable and that the product feature enabled by such license may be shut down or terminated by Cisco after expiration of the applicable term of the license (e.g., 30-day trial period). Cisco reserves the right to terminate or shut down any such product feature electronically or by any other means available. While alerts or such messages may be provided, it is your sole responsibility to monitor your terminable usage of any product feature enabled by the license and to ensure that your systems and networks are prepared for the shut down of the product feature. You acknowledge and agree that Cisco will not have any liability whatsoever for any damages, including, but not limited to, direct, indirect, special, or consequential damages related to any product feature being shutdown or terminated. By clicking the "accept" button or typing "yes" you are indicating you have read and agree to be bound by all the terms provided herein. ACCEPT? (yes/[no]): yes Rehost ticket saved to disk0:rt ubr10012-1#show license detail subslot 8/1 Index: 1 Feature: DS_License Version: 1.0 License Type: Evaluation License State: Active, In Use Evaluation total period: 8 weeks 4 days Evaluation period left: 8 weeks 3 days Expiry date: Sep 02 2013 06:41:34 License Count: 72/72/0 (Active/In-use/Violation) License Priority: High Store Index: 3 Store Name: Primary License Storage Index: 2 Feature: DS_License Version: 1.0 License Type: Permanent License State: Inactive License Count: 70/0/0 (Active/In-use/Violation) License Priority: Medium Store Index: 1 Store Name: Primary License Storage Index: 3 Feature: DS_License Version: 1.0 License Type: Evaluation License State: Inactive Evaluation total period: 8 weeks 4 days Evaluation period left: 1 week 2 days License Count: 72/0/0 (Active/In-use/Violation) License Priority: Low Store Index: 1 Store Name: Evaluation License Storage Index: 4 Feature: US_License Version: 1.0 License Type: Evaluation License State: Active, In Use --More-- % RPC failed to slot 17 Evaluation total period: 8 weeks 4 days Evaluation period left: 8 weeks 3 days Expiry date: Sep 02 2013 06:46:34 License Count: 60/60/0 (Active/In-use/Violation) License Priority: High Store Index: 2 Store Name: Primary License Storage Index: 5 Feature: US_License Version: 1.0 License Type: Permanent License State: Inactive License Count: 58/0/0 (Active/In-use/Violation) License Priority: Medium Store Index: 0 Store Name: Primary License Storage Index: 6 Feature: US_License Version: 1.0 License Type: Evaluation License State: Inactive Evaluation total period: 8 weeks 4 days Evaluation period left: 8 weeks 4 days License Count: 60/0/0 (Active/In-use/Violation) License Priority: Low Store Index: 0 Store Name: Evaluation License Storage ubr10012-1#

Passo 4: Obter nova licença para o LC de destino no portal de licenças

Insira o tíquete de rehostagem na ferramenta do portal de transferência de licenças escolhendo "Dispositivos > Mover licenças > Completar hospedagem segura...". juntamente com a UDI do dispositivo de destino. Consulte a imagem abaixo:

Extraia o texto do tíquete de hospedagem novamente:

```
ubr10012-1#more disk0:rt <?xml version="1.0" encoding="UTF-8"?><CISCO_WT_ARTIFACTS
version="1.0"><CISCO_WT_REHOST_ARTIFACT version="1.0"><HEADER><ARTIFACT_TYPE>Rehost
```


Artifact</ARTIFACT_TYPE><ARTIFACT_VERSION>1.0</ARTIFACT_VERSION><TRANSACTION_ID>00DD93AAAC</TRANSACTION_ID><UDI><PID>UBR-MC3GX60V</PID><SN>CAT1435E0TZ</SN></UDI><SOURCE>Device</SOURCE><CREATE_DATE>2013-07-04T13:41:34.151Z</CREATE_DATE><CISCO_REHOST_CHANGES><CISCO_REHOST_ADD><CISCO_WT_LICENSE version="1.0"><FEATURE_NAME>US_License</FEATURE_NAME><FEATURE_VERSION>1.0</FEATURE_VERSION><UDI><PID>UBR-MC3GX60V</PID><SN>CAT1435E0TZ</SN></UDI><SOURCE>Cisco HQ</SOURCE><CREATE_DATE>2013-07-05T00:13:44.000Z</CREATE_DATE><LICENSE_LINE_HASH hashAlgo="SHA1"></LICENSE_LINE_HASH><TYPE>EXTENSION</TYPE><EXPIRATION><DAYS>60</DAYS></EXPIRATION><EULA>YES</EULA><COUNT>60</COUNT></CISCO_WT_LICENSE></CISCO_REHOST_ADD><CISCO_REHOST_ADD><CISCO_WT_LICENSE version="1.0"><FEATURE_NAME>DS_License</FEATURE_NAME><FEATURE_VERSION>1.0</FEATURE_VERSION><UDI><PID>UBR-MC3GX60V</PID><SN>CAT1435E0TZ</SN></UDI><SOURCE>Cisco HQ</SOURCE><CREATE_DATE>2013-07-05T00:13:44.000Z</CREATE_DATE><LICENSE_LINE_HASH hashAlgo="SHA1"></LICENSE_LINE_HASH><TYPE>EXTENSION</TYPE><EXPIRATION><DAYS>60</DAYS></EXPIRATION><EULA>YES</EULA><COUNT>72</COUNT></CISCO_WT_LICENSE></CISCO_REHOST_ADD><CISCO_REHOST_REMOVE><CISCO_WT_LICENSE version="1.0"><FEATURE_NAME>DS_License</FEATURE_NAME><FEATURE_VERSION>1.0</FEATURE_VERSION><UDI><PID>UBR-MC3GX60V</PID><SN>CAT1435E0TZ</SN></UDI><SOURCE>Cisco HQ</SOURCE><CREATE_DATE>2010-11-25T07:51:48.000Z</CREATE_DATE><LICENSE_LINE_HASH hashAlgo="SHA1"></LICENSE_LINE_HASH><TYPE>PERMANENT</TYPE><COUNT>72</COUNT></CISCO_WT_LICENSE></CISCO_REHOST_REMOVE><CISCO_REHOST_REMOVE><CISCO_WT_LICENSE version="1.0"><FEATURE_NAME>US_License</FEATURE_NAME><FEATURE_VERSION>1.0</FEATURE_VERSION><UDI><PID>UBR-MC3GX60V</PID><SN>CAT1435E0TZ</SN></UDI><SOURCE>Cisco HQ</SOURCE><CREATE_DATE>2010-11-25T07:52:01.000Z</CREATE_DATE><LICENSE_LINE_HASH hashAlgo="SHA1"></LICENSE_LINE_HASH><TYPE>PERMANENT</TYPE><COUNT>60</COUNT></CISCO_WT_LICENSE></CISCO_REHOST_REMOVE><CISCO_REHOST_ADD><CISCO_WT_LICENSE version="1.0"><FEATURE_NAME>US_License</FEATURE_NAME><FEATURE_VERSION>1.0</FEATURE_VERSION><UDI><PID>UBR-MC3GX60V</PID><SN>CAT1435E0TZ</SN></UDI><SOURCE>Cisco HQ</SOURCE><CREATE_DATE>2013-07-05T00:13:44.000Z</CREATE_DATE><LICENSE_LINE_HASH hashAlgo="SHA1"></LICENSE_LINE_HASH><TYPE>PERMANENT</TYPE><COUNT>58</COUNT></CISCO_WT_LICENSE></CISCO_REHOST_ADD><CISCO_REHOST_ADD><CISCO_WT_LICENSE version="1.0"><FEATURE_NAME>DS_License</FEATURE_NAME><FEATURE_VERSION>1.0</FEATURE_VERSION><UDI><PID>UBR-MC3GX60V</PID><SN>CAT1435E0TZ</SN></UDI><SOURCE>Cisco HQ</SOURCE><CREATE_DATE>2013-07-05T00:13:44.000Z</CREATE_DATE><LICENSE_LINE_HASH hashAlgo="SHA1"></LICENSE_LINE_HASH><TYPE>PERMANENT</TYPE><COUNT>70</COUNT></CISCO_WT_LICENSE></CISCO_REHOST_ADD></CISCO_REHOST_CHANGES></HEADER><CONTENT><DECIPHER_INFO encoding="BASE64">AAEAAGAOAA4AhQEBgABlBmH/Q5r7IwMdRbAS/JAFyDQEKgWqkgLtrFwFdZa1cKxv3eZF/WVGvcBUBC WkYMB5ULk/RAA0BkVdecbCoHbpe2LNaTVBi1zBAkW/B6iPNqIwIbGzFUTNsFkV3hKtVPBayWiG4boAAAAAAAAAAAAAAAAAAAAAA AAAAAAAAAAAAAAAAAAAAAA=</DECIPHER_INFO><CORE_DATA><CIPHER_DATA encoding="BASE64">AAEAAGAPAA8RtAAPABAanu6WfSp4fjmeFsILXTPN3nG/7QCTe2Saa+L9N3qAiqCF5QT1orKYQn8NTk BZnYdSoDs003+n0Ek9c5kzTzxbntK2Qw+qtbtAgS4L5ZwgM1WC5v8+muTuyAFefMglgXuG6rsoosn+7vkvaF02Au2I+wLvXg T19BYVvMxRzixyk+aZYwL32z6GHF2P013xXLQk+nPovyB9Hy7/08xBaVDZ+zYb2hUIB8osfvYqyJP0S4u9V4UWv22zVx1s +GBw528i/tf3xBl+c3DtAWQfcAaPk5WpuB+KEYybJvhs/uSXqXwaQpDKxvQow5Im5+jS4od5/Whtk0cq+OBLEXDGG7eubR+ra azeP+7ULUN+zSY5yCNOe0wfJv1c4n/bQaAAX8a38+KzKndJL8cI7LkyUgnxv1KUGcaQYjaDstiWxanQ7ok87eVNMCTsck2Gq Uxfow4n1KWYDTW6ZOA3LzXwF+9uJZnZStIffBrwE5r1sYnPGbtLD0AmHpFKPAzTuXadJRJoMLNwC+w52TK25dHhrRqWn4Pc fwj5ce0hovPa6+XtsiTP+x/63xRf+OBi5iihOCBAUm+mhn6xy2uHDIiPKlAeY/no7E6Cyh7QS9gP9wfygBYJVq7n7qmGJG ctdDZkTl9Q34RUDYcvvrtrQnyf3nbOL3Nox5PxY7zOmxP2LldJ7A3+EsXFE06aw/c4Y9Ggb1g1Gfb6IAm9/HZwZ4fYWwvC LoZDL11CiBTVWLFWIGX49WTZqp9A//EMyOxCMebBPEBIyfiD19FrVJEcVK8q39MsDY+V1R/li12idGJfTiu1hLUqnoPYRip fpdSo4P5T+QxT6GIBSstXy55D1WlTealcw18o9h6XLlnUySTMZBmHMh1MzevOgKRTaXJfmlHbTKiUl1NboVdbUKclc0PPEy elY9XX19Z0LlTYNazAe4wbxnoUDbsQ99WuxYpPr8TcRD+ab8vKX3DUFxu+pyznPVzCymLtlk2ZtsFzk4vjqU3xHbaZhHz2R bdQckwlnkBB9+9e4eZ6wVOC29pVZBrBA8mh6Bt7H3dWj1LJNMpdegeZTgnr7+dHbATppbVeFFZe06wJ1jmm/EzRs/7/1mA01 uXUd6WUSjsyZUTIEyFtmVwfb1un9uyMzoSzQbCercz3vHQdi/dy8iQbXwGyJPKjhHhbJiKN6+p1UXHZRGvr0r09v/kIdTln fkbFGXPOoCRIUmBuz/ULimzibTf0PfqwQ98r42dQwXgN4UPyBkoR6/pQcPX287GVsB/5zpIvWR9544B+1Dvo+cCeuVA/60W J3UFvqoCA9YNM6b+B6A4mZvBT78S+j+r+prNfMBZhnYD90y0OpY5JocOEJfkdMSvDT78G+acfeqzRm76Ny4N4YbKVI4kUA06 PS0fqRsvK1hHUAu00yluVnqaD30X/SH8C97HCN1hmXUyDZ9ZfabAq49jairvba7fLHyHYF56RaQUhjck08v70CXyy+3zVWF9 Ce6YmAAjeTqVIE4Q6hZqXQbvLOuB+YHoSvAuIFq3LaJDi9pHirDlfpL9bYaCDDDCgarbj8Xh/CT+6qit1bXikoVSMlJ/xHD EP9FFbL9oQQq0U90I4J6Hqcn/f0SD4wjIs86Rz6+EE6kNNg00FhVxQZQsZfABsHy6PFxf4sH2l333ILEiAxLypwUiANfkTU ulf94rpdMKubQbPtjah1BnS1tCka3ANk5XomDcmJ379K119zHs+s4B+I6/Dbb4kvZKUA++UPyzu/AxhlXOXGodRI419lvjtd +rr3/kIJ0fXk3b1sx5qIdxgNsZmAG3ijUIxcmQmEnsJ7+/1zV7GCGfm9002E9BFqCvLzat0MKRKPu2aWm+LpOXvr9ybWjn0 Y4hIDR/3tnAYFo85ZAHTDOOdYEHMaqx38fZuFHQ0vGKA+XZzhZy2qDG1SsAzN39VlDsDThkbgm5hM9seUHLvWin9QEsFzpe bI6ENWIEz8vhlywtfJZ5v/8KeBydSeTvYr91r0+02zSNfdrMmguldG104ZQ60358AnR7EBtn57WAYCrNjSwyFySKSkQtHiZh KVLmXiboXdWjCvquT8sLjk60iRtPtoboTRVhNCDBTardMonhHiy5ZY6DIKhg7DN/1noAPwNY8K4BZhtPyzb3P9BGG+taiyt Tzm0ulz/ktAweled7IU311RvS7wR3Wvxh7TWiQG8e4fj+FiOTz90XBnBabl+7V53KHbcgXRC4w3wJmH804Gwe2UDVuyARFE

6uSbeZvf3FQitViC03h/gnGcvWtV6ghsOzwm7spxz2VNORK1KZRn+FmDPrTPBJeu6YN+VAFXVc27fJ/10phJiRdomUW/VJgG
YGXZxC0wAZOm9Mdht4W/nSsupcZQRoiOB4EPP06jnj6IJ5iNOwSqjGDFQ0rIz9wTe06qvI33uunyq/jih8+g7qqwpzXncc70
gQ2hAO2Kynp4GjX5aUALbxs0OdiMjT2JUAH2aMoI7ZAqE9izK8wyYpEzWdsD1GALfIedJEFQvUDFFewZDxEA4+JxhHT0ybuK
j8KCZKMT0jhIOG6UgMUyR0rwlO/YAC3RSjVDCYieW2MpirnFJDS5TbQ6ua8YbVpjdJn+b4wTfsl29fv/mSPj3mZQCSf9k7M+
72Jy2b29Bqz/G0ZJB6+7+hXQRYVzB8XciS9bnPBWmt3JSKugotK65dqUTVoE9c+kPkmZ/haUkST6FukqiZRE4mJYmgbJJyXM
YcHJkv5HrUaJ8xfE8+gJT40gghaV2X6W2Y122vVeV+epGPxU8VzBdQcltDoE6TU5YPqV8Pb7J/Z7KHF+QkcC1q91ZKCV7ob
9H4xvuBKsSGHs0HkI3/gzgrkM8fvaxWDC3RJK7C1iqd84Y17DxToCSmaFWymKaoRvK+iYxs1E6k4FdKrVobLvdIM+jZTcfuW
BD389nBuGmiDfVwIf5/DPuTjPxbppPrCjCZzwwUJF1K+ZjNj09HLonYomtP49T45+0uFBfd8w63rgTtx39N3iteJkEievSR
hkyB4ziL/g16oB9ssb/OYEMJoc+BIjuxLExyIon14qN/x1B2Vm7AcFH6uOagaT/qTm+xsEe5OZDivuv4cr2zKdbQUiVXky1k
bfZGJdC0R41kh2eOeWYMKbHI9UipZ3mEgknBm+ZE6AUwY1RbZP3JrxUfNoXI73zIkCVZidzBYPVEKcBHxTRWnbXXqzx4kKn0
TOigchAdyhOgfsE1sgWDCtRBreXHP3qT5syFSA7pydhTspK3BLMiWSuRzW9uH0bMJF8LURvnJD4hi1D1hLmFP4TD0v5bo2Mj
CgQmUSKaMfBu1XdB/OVawWrmdqXU/W4JIQUt96JNIC14BIZXtM2e8zWaziw4g83F8ND7v3fIFrvaReQL7K7Q+pZn7BbIpng6
A5pMSJ79zChz+Da8JxZ5hxPhxjzt+SpXZ3Tz0SLP49B6WL6dtiOcbIh854ekEDQRHhzwtdUMMTaYfdIBsureERzmUDLXHT73V
/+PIFMEkxwv6dDsr81qbsOyMT47DcCrcJwEvxxWDS2Px3OyuzA79Feps1vmKoudhm8Ik4zXujfbDNdf00uV/P001EQASUiuT
pllm/1/YQ/3fdOnxtm823/n+FXksa4GX0ji+9qr7GmsEDo/sxPql0p4Ha+epmoYmiTKAJW7i9r+XLMTdpMXKriVgKIx6qydB
C5TGcKomeaAKVULkvHvCF801/NyUdaSVg2cMcm7wWwarOrwhcjF7Wy/KccbxOcgirYjgzX1U2REza+RRln+xy802IQDDaNBk
7ED6W1Dy9MKPknJc6vTj+Kf1bap0ag+CmOGdGsgWJVRIMEk7UBJagChpP+eLPTmk6s7du9WlMvegBRMqIttqHhVodZt01J
Q1HGZfDvrGndd0V4kqDB0p28C0Y+Jci/V09waVfWHXsowL0hFXerFRYNNRvToXIdXug3uwKgVsl7QIKdWz3cKDbOCbbzR0V1
/YdewkOBWYbqxZ6dTeGCKmYnXk2KJhkxz1QkkEw5JLvpYIPcR70iLVWr/nEH+CtWCG0fRiWVRPDFuCXU2Hrmq7hbV2c9+Fi6
V2TmWXHxrMBS3CflzTo06V1bLOpt1G75b76D/ntzaCbco30/UtGkRvOzhj3pwUd/oj4exSQ9SJrpashlYmGL9nAVzOMoI3
p34LOyL3Y165zEEDuGQcsVd0ESxHf+81+7PwsY96+p5V70+vi10Jp4ia0BOgtDb2gic/gpxeKqCIyK6qaRwj6kIJRoFuaoVb
xBiZ1U4Xmb818bMm/zQDonWOZFHvjYtYukuqKdnbf20o2CY+Sf6HV3IMcrTOMLL9xdeJbHJZHC7Y/PU7w4JOT6boDHFHv5Y
q2je90Dn5HzU/3wrXpvmLwbixVSDhphcdCEvKE8zUZuM0YHnn5uGn0YECiiQX4r2i7dBy7elocqeMFEMQLVo0S0jt0tZgO/
Is/J8hXhJv8xkRCszVUYJBTRDb22vmpv5rbR805KQ8sBfxvILHbXQaj8Clu9Th6nRKbcEqGsDR1BQ941m4/aMyZe891tqe11
uuJuIs7qXf0GKTb1+SliWw0kjzI5z8vRobFTNGzif0/7qRCjad2+xf3dyR4zswJ28GZcUee1ni3DWX/devKhpI4F1a+fTv1
EquDrkrYZdTAaxvGBjJqWPZCkK/32X1GTlWcBv9xNqSHY31IVME02FFWg1K/519RK5WAvB00a0oii7QYXiUQ3S5Znp2YUvRy
e7jGq12zhixzorOD9W1DzGrVLjPfmW1aQ/hhv3SnCLrJ/Z45FLYJzWk61QDGRan21d6MYnUgzw033+Zx4K159WgoGapGEfo
Qn56eolqE5ehaPCCWX09pJt1gTjtRR8e47iEX/fZ7rkYUfWxqBlBYyGP14WTmv1Q7N3VqyT6UIYj2Y028/SCUDKlhhKppRi
wvJo3Hnb3jIokILNZnefu5tjFpU5quPV6Y2C1e1LfgUoHUIHTW/ap5Xlsbiu3uL1/QpmmFPmFeJjJ3axOAYVo0s7pRmIWRo9
EvVyb7LFEELHnZoSyR2jIV1vx0wCCwB/tLPDDi9twcOERdoMM+WFPCAZZEeBI7LfzZYT6DjCmGbdg2C2wdoVNqENIT2P61nV
zQIJTEJf1KtV7rVWHBaS9CesJx1X1nc1mJU6+lgFm9+a8QhEQvYx/4U4B54EYiXH2P3dxNhQbzemdROIluMjM3mF0ZK9zbWn
PTuEN87JTrQ1+UwXHKsA/zPGROGjmcDyqIDeVm76HUDkgm7oQ0c4qD88LNKzc0UbkzBwJwTp9xymawjX9AnUe3hOQR1WVN
Lm9D6p4db5JSasUwBuxbB8obn/YLwB1Fi03bVO/tWSEdy/BWG9w6N2NcX4P+I1mmVk9tOYOQv741VbuC9YuFbNyOzaFWY6qt
exCODtmNbvufIPCYznUbAYWeHzUbgwzAb1EtW6LPWkyPElKrsorXWL4p72NDK49w5kfbSvYgWRd5C+/iJvzF9nnh5mBd5bg51
ZTDiNB/aLd1M7QnkzAKI+42h1wWqBR/nmTFON9cPQY4U8Vepk1iI2BHoZMW5IeQaRh1D1n0EpIa7hp/yl0Hln1eRJaBxo2Nz
CY8bQN61KvFXM+3/XC8D/M8bYn4zybUf3NmbQy+ES7p/AwrBwhdEhc3biHpKm0TdAdJa1kzaH8rOadqsenLWuWXVnHzIWgWb
uuUca5hTWfeAz0CuJAZDme+ETTSIhYcfBIZcoMuKfrJvqMdRRLId6w/1LYCCuAogxNTXzDYqjd79ujJnR/n5Mn/D7jOztWd+
5POtDC7g11qh64zok+hKfrop2fuzU9wUkZqahjMG7/A5/IVGhn7y5k6MLx5IZDyRkKxAzYv01hoGEojIpmDowkymZVml2kL
HQoRmmEE+y0TMwu74YyDapxCqguA3MckE6i/PGtpIW9+JhKTW8tgMr7IrvlSsdLIIiO2UVpa0aadEbnAtZP3y2i9YHCtBuJ
8kuBlw8t4mJMYe/ayR8Eow1+90</CIPHER_DATA></CORE_DATA><SIGNATURE_INFO
encoding="BASE64">AAEAAGALAAAsAVAECAQLAYiZn2o1/b/XEYyF3681aOv/kIQAAAAAAAAAAAAAAAAAE/cnMwLdddDg807K
ZDqj7n5UvftxqDacwxmHnecgM3yfHlctTmyWC01cdm9Mtt8g==</SIGNATURE_INFO></CONTENT></CISCO_WT_REHOST_A
RTIFACT></CISCO_WT_ARTIFACTS> ubr10012-1#

Passo 4.1: Inserir informações de novo host

Tipo de produto: "Safenet"

ID do produto UDI: <PID de destino>

Número de série UDI: <SN de destino>

No campo "Rehost Ticket", insira o texto extraído do Tíquete de Rehost como acima.

Em seguida, clique em "Avançar"

Complete Secure Rehost/Transfer



1. Enter Rehost Ticket/Key | 2. Review

Select the Product Type:

Safenet

Enter a Rehost Ticket required to generate the license for the new device.

* UDI Product ID:

* UDI Serial Number:

* Rehost Ticket:

```
<?xml version="1.0" encoding="UTF-8"?><CISCO_WT_ARTIFACTS
version="1.0"><CISCO_WT_REHOST_ARTIFACT version="1.0">
<HEADER><ARTIFACT_TYPE>Device
Credentials</ARTIFACT_TYPE>
<ARTIFACT_VERSION>1.0</ARTIFACT_VERSION>
<TRANSACTION_ID>T and I trans id</TRANSACTION_ID><UDI>
```

Cancel

Next

Passo 4.2: Gerar arquivo de licença para o LC de destino

Clique em "Obter licença". Você receberá um arquivo de licença por e-mail.

Upload Rehost Ticket to Finish Rehost

Use this page to complete the final step of the secure license transfer process. [How do I ...](#)



✓ 1. Enter Rehost Ticket/Key

2. Review

	Serial Number	Product ID
1 Source	CAT1435E0TZ	UBR-MC3GX60V
Target	CAT1616E015	UBR-MC3GX60V

SKU	Quantity	More Information	Feature
1.1 SWLIC-MC3GX60V-DS	2	1 DS license: Must configure with UBR-MC3GX60V only	DS_License
1.2 SWLIC-MC3GX60V-US	2	1 US license: Must configure with UBR-MC3GX60V only	US_License

Your License Key will be emailed within the hour to these email addresses and connected with the specified end user.

*Send To:

*End User:

*License Agreement: I agree with the Terms of the License [View License Agreement...](#)

Back

Get License

Cancel

Passo 5: Instalar nova licença no LC de destino.

Passo 5.1: copiar arquivo de licença para CMTS

Copie o arquivo de licença do seu e-mail para um servidor TFTP acessível do uBR10K.

Copie o arquivo de licença para uBR10K do servidor TFTP.

```
ubr10012-1#copy tftp://10.66.94.155/CAT1616E015_20130704172627009.lic disk0:
```

```
Destination filename [CAT1616E015_20130704172627009.lic]?
```

```
Accessing tftp://10.66.94.155/CAT1616E015_20130704172627009.lic...
```

```
Loading CAT1616E015_20130704172627009.lic from 10.66.94.155 (via GigabitEthernet1/1/0): !
```

```
[OK - 2237 bytes]
```

```
2237 bytes copied in 0.556 secs (4023 bytes/sec)
```

```
ubr10012-1#
```

Passo 5.2: Verifique o status da licença atual antes de instalar a nova licença no LC de destino

Verifique o status atual da licença no subslot 8/0 antes de aplicar o novo arquivo de licença:

```
ubr10012-1#show license detail subslot 8/0
```

```
Index: 1      Feature: DS_License                          Version: 1.0
```

```
License Type: Permanent
```

```
License State: Active, In Use License Count: 60/60/0 (Active/In-use/Violation) License  
Priority: Medium Store Index: 0 Store Name: Primary License Storage Index: 2 Feature: DS_License
```

Version: 1.0 License Type: Evaluation License State: Inactive Evaluation total period: 8 weeks 4 days Evaluation period left: 8 weeks 4 days License Count: 72/0/0 (Active/In-use/Violation) License Priority: None Store Index: 1 Store Name: Evaluation License Storage Index: 3 Feature: US_License Version: 1.0 License Type: Permanent License State: Active, In Use License Count: 16/16/0 (Active/In-use/Violation) License Priority: Medium Store Index: 1 Store Name: Primary License Storage Index: 4 Feature: US_License Version: 1.0 License Type: Evaluation License State: Inactive Evaluation total period: 8 weeks 4 days Evaluation period left: 8 weeks 4 days License Count: 60/0/0 (Active/In-use/Violation) License Priority: None Store Index: 0 Store Name: Evaluation License Storage ubr10012-1#

Passo 5.3: Instalar nova licença no LC de destino

Instale a nova licença:

```
ubr10012-1#license install disk0:CAT1616E015_20130704172627009.lic
```

```
Installing licenses from "disk0:CAT1616E015_20130704172627009.lic"
```

```
Installing...Feature:US_License...Successful:Supported
```

```
Installing...Feature:DS_License...Successful:Supported
```

```
2/2 licenses were successfully installed 0/2 licenses were existing licenses 0/2 licenses were failed to install
```

Passo 5.4: Verificar o status da licença após a instalação

Execute o comando **show license detail** para 8/0 após instalar a licença 2x2 hospedada novamente. A contagem muda para 62/18:

```
ubr10012-1#show license detail subslot 8/0
```

```
Index: 1      Feature: DS_License      Version: 1.0
```

```
License Type: Permanent
```

```
License State: Active, In Use License Count: 62/62/0 (Active/In-use/Violation) License Priority: Medium Store Index: 3 Store Name: Primary License Storage Index: 2 Feature: DS_License Version: 1.0 License Type: Permanent License State: Inactive License Count: 60/0/0 (Active/In-use/Violation) License Priority: Medium Store Index: 0 Store Name: Primary License Storage Index: 3 Feature: DS_License Version: 1.0 License Type: Evaluation License State: Inactive Evaluation total period: 8 weeks 4 days Evaluation period left: 8 weeks 4 days License Count: 72/0/0 (Active/In-use/Violation) License Priority: None Store Index: 1 Store Name: Evaluation License Storage Index: 4 Feature: US_License Version: 1.0 License Type: Permanent License State: Active, In Use License Count: 18/18/0 (Active/In-use/Violation) License Priority: Medium Store Index: 2 Store Name: Primary License Storage Index: 5 Feature: US_License Version: 1.0 License Type: Permanent License State: Inactive License Count: 16/0/0 (Active/In-use/Violation) License Priority: Medium Store Index: 1 Store Name: Primary License Storage Index: 6 Feature: US_License Version: 1.0 License Type: Evaluation License State: Inactive Evaluation total period: 8 weeks 4 days Evaluation period left: 8 weeks 4 days License Count: 60/0/0 (Active/In-use/Violation) License Priority: None Store Index: 0 Store Name: Evaluation License Storage ubr10012-1#
```