



Hardware Installation Guide for Cisco 8700 Series Routers

First Published: 2024-09-04

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at www.cisco.com/go/offices.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2024 Cisco Systems, Inc. All rights reserved.



CONTENTS

CHAPTER 1

Cisco 8700 Series Routers Overview 1

- Cisco 8700 Series Routers 1
- Temperature and Physical Specifications 3
- Weight and Power Consumption 3
- Airflow Direction 3
- Maximum Power Available to Router 5
- Supported Optics 5

CHAPTER 2

Prepare for Installation 7

- Standard Warning Statements 7
- Safety Guidelines 11
- Compliance and Safety Information 11
- Laser Safety 12
- Energy Hazard 12
- Preventing Electrostatic Discharge Damage 12
- Cautions and Regulatory Compliance Statements for NEBS 13
- Installation Guidelines 14
- Procure Tools and Equipment 15
 - Router Accessory Kits 15
- Prepare Your Location 17
- Airflow for Site Planning 18
- Prepare Yourself 18
- Prepare Rack for Chassis Installation 20
- Clearance Requirements 21

CHAPTER 3

Unpack and Install the Chassis 23

Install the Bracket Mounting Adapter on 23-inch Rack Post	23
Install Bottom-Support Rails	25
Rack Mount the Chassis	26
Mount Cisco 8711-32FH-M Router in a 2-Post Rack with Sliders	26
Mount Cisco 8711-32FH-M Router in a 4-Post Rack with Sliders	31
Ground the Chassis	34
Install Cable Management Brackets	37
Install a Cable Management Bracket on Cisco 8711-32FH-M	37

CHAPTER 4**Powering on the Router 39**

Power Supply Overview	39
Power Supply Unit Input and Output Ranges	40
Connect AC Power to the Chassis	41
Connect DC Power to the Chassis	44
AC/DC-Input Power Cord Options	46

CHAPTER 5**Connect Router to the Network 49**

Interfaces and Port Description	50
Connecting a Console to the Router	53
Connect the Management Interface	54
Transceivers, Connectors, and Cables	55
Transceiver and Cable Specifications	55
RJ-45 Connectors	55
Install and Remove QSFP Transceiver Modules	55
Required Tools and Equipment	56
Installing the Transceiver Module	57
Attach the Optical Network Cable	60
Removing the Transceiver Module	62
Connect Interface Ports	64
Disconnect Optical Ports from the Network	64
Maintain Transceivers and Optical Cables	64
Create the Initial Router Configuration	64
Verify Chassis Installation	66

CHAPTER 6	Replace Chassis Components	81
	Replace Fan Modules	81
	Replace Power Supply	83

CHAPTER 7	LEDs	85
	LEDs for Cisco 8711-32FH-M Router	85
	Chassis LEDs	85
	Port Status LEDs	86
	Fan LED	87
	Power Supply LEDs	89



CHAPTER 1

Cisco 8700 Series Routers Overview

- [Cisco 8700 Series Routers, on page 1](#)
- [Temperature and Physical Specifications, on page 3](#)
- [Weight and Power Consumption, on page 3](#)
- [Airflow Direction, on page 3](#)
- [Maximum Power Available to Router, on page 5](#)
- [Supported Optics, on page 5](#)

Cisco 8700 Series Routers

Cisco 8711-32FH-M

The Cisco 8711-32FH-M is a P100 silicon chip-based router that provides 12.8 Tbps of network bandwidth. The Cisco 8711-32FH-M is a fixed-port, high density, one rack-unit form factor router. Supported ports include 32 QSFP56-DD 400GbE ports. It includes HBM/2.5D for advanced performance, and supports Cisco 400GbE Digital Coherent Optical Modules.

Cisco 8711-32FH-M Router Front View


The front of the chassis has the following:

- 32 x QSFP56-DD 400GbE ports or 16 x 800G QSFP-DD800 ports



Note Each of these ports can support 2x400GbE or 1x800G traffic. You can have any combination of the available 400GbE or 800G ports that must not exceed the total bandwidth of 12.8 Tbps. All the 400GbE ports support breakout operation.

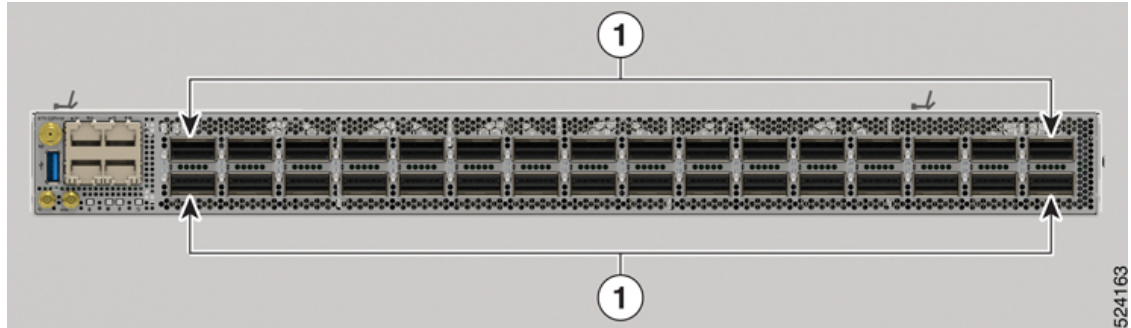Figure 1: Cisco 8711-32FH-M - Front View



1	32 QSFP56-DD 400GbE ports Note The top row is 16 x 800G QSFP-DD800 capable ports.
---	---

Cisco 8711-32FH-M Router Rear View

This table details the modules available in the rear of the chassis:


Table 1: Cisco 8711-32FH-M Router Rear View Details

Module Type	Description	Airflow Directions
Power Supply Modules	Two 2KW power modules that operate at 12 V capacity, providing 1+1 power redundancy and different AC/DC inputs capabilities.	<ul style="list-style-type: none"> • Port-Side-Intake (PSI) • Port-Side-Exhaust (PSE)
Fan Modules	Six 40mm counter-rotating double-fan trays providing N+1 redundancy. The fan modules can be removed individually.	<ul style="list-style-type: none"> • Port-Side-Intake (PSI) • Port-Side-Exhaust (PSE)



Note The chassis does not come preloaded with fans and power supply units.

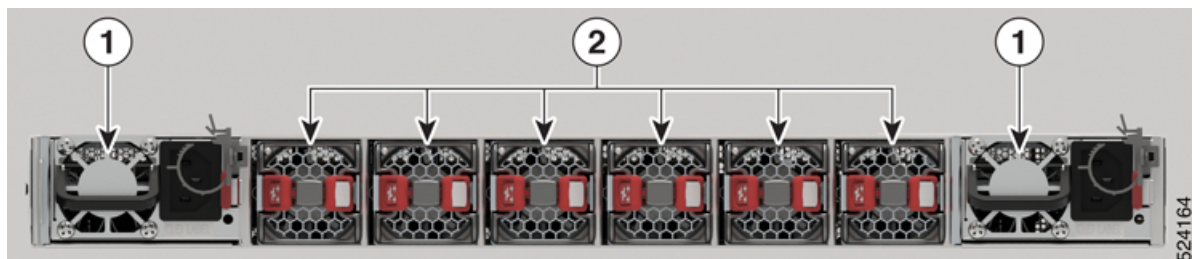Figure 2: Cisco 8711-32FH-M - Rear View



1	Power Supply
2	Fans



Note The fans and power modules illustrated have Port-Side-Intake (PSI) configuration.

Temperature and Physical Specifications

For temperature and physical specifications, refer to the *Physical characteristics* table in the *Cisco 8700 Router Data Sheet*.

Weight and Power Consumption

For weight and power consumption, refer to the *Physical characteristics* table in the *Cisco 8700 Router Data Sheet*.

Airflow Direction

The Cisco 8700 series routers support these configurations:

- Post-Side Intake (PSI) configuration - the airflow through both the fan trays and power supplies is from the front-side to the rear-side. In PSI configuration, the power and fan modules are in Burgundy color.
- Post-Side Exhaust (PSE) configuration - the airflow through both the fan trays and power supplies is from the rear-side to the front-side. In PSE configuration, the power and fan modules are in Cisco Safety Blue color.

Figure 3: Airflow Direction for Cisco 8711-32FH-M Router in PSI Configuration

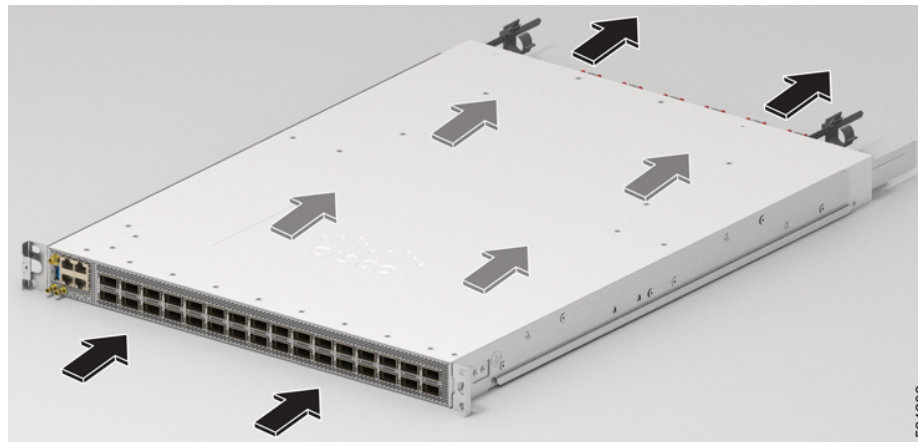


Figure 4: Airflow Direction for Cisco 8711-32FH-M Router in PSE Configuration



Figure 5: Airflow Direction for Cisco 8712-MOD-M Router in PSI Configuration



Figure 6: Airflow Direction for Cisco 8712-MOD-M Router in PSE Configuration





Note The airflow direction must be the same for all power supply and fan modules in the chassis.

Maximum Power Available to Router

The maximum power available to the router depends on the following factors:

- the input power from the power source
- the number of Power Supply Units (PSUs)
- the output capabilities of the PSUs
- the power redundancy mode

The following table lists the amount of power available for Cisco 8700 series routers from all available power trays.

Table 2: Maximum Power Available

Number of PSUs	Combined Mode (No redundancy)	1+1 Redundancy Mode (with Single Supply Loss)
1	2KW	—
2	4KW	2KW



Note In Cisco 8700 series routers, when the AC power supply unit operates at the low line voltage range of 90VAC to 140VAC, the router does not support 1+1 redundancy mode. The low line voltage maximum power per AC power supply unit is 1KW. Thus, the total power of two AC power supply units at the low line voltage is 2KW. Therefore, you must have two AC power supply units for the router to operate at low line voltage.

Supported Optics



Note To determine which transceivers and cables are supported by this router, refer to the Transceiver Module Group (TMG) Compatibility Matrix Tool:

<https://tmgmatrix.cisco.com/>



CHAPTER 2

Prepare for Installation

This chapter provides preinstallation information, such as recommendations and requirements that must be met before installing your router. Before you begin, inspect all items for shipping damage. If anything appears to be damaged or if you encounter problems installing or configuring your router, contact customer service.



Note The images in this chapter are only for representational purposes, unless specified otherwise. The chassis' actual appearance and size may vary.

- [Standard Warning Statements, on page 7](#)
- [Safety Guidelines, on page 11](#)
- [Compliance and Safety Information, on page 11](#)
- [Laser Safety, on page 12](#)
- [Energy Hazard, on page 12](#)
- [Preventing Electrostatic Discharge Damage, on page 12](#)
- [Cautions and Regulatory Compliance Statements for NEBS, on page 13](#)
- [Installation Guidelines, on page 14](#)
- [Procure Tools and Equipment, on page 15](#)
- [Prepare Your Location , on page 17](#)
- [Airflow for Site Planning, on page 18](#)
- [Prepare Yourself , on page 18](#)
- [Prepare Rack for Chassis Installation, on page 20](#)
- [Clearance Requirements, on page 21](#)

Standard Warning Statements

This section describes the warning definition and then lists core safety warnings grouped by topic.

General Safety Warnings



Warning Statement 1089—Instructed and Skilled Person Definitions

An instructed person is someone who has been instructed and trained by a skilled person and takes the necessary precautions when working with equipment.

A skilled person or qualified personnel is someone who has training or experience in the equipment technology and understands potential hazards when working with equipment.

There are no serviceable parts inside. To avoid risk of electric shock, do not open.



Warning Statement 9001—Product Disposal

Ultimate disposal of this product should be handled according to all national laws and regulations.



Warning Statement 1073—No User-Serviceable Parts

There are no serviceable parts inside. To avoid risk of electric shock, do not open.



Warning Statement 1074—Comply with Local and National Electrical Codes

To reduce risk of electric shock or fire, installation of the equipment must comply with local and national electrical codes.



Note Statement 407—Japanese Safety Instruction

You are strongly advised to read the safety instruction before using the product.

<https://www.cisco.com/web/JP/techdoc/pldoc/pldoc.html>

When installing the product, use the provided or designated connection cables/power cables/AC adapters.

〈製品仕様における安全上の注意〉
www.cisco.com/web/JP/techdoc/index.html

接続ケーブル、電源コードセット、ACアダプタ、バッテリーなどの部品は、必ず添付品または指定品をご使用ください。添付品・指定品以外をご使用になると故障や動作不良、火災の原因となります。また、電源コードセットは弊社が指定する製品以外の電気機器には使用できないためご注意ください。



Note Statement 438—Taiwan RoHS

Restricted Substances Content Disclosure Table web address: <http://www.cisco.com/go/taiwanrohs>



Warning Statement 445—Connect the Chassis to Earth Ground

To reduce the risk of electric shock, connect the chassis of this equipment to permanent earth ground during normal use.



Warning Statement 1015—Battery Handling

To reduce risk of fire, explosion, or leakage of flammable liquid or gas:

- Replace the battery only with the same or equivalent type recommended by the manufacturer.
 - Do not dismantle, crush, puncture, use a sharp tool to remove, short the external contacts, or dispose of the battery in fire.
 - Do not use if battery is warped or swollen.
 - Do not store or use battery in a temperature $> .$
 - Do not store or use battery in low air pressure environment $< .$
-



Warning Statement 1020—Electrical Power Outlet with Grounding

In accordance with the ABNT NBR 5410 Electrical Installation Standard, this equipment must be connected to an electrical power outlet that has grounding (three pins), which protects the user against electric shocks.



Warning Statement 1029—Blank Faceplates and Cover Panels

Blank faceplates and cover panels serve three important functions: they reduce the risk of electric shock and fire, they contain electromagnetic interference (EMI) that might disrupt other equipment, and they direct the flow of cooling air through the chassis. Do not operate the system unless all cards, faceplates, front covers, and rear covers are in place.



Warning Statement 1057—Hazardous Radiation Exposure

Use of controls, adjustments, or performance of procedures other than those specified may result in hazardous radiation exposure.



Warning Statement 1062—Remove Power Before Disconnecting

Explosion Hazard—Do not connect or disconnect any connector to this equipment unless power has been removed or you have verified that the area is nonhazardous. Secure any external connections that connect to this equipment by using screws, sliding latches, threaded connectors, or other means provided with this product.



Warning Statement 1071—Warning Definition

IMPORTANT SAFETY INSTRUCTIONS

Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Read the installation instructions before using, installing, or connecting the system to the power source. Use the statement number at the beginning of each warning statement to locate its translation in the translated safety warnings for this device.

SAVE THESE INSTRUCTIONS



Warning Statement 1090—Installation by Skilled Person

Only a skilled person should be allowed to install, replace, or service this equipment. See statement 1089 for the definition of a skilled person.

There are no serviceable parts inside. To avoid risk of electric shock, do not open.



Warning Statement 1091—Installation by an Instructed Person

Only an instructed person or skilled person should be allowed to install, replace, or service this equipment. See statement 1089 for the definition of an instructed or skilled person.

There are no serviceable parts inside. To avoid risk of electric shock, do not open.



Warning Statement 1093—Avoid Sharp Edges

Risk of personal injury. Avoid sharp edges when installing or removing replaceable units.



Warning Statement 1095—Install Switch in a Rack Mid-Mounting Position Only

For mounting railway-application equipment and for EN50155 standard compliance, the switch must be installed only in a rack mid-mounting position. If you install the switch in a front rack-mounting (cable side or power supply side) position or in a wall-mounting position, a mechanical failure can occur that results in the switch becoming detached from the rack.



Note **Statement 4007**—India Telecommunication Engineering Center (TEC) Requirements

This product conforms to the relevant essential requirements of Telecommunication Engineering Center (TEC) regulations from the Department of Telecommunications at the India Ministry of Communications.

Statement 8006—CE Mark

Safety Guidelines

Before you perform any procedure in this document, review the safety guidelines in this section to avoid injuring yourself or damaging the equipment. The following guidelines are for your safety and to protect the equipment. Because the guidelines do not include all hazards, be constantly alert.

- Keep the work area clear, smoke and dust-free during and after installation. Do not allow dirt or debris to enter into any laser-based components.
- Do not wear loose clothing, jewelry, or other items that could get caught in the router or other associated components.
- Cisco equipment operates safely when used in accordance with its specifications and product-usage instructions.
- If potentially hazardous conditions exist, do not work alone.
- Take care when connecting multiple units to the supply circuit so that wiring is not overloaded.
- This equipment must be grounded. Never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain about whether suitable grounding is available.
- When installing or replacing the unit, the ground connection must always be made first and disconnected last.
- To prevent personal injury or damage to the chassis, never attempt to lift or tilt the chassis using the handles on modules (such as power supplies, fans, or cards); these types of handles are not designed to support the weight of the unit.
- Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing.

Compliance and Safety Information

The Cisco 8000 Series Routers are designed to meet the regulatory compliance and safety approval requirements. For detailed safety information, see [Regulatory Compliance and Safety Information—Cisco 8000 Series Routers](#).

Laser Safety



Warning **Statement 1051**—Laser Radiation

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments.



Warning **Statement 1055**—Class 1/1M Laser

Invisible laser radiation is present. Do not expose to users of telescopic optics. This applies to Class 1/1M laser products.



Warning **Statement 1255**—Laser Compliance Statement

Pluggable optical modules comply with IEC 60825-1 Ed. 3 and 21 CFR 1040.10 and 1040.11 with or without exception for conformance with IEC 60825-1 Ed. 3 as described in Laser Notice No. 56, dated May 8, 2019.

Energy Hazard

The routers can be configured for a DC power source. Do not touch terminals while they are live. Observe the following warning to prevent injury.



Warning **Statement 1086**—Replace Cover on Power Terminals

Hazardous voltage or energy may be present on power terminals. To reduce the risk of electric shock, make sure the power terminal cover is in place when the power terminal is not being serviced. Be sure uninsulated conductors are not accessible when the cover is in place.

Preventing Electrostatic Discharge Damage

Many router components can be damaged by static electricity. Not exercising the proper electrostatic discharge (ESD) precautions can result in intermittent or complete component failures. To minimize the potential for ESD damage, always use an ESD-preventive antistatic wrist strap (or ankle strap) and ensure that it makes adequate skin contact.



Note Check the resistance value of the ESD-preventive strap periodically. The measurement should be 1–10 megohms.

Before you perform any of the procedures in this guide, attach an ESD-preventive strap to your wrist and connect the leash to the chassis.

Cautions and Regulatory Compliance Statements for NEBS

The NEBS-GR-1089-CORE regulatory compliance statements and requirements are discussed in this section.



Note **Statement 7001**—ESD Mitigation

This equipment may be ESD sensitive. Always use an ESD ankle or wrist strap before handling equipment. Connect the equipment end of the ESD strap to an unfinished surface of the equipment chassis or to the ESD jack on the equipment if provided.



Warning The intrabuilding port(s) of the equipment or subassembly, which is the management Ethernet port, must use shielded intrabuilding cabling/wiring that is grounded at both ends. Statement 7003



Warning The intrabuilding port(s) of the equipment or subassembly, which is the management Ethernet port, must not be metallically connected to interfaces that connect to the OSP or its wiring. These interfaces are designed for use as intrabuilding interfaces only (Type 2 or Type 4 ports as described in GR-1089-CORE) and require isolation from the exposed OSP cabling. The addition of Primary Protectors is not sufficient protection in order to connect these interfaces metallically to OSP wiring. Statement 7005



Note **Statement 7011**— Surge Protection Device Requirements for GR-1089 Antenna Ports

Protect equipment antenna ports, that are classified as Type 6 according to GR-1089-CORE, with lightning surge protectors that are rated at a minimum of 600 V peak surge of 1.2/50 uS duration.

Connecting a Cable to the GNSS Antenna Interface

- GNSS modules have built-in ESD protections on all pins, including the RF-input pin. However, additional surge protection is required if an outdoor antenna is being connected. The Lightning Protector must be able to provide a low clamping voltage (less than 600V).
 - A lightning protection must be mounted at the place where the antenna cable enters the building. The primary lightning protection must be capable of conducting all potentially dangerous electrical energy to PE (Protective Earth).
 - Surge arrestors should support DC-pass and suitable for the GPS frequency range (1.575GHz) with low attenuation.
-

**Warning** **Statement 7012**—Equipment Interfacing with AC Power Ports

Connect this equipment to AC mains that are provided with a surge protective device (SPD) at the service equipment that complies with NFPA 70, the National Electrical Code (NEC).

**Note** **Statement 7013**—Equipment Grounding Systems—Common Bonding Network (CBN)

This equipment is suitable for installations using the CBN.

**Warning** The battery return conductor of this equipment shall be treated as (DC-I). Statement 7016**Note** **Statement 7018**—System Recover Time

The equipment is designed to boot up in less than 30 minutes provided the neighboring devices are fully operational.

**Note** **Statement 8015**—Installation Location Network Telecommunications Facilities

This equipment is suitable for installation in network telecommunications facilities.

**Note** **Statement 8016**—Installation Location Where the National Electric Code (NEC) Applies

This equipment is suitable for installation in locations where the NEC applies.

Installation Guidelines

Before installing the chassis, ensure that the following guidelines are met:

- Site is properly prepared so that there is sufficient room for installation and maintenance.
- Operating environment is within the ranges that are listed in Environment and Physical specifications. For more details on environmental requirements, see *Cisco 8700 Router Data Sheet*.
- Chassis is mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting the chassis in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the chassis in the rack.

- Airflow around the chassis and through the vents is unrestricted.
- Cabling is away from sources of electrical noise, such as radios, power lines, and fluorescent lighting fixtures. Make sure that the cabling is safely away from other devices that might damage the cables.
- Each port must match the wave-length specifications on each end of the cable, and the cable must not exceed the stipulated cable length.



Note Cisco 8000 Series Routers function in operating temperatures of up to 40°C at sea level. For every 300 meters (1000 ft) elevation upto 1800 meters (6000 ft), the maximum temperature is reduced by 1°C. For more details on environmental requirements, see *Cisco 8700 Router Data Sheet*.

Procure Tools and Equipment

Obtain these necessary tools and equipment for installing the chassis:

- Number 1 and number 2 Phillips screwdrivers with torque capability to rack-mount the chassis.
- 3/16-inch flat-blade screwdriver.
- Tape measure and level.
- ESD wrist strap or other grounding device.
- Antistatic mat or antistatic foam.
- Two-hole ground lug (1).
- A crimping tool specified by the lug manufacturer that is large enough to accommodate the girth of the lug.
- Wire-stripping tool.
- Optical transceiver extraction tool.

Router Accessory Kits

Router Accessory Kit

The accessory kits for the Cisco 8700 series router includes the following:

Table 3: Router Accessory Kits - Cisco 8711-32FH-M Router

Kit Name	Kit PID	Description	Quantity
Rack mount kit for 4-post rack	8700-1RU-4P-KIT	Slider brackets	2
		Slider assembly	2
		Bracket mounting adapter	4
		Cable management bracket	1
		M5 x 12.45-mm Phillips dome-head screws	24
		M5 x 7.93-mm Phillips dome-head screws	2
		M4 x 5.7-mm Phillips flat-head screws	14
		M4 x 20-mm Phillips dome-head screws	1
		M5 washer	2
		Ground lug	1
		Ground lug extension bracket	1
Rack mount kit for 2-post rack	8700-1RU-2P-KIT	Slider brackets	2
		Slider assembly	2
		Bracket mounting adapter	4
		Cable management bracket	1
		M5 x 12.45-mm Phillips dome-head screws	22
		M5 x 7.93-mm Phillips dome-head screws	2
		M4 x 5.7-mm Phillips flat-head screws	14
		M4 x 20-mm Phillips dome-head screws	1
		M5 washer	2
		Ground lug	1
		Ground lug extension bracket	1



Note If you purchased this product through a Cisco reseller, you might receive more contents in your kit, such as documentation, hardware, and power cables.

The shipped cables depend on your specification when placing an order. See the *Power Supply Power Cord Specifications* section for information on the available power cords.

Discrepancies or Damage?

If you notice any discrepancies or damage, send the following information to your customer service representative by email:

- Invoice number of the shipper (see the packing slip)
- Model and serial number of the missing or damaged unit
- Description of the problem and how it affects the installation
- Photos of the damage to external packaging, internal packaging, and product

Prepare Your Location

This section illustrates how the building that houses the chassis must be properly grounded to the earth ground.




Note Unless specified otherwise, the image is only for representational purposes. The rack's actual appearance and size may vary.



Note This image is only for representational purposes. Your grounding requirement depends on your building.

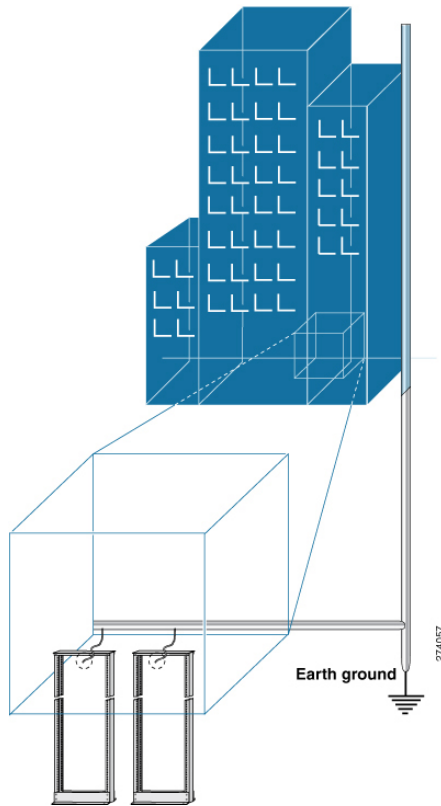Figure 7: Building with Rack Room Connected to Earth Ground



Airflow for Site Planning


Table 4: Cisco 8700 Airflow

Device	Maximum System Airflow (CFM) at Maximum System Temperature
Cisco 8711-32FH-M	160

Prepare Yourself

This section illustrates how to prepare yourself before removing the chassis from the sealed antistatic bag. The figures show how to cuff the ESD strap around the wrist and the ground cord that connects the cuff to the ground. ESD wrist straps are the primary means of controlling static charge on personnel.

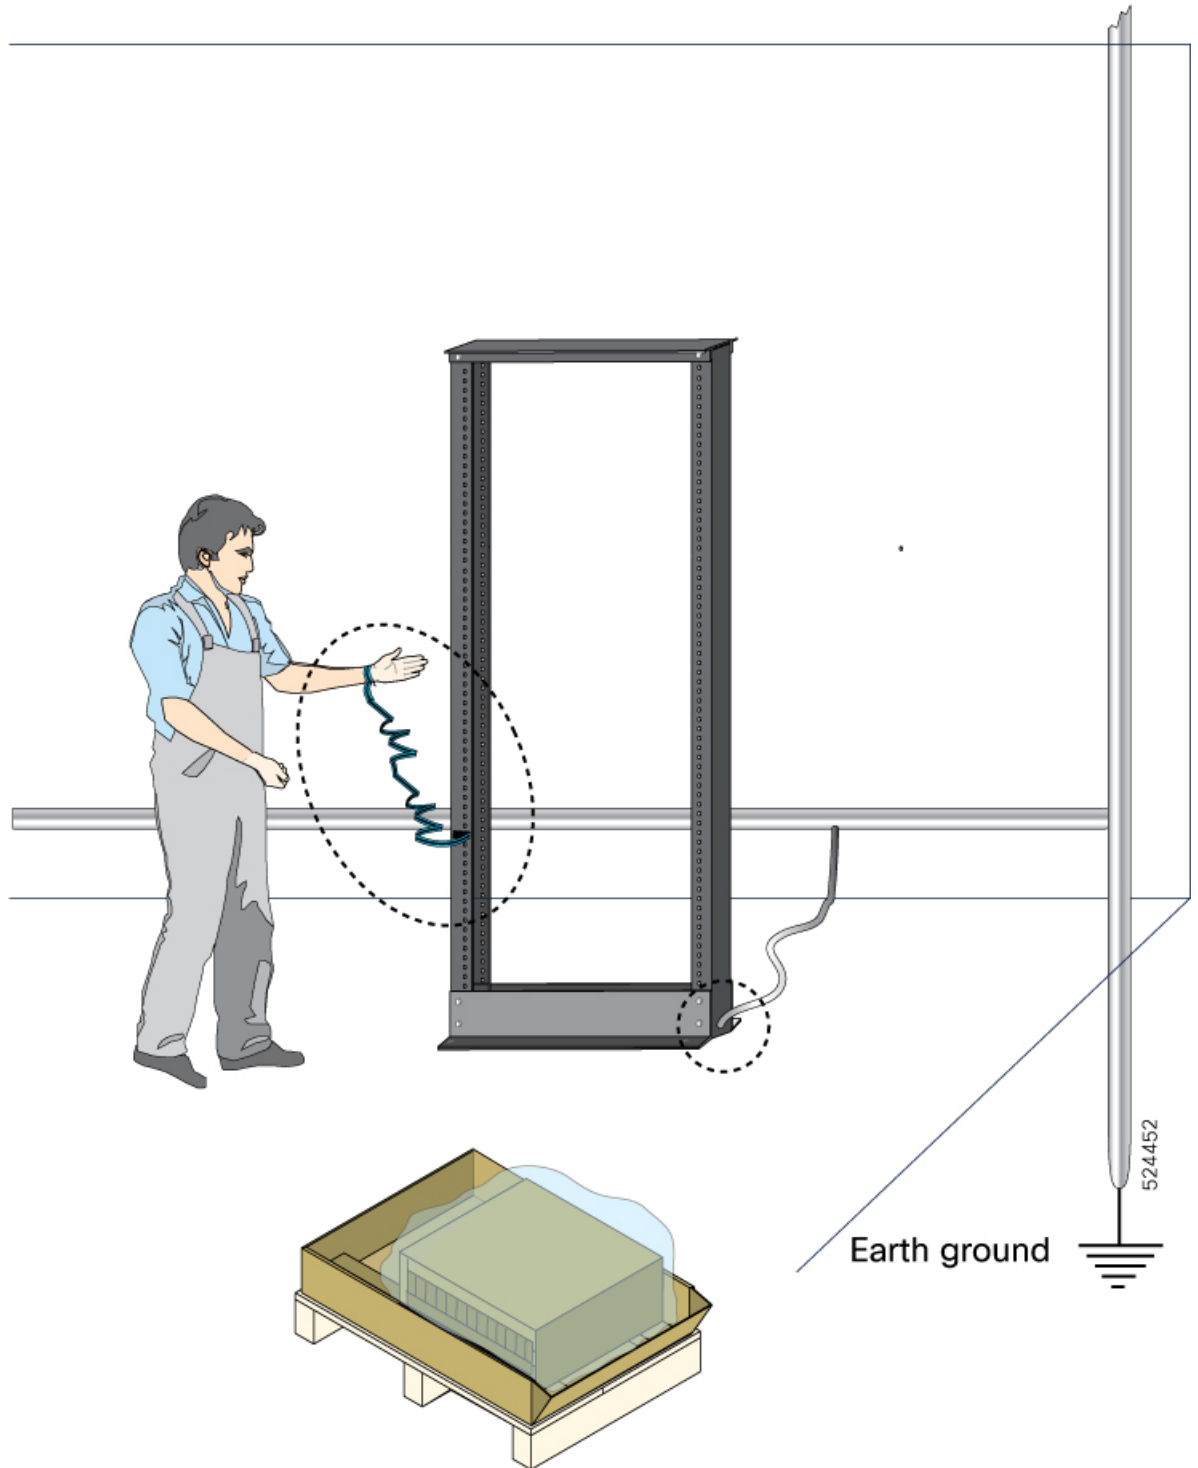Figure 8: Wearing the ESD Strap



Prepare Rack for Chassis Installation

Install the Cisco 8700 Series Routers on a standard 19 inch or 23 inch, Electronic Industries Alliance (EIA) rack with mounting rails that conform to English universal hole spacing according to Section 1 of the ANSI/EIA-310-D-1992 standard.



Note The Cisco 8700 router rack mount kit contains the slider brackets for 19-inch rack. To install the chassis in a 23-inch rack or an ETSI rack, you need the bracket mounting adapter to accommodate the 19-inch rack mount brackets.

The spacing between the posts of the rack must be (EIA-310-D-1992 19-inch rack compatible) wide enough to accommodate the width of the chassis.

Figure 9: Rack Specification EIA (19 inches and 23 inches)

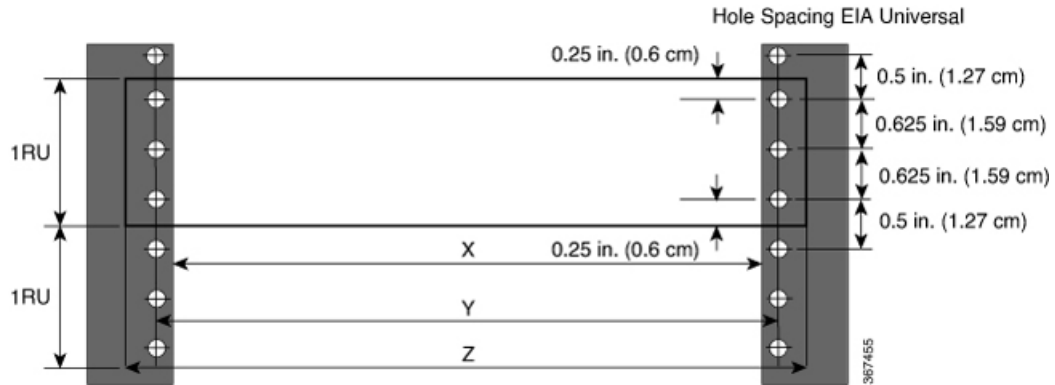


Table 5: Rack specification EIA (19 inches and 23 inches)

Post Type	Rack Type	Rack Front Opening (X)	Rack Mounting Hole Centre-Centre (Y)	Mounting Flange Dimension (Z)
4 Post	19 inches (48.3 centimeters)	450.8mm (17.75")	465mm (18.312")	482.6mm (19")
2 Post				
4 Post	23 inches (58.4 centimeters)	552.45mm (21.75")	566.7mm (22.312")	584.2mm (23")
2 Post				

Before you move the chassis or mount the chassis into the rack, we recommend that you do the following:

Procedure

- Step 1** Place the rack at the location where you plan to install the chassis.
- Step 2** (Optional) Secure the rack to the floor.

To bolt the rack to the floor, a floor bolt kit (also called an anchor embedment kit) is required. For information on bolting the rack to the floor, consult a company that specializes in floor mounting kits (such as Hilti; see Hilti.com for details). Ensure that floor mounting bolts are accessible, especially if annual retorquing of bolts is required.

Note Ensure that the rack in which the chassis is being installed is grounded to earth ground.


Clearance Requirements

To ensure adequate airflow, we recommended that you maintain a minimum of 6 in. (15.24 cm) front and rear clearance for air intake/exhaust at room temperature up to 55C, and maintain a minimum of 4.0 in. (10.16 cm) front and rear clearance for air intake/exhaust at room temperature up to 40C. Leave an additional 6.0 in. (15.24 cm)/4.0 in. (10.16 cm) rear clearance for removal and installation of power supplies and fan modules.

If the router is installed in a perforated door cabinet, maintain a minimum of 6 in. (15.24 cm) from the inside of the door. The front and rear doors of the cabinet must be perforated with a minimum open area of 70%.

This figure shows the clearances required for the installation of Cisco 8700 Series Routers.

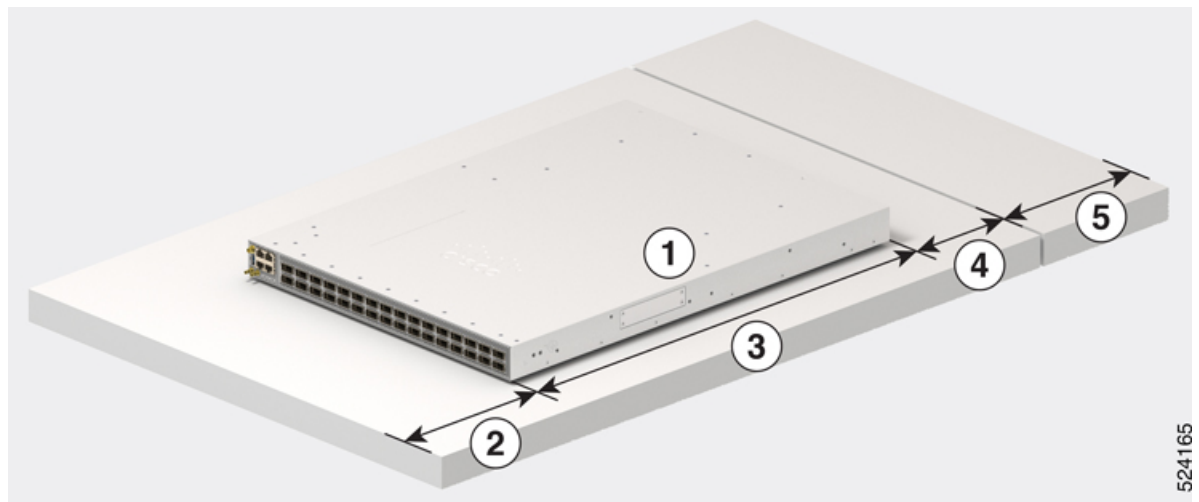Figure 10: Clearances Required Around the Chassis - Cisco 8711-32FH



1	Chassis	4	<ul style="list-style-type: none"> • 6.0 in. (15.24 cm) front clearance for air intake/exhaust at room temperature up to 55C • 4.0 in. (10.16 cm) front clearance for air intake/exhaust at room temperature up to 40C
2	<ul style="list-style-type: none"> • 6.0 in. (15.24 cm) front clearance for air intake/exhaust at room temperature up to 55C 	5	Rear service area for the fan and power modules replacement

Clearance Requirements

	<ul style="list-style-type: none">• 4.0 in. (10.16 cm) front clearance for air intake/exhaust at room temperature up to 40C		
3	Chassis depth		



CHAPTER 3

Unpack and Install the Chassis



Note The images in this chapter are only for representation purposes, unless specified otherwise. The chassis' actual appearance and size may vary.

- [Install the Bracket Mounting Adapter on 23-inch Rack Post, on page 23](#)
- [Install Bottom-Support Rails, on page 25](#)
- [Rack Mount the Chassis, on page 26](#)
- [Install Cable Management Brackets, on page 37](#)

Install the Bracket Mounting Adapter on 23-inch Rack Post

To install a chassis on a 23-inch 4-post or 2-post rack, you must first install the bracket mounting adapter on the rack. Perform these steps to install the bracket mounting adapter:

Rack Mount Kit

- 4 Post: NC57-2RU-ACC-KIT3
- 2 Post: NC57-2RU-ACC-KIT4

Procedure

Mount the Bracket mounting adapter on the 23-inch rack post. Use three 12-24 Phillips pan-head screws with 30 in-lb (3.39 N.m) to attach each Bracket mounting adapter to the rear and front rack post on either sides.

Figure 11: Mount Bracket Mounting Adapter on a 23-inch 2-Post Rack


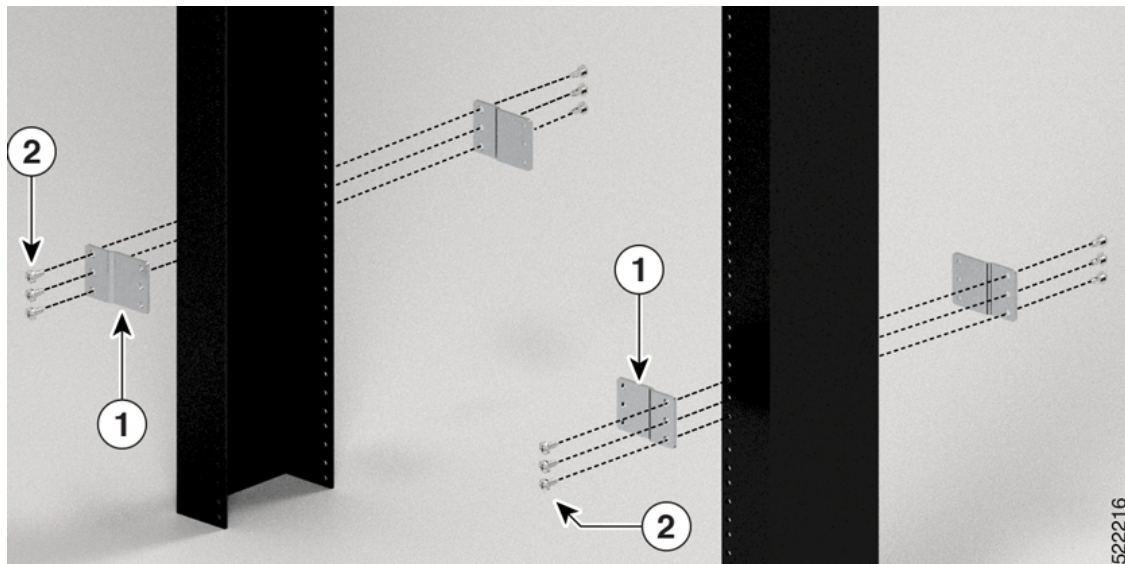


Figure 12: Mount Bracket Mounting Adapter on a 23-inch 4-Post Rack

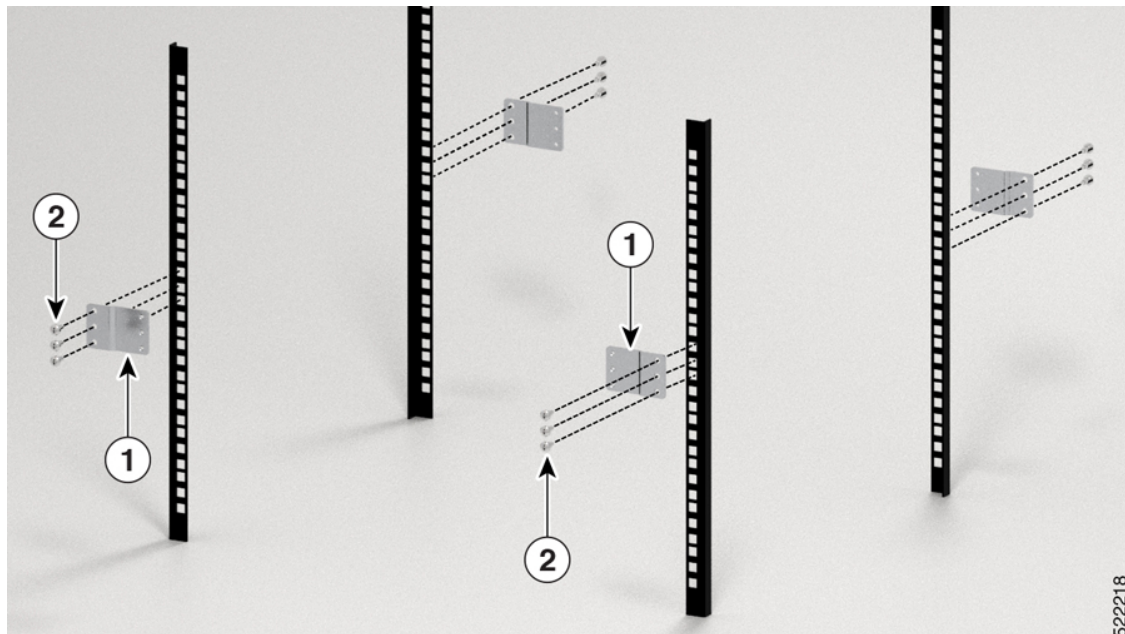

1	Bracket mounting adapter	2	Screws
---	--------------------------	---	--------

What to do next

Continue with the installation of the router by referring to the procedures for the 19-inch rack post.


Install Bottom-Support Rails

The bottom-support rails support the weight of the router chassis in the rack. To maximize the stability of the rack, you must attach these rails at the lowest possible rack unit (RU).

Procedure

- Step 1** Position the vertical rack rails at 32" depth to match with the length of the bottom-support rails. Check spacing considerations.
- Step 2** Attach the bottom-support rail to the rack by using a Phillips torque screwdriver. Use an equivalent M5 x 12.45 mm or 12-24 x 1/2 inch screws for each end of the bottom-support rails and tighten each screw to 40 in-lbs (4.5 N-m) of torque.

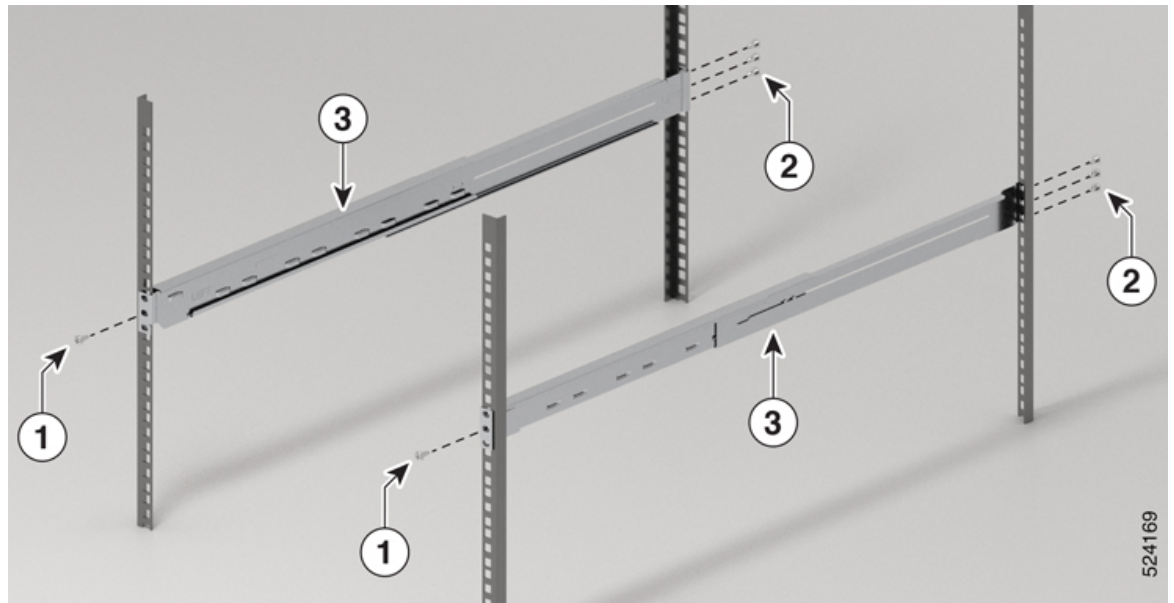Figure 13: Attach Bottom-Support Rails to Rack for Cisco 8711-32FH Router



1	M5 x 6-mm Phillips flat-head screws on the front (2)
2	M5 x 6-mm Phillips flat-head screws on the rear (6)
3	Bottom-support rails

- Step 3** Repeat Steps 1 and 2 to attach the other bottom-support rail to the rack.

Note Ensure that the two bottom-support rails are level with one another. If they are not level, adjust the higher rail down to the level of the lower rail.

Rack Mount the Chassis

The chassis can be mounted on a 4-post or a 2-post rack.



Warning **Statement 1032**—Lifting the Chassis

To prevent personal injury or damage to the chassis, never attempt to lift or tilt the chassis using the handles on modules, such as power supplies, fans, or cards. These types of handles are not designed to support the weight of the unit.



Warning **Statement 1006**—Chassis Warning for Rack-Mounting and Servicing

To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- This unit should be mounted at the bottom of the rack if it is the only unit in the rack.
 - When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
 - If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.
-



Warning **Statement 1096**—Headset Warning

High Sound Pressure—Avoid listening to high volume levels for long periods to prevent possible hearing damage.



Warning **Statement 1098**—Lifting Requirement

people are required to lift the heavy parts of the product. To prevent injury, keep your back straight and lift with your legs, not your back.



Note **Statement 4023**—Product Usage Restrictions

This product is designed for indoor usage only. Outdoor usage is not permitted.

Mount Cisco 8711-32FH-M Router in a 2-Post Rack with Sliders

This section describes how to use the rack-mount kit provided with the 8711-32FH-M router, to install the chassis into a cabinet or a 2-post 19-inch rack.



Caution If the rack is on wheels, ensure that the brakes are engaged or that the rack is otherwise stabilized.

For a complete list of items contained in the 2-post rack-mount kit (8700-1RU-2P-KIT) provided with the router, see [Router Accessory Kits](#).

Before you begin


To install the router on a 23-inch rack, install the bracket mounting adapter on the 23-inch rack post (see [Install the Bracket Mounting Adapter on 23-inch Rack Post](#)) and then continue with this procedure.

Procedure

Step 1 Install the slider assembly on the rack as follows:

- a) Align the left slider assembly to the rear post rack holes. The slider rail should be at the bottom.
- b) Use four M5 12.45-mm Phillips dome-head screws with 27.44 in-lb (3.1 N-m) to attach the slider assembly to the rear post.
- c) Repeat Steps 1a and 1b with the other slider assembly on the other side of the router.

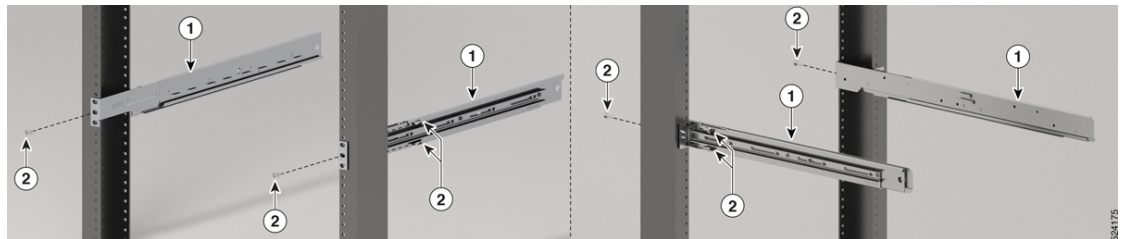Figure 14: Rack-Mount Slider Assembly on a 19-inch 2-Post Rack




1	2 x M5 12.45-mm Phillips dome-head screws. One screw on each side. 4 x M5 12.45-mm Phillips dome-head screws on the rear side. Two screws on each side.	2	Slider assembly
---	--	---	-----------------

Note In case of a 23-inch 2-post rack, mount the slider assembly on the bracket mounting adapter following the same procedure outlined in Step 2.

Step 2 Install the ground lug extension bracket on the chassis. Use two M4 x 5.7-mm Phillips flat-head screws with 13.28 in-lbs (1.5 N-m).

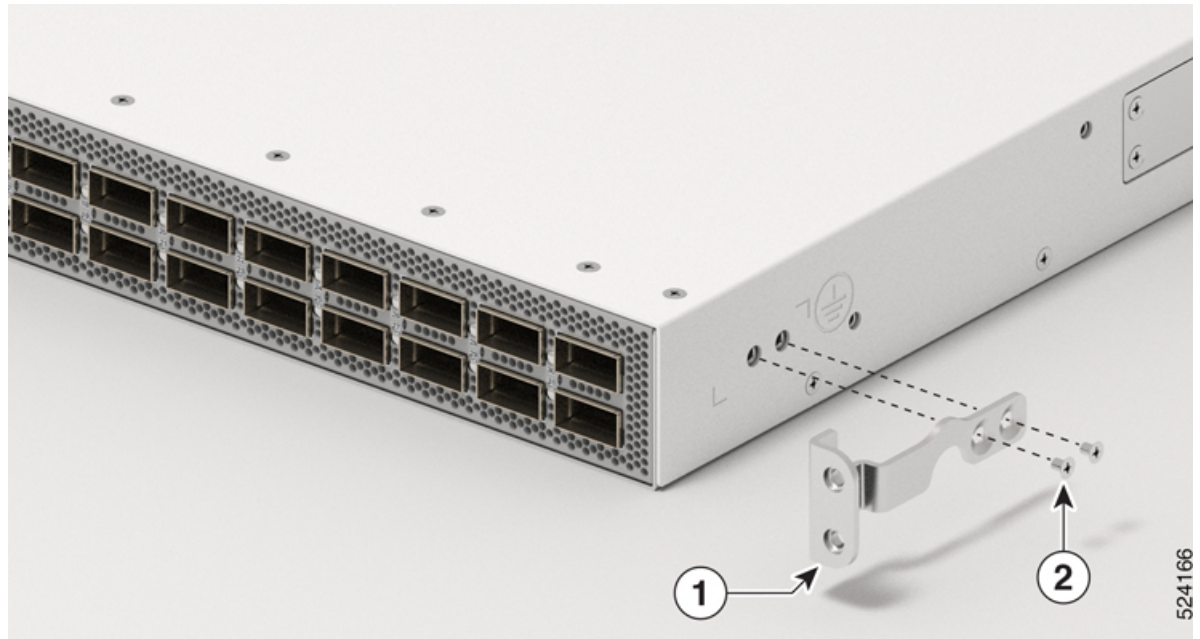Figure 15: Install the Ground Lug Extension Bracket on the Cisco 8711-32FH-M Router




1	Ground lug extension bracket	2	2 x M4 x 5.7-mm Phillips flat-head screws
---	------------------------------	---	---


Step 3

Install slider brackets to the router as follows:

- a) Determine which end of the chassis is to be located in the cold aisle as follows:
 - If the router has port-side intake modules, position the router so that the ports are in the cold aisle.
 - If the router has port-side exhaust modules, position the router so that the fan and power supply modules are in the cold aisle.
- b) With the slider bracket ears aligned to the front of the chassis as shown in the image, use twelve M4 x 5.7 mm flat head screws with 13.28 in-lbs (1.5 N-m). to attach the bracket to the chassis.
- c) Repeat the [step](#) with the other slider bracket on the other side of the router.

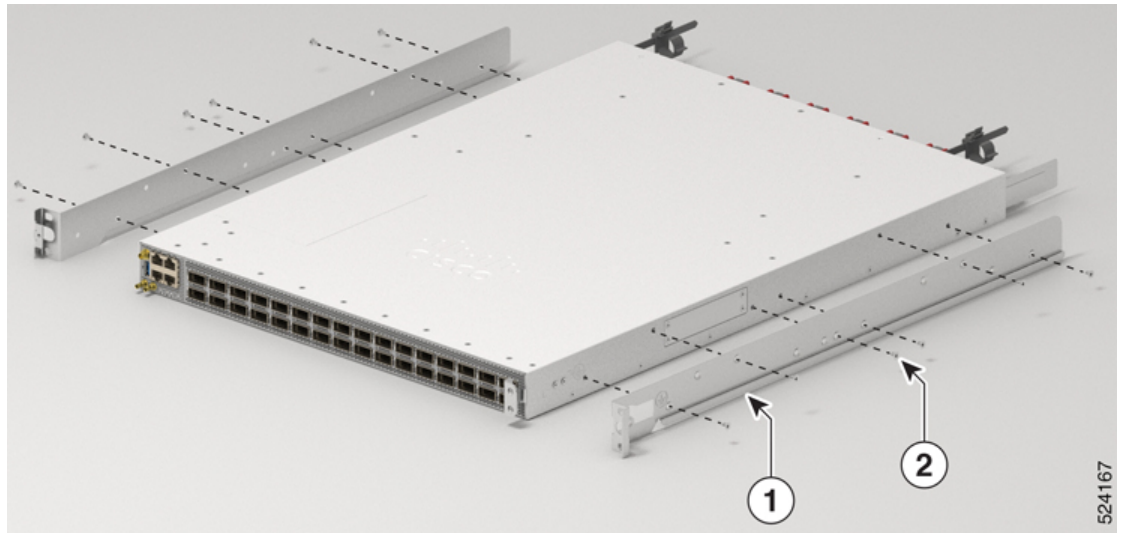Figure 16: Mount Slider Brackets in a 19-inch 2-Post Cisco 8711-32FH-M Router

Align the slider bracket with router face plate.

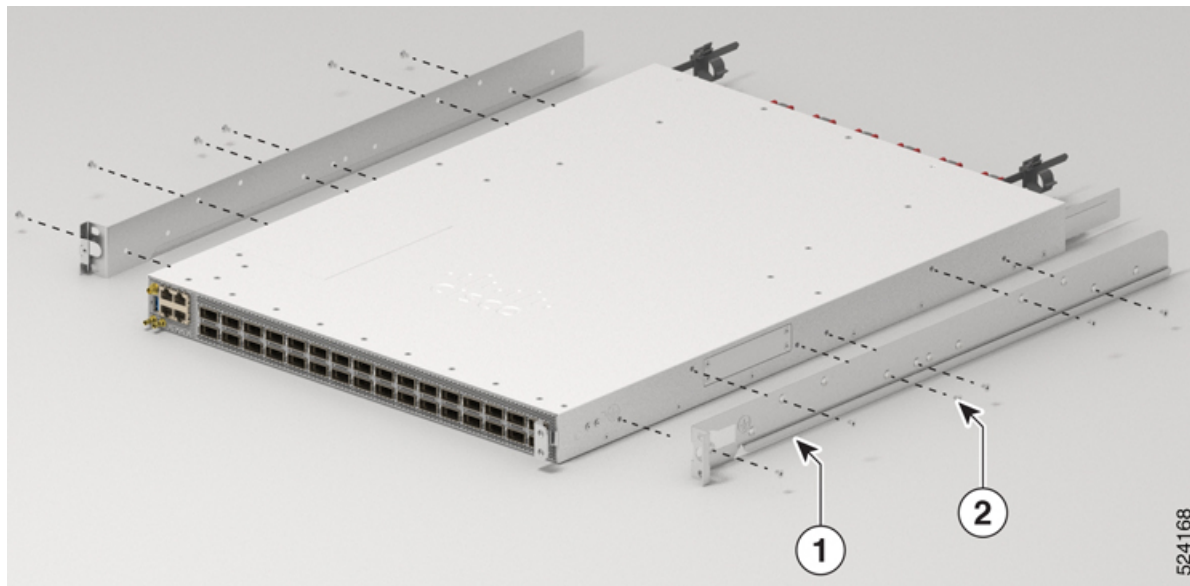Figure 17: Mount Slider Brackets in a 19-inch 2-Post Cisco 8711-32FH-M Router along the Marking Line

Align the slider brackets with the marking line. Refer this [Figure 22: Install the Ground Lug Extension Bracket Along Marking Line on a 19-inch 4-Post Cisco 8711-32FH-M Router](#) for marking line details.


1	Slider brackets	2	6 x M4 5.7-mm Phillips flat head screws on each side
---	-----------------	---	--

Step 4 Install the router onto the 2-post rack as follows:

- a) Holding the router with both hands, position the back of the router between the front posts of the rack.
- b) Move the router until the slider brackets come in contact with slider rails installed in the rack. Slide the slider brackets onto the slider rails, and then gently move the router all the way into the rack.

- c) Hold the chassis level while the second person inserts six pan-head screws (M5) in each of the two rack-mount brackets (using a total of twelve screws) and into the cage nuts or threaded holes in the vertical rack-mounting rails.
- d) Tighten the M5 12.45-mm Phillips dome-head screws to 27.44 in-lb (3.1 N-m).

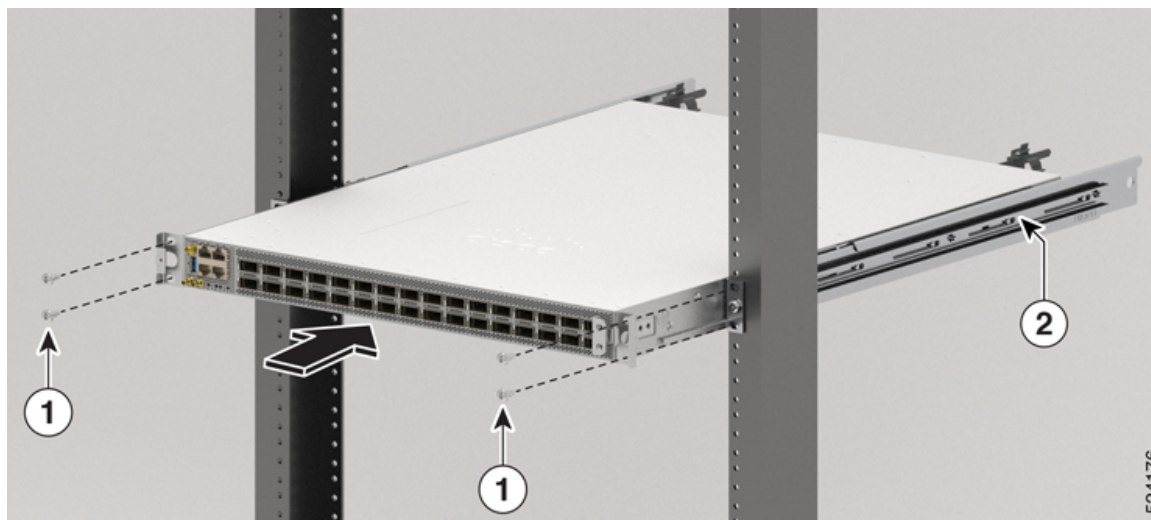Figure 18: Slide the Chassis into the 19-inch 2-Post Rack



1	2 x M5 12.45-mm Phillips dome-head screws. Two screws on each side.
2	Slider assembly

Figure 19: Chassis Mounted into the 19-inch 2-Post Rack



Mount Cisco 8711-32FH-M Router in a 4-Post Rack with Sliders

This section describes how to use the rack-mount kit provided with the Cisco 8711-32FH-M router, to install the chassis into a cabinet or a 4-post 19-inch rack.



Caution If the rack is on wheels, ensure that the brakes are engaged or that the rack is otherwise stabilized.

For a complete list of items contained in the 4-post rack-mount kit (8700-1RU-4P-KIT) provided with the router, see [Router Accessory Kits](#).

Before you begin


To install the router on a 23-inch rack, install the bracket mounting adapter on the 23-inch rack post (see [Install the Bracket Mounting Adapter on 23-inch Rack Post](#)) and then continue with this procedure.

Procedure

Step 1 Install the slider assembly on the rack as follows:

- Align the outer slider of the left slider assembly to the rear post rack holes and the inner slider of the left slider assembly to the front post rack holes. The slider rail should be at the bottom.
- Use four M5 12.45-mm Phillips dome-head screws (three on the rear side and one on the front side) with 27.44 in-lb (3.1 N-m) to attach the slider assembly to the rear and front rack post.
- Repeat Steps 1a and 1b with the other slider assembly on the other side of the router.

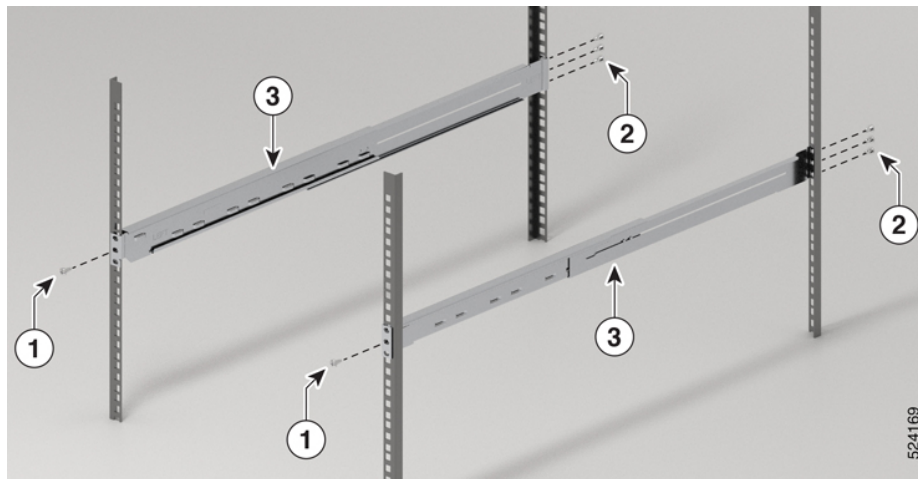Figure 20: Rack-Mount Slider Assembly on a 19-inch 4-Post Rack




1	Front screws – 2 x M5 12.45-mm Phillips dome-head screws. One screw on each side.	2	Rear screws – 6 x M5 12.45-mm Phillips dome-head screws. Three screws on each side.
3	Slider assembly		

Note In case of a 23-inch 2-post rack, mount the slider assembly on the bracket mounting adapter following the same procedure outlined in Step 1.

Step 2 Install slider brackets to the router as follows:


- a) Determine which end of the chassis is to be located in the cold aisle as follows:
 - If the router has port-side intake modules, position the router so that the ports are in the cold aisle.
 - If the router has port-side exhaust modules, position the router so that the fan and power supply modules are in the cold aisle.
- b) Install the ground lug extension bracket on the chassis. Use two M4 x 5.7-mm Phillips flat-head screws with 13.28 in-lbs (1.5 N-m).

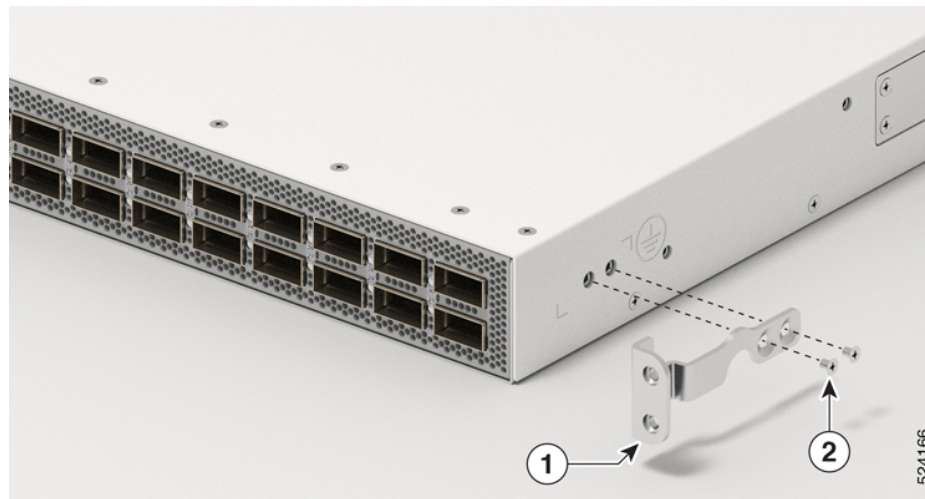Figure 21: Install the Ground Lug Extension Bracket on the Cisco 8711-32FH-M Router



1	Ground lug extension bracket	2	2 x M4 x 5.7-mm Phillips flat-head screws
---	------------------------------	---	---

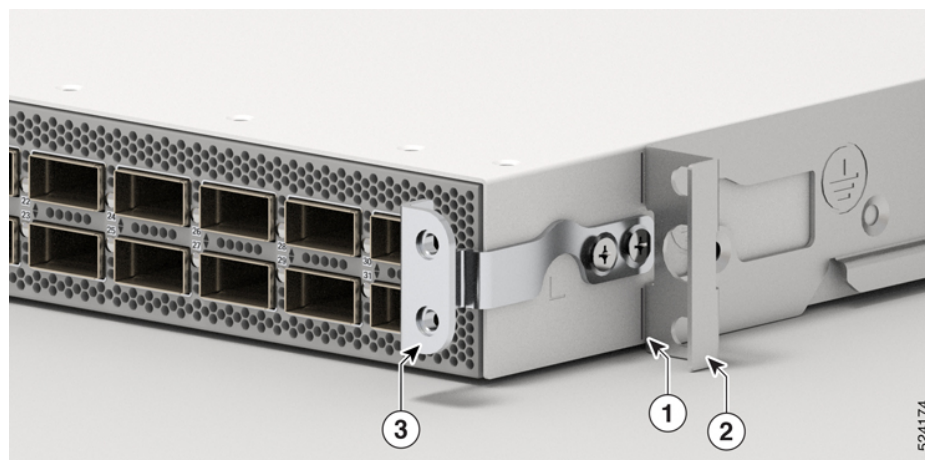
Figure 22: Install the Ground Lug Extension Bracket Along Marking Line on a 19-inch 4-Post Cisco 8711-32FH-M Router



1	Marking line for alignment	2	Slider brackets
3	Ground lug extension bracket		


- c) With the slider bracket ears aligned to the front of the chassis as shown in the image, use six M4 x 5.7-mm Phillips flat-head screws with 13.28 in-lbs (1.5 N-m) to attach the bracket to the chassis.
- d) Repeat 2c with the other slider bracket on the other side of the router.

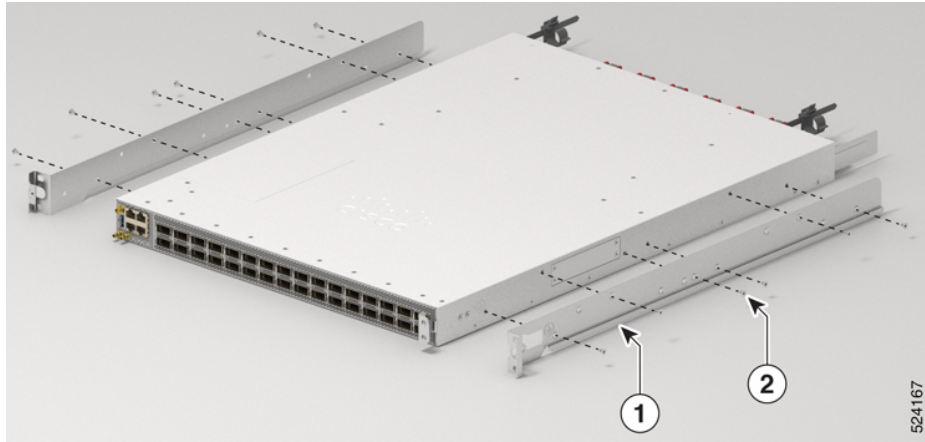Figure 23: Mount Slider Brackets on the Cisco 8711-32FH-M Router



Align the slider bracket with router face plate.

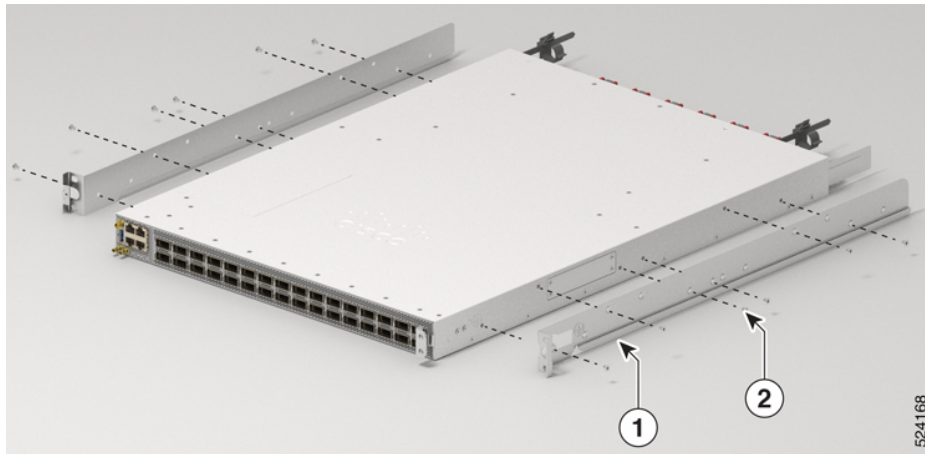Figure 24: Mount Slider Brackets on the Cisco 8711-32FH-M Router along the Marking Line



Align the slider brackets with the marking line. Refer this [Figure 22: Install the Ground Lug Extension Bracket Along Marking Line on a 19-inch 4-Post Cisco 8711-32FH-M Router](#) for marking line details.


1	Slider bracket	2	6 x M4 x 5.7-mm Phillips flat- head screws on each side
---	----------------	---	---

Step 3 Install the router onto the 4-post rack as follows:

- a) Holding the router with both hands, position the back of the router between the front posts of the rack.

- b) Move the router until the slider brackets come in contact with slider rails installed in the rack. Slide the slider brackets onto the slider rails, and then gently move the router all the way into the rack.
- c) Hold the chassis level while the second person inserts two screws M5 12.45-mm Phillips dome-head screws in each of the two rack-mount brackets (using a total of four screws) and into the cage nuts or threaded holes in the vertical rack-mounting rails.
- d) Tighten the M5 12.45-mm Phillips dome-head screw to 27.44 in-lb (3.1 N-m).

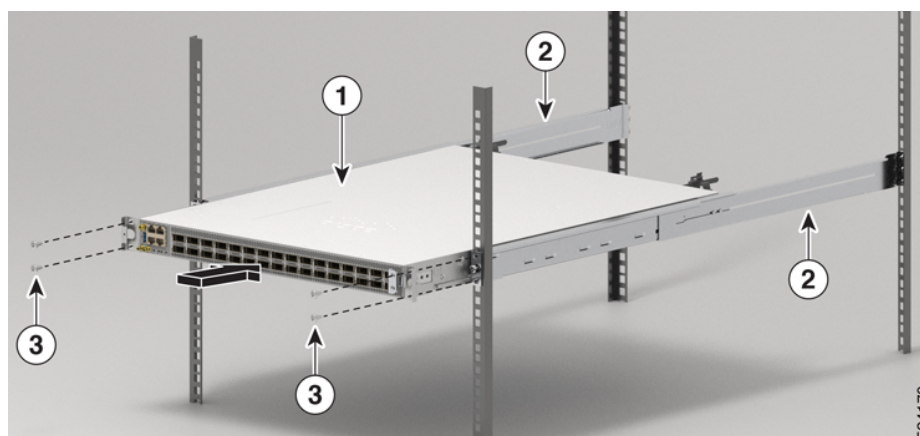Figure 25: Slide the Cisco 8711-32FH-M Router in 19-inch 4-Post Rack



1	Chassis	3	4 x M5 12.45-mm Phillips dome-head screws. Two screws on each side.
2	Slider assembly		

Ground the Chassis



Warning Statement 1101—Connected To Grounded Outlet

In the Scandinavian countries (Denmark, Finland, Iceland, Norway, and Sweden) the appliance must be connected to a grounded outlet.



Warning Statement 1024—Ground Conductor

This equipment must be grounded. To reduce the risk of electric shock, never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.

**Warning Statement 1046**—Installing or Replacing the Unit

To reduce risk of electric shock, when installing or replacing the unit, the ground connection must always be made first and disconnected last.

If your unit has modules, secure them with the provided screws.

**Warning Statement 2004**—Grounded Equipment

This equipment is intended to be grounded to comply with emission and immunity requirements. Ensure that the switch functional ground lug is connected to earth ground during normal use.

**Note Statement 7015**—Equipment Bonding and Grounding

When you use thread-forming screws to bond equipment to its mounting metalwork, remove any paint and nonconductive coatings and clean the joining surfaces. Apply an antioxidant compound before joining the surfaces between the equipment and mounting metalwork.



Caution Grounding the chassis is required, even if the rack is already grounded. A grounding pad with two threaded holes is provided on the chassis for attaching either a grounding lug or grounding plate. The ground lug must be NRTL-listed. In addition, a copper conductor (wires) must be used and the copper conductor must comply with NEC code for ampacity.




Caution When terminating the frame ground, do not use soldering lug connectors, screwless (push-in) connectors, quick connect connectors, or other friction-fit connectors.

Procedure

- Step 1** Use a wire-stripping tool to remove approximately 0.75 inches (19 mm) of the covering from the end of the #6 AWG grounding cable.
- Step 2** Insert the stripped end of the grounding cable into the open end of the grounding lug.
- Step 3** Use the crimping tool to secure the grounding cable in the grounding lug.
- Step 4** Attach the ground cable. Attach one end of the shelf ground cable (#6 AWG cable) to the ground lug extension bracket using the specified dual-hole lug connector.
- Step 5** Attach the ground lug extension bracket to the chassis.

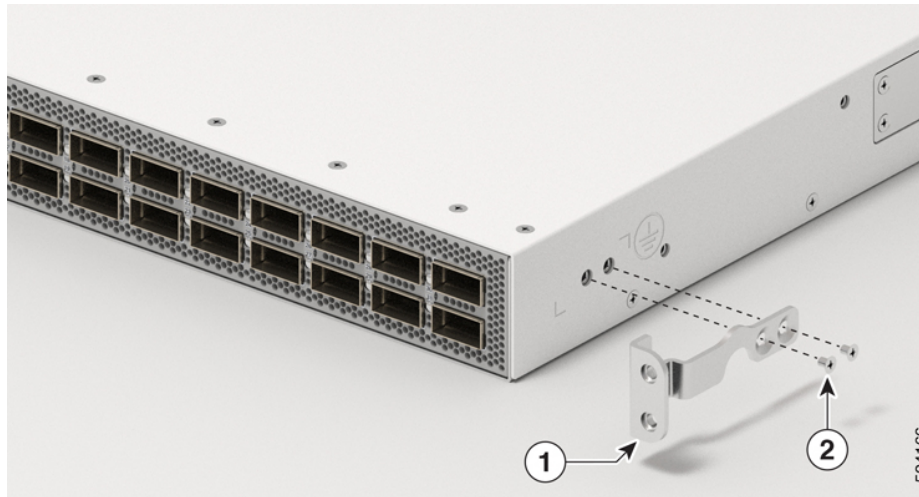Figure 26: Cisco 8711-32FH-M Ground Lug Extension Bracket



1	Ground lug extension bracket	2	2 x M4 5.7-mm Phillips flat-head screws
---	------------------------------	---	---


Step 6

Tighten the M4 5.7-mm Phillips flat-head screws to torque value of 13.28 in-lbs (1.5 N-m).

Step 7

Attach the washer and ground lug to the chassis. Tighter the two M4 5.7-mm Phillips flat-head screws to torque value of 13.28 in-lbs (1.5 N-m). Ensure that the ground lug and cable do not interfere with other equipment.

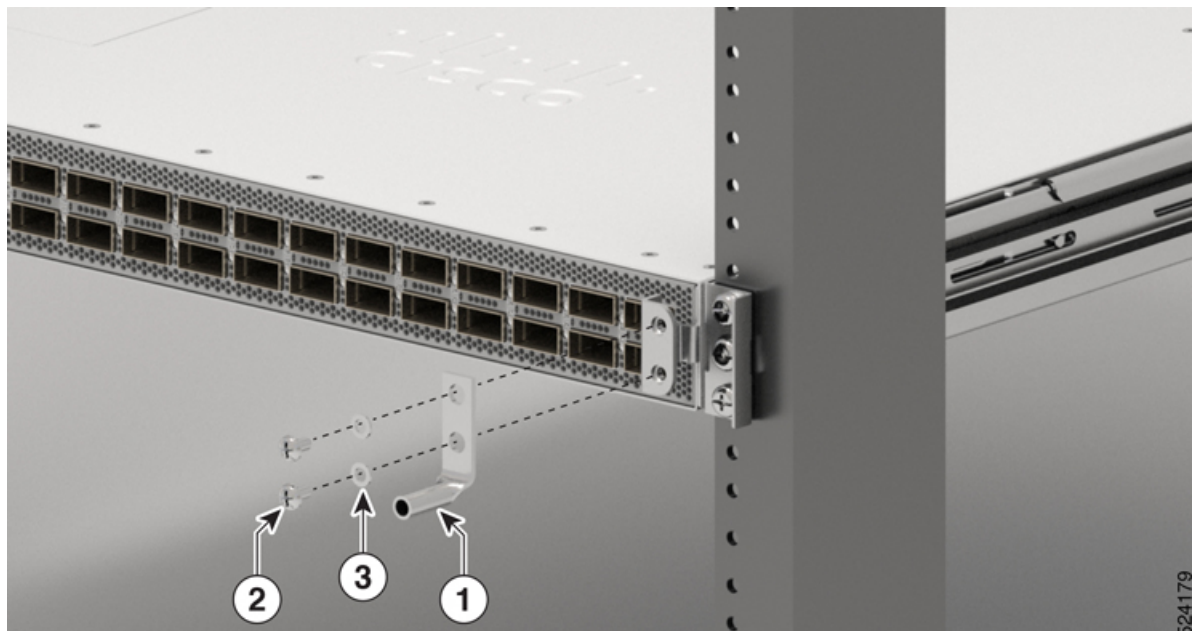Figure 27: Install Ground Lug



1	Ground lug	2	2 x M5 7.93-mm Phillips dome-head screws
---	------------	---	--

3	M5 washer		
---	-----------	--	--

- Step 8** Prepare the other end of the grounding cable, and connect it to an appropriate grounding point in your site to ensure adequate earth ground.
-

Install Cable Management Brackets

Install a Cable Management Bracket on Cisco 8711-32FH-M

To install a cable-management bracket, follow these steps:

Before you begin

The chassis must be installed and secured to the rack.

Required tools and equipment:

- Phillips screwdriver with a torque capability (customer supplied)
- Cable management bracket



-
- Note**
- The cable management bracket is shipped with the chassis.
 - The cable management bracket for Cisco 8711-32FH-M router supports only fiber-optics cables.
-


Procedure

Step 1 Remove the middle screw from the left side of the chassis. Save the screw for re-installation.

Step 2 Align the cable management bracket with the chassis on the left side as shown in the image.

Note The right side of the chassis is reserved for installing the ground lug.

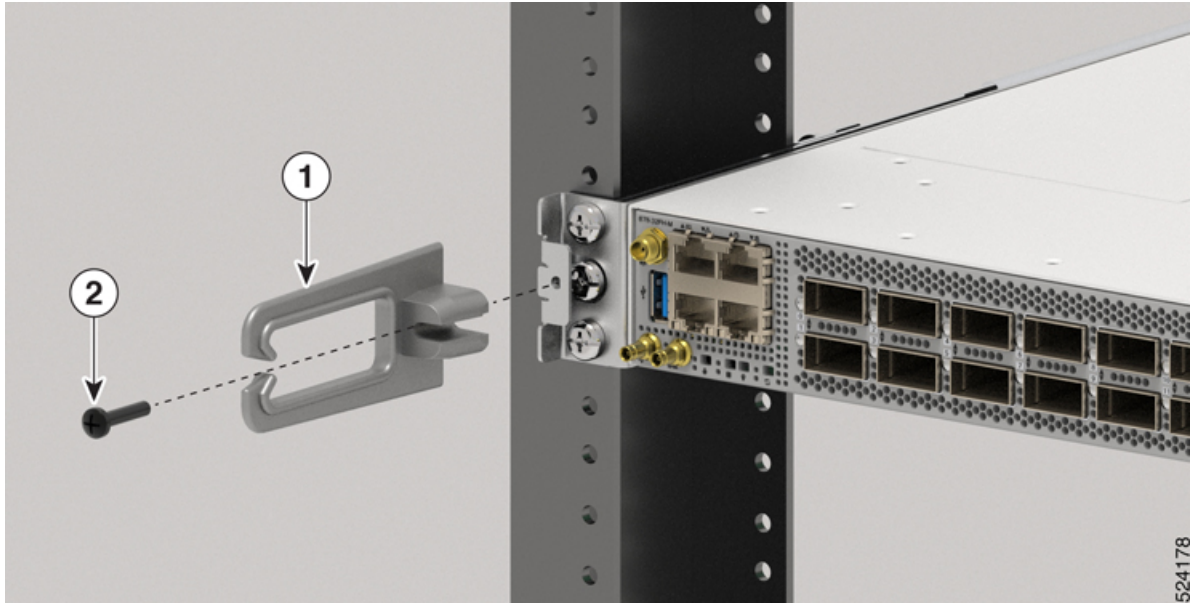Figure 28: Install Cable Management Bracket on the Cisco 8711-32FH-M Router



1	Cable management bracket	2	Screws
---	--------------------------	---	--------

Step 3 Tighten the M5 (12-24) screws to 27.88 in-lb (3.1 N.m) on the left side.



CHAPTER 4

Powering on the Router

This chapter describes how to connect the power modules in the chassis and to power on the router.

- [Power Supply Overview, on page 39](#)
- [Power Supply Unit Input and Output Ranges, on page 40](#)
- [Connect AC Power to the Chassis, on page 41](#)
- [Connect DC Power to the Chassis, on page 44](#)
- [AC/DC-Input Power Cord Options, on page 46](#)

Power Supply Overview

You can install up to two 2KW AC (PSU2KW-ACPI or PSU2KW-ACPE) or 2KW DC (PSU2KW-DCPI or PSU2KW-DCPE) power supplies in the chassis. Ensure that all power connection wiring conforms to the rules and regulations in the National Electrical Code (NEC) and in local codes.



Note The Cisco 8700 Series routers doesn't support a mix of:

- AC and DC Power Supply Units (PSUs).
- Port-Side Intake (PSI) and Port-Side Exhaust (PSE) configurations.

Module Type	Description	Nominal Range
AC Power	single feed with 2KW capacity at 12V	100—127V AC, 12A, 50—60Hz and 200—240V AC, 10A, 50—60Hz.
DC Power	dual feed with 2KW capacity at any specified input voltage.	-48—60V DC, 55A

Power Supply Unit Input and Output Ranges

Power Supply Restrictions and Considerations



Warning **Statement 1028**—More Than One Power Supply

This unit might have more than one power supply connection. To reduce risk of electric shock, remove all connections to de-energize the unit.



Warning **Statement 1005**—Circuit Breaker

This product relies on the building's installation for short-circuit (overcurrent) protection. To reduce risk of electric shock or fire, ensure that the protective device is rated not greater than:

- 20 A (North America) and 16 A (Europe) circuit breaker for an AC-input power supply module.
- 55 A DC-rated circuit breaker for each input of a DC-input power supply module, for safety purposes - irrespective of whether the inputs are power from a single or separate DC sources.



Warning **Statement 1022**—Disconnect Device

To reduce the risk of electric shock and fire, a readily accessible disconnect device must be incorporated in the fixed wiring.



Warning **Statement 1090**—Installation by Skilled Person

Only a skilled person should be allowed to install, replace, or service this equipment. See statement 1089 for the definition of a skilled person.

There are no serviceable parts inside. To avoid risk of electric shock, do not open.



Warning Statement 1091—Installation by an Instructed Person

Only an instructed person or skilled person should be allowed to install, replace, or service this equipment. See statement 1089 for the definition of an instructed or skilled person.

There are no serviceable parts inside. To avoid risk of electric shock, do not open.



Warning Statement 1073—No User-Serviceable Parts

There are no serviceable parts inside. To avoid risk of electric shock, do not open.



Warning Statement 1099—Before Connecting to System Power Supply

High touch/leakage current—Permanently connected protective earth ground is essential before connecting to the system power supply.



Warning Statement 1100—Before Making Telecommunication Network Connection

High touch/leakage current—Permanently connected protective earth ground is essential before connecting to the telecommunication network.

Observe the following guidelines and limitations:

- Use one type of power supply in a router.
- The power supply type that is used in the router depends on the type and configuration of the transceivers installed in it.
- Do not install a mix of AC and DC power supplies in a router.
- The airflow direction must be the same for all power supply and fan modules in the router.
- The AC-input power supplies support low-line voltage of 120V (Nominal) and high-line voltage of 220V (Nominal). If you need to change voltage type after installation, disconnect the feed from the power supply before switching the input voltage level.

Connect AC Power to the Chassis



Caution The chassis relies on the protective devices in the building installation to protect against short circuit, overcurrent, and ground faults. Ensure that the protective devices comply with local and national electrical codes.



Note We recommend that you occupy both the power supply slots of the fixed port routers with power supplies. In case a power module fails, it is recommended to retain the failed power module in its slot until it is replaced with a new power module. This recommendation ensures that the system airflow is not impacted adversely, which may then result in the overheating of the router and its components.



Warning Statement 1017—Restricted Area

This unit is intended for installation in restricted access areas. Only skilled, instructed, or qualified personnel can access a restricted access area.



Warning Statement 1003—DC Power Disconnection

To reduce risk of electric shock or personal injury, disconnect DC power before removing or replacing components or performing upgrades.



Warning Statement 1046—Installing or Replacing the Unit

To reduce risk of electric shock, when installing or replacing the unit, the ground connection must always be made first and disconnected last.

If your unit has modules, secure them with the provided screws.



Warning Statement 1022—Disconnect Device

To reduce the risk of electric shock and fire, a readily accessible disconnect device must be incorporated in the fixed wiring.

For Cisco 8700 series router, the following power supplies are supported:

- PSU2KW-ACPI – 2000W AC, port-side intake airflow
 - PSU2KW-ACPE – 2000W AC, port-side exhaust airflow
-



Important

- System shall not operate at input voltage: 100-127VAC, 50/60Hz with a single AC power supply condition.
 - System shall operate at input voltage: 100-127VAC, 50/60Hz with dual AC power supply condition.
-




Note A dual pole breaker is needed for installation. For determining the recommended breaker size, please adhere to local and national rules and regulations. The breaker size is based on the specifications of the product for the current drawn and the specified voltage level.

Procedure


- Step 1** Verify that the AC cable is installed in the correct AC source and outlet type.
- Step 2** Attach the AC power cable to the cable connector in the AC power module.
- Step 3** Place the cable through the opening in the cable tie.
- Step 4** Slide the cable tie toward the plug.
- Step 5** Close the cable tie on the shoulder of the power cable to secure the power cable.

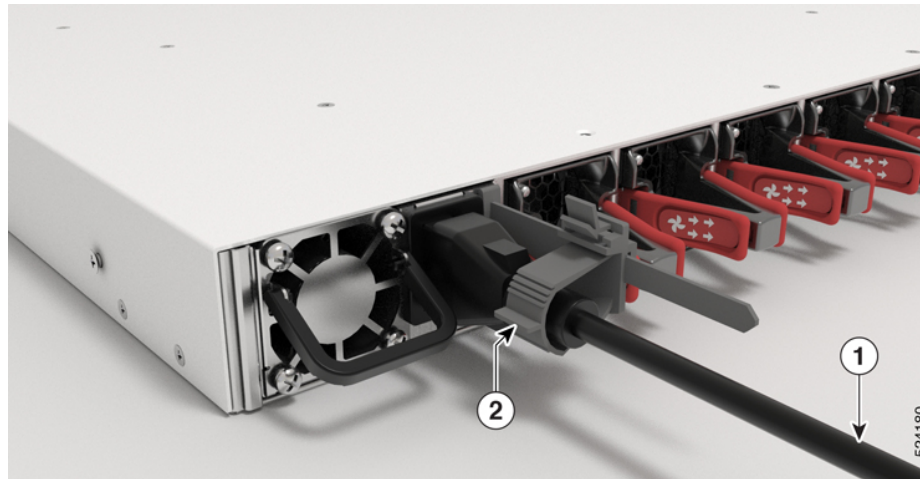Figure 29: Connecting AC Power - Cisco 8711-32FH-M



1	AC power cable	2	Cable tie
---	----------------	---	-----------

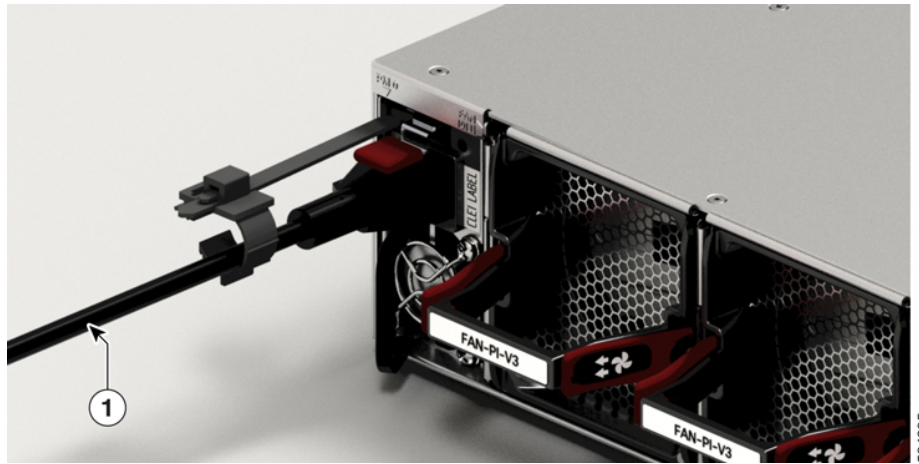Figure 30: Connecting AC Power - Cisco 8712-MOD-M



1	AC power cable
---	----------------

Connect DC Power to the Chassis



Caution The chassis relies on the protective devices in the building installation to protect against short circuit, overcurrent, and ground faults. Ensure that the protective devices comply with local and national electrical codes.



Note We recommend that you occupy both the power supply slots of the fixed port routers with power supplies. In case a power module fails, it is recommended to retain the failed power module in its slot until it is replaced with a new power module. This recommendation ensures that the system airflow is not impacted adversely, which may then result in the overheating of the router and its components.

For Cisco 8700 series router, the following power supplies are supported:

- PSU2KW-DCPI – 2000W AC, port-side intake airflow
- PSU2KW-DCPE – 2000W AC, port-side exhaust airflow

Procedure

Step 1 Verify that the correct fuse panel is installed in the top mounting space.

- Step 2** Ensure that the DC circuit is powered down (either breaker turned off or fuse pulled) and proper lockout tag out procedures are followed. Use the cable (PID: PWR-2KW-DC-CBL) supplied with the power supply. You can purchase power supply cord separately from Cisco.
- Step 3** Dress the power according to local practice.
- Step 4** Connect the office battery and return cables according to the fuse panel engineering specifications.
- Step 5** Insert the DC connector into the DC receptacle on the power supply.

Figure 31: Connecting DC Power - Cisco 8711-32FH-M


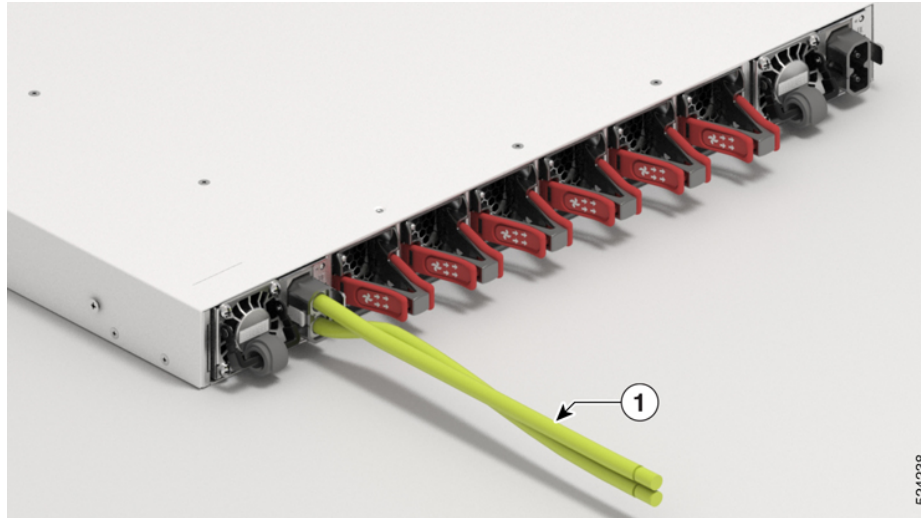


Figure 32: Connecting DC Power - Cisco 8712-MOD-M

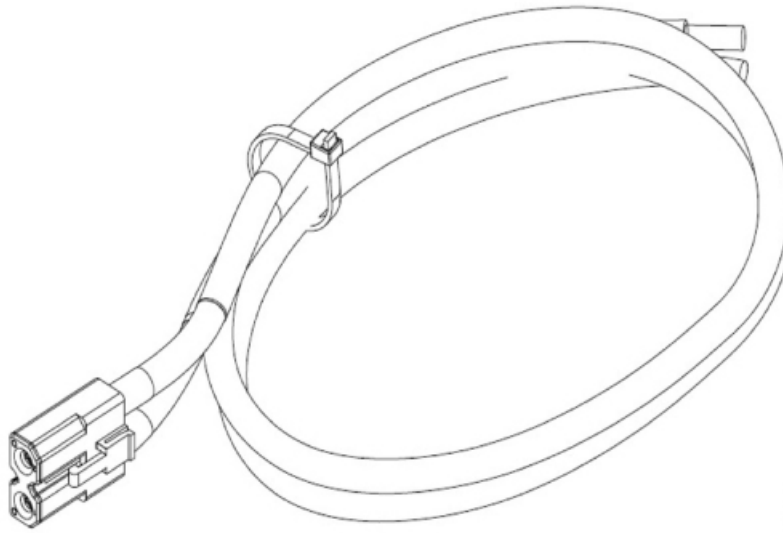

1	DC power cable
---	----------------

Figure 33: DC Power Cable - PWR-2KW-DC-CBL



- Step 6** Ensure that the locking mechanism has engaged to secure the cable.
- Step 7** Turn on the circuit breaker at the power source.

AC/DC-Input Power Cord Options

This table summarises the input and output power ranges for PSU high line applications:


AC/DC-Input Power Cord Options for Cisco 8700 Series Routers

Table 6: AC-Input Power Cord Options for Cisco 8700 Series Routers

Locale	Part Number	Length	Power Cord Rating
Australia, New Zealand	CAB-AC-10A-ANZ	14 ft (4.26 m)	10A, 250 VAC
Brazil	CAB-AC-10A-BRZ	14 ft (4.26 m)	10A, 250 VAC
Britain	CAB-AC-10A-GBR	14 ft (4.26 m)	10A, 250 VAC
China	CAB-AC-10A-CHN	14 ft (4.26 m)	10A, 250 VAC
Denmark	CAB-AC-10A-DEN	14 ft (4.26 m)	10A, 250 VAC

Locale	Part Number	Length	Power Cord Rating
Europe	CAB-AC-10A-EU	14 ft (4.26 m)	10A, 250 VAC
Italy	CAB-AC-10A-ITA	14 ft (4.26 m)	10A, 250 VAC
Japan	CAB-AC-10A-JPN1	14 ft (4.26 m)	10A, 250 VAC
Japan	CAB-AC-10A-JPN2	14 ft (4.26 m)	10A, 250 VAC
Korea	CAB-AC-10A-KOR	14 ft (4.26 m)	10A, 250 VAC
North America	CAB-AC-10A-NA	14 ft (4.26 m)	13A, 125 VAC
Switzerland	CAB-AC-10A-CHE	14 ft (4.26 m)	10A, 250 VAC
Cabinet Jumper Power Cord, 250 VAC 13A, C14-C15 Connectors	CAB-C15-CBN	14 ft (4.26 m)	13A, 250 VAC

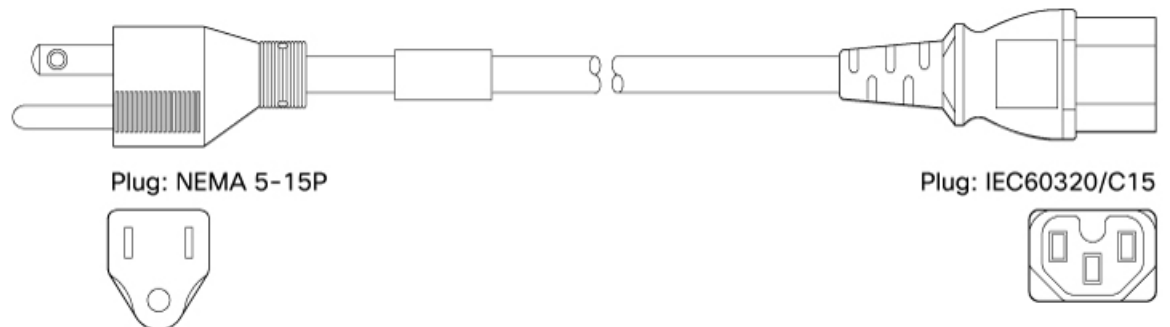Figure 34: CAB-AC-10A-NA



Note For a 2KW DC PSU, use the cable (PID: PWR-2KW-DC-CBL) supplied with the power supply. You can purchase power supply cord separately from Cisco.



CHAPTER 5

Connect Router to the Network




Note The images in this chapter are only for representation purposes, unless specified otherwise. The chassis' actual appearance and size may vary.

- [Interfaces and Port Description, on page 50](#)
- [Connecting a Console to the Router, on page 53](#)
- [Connect the Management Interface, on page 54](#)
- [Transceivers, Connectors, and Cables, on page 55](#)
- [Install and Remove QSFP Transceiver Modules, on page 55](#)
- [Connect Interface Ports, on page 64](#)
- [Maintain Transceivers and Optical Cables, on page 64](#)
- [Create the Initial Router Configuration, on page 64](#)

Interfaces and Port Description

Cisco 8711-32FH-M

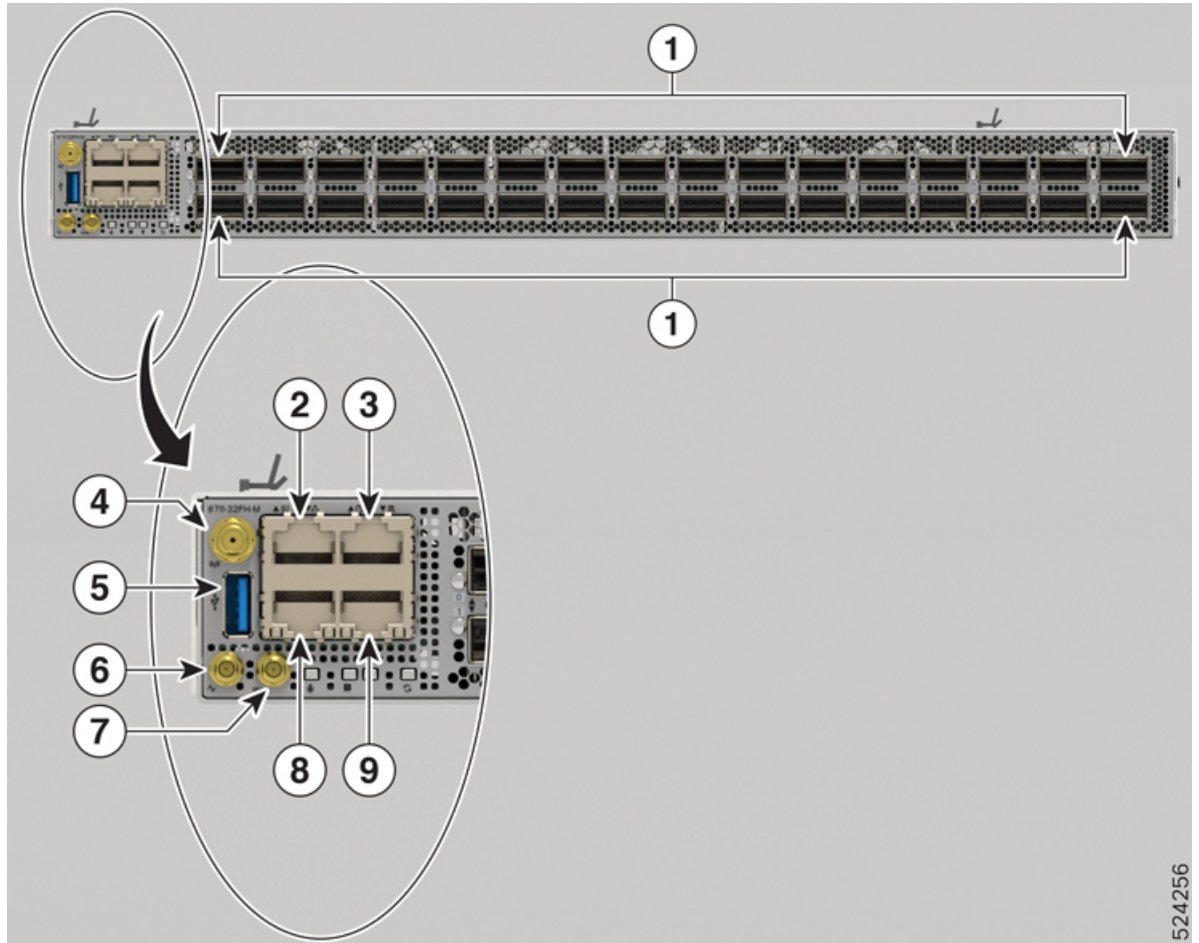Figure 35: Cisco 8711-32FH-M Fixed Port Router - Front View Port Description



524256

Table 7: Cisco 8711-32FH-M Fixed Port Router Front View Port Description

1	<p>32 QSFP56-DD 400GbE ports or 16 QSFP-DD 800G ports. These ports support the following breakout operation:</p> <ul style="list-style-type: none"> • 2x400 GbE • 8x100 GbE • 4x100 GbE • 2x100 GbE • 4x10 GbE • 4x25 GbE <ul style="list-style-type: none"> • For the Port-Side Intake (PSI) configuration, the QDD-400G-ZR-S, QDD-400G-ZRP-S, and DP04QSDD-HE0 optical modules are only supported on the even-numbered ports (top row). • For the Port-Side Exhaust (PSE) configuration, the QDD-400G-ZR-S, QDD-400G-ZRP-S, and DP04QSDD-HE0 optical modules are only supported on the odd-numbered ports (bottom row). <p>Note You must have dust caps installed on the unused ports.</p>	6	Mini coax connector for 1 PPS, input, and output.
2	Console port	7	Mini coax connector for 10MHz, input, and output
3	Time of the Day (ToD) port	8	10G Control Plane Expansion port
4	<p>GNSS port</p> <p>Note Lifting the signal amplitude to the suitable range for the receiver frontend. The amplification required is 20dB gain + cable/connector loss + Splitter signal loss. The recommended range of LNA gain (minus all cable and connector losses) at the connector of the receiver module is a minimum of 20dB and a maximum of 45dB.</p>	9	1G Management port
5	USB Port Type-A		

Cisco 8712-MOD-M

Figure 36: Cisco 8711-32FH-M Fixed Port Router - Front View Port Description

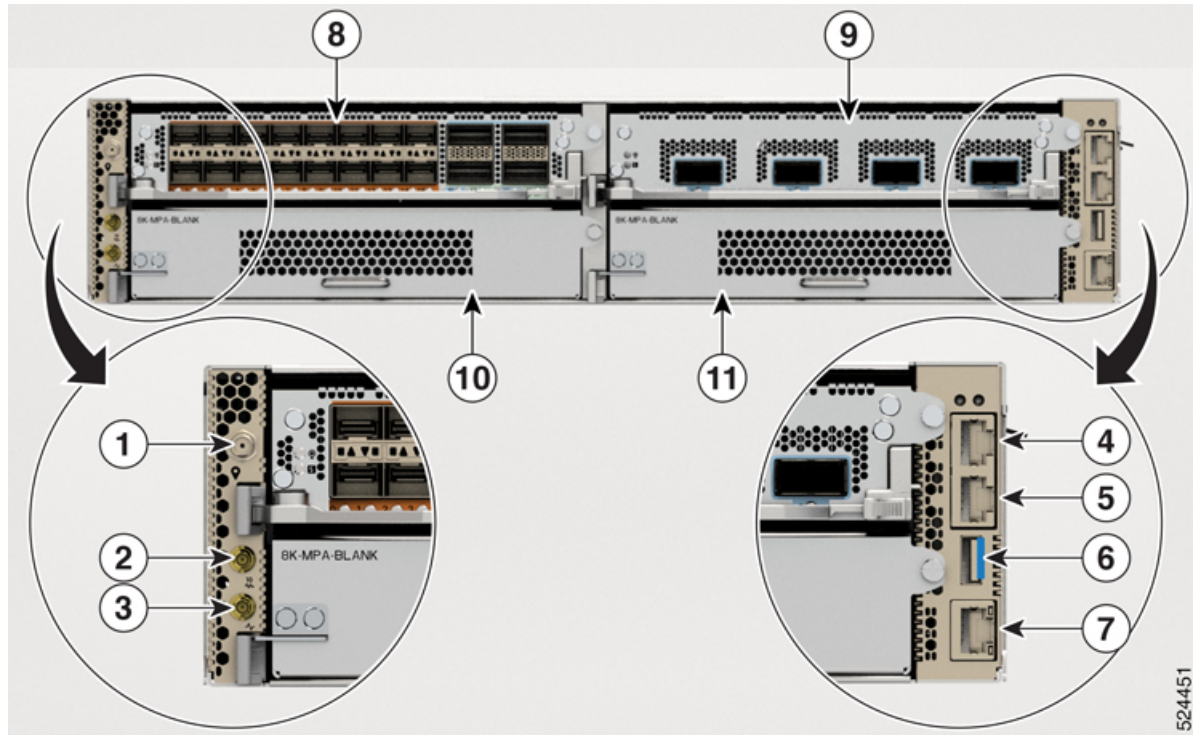


Table 8: Cisco 8712-Mod-M Fixed Port Router Front View Port Description

1	GNSS port Note Lifting the signal amplitude to the suitable range for the receiver frontend. The amplification required is 20dB gain + cable/connector loss + Splitter signal loss. The recommended range of LNA gain (minus all cable and connector losses) at the connector of the receiver module is a minimum of 20dB and a maximum of 45dB.	7	1G Management port
2	Mini coax connector for 10MHz, input, and output	8	MPA Slot 0
3	Mini coax connector for 1 PPS, input, and output.	9	MPA Slot 1
4	Time of the Day (ToD) port	10	MPA Slot 2
5	Console port	11	MPA Slot 3
6	USB Port Type-A		

Transceiver and Cable Specifications

To determine which transceivers and cables are supported by this router, refer to the Transceiver Module Group (TMG) Compatibility Matrix Tool:

<https://tmatrix.cisco.com/home>

Connecting a Console to the Router

Before you create a network management connection for the router or connect the router to the network, you must create a local management connection through a console terminal and configure an IP address for the router. The router can be accessed using remote management protocols, such as SSH and Telnet. By default, SSH is included in the software image. But telnet is not part of the software image. You must manually install the telnet optional package to use it.

You also can use the console to perform the following functions, each of which can be performed through the management interface after you make that connection:

- configure the router using the command-line interface (CLI)
- monitor network statistics and errors
- configure Simple Network Management Protocol (SNMP) agent parameters
- initiate software download updates via console

You make this local management connection between the asynchronous serial port on a Route Processor card and a console device capable of asynchronous transmission. Typically, you can use a computer terminal as the console device. On the Route Processor cards, you use the console serial port.



Note Before you can connect the console port to a computer terminal, ensure that the computer terminal supports VT100 terminal emulation. The terminal emulation software makes communication between the router and computer possible during setup and configuration.

Before you begin

- The router must be fully installed in its rack. The router must be connected to a power source and grounded.
- The necessary cabling for the console, management, and network connections must be available.
 - An RJ45 rollover cable and a DB9F/RJ45 adapter.
 - Network cabling should already be routed to the location of the installed router.

Procedure

Step 1 Configure the console device to match the following default port characteristics:

- 115200 baud
- 8 data bits
- 1 stop bit
- No parity

- Step 2** Connect and RJ45 rollover cable to a terminal, PC terminal emulator, or terminal server.
The RJ45 rollover cable is not part of the accessory kit.
- Step 3** Route the RJ45 rollover cable as appropriate and connect the cable to the console port on the chassis.
If the console or modem cannot use an RJ45 connection, use the DB9F/RJ45F PC terminal adapter.
Alternatively, you can use an RJ45/DSUB F/F or RJ45/DSUB R/P adapter, but you must provide those adapters.

What to do next

You are ready to create the initial router configuration.

Connect the Management Interface

The Route Processor management port (MGMT ETH) provides out-of-band management, which lets you to use the command-line interface (CLI) to manage the router by its IP address. This port uses a 10/100/1000 Ethernet connection with an RJ-45 interface.



Note In a dual Route Processor router, you can ensure that the active Route Processor card is always connected to the network by connecting the management interface on both Route Processor cards to the network. That is, you can perform this task for each Route Processor card. When the Route Processor card is active, the router automatically has a management interface that is running and accessible from the network.



Caution To prevent an IP address conflict, do not connect the MGMT 100/1000 Ethernet port until the initial configuration is complete.

Before you begin

You must have completed the initial router configuration.

Procedure

-
- Step 1** Connect a modular, RJ-45, UTP cable to the MGMT ETH port on the Route Processor card.
- Step 2** Route the cable through the central slot in the cable management system.
- Step 3** Connect the other end of the cable to a 100/1000 Ethernet port on a network device.
-

What to do next

You are ready to connect the interface ports to the network.

Transceivers, Connectors, and Cables

Transceiver and Cable Specifications

To determine which transceivers and cables are supported by this router, see [Cisco Transceiver Modules Compatibility Information](#).

To see the transceiver specifications and installation information, see [Cisco Transceiver Modules Install and Upgrade Guides](#).

RJ-45 Connectors

The RJ-45 connector connects Category 3, Category 5, Category 5e, Category 6, or Category 6A foil twisted-pair or unshielded twisted-pair cable from the external network to the following module interface connectors:


- Router chassis
 - CONSOLE port
 - MGMT ETH port



Caution To comply with GR-1089 intrabuilding, lightning immunity requirements, you must use a foil twisted-pair (FTP) cable that is properly grounded at both ends.

The following figure shows the RJ-45 connector.

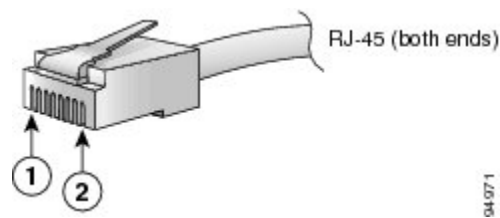Figure 37: RJ-45 Connector




1	Pin 1	2	Pin 8
---	-------	---	-------

Install and Remove QSFP Transceiver Modules

This section provides the installation, cabling, and removal instructions for the Quad Small Form-Factor Pluggable transceiver modules. Refer to the [Cisco Optical Transceiver Handling Guide](#) for additional details on optical transceivers.

The following figure shows a 400-Gigabit QSFP-DD optical transceiver.

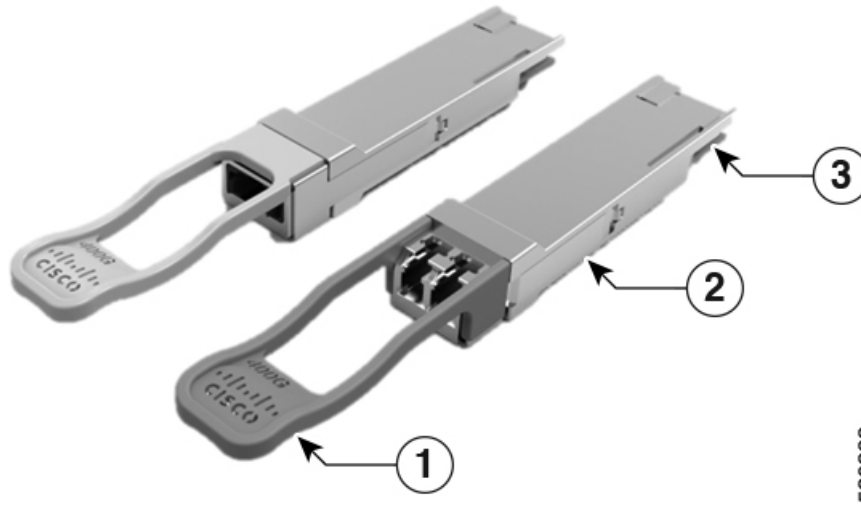Figure 38: 400-Gigabit QSFP-DD Transceiver Module



1	Pull-tab	2	QSFP-DD transceiver body
3	Electrical connection to the module circuitry		



Warning Statement 1079—Hot Surface

This icon is a hot surface warning. To avoid personal injury, do not touch without proper protection.



Required Tools and Equipment

You need these tools to install the transceiver modules:

- Wrist strap or other personal grounding device to prevent ESD occurrences.
- Antistatic mat or antistatic foam to set the transceiver on.
- Fiber-optic end-face cleaning tools and inspection equipment.

Installing the Transceiver Module



Warning **Statement 1055**—Class 1/1M Laser

Invisible laser radiation is present. Do not expose to users of telescopic optics. This applies to Class 1/1M laser products.



Warning **Statement 1051**—Laser Radiation

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments.



Warning **Statement 1079**—Hot Surface

This icon is a hot surface warning. To avoid personal injury, do not touch without proper protection.



Caution The transceiver module is a static-sensitive device. Always use an ESD wrist strap or similar individual grounding device when handling transceiver modules or coming into contact with system modules.

Caution Protect the transceiver ports by inserting clean dust caps (8000-QSFP-DCAP) into any ports not in use. Be sure to clean the optic surfaces of the fiber cables before you plug them back into the optical ports of another module. Use dust caps for all the open ports on the chassis.

The router ships with dust caps plugged in. We highly recommend you to keep the dust caps plugged in until you are ready to plug an optic.

The dust caps protect the ports from possible EMI interference and also avoid contamination due to dust collection. To meet the EMI interference requirements, you must use the metal dust caps when the ports are not in use by optical modules.

The following table provides the supported port details and operating temperature of the QDD-400G-ZR-S, QDD-400G-ZRP-S, and DP04QSDD-HE0 optical modules when port side intake fans and power supplies are used.

Table 9: Supported Ports and Operating Temperature of QDD-400G-ZR-S, QDD-400G-ZRP-S, DP04QSDD-HE0, DP04QSDD-ER1, DP01QSDD-ZF1 Optical Modules

Router	Port Side Intake (PSI) Ports	Port Side Intake (PSI) Operating Temperature
Cisco 8711-32FH-M	<ul style="list-style-type: none"> • QDD-400G-ZR-S – supported on all 400G ports • QDD-400G-ZRP-S – supported on all 400G ports • DP04QSDD-HE0 - supported only on even numbered ports. • DP04QSDD-ER1 – supported on all 400G ports • DP01QSDD-ZF1 – supported on all 400G ports 	40° C at sea level or 35° C at 1500 meter

The QSFP transceiver module has a pull-tab latch. To install a transceiver module, follow these steps:

Procedure

-
- Step 1** Attach an ESD wrist strap to yourself and a properly grounded point on the chassis or the rack.
- Step 2** Remove the transceiver module from its protective packaging.
- Step 3** Check the label on the transceiver module body to verify that you have the correct model for your network. Do not remove the dust plug until you're ready to attach the network interface cable. Dust plug is not shown in the images.
- Step 4** Hold the transceiver by the pull-tab so that the identifier label is on the top.
- Step 5** Align the transceiver module in front of the module's transceiver socket opening and carefully slide the transceiver into the socket until the transceiver contact with the socket electrical connector.

Figure 39: Installing the QSFP Transceiver Module - Cisco 8711-32FH-M


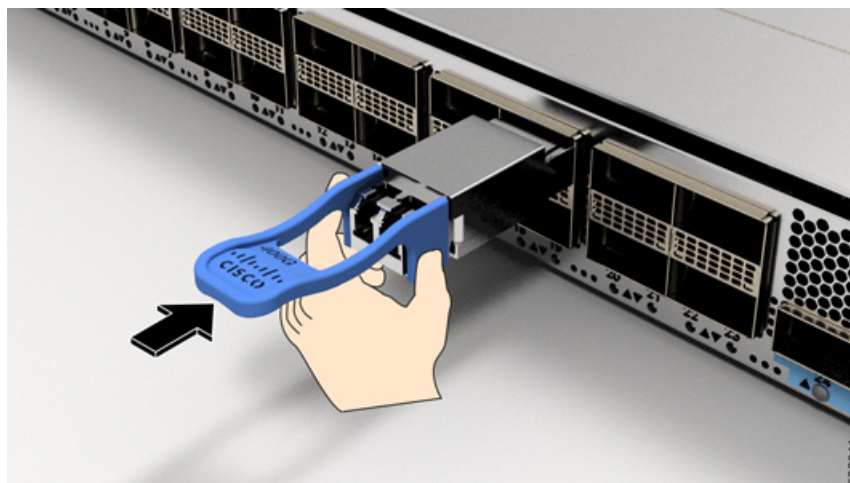


Figure 40: Installing the QSFP Transceiver Module - Cisco 8712-MOD-M

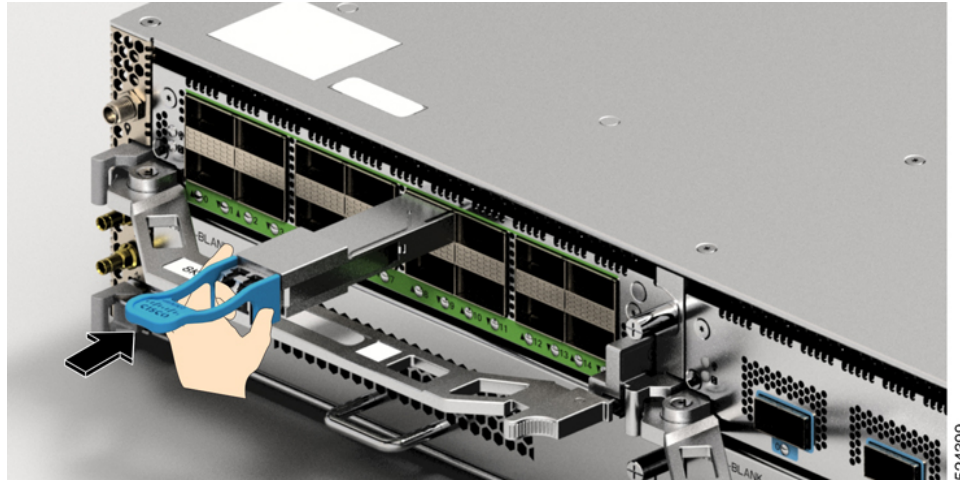

Step 6 Press firmly on the front of the transceiver module with your thumb to fully seat the transceiver in the module's transceiver socket (see the below figure).

Caution If the latch isn't fully engaged, you might accidentally disconnect the transceiver module.

Figure 41: Seating the QSFP Transceiver Module - Cisco 8711-32FH-M


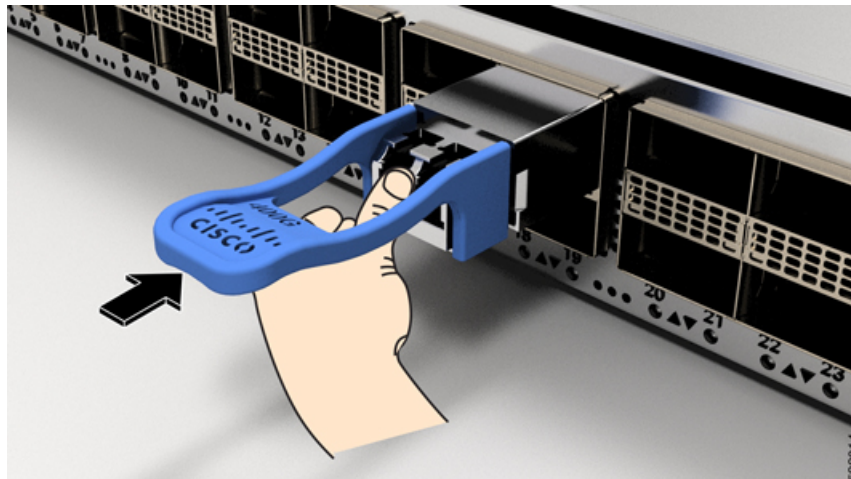


Figure 42: Seating the QSFP Transceiver Module - Cisco 8712-MOD-M

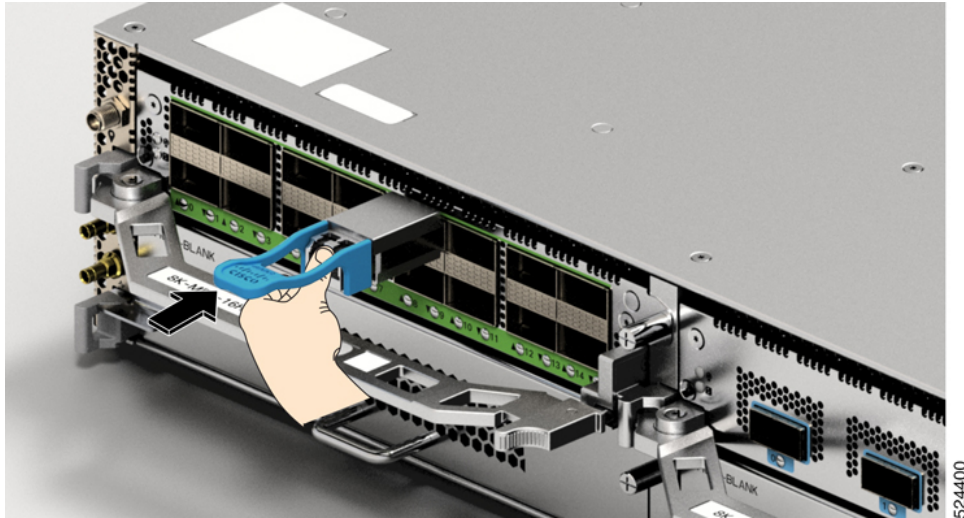

Attach the Optical Network Cable

Before you begin

Before you remove the dust plugs and make any optical connections, follow these guidelines:

- Keep the protective dust plugs installed in the unplugged fiber-optic cable connectors and in the transceiver optical bores until you are ready to make a connection.
- Inspect and clean the optical connector end faces just before you make any connections.
- Grasp the optical connector only by the housing to plug or unplug a fiber-optic cable.



Note The transceiver modules and fiber connectors are keyed to prevent incorrect insertion.



Note The multiple-fiber push-on (MPO) connectors on the optical transceivers support network interface cables with either physical contact (PC) or ultra-physical contact (UPC) flat polished face types. The MPO connectors on the optical transceivers do not support network interface cables with an angle-polished contact (APC) face type.



Note Inspect the MPO connector for the correct cable type, cleanliness, and any damage. For complete information on inspecting and cleaning fiber-optic connections, see the [Inspection and Cleaning Procedures for Fiber-Optic Connections](#) document.

Procedure

- Step 1** Remove the dust plugs from the optical network interface cable MPO connectors and from the transceiver module optical bores. Save the dust plugs for future use.
- Step 2** Attach the network interface cable MPO connectors immediately to the transceiver module.

Figure 43: Cabling a Transceiver Module -Cisco 8711-32FH-M


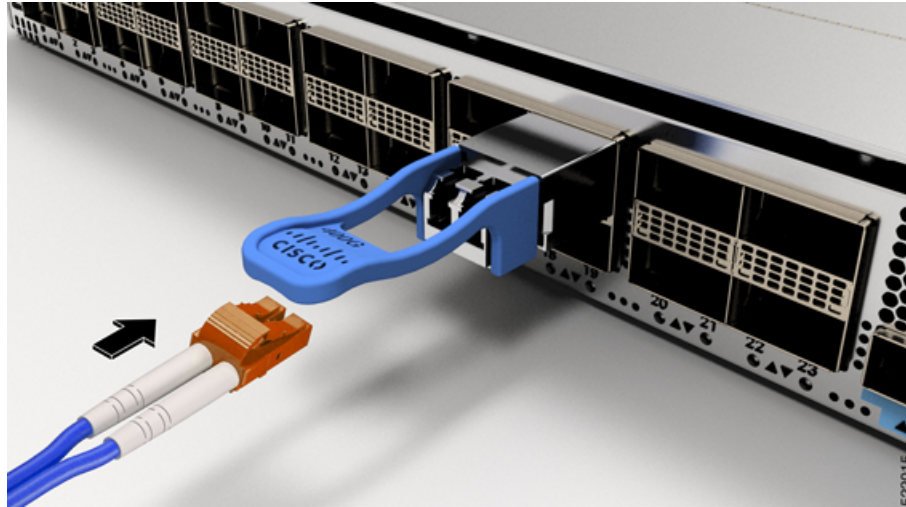


Figure 44: Cabling a Transceiver Module -Cisco 8712-MOD-M

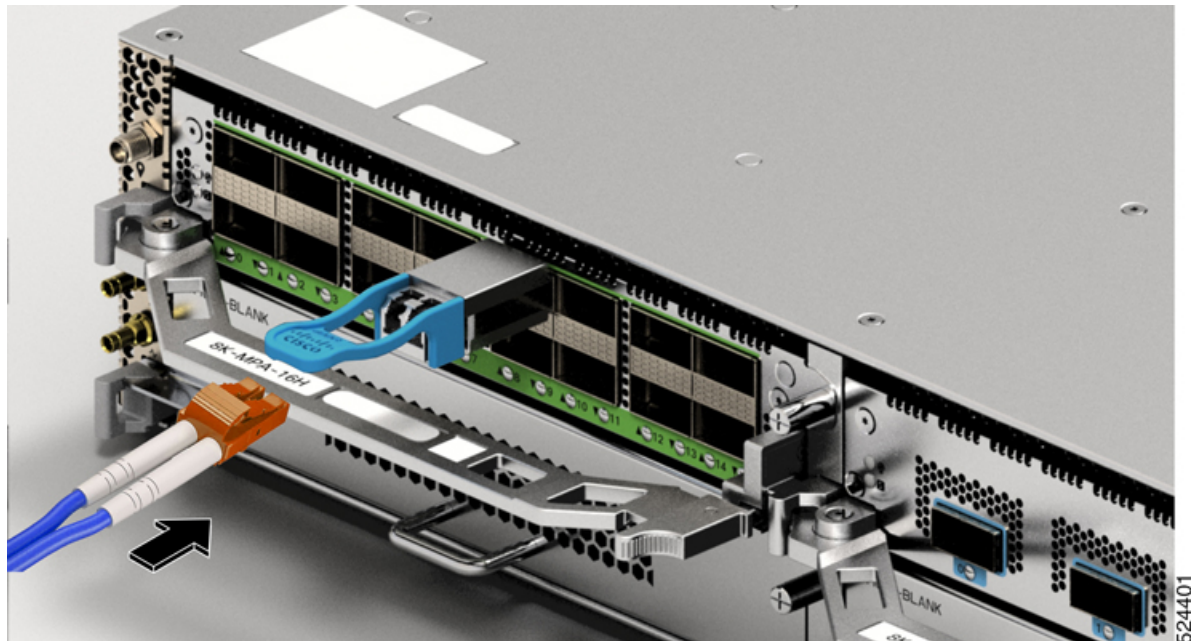

Removing the Transceiver Module



Warning **Statement 1055**—Class 1/1M Laser

Invisible laser radiation is present. Do not expose to users of telescopic optics. This applies to Class 1/1M laser products.



Warning **Statement 1051**—Laser Radiation

Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments.



Warning **Statement 1079**—Hot Surface

This icon is a hot surface warning. To avoid personal injury, do not touch without proper protection.



Caution The transceiver module is a static-sensitive device. Always use an ESD wrist strap or similar individual grounding device when handling transceiver modules or coming into contact with modules.



Caution Protect the transceiver ports by inserting clean dust caps (8000-QSFP-DCAP) into any ports not in use. Be sure to clean the optic surfaces of the fiber cables before you plug them back into the optical ports of another module. Use dust caps for all the open ports on the chassis.

Dust caps are optional and are orderable separately from Cisco and are available for a variety of input/output connectors.

We highly recommend you to keep the dust caps plugged in until you are ready to plug an optic.

The dust caps protect the ports from possible EMI interference and also avoid contamination due to dust collection. To meet the EMI interference requirements, you must use the metal dust caps when the ports are not in use by optical modules.

To remove a transceiver module, follow these steps:

Procedure

- Step 1** Disconnect the network interface cable from the transceiver connector.
- Step 2** Install the dust plug immediately into the transceiver's optical bore.
- Step 3** Grasp the pull-tab and gently pull to release the transceiver from the socket.

Figure 45: Removing the QSFP Transceiver Module - Cisco 8711-32FH-M


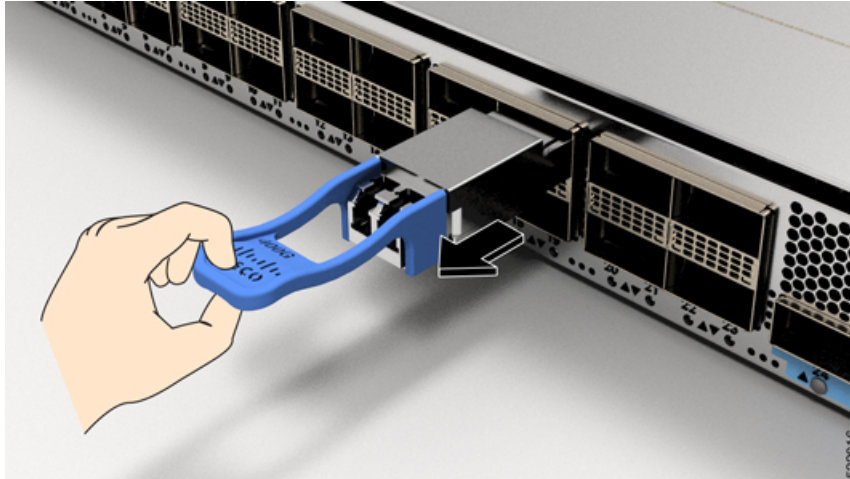


Figure 46: Removing the QSFP Transceiver Module - Cisco 8712-MOD-M

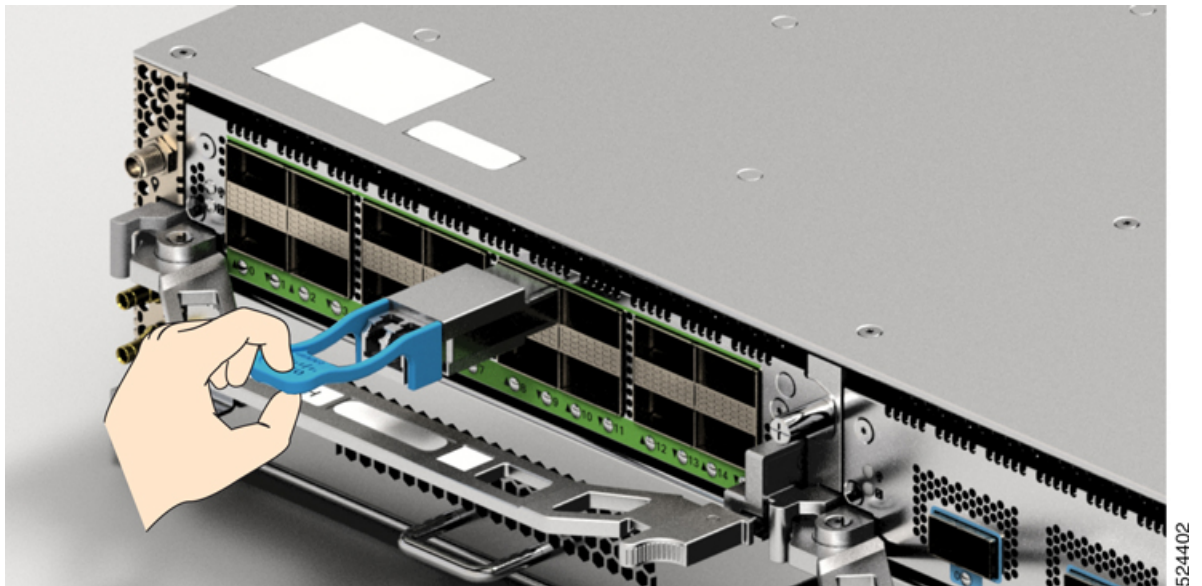

- Step 4** Slide the transceiver out of the socket.
- Step 5** Place the transceiver module into an antistatic bag.

Connect Interface Ports

You can connect optical interface ports on line cards with other devices for network connectivity.

Disconnect Optical Ports from the Network

When you need to remove fiber-optic transceivers, you must first remove the fiber-optic cables from the transceiver before you remove the transceiver from the port.

Maintain Transceivers and Optical Cables

Refer to [Inspection and Cleaning Procedures for Fiber-Optic Connections](#) document for inspection and cleaning processes for fiber optic connections.

Create the Initial Router Configuration

Assign an IP address to the router management interface to connect the router to the network.

When you initially power up the router, it boots up and displays a series of configuration-related questions. You can use the default choices for each configuration except for the IP address, which you must provide.



Note These routers are designed to boot up in less than 30 mins, provided the neighboring devices are in full-operational state.

When the system is powered on and the console port is connected to the terminal, the RP CPU messages are seen.

Before you begin

- A console device must be connected with the router.
- The router must be connected to a power source.
- Determine the IP address and netmask that is needed for the Management interfaces: `MgmtEth0/RP0/CPU0/0` and `MgmtEth0/RP1/CPU0/0`:

Procedure

Step 1

Power up the router.

The LEDs on each power supply light up (green) when the power supply units are sending power to the router, and the software asks you to specify a password to use with the router.

Step 2 When the system boots up for the first time, the system prompts you to create a new username and password. The following prompt appears:

```
!!!!!!!!!!!!!!!!!!!!!! NO root-system username is configured. Need to configure root-system
username. !!!!!!!!!!!!!!!!!!!!!!!

--- Administrative User Dialog ---

Enter root-system username:
% Entry must not be null.

Enter root-system username: cisco
Enter secret:
Use the 'configure' command to modify this configuration.
User Access Verification

Username: cisco
Password:

RP/0/RP0/CPU0:ios#
```

Step 3 Enter a new password to use for this router.

The software checks the security strength of your password and rejects your password if the system does not consider it as a strong password. To increase the security strength of your password, make sure that it adheres to the following guidelines:

- At least eight characters
- Minimizes or avoids the use of consecutive characters (such as "abcd")
- Minimizes or avoids repeating characters (such as "AAA")
- Does not contain recognizable words in the dictionary
- Does not contain proper names
- Contains both uppercase and lowercase characters
- Contains numbers and letters

Note Cleartext passwords cannot include the dollar sign (\$) special character.

Tip If a password is trivial (such as a short, easy-to-decipher password), the software rejects that password. Passwords are case-sensitive.

When you enter a strong password, the software asks you to confirm the password.

Step 4 Reenter the password.

When you enter the same password, the software accepts the password.

Step 5 Enter the configuration mode.

Step 6 Enter the IP address for the management interface. If using dual RPs, enter the IP address on both management interfaces.

Step 7 Enter a network mask for the management interface.

Step 8 Save your configuration.

- Step 9** The software asks whether you want to edit the configuration. If you don't want to edit your configuration, enter **'no'**.
-

Verify Chassis Installation

After installing the chassis, use the following **show** commands to verify the installation and configuration in the EXEC mode. Any issue if detected, take corrective action before making further configurations.

Command	Description
show platform	Displays the state information of each card.
show inventory	Displays information about the field replaceable units (FRUs), including product IDs, serial numbers, and version IDs.
show led	Displays LED information for the router, or for a specific LED location.
show hw-module fpd	Displays field-programmable device (FPD) compatibility for all modules or a specific module.
show alarms brief system active	Displays all existing alarms in the router.
show media	Displays the current state of the disk storage media.
show environment power	Displays the power usage information for the entire router.
show environment fan	Displays the status of the fan trays.

Command	Description
show environment temperature	<p>Displays temperature readings for card temperature sensors. Each module has temperature sensors with two thresholds:</p> <ul style="list-style-type: none"> • Minor temperature threshold – When a minor threshold is exceeded, minor alarm occurs and the following actions occur for all four sensors: <ul style="list-style-type: none"> • Displays system messages • Sends SNMP notifications (if configured) • Log environmental alarm event that can be reviewed by running the show alarm command. • Major temperature threshold – When a major threshold is exceeded, a major alarm occurs and the following actions occur: <ul style="list-style-type: none"> • For sensors 1, 3, and 4 (outlet and on board sensors), the following actions occur: <ul style="list-style-type: none"> • Displays system messages. • Sends SNMP notifications (if configured). • Logs environmental alarm event that can be reviewed by running the show alarm command. • For sensor 2 (intake sensor), the following actions occur: <ul style="list-style-type: none"> • If the threshold is exceeded in a switching card, only that card is shut down. • If the threshold exceeds an active Route Processor card with HA-standby or standby present, only that Route Processor card is shut down and the standby Route Processor card takes over. • If you do not have a standby Route Processor card in your router, you have up to 2 minutes to decrease the temperature. During this interval, the software monitors the temperature every 5 seconds and continuously sends system messages as configured. <p>Note</p> <ul style="list-style-type: none"> • Cisco recommends that you install dual Route Processor cards. • For some card temperature sensors, the temperature thresholds for both minor and major might display 'NA'. This is an expected behaviour and indicates that there are no alarms for those corresponding thresholds.
show environment voltage	Displays the voltage for the entire router.
show environment current	Displays the current environment status.

show platform command

The following example shows a sample output from the **show platform** command:

```

Router#show platform
Node                Type                State                Config state
-----
0/RP0/CPU0          8711-32FH-M(Active)  IOS XR RUN          NSHUT
0/FB0                8711-32FH-M[FB]     OPERATIONAL         NSHUT
0/FT0                FAN-1RU-PI-V2       OPERATIONAL         NSHUT
0/FT1                FAN-1RU-PI-V2       OPERATIONAL         NSHUT
0/FT2                FAN-1RU-PI-V2       OPERATIONAL         NSHUT
0/FT3                FAN-1RU-PI-V2       OPERATIONAL         NSHUT
0/FT4                FAN-1RU-PI-V2       OPERATIONAL         NSHUT
0/FT5                FAN-1RU-PI-V2       OPERATIONAL         NSHUT
0/PM1                PSU2KW-ACPI          OPERATIONAL         NSHUT
Router#

```

show inventory command

The following example shows a sample output from the **show inventory** command:

```

Router#show inventory

NAME: "Rack 0", DESCR: "Cisco 8711 1RU 12.8T P100 System"
PID: 8711-32FH-M      , VID: V00, SN: FOC2736R0J6

NAME: "0/RP0/CPU0", DESCR: "Cisco 8711 1RU 12.8T P100 System"
PID: 8711-32FH-M      , VID: V00, SN: FOC28100ZZ2

NAME: "FourHundredGigE0/0/0/9", DESCR: "Cisco QSPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S   , VID: V01 , SN: INL24155513

NAME: "FourHundredGigE0/0/0/10", DESCR: "Cisco QSPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S   , VID: V01 , SN: INL24155181

NAME: "FourHundredGigE0/0/0/11", DESCR: "Cisco QSPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S   , VID: V01 , SN: INL24165748

NAME: "FourHundredGigE0/0/0/12", DESCR: "Cisco QSPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S   , VID: V01 , SN: INL24164974

NAME: "FourHundredGigE0/0/0/13", DESCR: "Cisco QSPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S   , VID: V01 , SN: INL24154273

NAME: "FourHundredGigE0/0/0/14", DESCR: "Cisco QSPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S   , VID: V01 , SN: INL24173660

NAME: "FourHundredGigE0/0/0/15", DESCR: "Cisco QSPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S   , VID: V01 , SN: INL26010LMV

NAME: "FourHundredGigE0/0/0/16", DESCR: "Cisco QSPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S   , VID: V01 , SN: INL26010LHK

NAME: "FourHundredGigE0/0/0/17", DESCR: "Cisco QSPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S   , VID: V01 , SN: INL24155081

NAME: "FourHundredGigE0/0/0/18", DESCR: "Cisco QSPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S   , VID: V01 , SN: INL24155387

NAME: "FourHundredGigE0/0/0/19", DESCR: "Cisco QSPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S   , VID: V01 , SN: INL25141382

NAME: "FourHundredGigE0/0/0/20", DESCR: "Cisco QSPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S   , VID: V01 , SN: INL24155386

NAME: "FourHundredGigE0/0/0/21", DESCR: "Cisco QSPDD 400G DR4 Pluggable Optics Module"

```

PID: QDD-400G-DR4-S , VID: V01 , SN: INL26010LH9

NAME: "FourHundredGigE0/0/0/22", DESCR: "Cisco QSFPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S , VID: V01 , SN: INL24155108

NAME: "FourHundredGigE0/0/0/23", DESCR: "Cisco QSFPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S , VID: V01 , SN: INL26010LHP

NAME: "FourHundredGigE0/0/0/24", DESCR: "Cisco QSFPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S , VID: V01 , SN: INL24155086

NAME: "FourHundredGigE0/0/0/25", DESCR: "Cisco QSFPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S , VID: V01 , SN: INL24165460

NAME: "FourHundredGigE0/0/0/26", DESCR: "Cisco QSFPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S , VID: V01 , SN: INL24165426

NAME: "FourHundredGigE0/0/0/27", DESCR: "Cisco QSFPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S , VID: V01 , SN: INL24173668

NAME: "FourHundredGigE0/0/0/28", DESCR: "Cisco QSFPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S , VID: V01 , SN: INL2530A7DP

NAME: "FourHundredGigE0/0/0/29", DESCR: "Cisco QSFPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S , VID: ES0 , SN: INL23342230

NAME: "FourHundredGigE0/0/0/30", DESCR: "Cisco QSFPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S , VID: V01 , SN: INL24173675

NAME: "FourHundredGigE0/0/0/31", DESCR: "Cisco QSFPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S , VID: V01 , SN: INL25188245

NAME: "FourHundredGigE0/0/0/3", DESCR: "Cisco QSFPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S , VID: V01 , SN: INL24155312

NAME: "FourHundredGigE0/0/0/4", DESCR: "Cisco QSFPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S , VID: V01 , SN: INL24154278

NAME: "FourHundredGigE0/0/0/5", DESCR: "Cisco QSFPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S , VID: V01 , SN: INL24165696

NAME: "FourHundredGigE0/0/0/6", DESCR: "Cisco QSFPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S , VID: V01 , SN: INL24155313

NAME: "FourHundredGigE0/0/0/7", DESCR: "Cisco QSFPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S , VID: V01 , SN: INL24155369

NAME: "FourHundredGigE0/0/0/8", DESCR: "Cisco QSFPDD 400G DR4 Pluggable Optics Module"
PID: QDD-400G-DR4-S , VID: V01 , SN: INL26010LMW

NAME: "0/FB0", DESCR: "Cisco 8000 Series Fan Controller Board on 8711-32FH-M"
PID: 8711-32FH-M[FB] , VID: N/A, SN: FOC28100C6N

NAME: "0/FT0", DESCR: "1RU Fan with Port-side Air Intake Ver 2"
PID: FAN-1RU-PI-V2 , VID: V02 , SN: DCH2735R30X

NAME: "0/FT1", DESCR: "1RU Fan with Port-side Air Intake Ver 2"
PID: FAN-1RU-PI-V2 , VID: V02 , SN: DCH2735R2ST

NAME: "0/FT2", DESCR: "1RU Fan with Port-side Air Intake Ver 2"
PID: FAN-1RU-PI-V2 , VID: V02 , SN: DCH2735R2TS

NAME: "0/FT3", DESCR: "1RU Fan with Port-side Air Intake Ver 2"
PID: FAN-1RU-PI-V2 , VID: V02 , SN: DCH2735R2ZJ

```

NAME: "0/FT4", DESCR: "1RU Fan with Port-side Air Intake Ver 2"
PID: FAN-1RU-PI-V2      , VID: V02 , SN: DCH2735R2S0

NAME: "0/FT5", DESCR: "1RU Fan with Port-side Air Intake Ver 2"
PID: FAN-1RU-PI-V2      , VID: V02 , SN: DCH2735R34P

NAME: "0/PM1", DESCR: "2000W AC Power Module with Port-side Air Intake"
PID: PSU2KW-ACPI        , VID: V01 , SN: QCS27517S0E
Router#

```

show led command

The following example shows a sample output from the **show led** command:

```

Router#show led
=====
Location          LED Name          Mode          Color
=====
0/FT0
0/FT1              Status/Attention  OPERATIONAL    GREEN
0/FT2              Status/Attention  OPERATIONAL    GREEN
0/FT3              Status/Attention  OPERATIONAL    GREEN
0/FT4              Status/Attention  OPERATIONAL    GREEN
0/FT5              Status/Attention  OPERATIONAL    GREEN
0/PM0              Status            OPERATIONAL    GREEN
0/PM1              Status            OPERATIONAL    GREEN
0/RP0/CPU0
0/RP0/CPU0         Attention         OPERATIONAL    OFF
0/RP0/CPU0         GNSS              OPERATIONAL    OFF
0/RP0/CPU0         GPS               OPERATIONAL    OFF
0/RP0/CPU0         Status            OPERATIONAL    BLINKING RED
0/RP0/CPU0         Sync              OPERATIONAL    OFF
Router#

```

show hw-module fpd command

The following example shows a sample output from the **show hw-module fpd** command:

```

Router#show hw-module fpd

Auto-upgrade:Enabled,PM excluded
Attribute codes: B golden, P protect, S secure, A Anti Theft aware

Location  Card type          HWver FPD device  ATR Status  Running Programd  FPD Versions
Reload Loc
=====
0/RP0/CPU0 8711-32FH-M        0.3  Bios            S  CURRENT        5.05  5.05
0/RP0/CPU0
0/RP0/CPU0 8711-32FH-M        0.3  BiosGolden      BS  NEED UPGD      5.04
0/RP0/CPU0
0/RP0/CPU0 8711-32FH-M        0.3  IoFpga          CURRENT     1.09  1.09

```

```

0/RP0
0/RP0/CPU0 8711-32FH-M          0.3  IoFpgaGolden    B  NEED UPGD      1.06
0/RP0
0/RP0/CPU0 8711-32FH-M          0.3  x86Fpga         S  CURRENT        2.11  2.11
0/RP0
0/RP0/CPU0 8711-32FH-M          0.3  x86FpgaGolden  BS  CURRENT        2.07
0/RP0
0/RP0/CPU0 8711-32FH-M          0.3  x86TamFw        S  CURRENT        9.07  9.07
0/RP0
0/RP0/CPU0 8711-32FH-M          0.3  x86TamFwGolden BS  CURRENT        9.05
0/RP0
0/PM1      PSU2KW-ACPI          0.0  QC-PrimMCU      CURRENT        1.01  1.01
NOT REQ
0/PM1      PSU2KW-ACPI          0.0  QC-SecMCU       CURRENT        3.02  3.02
NOT REQ
0/FB0      8711-32FH-M[FB]     0.3  IoFpga          CURRENT        1.10  1.10
NOT REQ
0/FB0      8711-32FH-M[FB]     0.3  IoFpgaGolden    B  CURRENT        1.10
NOT REQ
Router#

```

show alarms brief system active command

The following example shows a sample output from the **show alarms brief system active** command:

```
Router#show alarms brief system active
```

```

-----
Active Alarms
-----
Location          Severity    Group          Set Time          Description
-----
0/RP0/CPU0        Major      FPD_Infra      01/09/2021 13:48:11 UTC  One Or More FPDs
Need Upgrade Or Not In Current State

0/RP0/CPU0        Major      Software        01/09/2021 13:50:22 UTC  Communications
Failure With Cisco Licensing Cloud

0/RP0/CPU0        Critical   Environ        01/09/2021 13:50:26 UTC  DIE_TEMP_PHY_0:
temperature alarm

0/RP0/CPU0        Critical   Environ        01/09/2021 13:50:31 UTC  DIE_TEMP_PHY_1:
temperature alarm

0/RP0/CPU0        Critical   Environ        01/09/2021 13:50:36 UTC  DIE_TEMP_PHY_2:
temperature alarm

0/RP0/CPU0        Critical   Environ        01/09/2021 13:50:41 UTC  DIE_TEMP_PHY_3:
temperature alarm

0/RP0/CPU0        Critical   Environ        01/09/2021 13:50:46 UTC  DIE_TEMP_PHY_4:
temperature alarm

```

```

0/RP0/CPU0      Critical   Environ      01/09/2021 13:50:51 UTC  DIE_TEMP_PHY_5:
temperature alarm

0/RP0/CPU0      Critical   Environ      01/09/2021 13:50:56 UTC  DIE_TEMP_PHY_6:
temperature alarm

0/RP0/CPU0      Critical   Environ      01/09/2021 13:51:01 UTC  DIE_TEMP_PHY_7:
temperature alarm

```

Router#



Note If there's a mismatch of the interface state between the active and standby modes of the components that are available on the front of the chassis, the router generates an alarm. For information on components available on the front of the chassis, see [Cisco 8700 Series Routers](#).

show media command

The following example shows a sample output from the **show media** command:

```

Router#show media

Media Info for Location: node0_RP0_CPU0
Partition          Size      Used  Percent  Avail
-----
rootfs:            71.6G    9.4G    13%     62.3G
data:              339.1G   2.5G    1%     336.6G
tmp:               32G      168K    1%      32G
/var/lib/docker    9.3G     796K    1%      8.8G
disk0:             9.3G     200K    1%      8.8G
harddisk:          70G      58M     1%      67G
log:               9.3G     163M    2%      8.7G
Router#

```

show environment power command

The following example shows a sample output from the **show environment power** command:

```

Router#show environment power
=====
CHASSIS LEVEL POWER INFO: 0
=====
Total output power capacity (Group 0 + Group 1) :    2000W +    0W
Total output power required                    :    1940W
Total power input                              :    1238W
Total power output                             :    1168W

Power Group 0:
=====
Power      Supply      -----Input-----  -----Output-----  Status
Module    Type           Volts    Amps    Volts    Amps
=====
0/PM1     PSU2KW-ACPI    217.2    5.7     12.0     97.4    OK

Total of Group 0:                1238W/5.7A                1168W/97.4A

```

```

=====
Location      Card Type                Power      Power      Status
Allocated    Used
Watts        Watts
=====
0/RP0/CPU0    8711-32FH-M              1670      -          ON
0/FT0         FAN-1RU-PI-V2           45        9          ON
0/FT1         FAN-1RU-PI-V2           45        9          ON
0/FT2         FAN-1RU-PI-V2           45        9          ON
0/FT3         FAN-1RU-PI-V2           45        9          ON
0/FT4         FAN-1RU-PI-V2           45        9          ON
0/FT5         FAN-1RU-PI-V2           45        9          ON
Router#

```

show environment fan command

The following example shows a sample output from the **show environment fan** command:

```

Router#show environment fan
=====
Location      FRU Type                Fan speed (rpm)
FAN_0        FAN_1
=====
0/FT0         FAN-1RU-PI-V2           24030     21090
0/FT1         FAN-1RU-PI-V2           24000     20970
0/FT2         FAN-1RU-PI-V2           23730     20850
0/FT3         FAN-1RU-PI-V2           23760     20760
0/FT4         FAN-1RU-PI-V2           23880     20970
0/FT5         FAN-1RU-PI-V2           23940     20970
0/PM0         PSU2KW-ACPI              18752     17248
0/PM1         PSU2KW-ACPI              18816     17152
Router#

```

show environment temperature location *location* command

The following example shows a sample output from the **show environment temperature location** command. The location specified is **0/RP0/CPU0**:

```

Router#show environment temperature location 0/RP0/CPU0
=====
Location      TEMPERATURE                Value      Crit      Major      Minor      Minor
Major        Crit                        (deg C)   (Lo)     (Lo)       (Lo)       (Hi)
(Hi)        (Hi)
=====
0/RP0/CPU0
  NPU_0_T6    NA                          51        NA        NA         NA         NA
  NA          NA
  NPU_0_T7    NA                          53        NA        NA         NA         NA
  NA          NA
  NPU_0_T8    NA                          50        NA        NA         NA         NA
  NA          NA
  NPU_0_T9    NA                          56        NA        NA         NA         NA
  NA          NA
  NPU_0_T10   NA                          56        NA        NA         NA         NA
  NA          NA
  NPU_0_T11   NA                          50        NA        NA         NA         NA
  NA          NA
  NPU_0_T12   NA                          57        NA        NA         NA         NA

```

NA	NA					
	NPU_0_T13	53	NA	NA	NA	NA
NA	NA					
	NPU_0_T14	50	NA	NA	NA	NA
NA	NA					
	NPU_0_T15	51	NA	NA	NA	NA
NA	NA					
	NPU_0_T16	53	NA	NA	NA	NA
NA	NA					
	NPU_0_T17	50	NA	NA	NA	NA
NA	NA					
	NPU_0_T18	51	NA	NA	NA	NA
NA	NA					
	NPU_0_T19	51	NA	NA	NA	NA
NA	NA					
	NPU_0_T20	51	NA	NA	NA	NA
NA	NA					
	NPU_HBM_0_T1	49	NA	NA	NA	NA
NA	NA					
	NPU_HBM_0_T2	49	NA	NA	NA	NA
NA	NA					
	NPU_HBM_0_T3	47	NA	NA	NA	NA
NA	NA					
	NPU_HBM_0_T4	49	NA	NA	NA	NA
NA	NA					
	MNP0_IFG_VDDH_I_T	51	-10	-5	0	110
115	125					
	MNP0_IFG_VDDH_E_T	49	-10	-5	0	110
115	125					
	MNP0_HBM_VDD_I_T	51	-10	-5	0	110
115	125					
	MNP0_HBM_VDD_E_T	47	-10	-5	0	110
115	125					
	MU101_ADC_A_T	49	-10	-5	0	95
100	105					
	MU101_ADC_B_T	49	-10	-5	0	95
100	105					
	MU101_ADC_C_T	48	-10	-5	0	95
100	105					
	MU507_ADC_A_T	48	-10	-5	0	95
100	105					
	MU507_ADC_B_T	48	-10	-5	0	95
100	105					
	MU507_ADC_C_T	48	-10	-5	0	95
100	105					
	MU369_ADC_A_T	48	-10	-5	0	95
100	105					
	MU369_ADC_B_T	48	-10	-5	0	95
100	105					
	CHAS_INLET_T_I_T	57	-15	-10	-5	95
100	105					
	MB_PORT_Sensor	29	-15	-10	-5	42
45	50					
	CHAS_OUTLET_T_I_LEFT_T	34	-15	-10	-5	70
75	80					
	CHAS_OUTLET_T_I_RIGHT_T	38	-15	-10	-5	70
75	80					
	SSD_TEMP_T	51	-10	0	5	72
75	83					
	! DIE_TEMP_PHY_0	-1003	-10	-5	0	110
120	125					
	! DIE_TEMP_PHY_1	-1003	-10	-5	0	110
120	125					
	! DIE_TEMP_PHY_2	-1003	-10	-5	0	110


```

120      125
! DIE_TEMP_PHY_3          -1003    -10     -5      0      110
120      125
! DIE_TEMP_PHY_4          -1003    -10     -5      0      110
120      125
! DIE_TEMP_PHY_5          -1003    -10     -5      0      110
120      125
! DIE_TEMP_PHY_6          -1003    -10     -5      0      110
120      125
! DIE_TEMP_PHY_7          -1003    -10     -5      0      110
120      125
NPU_0_T0                   51      NA      NA      NA      NA
NA      NA
NPU_0_T1                   53      NA      NA      NA      NA
NA      NA
NPU_0_T2                   51      NA      NA      NA      NA
NA      NA
NPU_0_T3                   52      NA      NA      NA      NA
NA      NA
NPU_0_T4                   52      NA      NA      NA      NA
NA      NA
NPU_0_T5                   51      NA      NA      NA      NA
NA      NA
CTC_U24_DIE_T              47      -10     -5      0      110
115      125
CTC_Mid_Left_Temp_T       52      -10     -5      0      80
90      95
CTC_Mid_Right_Temp_T      52      -10     -5      0      80
90      95
LTC2979_A_TEMP_T          46      -10     0       5      90
100     105
LTC2979_B_TEMP_T          46      -10     0       5      90
100     105
FAN_Sensor                 49      -10     0       5      75
80      85
CPU_CORE_TEMP_0_T         58      -10     0       5      90
95     100
CPU_CORE_TEMP_1_T         57      -10     0       5      90
95     100
CPU_CORE_TEMP_2_T         57      -10     0       5      90
95     100
CPU_CORE_TEMP_3_T         57      -10     0       5      90
95     100
SODIMM_0_TEMP_T           51      -10     0       5      85
95     100
SODIMM_1_TEMP_T           51      -10     0       5      85
95     100
TI_2PLUS1_TEMP_T          53      -10     0       5      110
120     125
TI_1PLUS1_TEMP_T          52      -10     0       5      110
120     125
IOB Ambient Temp_T        36      -10     -5      0      50
55     60
Router#

```

show environment voltage location *location* command

The following example shows a sample output from the **show environment voltage location** command. The location specified is **0/RP0/CPU0**:

```
Router#show environment voltage location 0/RP0/CPU0
```

Location Major (Hi)	TEMPERATURE Crit Sensor (Hi)	Value (deg C)	Crit (Lo)	Major (Lo)	Minor (Lo)	Minor (Hi)
0/RP0/CPU0						
NA	NPU_0_T6 NA	51	NA	NA	NA	NA
NA	NPU_0_T7 NA	53	NA	NA	NA	NA
NA	NPU_0_T8 NA	50	NA	NA	NA	NA
NA	NPU_0_T9 NA	56	NA	NA	NA	NA
NA	NPU_0_T10 NA	56	NA	NA	NA	NA
NA	NPU_0_T11 NA	50	NA	NA	NA	NA
NA	NPU_0_T12 NA	57	NA	NA	NA	NA
NA	NPU_0_T13 NA	53	NA	NA	NA	NA
NA	NPU_0_T14 NA	50	NA	NA	NA	NA
NA	NPU_0_T15 NA	51	NA	NA	NA	NA
NA	NPU_0_T16 NA	53	NA	NA	NA	NA
NA	NPU_0_T17 NA	50	NA	NA	NA	NA
NA	NPU_0_T18 NA	51	NA	NA	NA	NA
NA	NPU_0_T19 NA	51	NA	NA	NA	NA
NA	NPU_0_T20 NA	51	NA	NA	NA	NA
NA	NPU_HBM_0_T1 NA	49	NA	NA	NA	NA
NA	NPU_HBM_0_T2 NA	49	NA	NA	NA	NA
NA	NPU_HBM_0_T3 NA	47	NA	NA	NA	NA
NA	NPU_HBM_0_T4 NA	49	NA	NA	NA	NA
115	MNP0_IFG_VDDH_I_T 125	51	-10	-5	0	110
115	MNP0_IFG_VDDH_E_T 125	49	-10	-5	0	110
115	MNP0_HBM_VDD_I_T 125	51	-10	-5	0	110
115	MNP0_HBM_VDD_E_T 125	47	-10	-5	0	110
100	MU101_ADC_A_T 105	49	-10	-5	0	95
100	MU101_ADC_B_T 105	49	-10	-5	0	95
100	MU101_ADC_C_T 105	48	-10	-5	0	95
100	MU507_ADC_A_T 105	48	-10	-5	0	95
100	MU507_ADC_B_T 105	48	-10	-5	0	95
100	MU507_ADC_C_T 105	48	-10	-5	0	95

100	MU369_ADC_A_T	48	-10	-5	0	95
	105					
100	MU369_ADC_B_T	48	-10	-5	0	95
	105					
100	CHAS_INLET_T_I_T	57	-15	-10	-5	95
	105					
45	MB_PORT_Sensor	29	-15	-10	-5	42
	50					
75	CHAS_OUTLET_T_I_LEFT_T	34	-15	-10	-5	70
	80					
75	CHAS_OUTLET_T_I_RIGHT_T	38	-15	-10	-5	70
	80					
75	SSD_TEMP_T	51	-10	0	5	72
	83					
120	! DIE_TEMP_PHY_0	-1003	-10	-5	0	110
	125					
120	! DIE_TEMP_PHY_1	-1003	-10	-5	0	110
	125					
120	! DIE_TEMP_PHY_2	-1003	-10	-5	0	110
	125					
120	! DIE_TEMP_PHY_3	-1003	-10	-5	0	110
	125					
120	! DIE_TEMP_PHY_4	-1003	-10	-5	0	110
	125					
120	! DIE_TEMP_PHY_5	-1003	-10	-5	0	110
	125					
120	! DIE_TEMP_PHY_6	-1003	-10	-5	0	110
	125					
120	! DIE_TEMP_PHY_7	-1003	-10	-5	0	110
	125					
NA	NPU_0_T0	51	NA	NA	NA	NA
	NA					
NA	NPU_0_T1	53	NA	NA	NA	NA
	NA					
NA	NPU_0_T2	51	NA	NA	NA	NA
	NA					
NA	NPU_0_T3	52	NA	NA	NA	NA
	NA					
NA	NPU_0_T4	52	NA	NA	NA	NA
	NA					
NA	NPU_0_T5	51	NA	NA	NA	NA
	NA					
115	CTC_U24_DIE_T	47	-10	-5	0	110
	125					
90	CTC_Mid_Left_Temp_T	52	-10	-5	0	80
	95					
90	CTC_Mid_Right_Temp_T	52	-10	-5	0	80
	95					
100	LTC2979_A_TEMP_T	46	-10	0	5	90
	105					
100	LTC2979_B_TEMP_T	46	-10	0	5	90
	105					
80	FAN_Sensor	49	-10	0	5	75
	85					
95	CPU_CORE_TEMP_0_T	58	-10	0	5	90
	100					
95	CPU_CORE_TEMP_1_T	57	-10	0	5	90
	100					
95	CPU_CORE_TEMP_2_T	57	-10	0	5	90
	100					
95	CPU_CORE_TEMP_3_T	57	-10	0	5	90
	100					
95	SODIMM_0_TEMP_T	51	-10	0	5	85
	100					

```

          SODIMM_1_TEMP_T           51    -10     0     5     85
95      100
          TI_2PLUS1_TEMP_T          53    -10     0     5    110
120     125
          TI_1PLUS1_TEMP_T          52    -10     0     5    110
120     125
          IOB Ambient Temp_T        36    -10    -5     0     50
55      60
Router#

```

show environment current location *location* command

The following example shows a sample output from the **show environment current location** command. The location specified is **0/RP0/CPU0**:

```
Router#show environment current location 0/RP0/CPU0sh
```

Location	CURRENT Sensor	Value (mA)

0/RP0/CPU0	MNP0_IFG_VDDH_I	12015
	MNP0_HBM_VDD_I	2332
	12P0_NPU0_INA_VOUT_1_I	5227
	12P0_OPT_L_INA_VOUT_I	7517
	12P0_OPT_R_INA_VOUT_I	10193
	12P0_CF_INA_VOUT_I	9906
	12P0_GEN_INA_VOUT_I	2344
	12P0_PHY_INA_VOUT_I	30329
	VP0P75_PHY0_AVD_IAVG_I	10688
	VP1P2_PHY0_AVD_IAVG_I	14841
	NPU0_IFG_VDDA_0P75_IAVG_I	23258
	NPU0_VDDC_0P75_IAVG_I	122638
	VP0P75_PHY0_CORE_IAVG_I	19282
	QSFPDD0_IMON_I	1778
	QSFPDD31_IMON_I	73476
	NPU0_IFG_VDDS_0P65_IAVG_I	26058
	MP12P0_CF_I	9840
	MP12P0_NPU0_I	4600
	MP12P0_PHY_I	30280
	MP12P0_OPT_R_I	10100
	MP12P0_OPT_L_I	7400
	MP12P0_GEN_I	2310
	VP3P3_QSFPDD_0_I0	3625
	VP3P3_QSFPDD_0_I1	5125
	VP3P3_QSFPDD_1_I0	7562
	VP3P3_QSFPDD_1_I1	7562
	VP3P3_QSFPDD_2_I0	8000
	VP3P3_QSFPDD_2_I1	7187
	VP3P3_QSFPDD_3_I0	9500
	VP3P3_QSFPDD_3_I1	10062
	P12V_CPU_CARD_I	2450
	CPU_CORE_CURRENT_I	12062
	P1V05_SUS_CURRENT_I	1783
	DDR4_CURRENT_I	12046
	P1V05_IO_CURRENT_I	1199
RP/0/RP0/CPU0:ios#		



Note To manually configure the environmental altitude of the chassis, use the **environment altitude** command.



CHAPTER 6

Replace Chassis Components



Note The images in this chapter are only for representation purposes, unless specified otherwise. The chassis' actual appearance and size may vary.



Caution Whenever you replace any card, you must always ensure to secure the ejector thumbscrews properly.

- [Replace Fan Modules, on page 81](#)
- [Replace Power Supply, on page 83](#)

Replace Fan Modules

The fan module is designed to be removed and replaced while the system is operating without presenting an electrical hazard or damage to the system. Please keep the replacement fan modules ready prior to attempting this task.

The router supports the following types of fan modules:

- Cisco 8711-32FH-M Router
 - port-side intake airflow - FAN-1RU-PI-V2
 - port-side exhaust airflow - FAN-1RU-PE-V2



Note The airflow direction must be the same for all power supply and fan modules in the chassis. Depending upon the required airflow direction, you can change the fan type. You must then also change the power supply.

Procedure

- Step 1** To remove a fan module, follow these steps:

- a) Press two latches on the fan module and grasp the handle of fan module.

Figure 47: Cisco 8711-32FH-M Router — Remove Fans


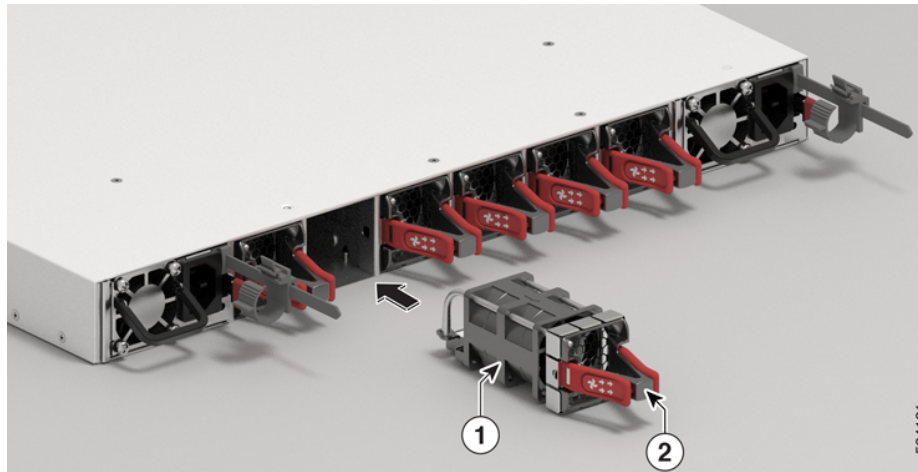


Figure 48: Cisco 8712-MOD-M Router — Remove Fans

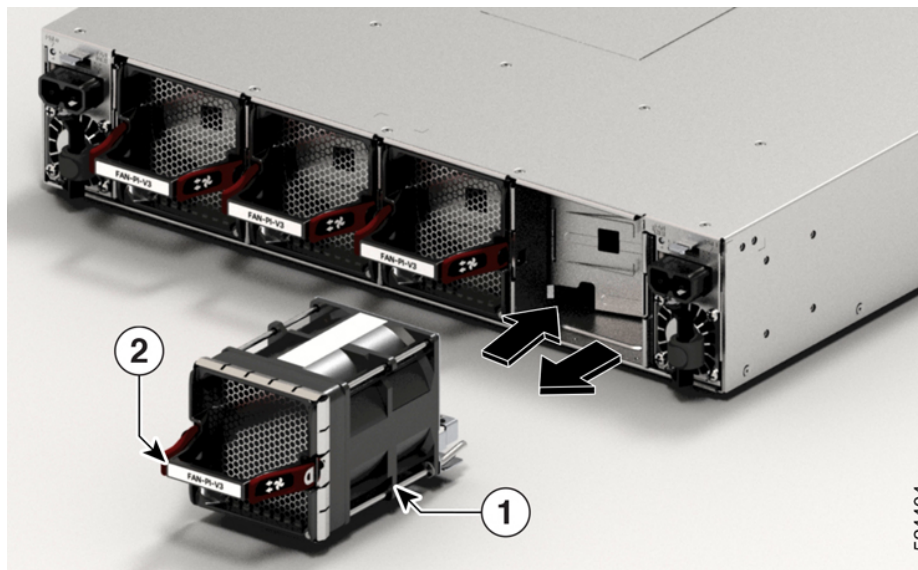

1	Latched fan module	2	Fan latch
---	--------------------	---	-----------

- b) As you simultaneously press the latches pull the fan module fully out of the chassis.

Step 2

To install a fan module, follow these steps:

- a) Hold the fan module with the LED at the top.
- b) Align the fan module to the open fan tray slot in the chassis, and press the module all the way into the slot until the left and right latches click and are locked on the chassis.

Note If the fan module does not go all the way into the slot, do not force it. Remove the fan module and verify that it is the correct type for your router and in the correct orientation. To verify the status of fans and the speed, use the **show environment fan** command.

- c) If the chassis is powered on, listen for the sound of the fans in operation. You should immediately hear them in operation. If you do not hear them, ensure that the fan module is inserted completely in the chassis.

Note During the fan module replacement, the other fans adjust their speed to allow for proper initialization of the new module. When you insert a new fan module, the fans may run at lower or higher speeds for a few minutes.

- d) Verify that the fan module LED turns green. If the LED is not green, one or more fans are faulty. If this situation occurs, contact your customer service representative for replacement parts.

Replace Power Supply



Note We recommend that you occupy both the power supply slots of the fixed port routers with power supplies. In case a power module fails, it is recommended to retain the failed power module in its slot until it is replaced with a new power module. This recommendation ensures that the system airflow is not impacted adversely, which may then result in the overheating of the router and its components.

When there are two PSUs in the router, use the following steps to replace the PSUs (AC to DC or vice-versa). Routers can operate normally only with the same type of PSU in both the power slots. During replacement of PSU from one type to another, the router exhibits unexpected behaviour and the Cisco IOS XR software raises the PID mismatch alarm due to the presence of different types of PSUs. You must therefore replace the PSUs in both slots with the same type.

Power down the fixed configuration Power Distribution Unit (PDU) before removing the PDU from the chassis.

Procedure

- Step 1** Ensure that both the PSUs are powered off.
- Step 2** If the power supply is connected to an AC or DC circuit, shut off the circuit at the circuit breaker or PDU.
- Step 3** Disconnect the power cable of the PSU that must be replaced.
- Note** To remove the Saf-D-Grid power cord (AC or HVDC) or the low voltage DC power cord from the power supply, press the latch before pulling the power cord out.
- Step 4** Press the tab inward to unlatch the PSU, and pull the handle to remove the PSU.
- Step 5** Insert the new PSU.
- Note** If the PSU does not go all the way into the slot, do not force it. Remove the PSU and verify that it is the correct type for your router and in the correct orientation.
- Step 6** Connect the PSU cable. If the power supply is connected to an AC or DC circuit, turn on the circuit at the circuit breaker or PDU source. Wait till the PSU LED color turns green. After replacing the PSU, verify the power using the **show environment power** command.
- Step 7** Repeat steps 1 through 6 to replace the PSU in the second slot.

Figure 49: Cisco 8711-32FH Router — Remove Power Supply


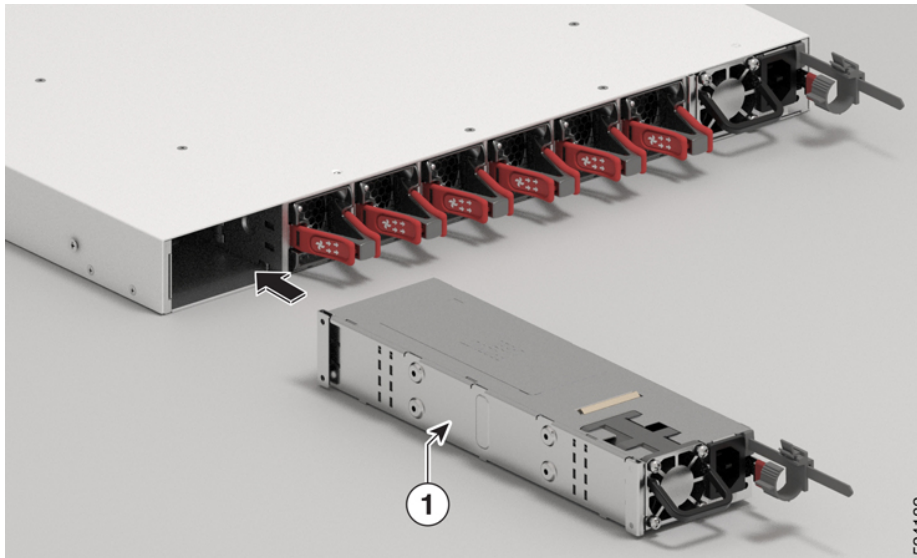


Figure 50: Cisco 8712-MOD-M Router — Remove Power Supply

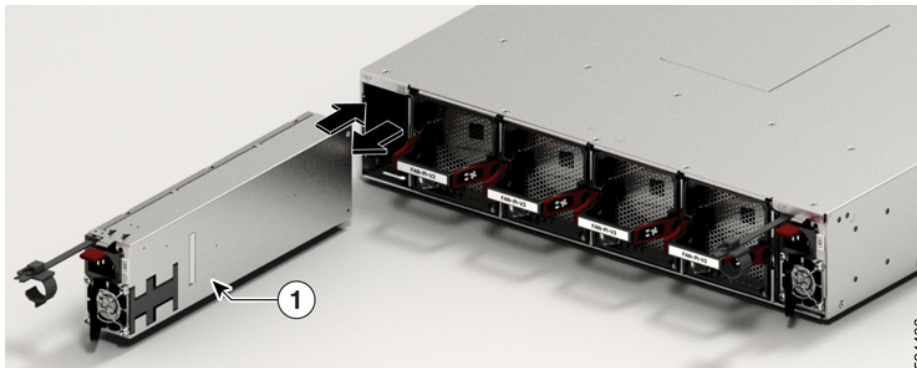

1	Remove power supply
---	---------------------



CHAPTER 7

LEDs

You can perform the following check on LEDs that assist you with the troubleshooting process:

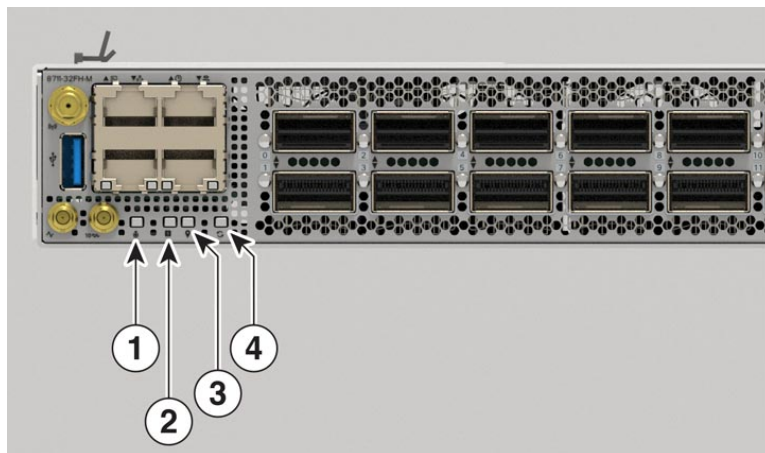
- [LEDs for Cisco 8711-32FH-M Router, on page 85](#)
- [Fan LED, on page 87](#)
- [Power Supply LEDs, on page 89](#)

LEDs for Cisco 8711-32FH-M Router

Chassis LEDs





Attention, Status, Synchronization, and GPS LEDs are located both at the far left of the front of the chassis and also on the back of the chassis:

Figure 51: Chassis LEDs - Front View of Cisco 8711-32FH-M



1	Attention
2	Status
3	GPS
4	Synchronization


Table 10: Chassis LED Descriptions

LED	Color	Status
	Flashing blue	The operator has activated this LED to identify this chassis.
	Off	This chassis is not being identified.
	Green	The module is operational and has no active major or critical alarms.
	Flashing Green	The auto or manual FPD upgrade is in progress.
	Amber	The module is in one of the following states: <ul style="list-style-type: none"> • Power cycle • Reload or reimage • Shutdown
	Flashing Amber	The module has minor alarm.
	Red	Power-up failure which prevents the CPU from booting.
	Flashing Red	The module has active major or critical alarms.
	Off	The module is powered-off.
	Green	The GPS interface is provisioned and frequency, time of day and phase inputs are all operating correctly.
	Off	The GPS interface is not provisioned, or the GPS inputs are not working correctly.
	Green	Time core is synchronized to an external source including IEEE1588.
	Amber	The system is running in holdover or free-run mode and it is not synchronized to an external interface.
	Off	The centralized frequency or time and phase distribution is not enabled.

Port Status LEDs

Each port has an LED. The following table describes port status LEDs.

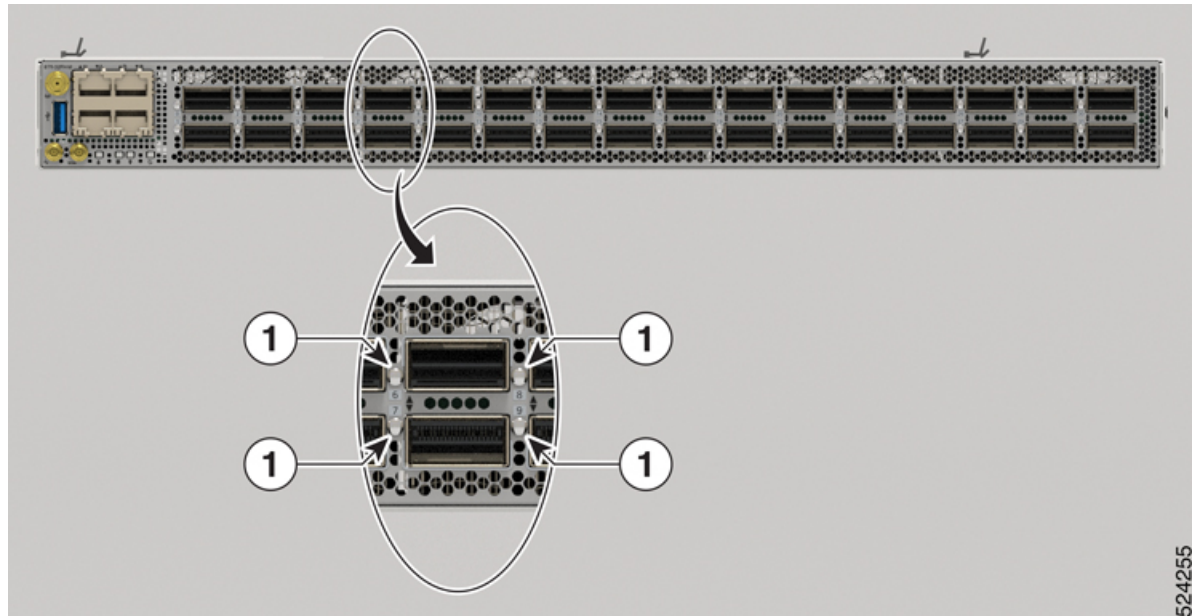Figure 52: Port Status LED - Cisco 8711-32FH-M Chassis



1	400G Port Status LED
---	----------------------

Table 11: Port Status LEDs (one per port)

LED Color	Description
Off	Port is administratively shut down.
Amber	Port is administratively enabled and the link is down.
Green	Port is administratively enabled and the link is up.

Fan LED

Fan modules are located on the back of the chassis. Each fan module has a Status LED.

Figure 53: Fan LED - Cisco 8711-32FH-M Chassis


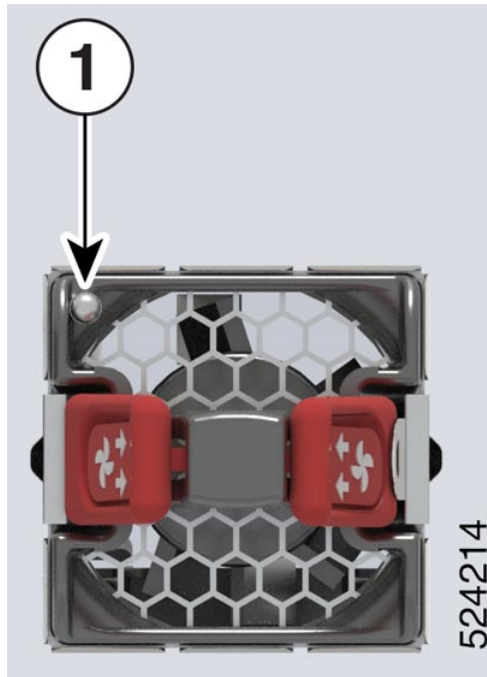


Figure 54: Fan LED - Cisco 8712-MOD-M Chassis

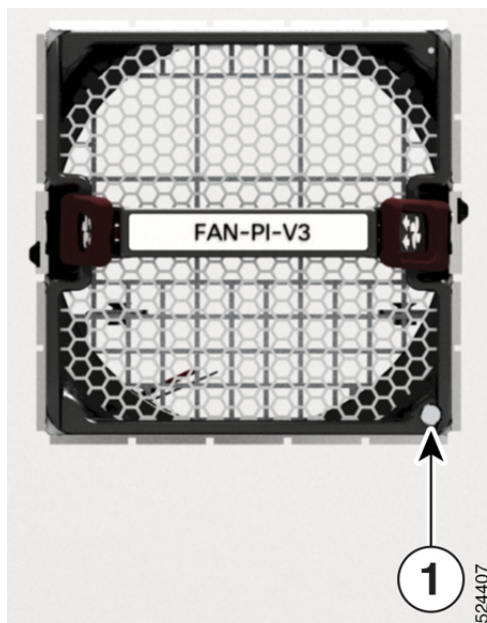

1

Fan Status LED

Table 12: Fan LED Descriptions

LED	Color	Status
Status	Green	Fan is operating normally.
	Amber	Fan is inserted and pending to come online.
	Flashing Amber	The module is in one of these states: <ul style="list-style-type: none"> • Fan speed (RPM) is outside normal range. • The module has a minor, major, or critical alarm.
	Flashing Blue	The module is identified or activated.
	Off	Fan is not receiving power.

Power Supply LEDs

Power modules are located on the back side of the chassis. Each power module has a Status LED.

Figure 55: Cisco 8711-32FH-M Power Supply LED

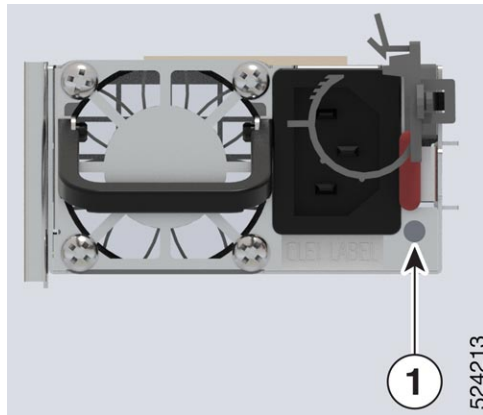


Figure 56: Cisco 8712-MOD-M DC Power Supply LED

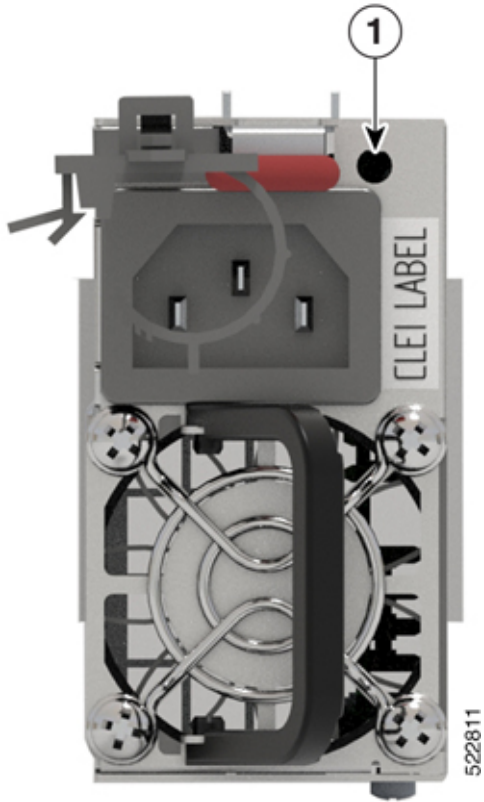


Figure 57: Cisco 8712-MOD-M AC Power Supply LED



1	Status LED
---	------------

Table 13: Power Supply LED Descriptions

LED	Color	Status
Status	Green	Power supply is on and transmitting power to the router.
	Flashing Green (2 Hz)	Power supply is connected to input power source but not transmitting power to the router.
	Flashing Green (4 Hz)	Power Supply Unit firmware upgrade in-progress.
	Amber	Power supply failure, due to one of these conditions: <ul style="list-style-type: none"> • Over voltage • Over current • Over temperature • Fan failure
	Flashing Amber (1 Hz)	Power supply is operating but a warning condition has occurred, due to one of these conditions: <ul style="list-style-type: none"> • High temperature • High power • Slow fan
	Off	Power supply units are not receiving power.